

SIEMENS



Operating Instructions

# SINAMICS

## SINAMICS DCM

DC converter

Edition

12/2018

[www.siemens.com/drives](http://www.siemens.com/drives)



# SIEMENS

## SINAMICS

### DCM SINAMICS DCM DC Converter

#### Operating Instructions




Firmware Version V1.5

Preface	
Safety instructions	1
Type spectrum, ordering information	2
Description	3
Technical data	4
Transportation, unpacking, installation	5
Connecting	6
Additional system components	7
Commissioning	8
Operation	9
Descriptions of functions	10
Maintenance	11
Applications	12
Functional safety	13
Appendix A	A
Appendix B	B

## Legal information

### Warning notice system

This manual contains notices you have to observe in order to ensure your personal safety, as well as to prevent damage to property. The notices referring to your personal safety are highlighted in the manual by a safety alert symbol, notices referring only to property damage have no safety alert symbol. These notices shown below are graded according to the degree of danger.

 <b>DANGER</b>
indicates that death or severe personal injury <b>will</b> result if proper precautions are not taken.
 <b>WARNING</b>
indicates that death or severe personal injury <b>may</b> result if proper precautions are not taken.
 <b>CAUTION</b>
indicates that minor personal injury can result if proper precautions are not taken.
<b>NOTICE</b>
indicates that property damage can result if proper precautions are not taken.


If more than one degree of danger is present, the warning notice representing the highest degree of danger will be used. A notice warning of injury to persons with a safety alert symbol may also include a warning relating to property damage.

### Qualified Personnel

The product/system described in this documentation may be operated only by **personnel qualified** for the specific task in accordance with the relevant documentation, in particular its warning notices and safety instructions. Qualified personnel are those who, based on their training and experience, are capable of identifying risks and avoiding potential hazards when working with these products/systems.

### Proper use of Siemens products

Note the following:

 <b>WARNING</b>
Siemens products may only be used for the applications described in the catalog and in the relevant technical documentation. If products and components from other manufacturers are used, these must be recommended or approved by Siemens. Proper transport, storage, installation, assembly, commissioning, operation and maintenance are required to ensure that the products operate safely and without any problems. The permissible ambient conditions must be complied with. The information in the relevant documentation must be observed.

### Trademarks

All names identified by ® are registered trademarks of Siemens AG. The remaining trademarks in this publication may be trademarks whose use by third parties for their own purposes could violate the rights of the owner.

### Disclaimer of Liability

We have reviewed the contents of this publication to ensure consistency with the hardware and software described. Since variance cannot be precluded entirely, we cannot guarantee full consistency. However, the information in this publication is reviewed regularly and any necessary corrections are included in subsequent editions.

# Preface

---

## Note

### Information on connecting the unit

The inside front cover of the SINAMICS DC MASTER Operating Instructions contains a summary of the key information required for connecting the unit.

---

## Product name

The SINAMICS DCM documentation uses the following product names:

- SINAMICS DCM
- SINAMICS DC MASTER

## Device firmware version

As these Operating Instructions went to print, SINAMICS DCM converters were being supplied from the factory with the firmware release specified on the inside front page.

However, these Operating Instructions can, in principle, also apply to other firmware versions.

- **Older firmware versions:**

It is possible that not all of the functions described here are actually available.

- **Newer firmware versions:**

It is possible that SINAMICS DCM may feature additional functions that are not described in these Operating Instructions. Do not change any parameters that you cannot find in the List Manual from their factory setting, and do not give parameters any values that are not specified in the List Manual.

The firmware version is displayed using r50060[6].

Example:

01010203 displayed on the BOP20 means 01.01.02.03 → Version 1.1, Service Pack 2, Hotfix 3

When required, you can obtain the current firmware from your local Siemens sales office.

Download of the current firmware version for registered users

(<https://support.industry.siemens.com/cs/ww/en/view/44029688>)

**Note**

**Hardware/firmware compatibility**

The hardware version of the Control Unit (CUD) must be taken into account when updating the device firmware, see the following table.

The hardware version can be read from the label on the right-hand side of the CUD.

CUD (print on label)	Executable firmware versions
C98043-A7100-L1-... C98043-A7100-L2-... C98043-A7100-L100-... C98043-A7100-L200-...	1.1, 1.2, 1.3
C98043-A7100-L3-... C98043-A7100-L4-... C98043-A7100-L103-... C98043-A7100-L204-...	All versions
A5E...	All versions

**SINAMICS DCM documentation available**

**SINAMICS DCM DC Converters Operating Instructions**

Contains all information on ordering, installation, connecting, commissioning, maintaining, description of functions, and service

**SINAMICS DCM Control Modules Operating Instructions**

Contains all information on ordering, installation, connecting, commissioning, maintaining, description of functions, and service

**SINAMICS DCM List Manual (for DC converters and control modules)**

Contains parameter list, function diagrams, list of faults and alarms

**SINAMICS free function blocks, function description**

Includes a general description, list of parameters, the function block diagrams as well as the list of faults and alarms.

**Manuals and application notes on the Internet**

The manuals and application documents are also available in the Internet:

Manuals (<https://support.industry.siemens.com/cs/ww/en/ps/13298/man>)

The list of general conditions available there include current supplements to the manuals. The notes included in the general condition lists have a higher priority than the statements made in the manuals.

## FAQ in the Internet

FAQ (<https://support.industry.siemens.com/cs/ww/en/ps/13298/faq>)

## Service

You can find information on our services and regional contact persons in the Internet (<https://support.industry.siemens.com/sc/ww/en/sc>)

## Technical Support

Our technical support can provide you with technical assistance for products, systems, and solutions:

Service (<https://support.industry.siemens.com/sc/ww/en/sc>)

## Central hotlines for SINAMICS DCM technical support

European and African time zone	Service Request ( <a href="https://support.industry.siemens.com/My/ww/en/requests#createRequest">https://support.industry.siemens.com/My/ww/en/requests#createRequest</a> )	
America time zone	<b>24-hour hotline: +1 800 333 7421</b> Tel.: +1 423 262 2960 Fax: +1 423 262 2200 email ( <a href="mailto:support.america.automation@siemens.com">mailto:support.america.automation@siemens.com</a> )	8:00 to 17:00 Eastern Standard Time
Asia/Australia time zone	Tel.: +86 1064 757575 Fax: +86 1064 747474 email ( <a href="mailto:support.asia.automation@siemens.com">mailto:support.asia.automation@siemens.com</a> )	7:30 to 17:30 Beijing local time

## Spare parts

You can find information on spare parts

- In catalog D23.1
- Via the electronic spare parts catalog Spares On Web, after entering the serial number and article number of your SINAMICS DCM in the Internet (registration required)

Spares on Web (<https://www.sow.siemens.com/>)

## Websites of third parties

This publication contains hyperlinks to websites of third parties. Siemens does not take any responsibility for the contents of these websites or adopt any of these websites or their contents as their own, because Siemens does not control the information on these websites and is also not responsible for the contents and information provided there. Use of these websites is at the risk of the person doing so.

## Use of OpenSSL

This product contains software that has been developed by the OpenSSL project for use in the OpenSSL toolkit.

This product contains cryptographic software created by Eric Young.

This product contains software developed by Eric Young.

## Compliance with the General Data Protection Regulation

Siemens respects the principles of data protection, in particular the data minimization rules (privacy by design).

For this product, this means:

The product does not process neither store any person-related data, only technical function data (e.g. time stamps). If the user links these data with other data (e.g. shift plans) or if he stores person-related data on the same data medium (e.g. hard disk), thus personalizing these data, he has to ensure compliance with the applicable data protection stipulations.

## Further Internet links

Generic station description file (GSD) for

PROFIBUS (<https://support.industry.siemens.com/cs/ww/en/view/98206128>)

PROFINET (<https://support.industry.siemens.com/cs/ww/en/view/98207877>)



# Table of contents

	<b>Preface .....</b>	<b>3</b>
<b>1</b>	<b>Safety instructions.....</b>	<b>17</b>
1.1	General safety instructions .....	17
1.2	Hearing protection.....	21
1.3	Warning note relating to the off button of the AOP30.....	21
1.4	ESD-sensitive components.....	22
1.5	Industrial security .....	23
1.6	Residual risks of power drive systems.....	24
<b>2</b>	<b>Type spectrum, ordering information .....</b>	<b>25</b>
2.1	Device article numbers .....	25
2.2	Key for the device article numbers .....	28
2.3	Rating plates, packaging label.....	29
2.4	Ordering information for options and accessories .....	30
2.5	Accessories.....	33
2.5.1	Mounting kit to increase the degree of protection to IP20 .....	33
<b>3</b>	<b>Description.....</b>	<b>35</b>
<b>4</b>	<b>Technical data .....</b>	<b>39</b>
4.1	Load classes .....	39
4.2	Duty cycles for 2Q applications .....	40
4.3	Duty cycles for 4Q applications .....	42
4.4	Environmental requirements.....	44
4.5	Unit data.....	45
4.6	Derating .....	75
<b>5</b>	<b>Transportation, unpacking, installation .....</b>	<b>77</b>
5.1	Transportation, unpacking .....	77
5.2	Installation.....	77
5.2.1	Dimension drawings.....	80
5.2.2	Installing options and accessories.....	89
5.2.2.1	AOP30 operator panel .....	89
5.2.2.2	Installing a second CUD .....	89

<b>6</b>	<b>Connecting .....</b>	<b>91</b>
6.1	Instructions for EMC-compliant drive installation .....	92
6.1.1	Basic information about EMC .....	92
6.1.2	EMC-compliant drive installation (installation instructions).....	95
6.1.3	Example of a cabinet configuration.....	98
6.1.4	Arranging components for converter units .....	102
6.1.5	RFI suppression filter .....	103
6.1.6	Information on line-side harmonics produced by converter units in a fully-controlled two-pulse bridge circuit configuration (B6C and (B6)A(B6)C) .....	104
6.1.7	Data on the line-side harmonics from converter units in a fully-controlled AC bridge circuit B2C .....	106
6.2	Cable routing into the unit .....	107
6.3	Block diagram with connection suggestion .....	114
6.4	Power connections.....	123
6.5	Field supply .....	143
6.6	Line reactors .....	146
6.7	Fuses .....	149
6.7.1	Fuses for the field circuit .....	149
6.7.2	Fuses for the armature circuit .....	150
6.7.3	Fuses in the Power Interface .....	155
6.8	Arrangement of terminals and connectors .....	156
6.9	Assignment of terminals and connectors .....	168
6.9.1	Power unit .....	169
6.9.2	Field circuit.....	172
6.9.3	Electronics power supply .....	173
6.9.4	Fan .....	174
6.9.5	Open-loop and closed-loop control section .....	175
6.9.6	Assignment of the RS485 cable to the AOP30.....	187
6.9.7	Terminal assignment functional safety .....	188
6.10	Installation notes for installation according to UL 508C.....	189
<b>7</b>	<b>Additional system components.....</b>	<b>191</b>
7.1	Option Board: Communication Board Ethernet CBE20 .....	192
7.1.1	Description .....	192
7.1.2	Safety instructions.....	192
7.1.3	Interface description.....	193
7.1.3.1	Overview .....	193
7.1.3.2	X1400 Ethernet interface .....	194
7.1.4	Meaning of the LEDs .....	195
7.1.5	Installation .....	197
7.1.6	Technical data.....	197
7.2	SMC10 Sensor Module Cabinet-Mounted .....	198
7.2.1	Description .....	198
7.2.2	Interface description.....	198
7.2.2.1	Overview .....	198
7.2.2.2	X500 DRIVE-CLiQ interface .....	199
7.2.2.3	X524 Electronics power supply.....	199

7.2.2.4	X520 encoder system interface .....	200
7.2.3	Connection example .....	201
7.2.4	Meaning of the LED .....	201
7.2.4.1	Meaning of the LED on the Sensor Module Cabinet-Mounted SMC10 .....	201
7.2.4.2	Cause and rectification of faults .....	202
7.2.5	Dimension drawing .....	202
7.2.6	Mounting .....	203
7.2.7	Technical data .....	204
7.3	Sensor Module Cabinet-Mounted SMC30 .....	206
7.3.1	Description .....	206
7.3.2	Safety instructions .....	207
7.3.3	Interface description .....	209
7.3.3.1	Overview .....	209
7.3.3.2	X500 DRIVE-CLiQ interface .....	210
7.3.3.3	X524 electronic power supply .....	210
7.3.3.4	X520 encoder system interface .....	211
7.3.3.5	X521/X531 alternative encoder system interface .....	212
7.3.4	Connection examples .....	214
7.3.5	Meaning of the LEDs .....	216
7.3.6	Dimension drawing .....	217
7.3.7	Mounting .....	217
7.3.8	Protective conductor connection and shield support .....	219
7.3.9	Technical data .....	220
7.4	Terminal Module TM15 .....	224
7.4.1	Description .....	224
7.4.2	Safety instructions .....	224
7.4.3	Interface description .....	225
7.4.3.1	Overview .....	225
7.4.3.2	X500 and X501 DRIVE-CLiQ interface .....	226
7.4.3.3	X524 electronic power supply .....	227
7.4.3.4	X520 bidirectional digital inputs/outputs .....	227
7.4.3.5	X521 bidirectional digital inputs/outputs .....	228
7.4.3.6	X522 bidirectional digital inputs/outputs .....	228
7.4.4	Connection example .....	229
7.4.5	Meaning of the LEDs on the Terminal Module TM15 .....	230
7.4.6	Dimension drawing .....	231
7.4.7	Installation .....	231
7.4.8	Protective conductor connection and shield support .....	233
7.4.9	Connector coding .....	234
7.4.10	Technical data .....	235
7.5	Terminal Module TM31 .....	237
7.5.1	Description .....	237
7.5.2	Safety instructions .....	238
7.5.3	Interface description .....	239
7.5.3.1	Overview .....	239
7.5.3.2	X500/X501 DRIVE-CLiQ interfaces .....	240
7.5.3.3	X524 electronic power supply .....	241
7.5.3.4	X520, X530 digital inputs .....	242
7.5.3.5	X521 analog inputs .....	243
7.5.3.6	Analog inputs current/voltage switch .....	244
7.5.3.7	X522 analog outputs/temperature sensor .....	244

7.5.3.8	X540 auxiliary voltage for the digital inputs .....	245
7.5.3.9	X541 bidirectional digital inputs/outputs .....	246
7.5.3.10	X542 relay outputs .....	247
7.5.4	Connection example .....	248
7.5.5	Meanings of the LEDs on the Terminal Module TM31 .....	249
7.5.6	Dimension drawing .....	250
7.5.7	Installation .....	251
7.5.8	Protective conductor connection and shield support .....	252
7.5.9	Connector coding .....	253
7.5.10	Technical data .....	254
7.6	Terminal Module TM150 .....	255
7.6.1	Description .....	255
7.6.2	Safety instructions .....	256
7.6.3	Interface description .....	257
7.6.3.1	Overview .....	257
7.6.3.2	X500 and X501 DRIVE-CLiQ interfaces .....	258
7.6.3.3	X524 Electronics power supply .....	259
7.6.3.4	X531-X536 temperature sensor inputs .....	259
7.6.4	Connection examples .....	261
7.6.5	Meaning of the LEDs on the Terminal Module TM150 .....	263
7.6.6	Dimension drawing .....	264
7.6.7	Installation .....	265
7.6.8	Protective conductor connection and shield support .....	266
7.6.9	Technical data .....	267
<b>8</b>	<b>Commissioning .....</b>	<b>269</b>
8.1	Commissioning checklist .....	270
8.1.1	Commissioning checklist .....	270
8.2	Switching on .....	272
8.3	Commissioning using the BOP20 operator panel .....	273
8.3.1	Preconditions .....	273
8.3.2	Commissioning steps .....	274
8.4	Commissioning using the AOP30 operator panel .....	281
8.4.1	First commissioning .....	281
8.4.1.1	First power-up .....	281
8.4.1.2	Full drive commissioning .....	283
8.4.2	Status after commissioning .....	286
8.4.3	Resetting parameters to factory settings .....	287
8.5	Commissioning with the STARTER commissioning tool .....	287
8.5.1	STARTER commissioning tool .....	287
8.5.1.1	Installing the STARTER commissioning tool .....	288
8.5.1.2	Layout of the STARTER user interface .....	288
8.5.2	Procedure for commissioning with STARTER .....	289
8.5.2.1	Creating the project .....	289
8.5.2.2	Configuring a drive unit .....	298
8.5.2.3	Starting the drive project .....	317
8.6	Activating function modules .....	321
8.6.1	Activating offline with STARTER .....	321
8.6.2	Activating online through parameters .....	323

8.7	Commissioning optional additional modules .....	324
8.7.1	Terminal Modules (TM31, TM15, TM150) .....	325
8.7.1.1	Commissioning with STARTER .....	325
8.7.1.2	Commissioning via parameter assignment.....	328
8.7.2	Encoder evaluation (SMC10, SMC30).....	328
8.7.2.1	Add/commissioning (with STARTER) .....	329
8.7.2.2	Removal (with STARTER) .....	333
8.7.3	CBE20 Communication Board Ethernet .....	333
8.7.3.1	Adding online into the drive .....	333
8.7.3.2	Adding offline in STARTER .....	334
8.7.3.3	Deleting from the drive online .....	335
8.7.3.4	Deleting offline with STARTER .....	335
8.8	Drive optimization .....	336
8.9	Manual optimization .....	344
8.9.1	Optimization of closed-loop armature current control.....	344
8.9.2	Optimization of closed-loop field-current control .....	346
8.9.3	Optimizing the speed controller .....	347
<b>9</b>	<b>Operation.....</b>	<b>349</b>
9.1	Basic information .....	349
9.1.1	Parameter .....	349
9.1.2	Data sets .....	353
9.1.2.1	Function diagrams and parameters .....	355
9.1.2.2	Using data sets .....	356
9.1.3	Drive objects .....	357
9.1.4	Memory card functions.....	359
9.1.5	BICO technology: Interconnecting signals.....	364
9.1.5.1	Binectors, connectors .....	365
9.1.5.2	Interconnecting signals using BICO technology .....	366
9.1.5.3	Internal encoding of the binector/connector output parameters .....	367
9.1.5.4	Example: Interconnecting digital signals.....	367
9.1.5.5	Information on BICO technology .....	368
9.2	Parameterizing using the BOP20 (Basic Operator Panel 20).....	368
9.2.1	General information about the BOP20.....	368
9.2.2	Displays and using the BOP20 .....	373
9.2.3	Displaying faults and alarms.....	378
9.2.4	Controlling the drive using the BOP20.....	379
9.3	Controlling via the AOP30 operator panel .....	380
9.3.1	Overview and menu structure .....	381
9.3.2	Menu: Operation screen .....	383
9.3.3	Parameterization menu.....	384
9.3.4	Menu: Fault/alarm memory .....	385
9.3.5	Menu: Commissioning/Service .....	386
9.3.5.1	Drive commissioning.....	386
9.3.5.2	Device commissioning .....	387
9.3.5.3	AOP settings .....	387
9.3.5.4	Lists of signals for the operation screen .....	389
9.3.5.5	AOP30 diagnostics .....	392
9.3.6	Sprachauswahl/Language selection .....	393
9.3.7	Operation via the operator panel (LOCAL mode).....	393

9.3.7.1	LOCAL/REMOTE key .....	393
9.3.7.2	ON key/OFF key .....	394
9.3.7.3	CCW/CW changeover .....	395
9.3.7.4	Jogging .....	395
9.3.7.5	Increase setpoint/Decrease setpoint .....	395
9.3.7.6	AOP setpoint .....	396
9.3.7.7	Inhibiting AOP LOCAL mode .....	396
9.3.7.8	Acknowledging errors via the AOP .....	397
9.3.7.9	Timeout monitoring .....	397
9.3.7.10	Operator inhibit lock/Parameters disable .....	397
9.3.8	Faults and alarms .....	399
9.3.9	Saving the parameters permanently .....	401
9.3.10	Parameterization errors .....	401
9.3.11	Assigning parameters to make AOP30 time-of-day master .....	402
<b>10</b>	<b>Descriptions of functions .....</b>	<b>403</b>
10.1	Inputs/outputs .....	403
10.1.1	Overview of inputs/outputs .....	403
10.1.2	Digital inputs/outputs .....	403
10.1.3	Analog inputs .....	404
10.1.4	Analog outputs .....	405
10.2	Communication, IT security .....	405
10.3	Communication according to PROFIdrive .....	405
10.3.1	Application classes .....	408
10.3.2	Cyclic communication .....	410
10.3.2.1	Telegrams and process data .....	410
10.3.2.2	Description of control words and setpoints .....	413
10.3.2.3	Description of status words and actual values .....	419
10.3.2.4	Control and status words for encoders .....	424
10.3.2.5	Extended encoder evaluation .....	433
10.3.2.6	Central control and status words .....	433
10.3.2.7	Diagnostics channels for cyclic communication .....	436
10.3.3	Parallel operation of communication interfaces .....	438
10.3.4	Acyclic communication .....	441
10.3.4.1	General information about acyclic communication .....	441
10.3.4.2	Structure of orders and responses .....	443
10.3.4.3	Determining the drive object numbers .....	449
10.3.4.4	Example 1: Read parameters .....	449
10.3.4.5	Example 2: Write parameters (multi-parameter request) .....	452
10.4	Communication via PROFIBUS DP .....	455
10.4.1	PROFIBUS connection .....	455
10.4.2	General information about PROFIBUS .....	457
10.4.2.1	General information about PROFIBUS for SINAMICS .....	457
10.4.2.2	Example of a telegram structure for acyclic data acquisition .....	459
10.4.3	Commissioning PROFIBUS .....	461
10.4.3.1	Setting the PROFIBUS interface .....	461
10.4.3.2	PROFIBUS interface in operation .....	462
10.4.3.3	Commissioning PROFIBUS .....	463
10.4.3.4	Diagnostics options .....	464
10.4.3.5	SIMATIC HMI addressing .....	464
10.4.3.6	Monitoring, telegram failure .....	466

10.4.4	Direct data exchange .....	468
10.4.4.1	Setpoint assignment in the subscriber .....	470
10.4.4.2	Activating/parameterizing slave-to-slave communication .....	470
10.4.4.3	Commissioning of the PROFIBUS slave-to-slave communication .....	472
10.4.4.4	GSD during operation .....	481
10.4.4.5	Diagnostics of the PROFIBUS slave-to-slave communication in STARTER .....	482
10.4.5	Messages via diagnostics channels .....	482
10.5	Communication via PROFINET IO .....	485
10.5.1	Activating online mode: STARTER via PROFINET IO .....	485
10.5.2	General information about PROFINET IO .....	491
10.5.2.1	Real-time (RT) and isochronous real-time (IRT) communication .....	492
10.5.2.2	Addresses .....	493
10.5.2.3	Data transmission .....	494
10.5.2.4	Communication channels for PROFINET .....	496
10.5.3	Drive control with PROFINET .....	496
10.5.3.1	Media redundancy .....	499
10.5.4	RT classes for PROFINET IO .....	499
10.5.5	PROFINET GSDML .....	505
10.5.6	Communication with CBE20 .....	505
10.5.7	Messages via diagnostics channels .....	506
10.5.8	Support of I&M data sets 1...4 .....	510
10.6	Communication via SINAMICS Link .....	512
10.6.1	Basic principles of SINAMICS Link .....	512
10.6.2	Topology .....	514
10.6.3	Configuring and commissioning .....	515
10.6.4	Example .....	520
10.6.5	Communication failure when booting or in cyclic operation .....	522
10.6.6	Examples: Transmission times for SINAMICS Link .....	523
10.6.7	Function diagrams and parameters .....	524
10.7	EtherNet/IP .....	525
10.7.1	Connection of SINAMICS DCM with EtherNet/IP to Ethernet networks .....	525
10.7.2	Configuration of SINAMICS DCM for EtherNet/IP .....	526
10.7.2.1	Setting the IP address and activating the EtherNet/IP protocol .....	526
10.7.2.2	Communication with the SINAMICS DCM .....	527
10.7.3	Examples of the use of a Rockwell PLC .....	533
10.7.3.1	Configuration of a Rockwell PLC for the communication with SINAMICS DCM .....	533
10.7.3.2	Writing and reading parameters with Class 4xx .....	536
10.8	Communication via Modbus TCP .....	538
10.8.1	Overview .....	538
10.8.2	Configuring Modbus TCP via interface X1400 .....	539
10.8.3	Mapping tables .....	540
10.8.4	Read and write access using function codes .....	543
10.8.5	Communication via data set 47 .....	545
10.8.5.1	Communication details .....	546
10.8.5.2	Examples: Read parameter .....	547
10.8.5.3	Examples: Write parameter .....	548
10.8.6	Communication sequence .....	549
10.8.7	Messages and parameters .....	550
10.9	Serial interface with USS protocol .....	551

10.10	Switch on, switch off, enable.....	552
10.10.1	Switch on/Switch off (ON/OFF1) – Control word bit 0.....	552
10.10.2	OFF2 (disconnection) – Control word bit 1 .....	555
10.10.3	OFF3 (quick stop) – Control word bit 2 .....	555
10.10.4	Operation enable (enable) – Control word bit 3 .....	557
10.11	Safety shutdown (E-STOP).....	557
10.12	Setpoint channel .....	558
10.12.1	Ramp-function generator .....	558
10.12.2	Jog .....	563
10.12.3	Creep .....	564
10.12.4	Fixed setpoint.....	565
10.13	Encoder evaluation .....	566
10.13.1	Actual speed values .....	567
10.13.2	Control and status words for encoders .....	568
10.14	Speed controller .....	568
10.15	Adaptation of the armature and field current controller .....	572
10.16	Technology controller.....	575
10.17	Switch-on command for holding or operational brake .....	578
10.18	Switching on auxiliary circuits .....	581
10.19	Operating hours counter, unit fan .....	581
10.20	Thermal overload protection for the DC motor ( $I^2t$ monitoring of the motor) .....	582
10.21	Measuring the motor temperature.....	587
10.22	Speed-dependent current limitation .....	588
10.23	Dynamic overload capability of the power unit .....	591
10.23.1	Overview of functions.....	591
10.23.2	Configuring for dynamic overload capability .....	592
10.24	Sensor for the ambient and/or air intake temperature .....	595
10.25	Calculating the thyristor blocking voltage .....	596
10.26	Automatic restart.....	598
10.27	Operation on a single-phase line supply.....	598
10.28	Connecting units in parallel and in series .....	600
10.28.1	6-pulse parallel connection .....	603
10.28.2	12-pulse parallel connection .....	609
10.28.3	6-pulse series connection .....	611
10.28.4	6-pulse series connection: controlled converter + uncontrolled converter .....	614
10.28.5	12-pulse series connection .....	616
10.28.6	12-pulse series connection: controlled converter + uncontrolled converter .....	618
10.28.7	Switchover of the power unit topology - option S50.....	619
10.29	Field reversal.....	620
10.29.1	Direction of rotation reversal using field reversal.....	620
10.29.2	Braking using field reversal.....	622



10.30	Serial interface with peer-to-peer protocol.....	624
10.30.1	Examples of peer-to-peer connections .....	626
10.31	Expanding the SINAMICS DCM to include a second CUD .....	628
10.32	Terminal Module Cabinet TMC (option G63).....	631
10.33	Runtime (operating hours counter) .....	631
10.34	Diagnostics .....	632
10.34.1	Diagnostic memory .....	632
10.34.2	Trend recorder function.....	633
10.34.3	Thyristor diagnostics .....	633
10.34.4	Description of the LEDs on the CUD .....	635
10.34.5	Diagnostics via STARTER.....	638
10.34.5.1	Function generator .....	639
10.34.5.2	Trace function .....	642
10.34.6	Faults and alarms .....	648
10.34.6.1	General information .....	648
10.34.6.2	Buffer for faults and alarms.....	651
10.34.6.3	Configuring messages .....	654
10.34.6.4	Parameters and function diagrams for faults and alarms .....	656
10.34.6.5	Forwarding faults and alarms .....	657
10.35	CPU time load with SINAMICS DCM.....	657
10.35.1	Maximum configuration.....	659
10.35.2	Computation examples .....	660
10.36	Free function blocks.....	661
10.37	Drive Control Chart (DCC).....	663
10.37.1	Loading the DCC technology option into the drive unit memory .....	664
10.37.2	CPU time load through DCC.....	666
10.37.3	Memory load through DCC .....	667
10.37.4	Backing up the DCC diagrams .....	668
10.38	Write and know-how protection .....	669
10.38.1	Write protection.....	669
10.38.2	Know-how protection .....	671
10.38.2.1	Copy protection.....	674
10.38.2.2	Configuring know-how protection .....	674
10.38.2.3	Loading know-how protected data to the file system.....	678
10.38.3	Overview of important parameters.....	683
<b>11</b>	<b>Maintenance .....</b>	<b>685</b>
11.1	Upgrading firmware releases.....	686
11.1.1	Upgrading the device firmware .....	687
11.1.2	Upgrading the DCC technology option .....	690
11.2	Replacing components .....	692
11.2.1	Replacing the fan.....	692
11.2.2	Replacing fuses .....	698
11.2.3	Replacing the CUD .....	700
11.3	Replacing the back-up battery in the AOP30 operator panel .....	702

<b>12</b>	<b>Applications .....</b>	<b>705</b>
12.1	Using SINAMICS DCM in shipbuilding .....	705
12.2	Connecting an incremental encoder .....	705
12.3	Use of the SINAMICS DCM in galvanizing and dip-painting plants.....	706
12.4	Using SINAMICS DCM as thyristor controller in heating applications.....	708
<b>13</b>	<b>Functional safety.....</b>	<b>709</b>
13.1	Functional safety: Deactivated – Activated .....	709
13.2	General technical specifications of the DCM (6RA80).....	709
13.3	Standards.....	710
13.4	Fundamental safety technology principles.....	711
13.4.1	Standard stop functions .....	711
13.4.1.1	Emergency Off and Emergency Stop .....	711
13.4.2	Standard safety functions according to EN 61800-5-2 .....	712
13.4.2.1	Safe Torque Off (STO).....	712
13.4.2.2	Safe Stop 1 (SS1-t, time controlled) .....	712
13.4.3	Safety functions of the SINAMICS DC MASTER.....	713
13.5	Application examples .....	714
13.6	Validating/checking the safety functions.....	722
13.7	Diagnostics test.....	722
13.8	Relationship between the test stop interval and SIL or PL and Cat. ....	722
13.9	Circuit breakers and power contactors .....	723
13.10	Recommended safety relays .....	728
<b>A</b>	<b>Appendix A .....</b>	<b>729</b>
A.1	Certifications and standards .....	729
A.2	List of abbreviations .....	732
A.3	Environmental compatibility .....	740
A.4	Servicing .....	741
<b>B</b>	<b>Appendix B .....</b>	<b>743</b>
B.1	Runtimes of the DCC blocks for SINAMICS DCM.....	743
B.2	BOP20 status display during power-up .....	748
	<b>Index .....</b>	<b>749</b>

# Safety instructions

## 1.1 General safety instructions



### WARNING

#### Electric shock and danger to life due to other energy sources

Touching live components can result in death or serious injury.

- Only work on electrical equipment if you are appropriately qualified.
- Always observe the country-specific safety rules for all work.

Generally, the following six steps apply when establishing safety:

1. Prepare for disconnection. Notify all those who will be affected by the procedure.
2. Isolate the drive system from the power supply and take measures to prevent it being switched back on again.
3. Wait until the discharge time specified on the warning labels has elapsed.
4. Check that there is no voltage between any of the power connections, and between any of the power connections and the protective conductor connection.
5. Check whether the existing auxiliary supply circuits are de-energized.
6. Ensure that the motors cannot move.
7. Identify all other dangerous energy sources, e.g. compressed air, hydraulic systems, or water. Switch the energy sources to a safe state.
8. Check that the correct drive system is completely locked.

After you have completed the work, restore the operational readiness by following the above steps in the reverse order.




### WARNING

#### Electric shock due to connection to an unsuitable power supply


When equipment is connected to an unsuitable power supply, exposed components may carry a hazardous voltage that might result in serious injury or death.

- Only use power supplies that provide SELV (Safety Extra Low Voltage) or PELV (Protective Extra Low Voltage) output voltages for all connections and terminals of the electronics modules.




 <b>WARNING</b>
<b>Electric shock due to equipment damage</b>
Improper handling may cause damage to equipment. For damaged devices, hazardous voltages can be present at the enclosure or at exposed components; if touched, this can result in death or severe injury.
<ul style="list-style-type: none"><li>• Ensure compliance with the limit values specified in the technical data during transport, storage and operation.</li><li>• Do not use any damaged devices.</li></ul>

 


 <b>WARNING</b>
<b>Electric shock due to unconnected cable shield</b>
Hazardous touch voltages can occur through capacitive cross-coupling due to unconnected cable shields.
<ul style="list-style-type: none"><li>• Connect cable shields and unused conductors of power cables (e.g. brake conductors) at least on one side to the grounded housing potential.</li></ul>




 <b>WARNING</b>
<b>Electric shock if there is no ground connection</b>
For missing or incorrectly implemented protective conductor connection for devices with protection class I, high voltages can be present at open, exposed parts, which when touched, can result in death or severe injury.
<ul style="list-style-type: none"><li>• Ground the device in compliance with the applicable regulations.</li></ul>



 <b>WARNING</b>
<b>Arcing when a plug connection is opened during operation</b>
Opening a plug connection when a system is in operation can result in arcing that may cause serious injury or death.
<ul style="list-style-type: none"><li>• Only open plug connections when the equipment is in a voltage-free state, unless it has been explicitly stated that they can be opened in operation.</li></ul>



 <b>WARNING</b>
<b>Electric shock due to residual charges in power components</b>
Because of the capacitors, a hazardous voltage is present for up to 5 minutes after the power supply has been switched off. Contact with live parts can result in death or serious injury.
<ul style="list-style-type: none"><li>• Wait for 5 minutes before you check that the unit really is in a no-voltage condition and start work.</li></ul>

**NOTICE****Property damage due to loose power connections**

Insufficient tightening torques or vibration can result in loose power connections. This can result in damage due to fire, device defects, or malfunctions.

- Tighten all power connections to the prescribed torque.
- Check all power connections at regular intervals, particularly after equipment has been transported.

 **WARNING****Spread of fire from built-in devices**

In the event of fire outbreak, the enclosures of built-in devices cannot prevent the escape of fire and smoke. This can result in serious personal injury or property damage.

- Install built-in units in a suitable metal cabinet in such a way that personnel are protected against fire and smoke, or take other appropriate measures to protect personnel.
- Ensure that smoke can only escape via controlled and monitored paths.

 **WARNING****Failure of pacemakers or implant malfunctions due to electromagnetic fields**

Electromagnetic fields (EMF) are generated by the operation of electrical power equipment, such as transformers, converters, or motors. People with pacemakers or implants in the immediate vicinity of this equipment are at particular risk.

- If you have a heart pacemaker or implant, maintain a minimum distance of 2 m from electrical power equipment.

 **WARNING****Unexpected movement of machines caused by radio devices or mobile phones**

When radio devices or mobile phones with a transmission power  $> 1$  W are used in the immediate vicinity of components, they may cause the equipment to malfunction.

Malfunctions may impair the functional safety of machines and can therefore put people in danger or lead to property damage.

- If you come closer than around 2 m to such components, switch off any radio devices or mobile phones.
- Use the "SIEMENS Industry Online Support App" only on equipment that has already been switched off.

 **WARNING**

**Motor fire in the event of insulation overload**

There is higher stress on the motor insulation through a ground fault in an IT system. If the insulation fails, it is possible that death or severe injury can occur as a result of smoke and fire.

- Use a monitoring device that signals an insulation fault.
- Correct the fault as quickly as possible so the motor insulation is not overloaded.

 **WARNING**

**Fire due to inadequate ventilation clearances**

Inadequate ventilation clearances can cause overheating of components with subsequent fire and smoke. This can cause severe injury or even death. This can also result in increased downtime and reduced service lives for devices/systems.

- Ensure compliance with the specified minimum clearance as ventilation clearance for the respective component.

 **WARNING**

**Unrecognized dangers due to missing or illegible warning labels**

Dangers might not be recognized if warning labels are missing or illegible. Unrecognized dangers may cause accidents resulting in serious injury or death.

- Check that the warning labels are complete based on the documentation.
- Attach any missing warning labels to the components, where necessary in the national language.
- Replace illegible warning labels.

**NOTICE**

**Device damage caused by incorrect voltage/insulation tests**

Incorrect voltage/insulation tests can damage the device.


- Before carrying out a voltage/insulation check of the system/machine, disconnect the devices as all inverters and motors have been subject to a high voltage test by the manufacturer, and therefore it is not necessary to perform an additional test within the system/machine.

 **CAUTION**


**Hot component surfaces**

Certain components (e.g. the heat sink and reactor) can become very hot during operation. These components can remain hot for a long time after operation. Contact can result in serious injury, such as skin burns.

- Do not touch hot components, even after you have switched off the device.

 <b>WARNING</b>
<b>Unexpected movement of machines caused by inactive safety functions</b> Inactive or non-adapted safety functions can trigger unexpected machine movements that may result in serious injury or death. <ul style="list-style-type: none"><li>• Observe the information in the appropriate product documentation before commissioning.</li><li>• Carry out a safety inspection for functions relevant to safety on the entire system, including all safety-related components.</li><li>• Ensure that the safety functions used in your drives and automation tasks are adjusted and activated through appropriate parameterizing.</li><li>• Carry out a function test.</li><li>• Only put your plant into live operation once you have guaranteed that the functions relevant to safety are running correctly.</li></ul>

## 1.2 Hearing protection

 <b>WARNING</b>
<b>Damage to hearing due to lack of hearing protection</b> In general, wearing hearing protection is required or recommended for a sound level of $\geq 80$ dB(A). <ul style="list-style-type: none"><li>• Note the regional regulations for the use of hearing protection.</li><li>• The noise emission is specified in the tables in Chapter "Unit data (Page 45)" in the line, fan noise.</li></ul>

## 1.3 Warning note relating to the off button of the AOP30

---

### Note

The OFF switch on the AOP30 operator panel does not have an EMERGENCY OFF function.

The OFF switch on the AOP30 operator panel does not have an STO function regarding functional safety.

---

## 1.4 ESD-sensitive components

Electrostatic sensitive devices (ESD) are individual components, integrated circuits, modules or devices that may be damaged by either electric fields or electrostatic discharge.



### NOTICE

#### Damage caused by electric fields or electrostatic discharge

Electric fields or electrostatic discharge can cause malfunctions through damaged individual components, integrated circuits, modules or devices.


- Only pack, store, transport and send electronic components, modules or devices in their original packaging or in other suitable materials, e.g. conductive foam rubber or aluminum foil.
- Only touch components, modules and devices when you are grounded by one of the following methods:
  - Wearing an ESD wrist strap
  - Wearing ESD shoes or ESD grounding straps in ESD areas with conductive flooring
- Only place electronic components, modules or devices on conductive surfaces (table with ESD surface, conductive ESD foam, ESD packaging, ESD transport container).

The necessary ESD protection measures are elucidated once again in the following illustration:

Seated

Standing

Seated/standing

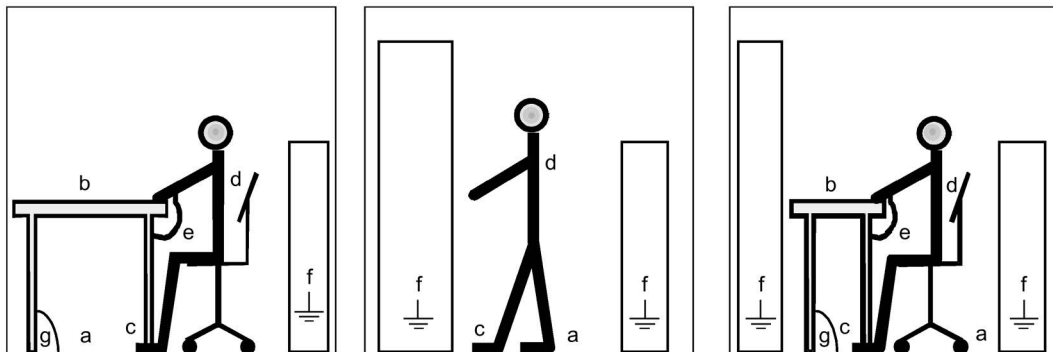

- a Conductive floor
- b ESD Table
- c ESD footwear

- d ESD overall
- e ESD wrist strap
- f Cubicle ground connection



## 1.5 Industrial security

---

### Note

#### Industrial Security

Siemens provides products and solutions with industrial security functions that support the secure operation of plants, systems, machines and networks.

In order to protect plants, systems, machines and networks against cyber threats, it is necessary to implement – and continuously maintain – a holistic, state-of-the-art Industrial Security concept. Siemens products and solutions only represent one component of such a concept.

The customer is solely responsible for preventing unauthorized access to its plants, systems, machines and networks. Systems, machines and components should only be connected to the company's network or the internet if and to the extent necessary and with appropriate security measures (e.g. use of firewalls and network segmentation) in place.

Additionally, Siemens' guidance on appropriate security measures should be taken into account. For more information about Industrial Security, please visit:

Industrial Security (<http://www.siemens.com/industrialsecurity>).

Siemens' products and solutions undergo continuous development to make them more secure. Siemens strongly recommends to apply product updates as soon as available and to always use the latest product versions. Use of product versions that are no longer supported, and failure to apply latest updates may increase customer's exposure to cyber threats.

To stay informed about product updates, subscribe to the Siemens Industrial Security RSS Feed at:

Industrial Security (<http://www.siemens.com/industrialsecurity>).

---

### WARNING

#### Unsafe operating states resulting from software manipulation

Software manipulation (e.g. viruses, trojans, malware or worms) can cause unsafe operating states in your system that may lead to death, serious injury, and property damage.

- Keep the software up to date.
- Incorporate the automation and drive components into a holistic, state-of-the-art industrial security concept for the installation or machine.
- Make sure that you include all installed products into the holistic industrial security concept.
- Protect files stored on exchangeable storage media from malicious software by applying suitable protection measures, e.g. virus scanners.

---

### Note

#### Industrial security Configuration Manual

You can find a Configuration Manual on the topic of industrial security at this address (<https://support.industry.siemens.com/cs/ww/en/view/108862708>).

---

## 1.6 Residual risks of power drive systems

When assessing the machine or system-related risk in accordance with the respective local regulations (e.g. EC Machinery Directive), the machine manufacturer or system installer must take into account the following residual risks emanating from the control and drive components of a drive system:

1. Unintentional movements of the driven machine or system components during commissioning, operation, maintenance, and repairs caused by, for example:
  - Hardware and/or software errors in the sensors, control system, actuators and connection system
  - Response times of the controller and drive
  - Operation and/or environmental conditions outside the specifications
  - Condensation/conductive pollution
  - Parameterization, programming, cabling, and installation errors
  - Use of wireless devices/mobile phones in the immediate vicinity of electronic components
  - External influences/damage
  - X-ray, ionizing radiation and cosmic radiation
2. Unusually high temperatures, including open flames, as well as the emission of light, noise, particles, gases, etc., can occur inside and outside the components under fault conditions caused by, for example:
  - Component malfunctions
  - Software errors
  - Operation and/or environmental conditions outside the specifications
  - External influences/damage
3. Hazardous shock voltages caused by, for example:
  - Component malfunctions
  - Influence of electrostatic charging
  - Induction of voltages in moving motors
  - Operation and/or environmental conditions outside the specifications
  - Condensation/conductive pollution
  - External influences/damage
4. Electrical, magnetic and electromagnetic fields generated in operation that can pose a risk to people with a pacemaker, implants or metal replacement joints, etc., if they are too close
5. Release of environmental pollutants or emissions as a result of improper operation of the system and/or failure to dispose of components safely and correctly
6. Influence of network-connected communication systems, e.g. ripple-control transmitters or data communication via the network.

For more information about residual risks of the components in a drive system, see the relevant sections in the technical user documentation.

## Type spectrum, ordering information



Figure 2-1 Type series

### 2.1 Device article numbers

---

**Note**

Devices with a rated input voltage above 400 V AC are also suitable for a supply voltage of 400 V AC.

---

2.1 Device article numbers

2Q devices				
Armature supply voltage	Rated DC current	Rated DC voltage	Type designation	Article number MLFB
3-ph. 400 V AC	60 A	485 V	D485/60 Mre-GeE6S22	6RA8025-6DS22-0AA0
	90 A	485 V	D485/90 Mre-GeE6S22	6RA8028-6DS22-0AA0
	125 A	485 V	D485/125 Mre-GeE6S22	6RA8031-6DS22-0AA0
	210 A	485 V	D485/210 Mre-GeEF6S22	6RA8075-6DS22-0AA0
	280 A	485 V	D485/280 Mre-GeEF6S22	6RA8078-6DS22-0AA0
	400 A	485 V	D485/400 Mre-GeEF6S22	6RA8081-6DS22-0AA0
	600 A	485 V	D485/600 Mre-GeEF6S22	6RA8085-6DS22-0AA0
	850 A	485 V	D485/850 Mre-GeEF6S22	6RA8087-6DS22-0AA0
	1200 A	485 V	D485/1200 Mre-GeEF6S22	6RA8091-6DS22-0AA0
	1600 A	485 V	D485/1600 Mre-GeEF4S22	6RA8093-4DS22-0AA0
	2000 A	485 V	D485/2000 Mre-GeEF4S22	6RA8095-4DS22-0AA0
	3000 A	485 V	D485/3000 Mre-GeEF4S22	6RA8098-4DS22-0AA0
3-ph. 480 V AC	60 A	550 V	D575/60 Mre-GeE6S22	6RA8025-6FS22-0AA0
	90 A	550 V	D575/90 Mre-GeE6S22	6RA8028-6FS22-0AA0
	125 A	550 V	D575/125 Mre-GeE6S22	6RA8031-6FS22-0AA0
	210 A	550 V	D575/210 Mre-GeEF6S22	6RA8075-6FS22-0AA0
	280 A	550 V	D575/280 Mre-GeEF6S22	6RA8078-6FS22-0AA0
	450 A	550 V	D575/450 Mre-GeEF6S22	6RA8082-6FS22-0AA0
	600 A	550 V	D575/600 Mre-GeEF6S22	6RA8085-6FS22-0AA0
	850 A	550 V	D575/850 Mre-GeEF6S22	6RA8087-6FS22-0AA0
	1200 A	550 V	D575/1200 Mre-GeEF6S22	6RA8091-6FS22-0AA0
	3-ph. 575 V AC	60 A	690 V	D690/60 Mre-GeE6S22
125 A		690 V	D690/125 Mre-GeE6S22	6RA8031-6GS22-0AA0
210 A		690 V	D690/210 Mre-GeEF6S22	6RA8075-6GS22-0AA0
400 A		690 V	D690/400 Mre-GeEF6S22	6RA8081-6GS22-0AA0
600 A		690 V	D690/600 Mre-GeEF6S22	6RA8085-6GS22-0AA0
800 A		690 V	D690/800 Mre-GeEF6S22	6RA8087-6GS22-0AA0
1100 A		690 V	D690/1100 Mre-GeEF6S22	6RA8090-6GS22-0AA0
1600 A		690 V	D690/1600 Mre-GeEF4S22	6RA8093-4GS22-0AA0
2000 A		690 V	D690/2000 Mre-GeEF4S22	6RA8095-4GS22-0AA0
2200 A		690 V	D690/2200 Mre-GeEF4S22	6RA8096-4GS22-0AA0
2800 A		690 V	D690/2800 Mre-GeEF4S22	6RA8097-4GS22-0AA0
3-ph. 690 V AC		720 A	830 V	D830/720 Mre-GeEF6S22
	1000 A	830 V	D830/1000 Mre-GeEF6S22	6RA8090-6KS22-0AA0
	1500 A	830 V	D830/1500 Mre-GeEF4S22	6RA8093-4KS22-0AA0
	2000 A	830 V	D830/2000 Mre-GeEF4S22	6RA8095-4KS22-0AA0
	2600 A	830 V	D830/2600 Mre-GeEF4S22	6RA8097-4KS22-0AA0
3-ph. 830 V AC	950 A	1000 V	D1000/950 Mre-GeEF6S22	6RA8088-6LS22-0AA0
	1500 A	1000 V	D1000/1500 Mre-GeEF4S22	6RA8093-4LS22-0AA0
	1900 A	1000 V	D1000/1900 Mre-GeEF4S22	6RA8095-4LS22-0AA0
3-ph. 950 V AC	2200 A	1140 V	D1140/2200 Mre-GeEF4S22	6RA8096-4MS22-0AA0


4Q devices				
Armature supply voltage	Rated DC current	Rated DC voltage	Type designation	Article number MLFB
3-ph. 400 V AC	15 A	420 V	D420/15 Mreq-GeG6V62	6RA8013-6DV62-0AA0
	30 A	420 V	D420/30 Mreq-GeG6V62	6RA8018-6DV62-0AA0
	60 A	420 V	D420/60 Mreq-GeG6V62	6RA8025-6DV62-0AA0
	90 A	420 V	D420/90 Mreq-GeG6V62	6RA8028-6DV62-0AA0
	125 A	420 V	D420/125 Mreq-GeG6V62	6RA8031-6DV62-0AA0
	210 A	420 V	D420/210 Mreq-GeGF6V62	6RA8075-6DV62-0AA0
	280 A	420 V	D420/280 Mreq-GeGF6V62	6RA8078-6DV62-0AA0
	400 A	420 V	D420/400 Mreq-GeGF6V62	6RA8081-6DV62-0AA0
	600 A	420 V	D420/600 Mreq-GeGF6V62	6RA8085-6DV62-0AA0
	850 A	420 V	D420/850 Mreq-GeGF6V62	6RA8087-6DV62-0AA0
	1200 A	420 V	D420/1200 Mreq-GeGF6V62	6RA8091-6DV62-0AA0
	1600 A	420 V	D420/1600 Mreq-GeGF4V62	6RA8093-4DV62-0AA0
	2000 A	420 V	D420/2000 Mreq-GeGF4V62	6RA8095-4DV62-0AA0
	3000 A	420 V	D420/3000 Mreq-GeGF4V62	6RA8098-4DV62-0AA0
3-ph. 480 V AC	15 A	500 V	D500/15 Mreq-GeG6V62	6RA8013-6FV62-0AA0
	30 A	500 V	D500/30 Mreq-GeG6V62	6RA8018-6FV62-0AA0
	60 A	500 V	D500/60 Mreq-GeG6V62	6RA8025-6FV62-0AA0
	90 A	500 V	D500/90 Mreq-GeG6V62	6RA8028-6FV62-0AA0
	125 A	500 V	D500/125 Mreq-GeG6V62	6RA8031-6FV62-0AA0
	210 A	500 V	D500/210 Mreq-GeGF6V62	6RA8075-6FV62-0AA0
	280 A	500 V	D500/280 Mreq-GeGF6V62	6RA8078-6FV62-0AA0
	450 A	500 V	D500/450 Mreq-GeGF6V62	6RA8082-6FV62-0AA0
	600 A	500 V	D500/600 Mreq-GeGF6V62	6RA8085-6FV62-0AA0
	850 A	500 V	D500/850 Mreq-GeGF6V6	6RA8087-6FV62-0AA0
	1200 A	500 V	D500/1200 Mreq-GeGF6V62	6RA8091-6FV62-0AA0
	3-ph. 575 V AC	60 A	600 V	D600/60 Mreq-GeG6V62
125 A		600 V	D600/125 Mreq-GeG6V62	6RA8031-6GV62-0AA0
210 A		600 V	D600/210 Mreq-GeGF6V62	6RA8075-6GV62-0AA0
400 A		600 V	D600/400 Mreq-GeGF6V62	6RA8081-6GV62-0AA0
600 A		600 V	D600/600 Mreq-GeGF6V62	6RA8085-6GV62-0AA0
850 A		600 V	D600/850 Mreq-GeGF6V62	6RA8087-6GV62-0AA0
1100 A		600 V	D600/1100 Mreq-GeGF6V62	6RA8090-6GV62-0AA0
1600 A		600 V	D600/1600 Mreq-GeGF4V62	6RA8093-4GV62-0AA0
2000 A		600 V	D600/2000 Mreq-GeGF4V62	6RA8095-4GV62-0AA0
2200 A		600 V	D600/2200 Mreq-GeGF4V62	6RA8096-4GV62-0AA0
2800 A		600 V	D600/2800 Mreq-GeGF4V62	6RA8097-4GV62-0AA0
3-ph. 690 V AC	760 A	725 V	D725/760 Mreq-GeGF6V62	6RA8086-6KV62-0AA0
	1000 A	725 V	D725/1000 Mreq-GeGF6V62	6RA8090-6KV62-0AA0
	1500 A	725 V	D725/1500 Mreq-GeGF4V62	6RA8093-4KV62-0AA0
	2000 A	725 V	D725/2000 Mreq-GeGF4V62	6RA8095-4KV62-0AA0
	2600 A	725 V	D725/2600 Mreq-GeGF4V62	6RA8097-4KV62-0AA0
3-ph. 830 V AC	950 A	875 V	D875/950 Mreq-GeGF6V62	6RA8088-6LV62-0AA0
	1500 A	875 V	D875/1500 Mreq-GeGF4V62	6RA8093-4LV62-0AA0
	1900 A	875 V	D875/1900 Mreq-GeGF4V62	6RA8095-4LV62-0AA0
3-ph. 950 V AC	2200 A	1000 V	D1000/2200 Mreq-GeGF4V62	6RA8096-4MV62-0AA0

## 2.2 Key for the device article numbers

① 6RA defined according to the general guidelines for MLFB				
② Device version				
23: SIMOREG compact unit, 4th generation analog		70: SIMOREG DC MASTER		
24: SIMOREG compact unit, 4th generation digital		80: SINAMICS DCM		
③ Rated DC currents and cooling				
Natural air cooling, ambient temperature +45 °C				
00: -	10: ≥ 10.0... < 11.5	20: ≥ 31.5... < 36.0	30: ≥ 100... < 115	40: -
01: ≥ 3.6... < 4.1	11: ≥ 11.5... < 13.0	21: ≥ 36.0... < 41.0	31: ≥ 115... < 130	41: -
02: ≥ 4.1... < 4.65	12: ≥ 13.0... < 14.5	22: ≥ 41.0... < 46.5	32: ≥ 130... < 145	42: -
03: ≥ 4.65... < 5.25	13: ≥ 14.5... < 16.5	23: ≥ 46.5... < 52.5	33: ≥ 145... < 165	43: -
04: ≥ 5.25... < 6.0	14: ≥ 16.5... < 19.0	24: ≥ 52.5... < 60.0	34: ≥ 165... < 190	44: -
05: ≥ 6.0... < 6.8	15: ≥ 19.0... < 21.5	25: ≥ 60.0... < 68.0	35: ≥ 190... < 215	45: -
06: ≥ 6.8... < 7.75	16: ≥ 21.5... < 24.5	26: ≥ 68.0... < 77.5	36: ≥ 215... < 245	46: -
07: ≥ 7.75... < 8.8	17: ≥ 24.5... < 28.0	27: ≥ 77.5... < 88.0	37: ≥ 245... < 280	47: -
08: ≥ 8.8... < 10.0	18: ≥ 28.0... < 31.5	28: ≥ 88.0... < 100	38: ≥ 280... < 315	48: -
09: -	19: -	29: -	39: -	49: -
Forced ventilation, ambient temperature +35 °C. With 6RA70 and 6RA80 +40 °C.				
50: -	60: ≥ 31.5... < 36.0	70: ≥ 100... < 115	80: ≥ 315... < 360	90: ≥ 1000... < 1150
51: -	61: ≥ 36.0... < 41.0	71: ≥ 115... < 130	81: ≥ 360... < 410	91: ≥ 1150... < 1300
52: -	62: ≥ 41.0... < 46.5	72: ≥ 130... < 145	82: ≥ 410... < 465	92: ≥ 1300... < 1450
53: -	63: ≥ 46.5... < 52.5	73: ≥ 145... < 165	83: ≥ 465... < 525	93: ≥ 1450... < 1650
54: -	64: ≥ 52.5... < 60.0	74: ≥ 165... < 190	84: ≥ 525... < 600	94: ≥ 1650... < 1900
55: -	65: ≥ 60.0... < 68.0	75: ≥ 190... < 215	85: ≥ 600... < 680	95: ≥ 1900... < 2150
56: -	66: ≥ 68.0... < 77.5	76: ≥ 215... < 245	86: ≥ 680... < 775	96: ≥ 2150... < 2400
57: -	67: ≥ 77.5... < 88.0	77: ≥ 245... < 280	87: ≥ 775... < 880	97: ≥ 2400... < 2850
58: -	68: ≥ 88.0... < 100	78: ≥ 280... < 315	88: ≥ 880... < 1000	98: ≥ 2850... < 3250
59: -	69: -	79: -	89: -	99: -
④ Thyristor design and fuse design		⑤ Rated supply voltage		
0: Control Units without power unit 1: USA Power 2: USA Base 3: Disc-type thyristors, made in China 4: Disc-type thyristors with fuse construction 5: Thyristor modules, made in China 6: Thyristor modules 7: Rated DC current in acc. with ③ × 100 8: I IS		A: - B: 230 V C: - D: 400 V E: - F: 440 V - 480 V		G: 500 V - 575 V H: 660 V K: 690 V - 750 V L: 830 V M: 950 V


⑥ Converter circuit		⑦ Closed-loop control	
A: - B: - C: - D: B2HZ (1Q) ... K: (B2) A (B2) C (4Q) ...	S: B6C (2Q) T: - U: - V: (B6) A (B6) C (4Q)	0: No closed-loop control 1: 2Q, analog 2: 2Q, digital	6: 4Q digital 7: 4Q analog
		⑧ Closed-loop field control	
		0: No field 1: Field without closed-loop control	2: Field with closed-loop control
		⑨ Innovation	
		⑩ Z: With option	

## 2.3 Rating plates, packaging label

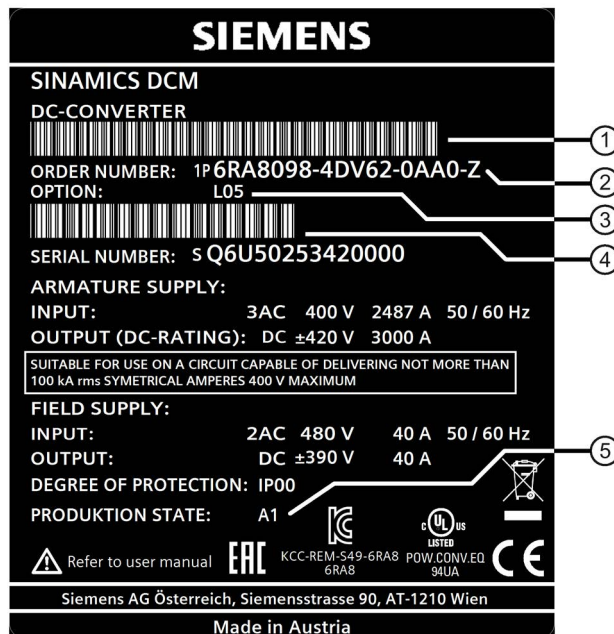


- ① Bar code for article number (MLFB)
- ② For options: "Z" after the article number
- ③ Order codes for options (according to ordering information for options) (order-specific)
- ④ Serial number bar code (order-specific)
- ⑤ Product version

Rating plate on front cover

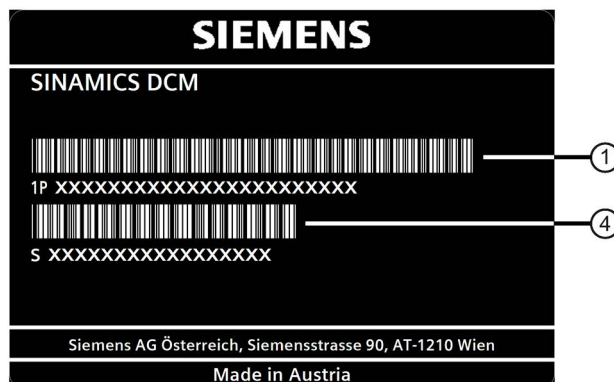

Rating plate in device

2.4 Ordering information for options and accessories

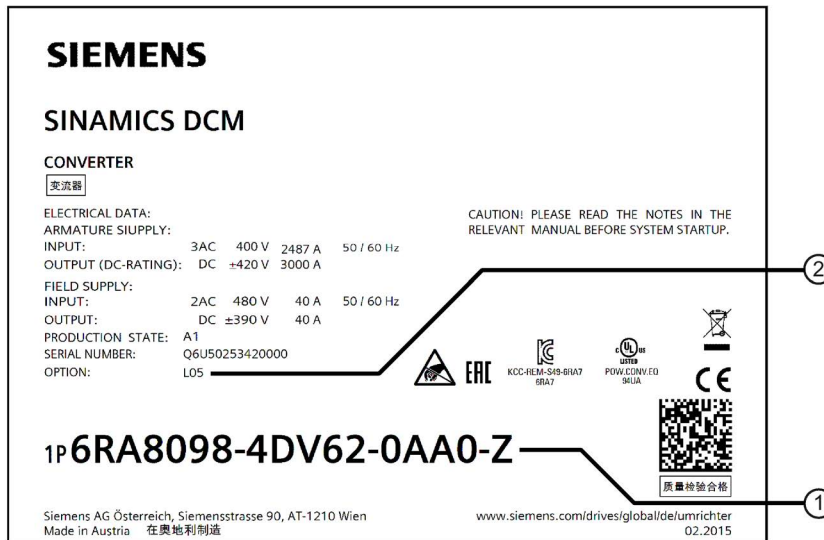


- ① For options: "Z" after the article number
- ② Order codes for options (according to ordering information for options)

Figure 2-2 Packaging label

## 2.4 Ordering information for options and accessories

### Ordering information for options with order codes

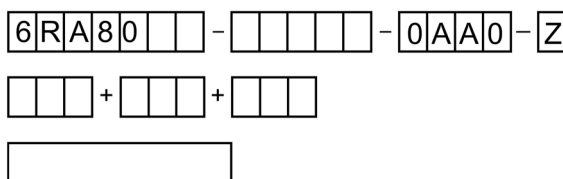

Article number of SINAMICS DCM with Z designation and order codes (multiple order codes together) and/or plain text, if necessary

Table 2- 1 Control Unit CUD options

Option	Order codes
Advanced CUD in left slot	G00
Standard CUD in right slot (possible with option G00)	G10
Advanced CUD in right slot (possible with option G00)	G11
CBE20 PROFINET, left (possible with option G00)	G20
CBE20 PROFINET, right (possible with option G11)	G21
Memory card, left	S01
Memory card, right (possible with options G10 and G11)	S02
Note: Standard equipment = Standard CUD, left	



Table 2- 2 Options field

Option	Order codes
2Q field power unit (not possible for 15 A and 30 A devices)	L11
No field power unit (not possible for 15 A and 30 A devices)	L10
Field power unit with 85 A rated current (possible for devices with rated armature DC current $\geq 1500$ A, in standard version and with option L11)	L85

Table 2- 3 Fan options

Option	Order codes
Device without fan (possible for devices with a rated armature DC current $\geq 1500$ A) Note: The air flow specified in the technical data must be maintained (fan air flow in m <sup>3</sup> /h).	L20
Fan for 1-phase connection (possible for devices with rated armature DC current 400 A to 1200 A)	L21

Table 2- 4 Additional options

Option	Order codes
Terminal Module Cabinet (TMC) Can be snapped onto a 35 mm mounting rail. Enables the simple connection of the CUD standard signals (X177) via spring-loaded terminals in an easily accessible area of the control cabinet. The CUD is equipped with an adapter board. Terminal Module Cabinet and connecting cable (3 m) are supplied separately. Notes: <ul style="list-style-type: none"> <li>In the device version with option G63, the X177 terminal connections are no longer available directly on the CUD.</li> <li>When ordering, please specify which CUD (in the left or right slot) is to be equipped with the option.</li> <li>If two CUDs are to be equipped with option G63, the option must be ordered for each CUD.</li> </ul>	G63
Armature infeed with extra-low voltage 10 V to 50 V (possible for devices with rated supply voltage $\leq 575$ V)	L04
Electronic power supply for connection to 24 V DC	L05
Sensor for the air intake temperature Possible as of firmware version 1.3 HF1	L15
Coated modules Coated modules increase the degree of ruggedness with respect to climatic effects: Relative / absolute humidity 5% to 95% / 1 to 29 g/m <sup>3</sup> for ambient temperature or cooling medium temperature $\leq 30$ °C $\leq 60\%$ with the occurrence of SO <sub>2</sub> and H <sub>2</sub> S and/or for ambient temperature or cooling medium temperature 30 °C to 40 °C Oil mist, salt mist, formation of ice, condensation, dropping, spray, splashing and jet-water not permissible.	M08

2.4 Ordering information for options and accessories

Option	Order codes
Nickel-plated copper bars (for devices with aluminum bars as standard, use of nickel-plated copper bars)	M10
Control for switching over the power unit topology for devices connected in parallel and series This option is described in the application document "12-pulse applications".	S50

Ordering information for accessories

Table 2- 5 Articles numbers for accessories

Article	Article number
Standard CUD retrofit kit Combination of the spare parts, Standard CUD and connector board	6RY1803-0AA00-0AA1 + 6RY1803-0GA00
Standard CUD coated retrofit kit Combination of the spare parts, Standard CUD coated and connector board coated	6RY1803-0AA20-0AA1 + 6RY1803-0GA20
Advanced CUD retrofit kit Combination of the spare parts, Advanced CUD and connector board	6RY1803-0AA05-0AA1 + 6RY1803-0GA00
Advanced CUD coated retrofit kit Combination of the spare parts, Advanced CUD coated and connector board coated	6RY1803-0AA25-0AA1 + 6RY1803-0GA20
CBE20 PROFINET	6SL3055-0AA00-2EB0
Memory card (equivalent to spare part for options S01 and S02)	6RX1800-0AS01
Terminal Module TM15	6SL3055-0AA00-3FA0
Terminal Module TM31	6SL3055-0AA00-3AA1
Terminal Module TM150	6SL3055-0AA00-3LA0
Sensor Module Cabinet-Mounted SMC10	6SL3055-0AA00-5AA3
Sensor Module Cabinet-Mounted SMC30	6SL3055-0AA00-5CA2
Mounting kit to increase the degree of protection to IP20 for 15 A to 30 A devices	6RX1800-0MA00
Mounting kit to increase the degree of protection to IP20 for 60 A to 280 A devices	6RX1800-0MA01
Mounting kit to increase the degree of protection to IP20 for 400 A to 600 A devices	6RX1800-0MA02
Mounting kit to increase the degree of protection to IP20 for 720 A to 850 A devices	6RX1800-0MA03
SICROWBAR overvoltage protection	Depending on device type <sup>1)</sup>
Firing Unit Trigger-Board	6RY1803-0CP00
Fuses	Depending on device type <sup>3)</sup>
Reactors	Depending on device type <sup>4)</sup>
RFI suppression filter	Depending on device type <sup>2)</sup>
STARTER commissioning tool	6SL3072-0AA00-0AG0
Drive Control Chart (DCC) for SINAMICS	6AU1810-1HA20-1XA0
Drive Control Chart (DCC) for SINAMICS and SIMOTION	6AU1810-1JA20-1XA0
<sup>1)</sup> Please contact your local Siemens office. <sup>2)</sup> See Chapter "RFI suppression filter (Page 103)" <sup>3)</sup> See Chapter "Fuses (Page 149)" as well as the catalogs and reference sources specified in this chapter <sup>4)</sup> See Chapter "Line reactors (Page 146)"	

Table 2- 6 Article numbers for the Advanced Operator Panel AOP30

Article	Article number
Advanced Operator Panel AOP30	6SL3055-0AA00-4CA4
RS485 connecting cable for connecting the AOP30 to one CUD; 3 m	6RY1807-0AP00
RS485 connecting cable for connecting the AOP30 to two CUDs; 3 m	6RY1807-0AP10
Additional cable lengths can be ordered as option. When ordering the RS485 cable with option, the suffix "-Z" must be attached to the article number followed by the order code for the required option. Ordering example for a 35 m long cable: Article number: 6RY1807-0AP00-Z, order code: K35	
Cable length	Order code
5 m	K05
10 m	K10
15 m	K15
20 m	K20
25 m	K25
30 m	K30
35 m	K35
40 m	K40
45 m	K45
50 m	K50

## 2.5 Accessories

### 2.5.1 Mounting kit to increase the degree of protection to IP20

#### IP20 according to EN 60529

The degree of protection indicates protection against touching and penetration of solid objects and/or water.

Units in the SINAMICS DCM range are delivered with degree of protection IP00 and therefore offer no protection against touching or penetration. The mounting kit for units with a rated DC current up to 850 A increases the degree of protection to IP20.

Degree of protection IP20 offer protection against touching with the finger and penetration of solid objects greater than 12.5 mm dia, but no protection against water.

See Chapter "Ordering information for options and accessories (Page 30)" for ordering data.



# Description

## Area of application

The SINAMICS DC MASTER converter units have been specifically designed to supply the armature and field of DC motors.

Alternative applications (e.g. supplying the field of a synchronous generator) are also possible.

## Design

SINAMICS DC MASTER converter units are compact units containing both the power unit for the armature supply and the power unit for the field supply, as well as the control electronics and possible additional modules.

In the case of units with a 15 A to 1200 A rated DC current, the power units for the armature and field include electrically insulated thyristor modules, meaning that the heat sink is at ground potential. In units with a higher rated DC current, the power unit for the armature circuit includes disc-type thyristors and heat sinks (thyristor modules) at voltage potential.

The units have degree of protection IP00.

The connecting terminals are accessible from the front. The fan supply is fed in from the top; depending on the unit type, the field supply is either fed in from the top or the bottom.

All SINAMICS DC MASTER units are equipped with a Basic Operator Panel BOP20 in the front plate.

The following conditions are enabled with the BOP20:

- Settings required for commissioning
- Display for all relevant measured values
- Display of faults and alarms and acknowledgment of faults
- Switching the drive on and off

## Versions

The armature supply is available in the following versions:

- 2-quadrant units:  
The armature is supplied via a fully-controlled three-phase bridge (B6C).
- 4-quadrant units:  
The armature is supplied via two fully-controlled three-phase bridges connected in a circulating-current-free inverse-parallel configuration ((B6)A(B6)C).

The field supply is available in the following versions:

- 1-phase, single-pair controllable two-pulse bridge circuit (B2HZ)
- 1-phase, fully-controlled two-pulse bridge circuit (B2C) (option)

The electronics (CUD) are available in the following versions:

- Standard CUD
- Advanced CUD (option)  
This CUD can be expanded to include a PROFINET module (CBE20) and features 2 DRIVE-CLiQ connections for connecting additional components from the SINAMICS drive system, as well as a connector for expansion purposes (to include a second CUD).
- Additional (second) CUD (Standard CUD or Advanced CUD) (option)  
This additional CUD can be fitted to the right of the first CUD and is used for system-specific extension of the SINAMICS DC MASTER functions.

## Additional components

- **Advanced Operator Panel AOP30**  
The optional Advanced Operator Panel AOP30 is installed outside of the unit – in the control cabinet door, for example – rather than inside it.  
The AOP30 ensures the following additional comfort:
  - Commissioning is supported by a wizard.
  - Measured values are represented by a graphical operation screen.
  - Displays a user-friendly parameter list, including text.
  - There are several editors for user-friendly setting and changing of parameters.
  - As well as help texts on individual faults and alarms, the fault and alarm messages which occur are listed.
  - Control of the drive (ON/OFF, setpoint specification, jog, direction of rotation reversal) is enabled "on-site".
  - Three LEDs display the drive status.
- **Additional module CBE20**  
The additional module CBE20 is inserted in the optional module slot of an Advanced CUD. It enables the SINAMICS DC MASTER to access the **PROFINET** network as a slave as well as to establish **SINAMICS Link** connections.

- **DRIVE-CLiQ components**

The DRIVE-CLiQ interface enables components from the SINAMICS drive system to be connected.

The following components are supported:

- TM15 (digital inputs/outputs)
- TM31 (digital inputs/outputs, analog inputs/outputs)
- TM150 (temperature sensor inputs)
- SMC10 (resolver evaluation for speed actual value sensing)
- SMC30 (incremental encoder evaluation for actual speed value acquisition)

An SMC10 or SMC30 and up to three TMx modules can be connected to each CUD.

## Extended functions

- **Free function blocks (FBLOCKS)**

In a wide variety of applications, a logic operation connecting several states (e.g. access control, system status) to a control signal (e.g. ON command) is required to control the drive system. However, in addition to logic operations, drive systems require mathematical operations and memory elements.

These functions are available in the form of the "free function blocks" function module.

A series of elementary function blocks are available that can be freely used:

- Logic function blocks (AND, OR, XOR, inverter)
- Calculation function blocks (adder, multiplier, divider, absolute-value generator)
- Time function blocks (pulse generator, pulse contracting block, ON delay, OFF delay, pulse stretching)
- Memory function blocks (RS flip-flop, D flip-flop)
- Switch function blocks (binary selector switch, numerical selector switch)
- Control function blocks (limiter, smoothing element, integrator, derivative element)
- Complex function blocks (double-sided limit monitor with hysteresis)

- **Drive Control Chart (DCC)**

DCC is available for applications requiring a more complex method of controlling the drive system which cannot be accomplished using the free function blocks. DCC makes it possible for one of the interconnected elementary function blocks to generate a graphical depiction of an existing function diagram and load it to the SINAMICS DC MASTER. The function diagram may contain up to 750 function blocks. It is possible to configure the time slices in which the individual parts of the function diagram are processed.

Note:

A DCC function diagram can be loaded not only to the CUD in the left-hand slot, but also to an optional second CUD in the right-hand slot.

The automatic speed control processes are computed on the CUD in the left-hand slot, This means that only a restricted amount of computing capacity is available for a DCC function block diagram. In other words, either only a few function blocks can be computed, or computing can only be carried out in a slow time slice.

The CUD in the right-hand slot is essentially available (in addition to the operating system) for one DCC function diagram only.

- **Technology controller**

Simple closed-loop control functions can be implemented with the technology controller, e.g.:

- Liquid level control
- Temperature control
- Dancer roll position control
- Pressure control
- Flow control
- Simple control without higher-level control
- Tension control



## Technical data

### Note






You can find the technical data for the connectors and terminals in the section titled "Connecting (Page 91)".

### 4.1 Load classes

For maximum efficiency when adapting the SINAMICS DC MASTER to the load profile for the driven machine, you can use the load cycle to carry out dimensioning.

Parameter p50067 is used to make the setting in the SINAMICS DC MASTER.

Table 4- 1 Load classes

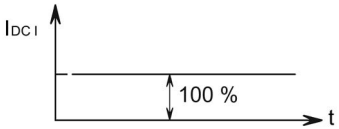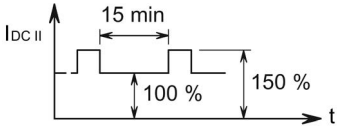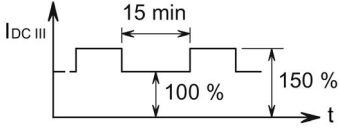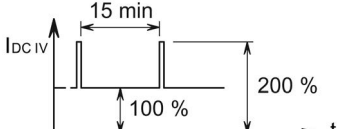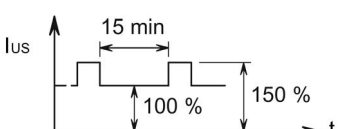Load class	Load for converter	Load cycle
DC I (p50067 = 1)	$I_{DC I}$ continuous ( $I_{dN}$ )	
DC II (p50067 = 2)	$I_{DC II}$ for 15 mins and $1.5 \times I_{DC II}$ for 60 s	
DC III (p50067 = 3)	$I_{DC III}$ for 15 mins and $1.5 \times I_{DC III}$ for 120 s	
DC IV (p50067 = 4)	$I_{DC IV}$ for 15 mins and $2 \times I_{DC IV}$ for 10 s	
US rating (p50067 = 5)	$I_{US}$ for 15 mins and $1.5 \times I_{US}$ for 60 s	

**Note**

- If a value > 1 is set at p50067, you need to make sure that the "Dynamic overload capability of the power unit" is enabled. This requires a value > 0 to be set at p50075.
- The SINAMICS DC MASTER does not monitor whether the load class set using p50067 is being adhered to. If the power unit permits it, longer overload periods can be used than those that correspond to the load class.  
The actual permissible overload duration for the particular power unit is always greater than the overload duration corresponding to the particular load class. SINAMICS DC MASTER monitors whether the overload duration that is actually permitted for the power unit is being maintained. For details on the power unit's dynamic overload capability, refer to Chapter "Dynamic overload capability of the power unit (Page 591)".
- The 100% I<sub>DCx</sub> shown previously DO NOT generally correspond to the rated unit current, but are reduced according to the subsequent table.

## 4.2 Duty cycles for 2Q applications

Table 4- 2 Duty cycles for 2Q applications

SINAMICS DCM	Duty cycles									
	T <sub>u</sub>	DC I continuous	DC II		DC III		DC IV		US rating T <sub>u</sub> = 45 °C	
			15 min 100%	60 s 150%	15 min 100%	120 s 150%	15 min 100%	10 s 200%	15 min 100%	60 s 150%
6RA80..	°C	A	A	A	A	A	A	A	A	A
<b>400 V, 2Q</b>										
.25-6DS22	45	60	51.4	77.1	50.2	75.3	46.4	92.8	51.4	77.1
.28-6DS22	45	90	74.4	111	72.8	109	65.4	130	74.4	111
.31-6DS22	45	125	106	159	103	155	96.3	192	106	159
.75-6DS22	40	210	164	247	161	242	136	273	157	236
.78-6DS22	40	280	226	340	219	328	201	402	215	323
.81-6DS22	40	400	290	435	282	423	244	488	278	417
.85-6DS22	40	600	462	693	446	669	413	826	443	665
.87-6DS22	40	850	652	978	622	933	609	1219	619	929
.91-6DS22	40	1200	884	1326	857	1286	768	1537	842	1263
.93-4DS22	40	1600	1255	1883	1213	1819	1139	2279	1190	1785
.95-4DS22	40	2000	1477	2216	1435	2152	1326	2653	1404	2106
.98-4DS22	40	3000	2288	3432	2189	3283	2164	4328	2178	3267

<b>480 V, 2Q</b>										
.25-6FS22	45	60	51.4	77.1	50.2	7.3	46.4	92.8	51.4	77.1
.28-6FS22	45	90	74.4	111	72.8	109	65.4	130	74.4	111
.31-6FS22	45	125	106	159	103	155	96.3	192	106	159
.75-6FS22	40	210	164	247	161	242	136	273	157	236
.78-6FS22	40	280	226	340	219	328	201	402	215	323
.82-6FS22	40	450	320	480	311	466	274	548	306	460
.85-6FS22	40	600	462	693	446	669	413	826	443	665
.87-6FS22	40	850	652	978	622	933	609	1219	619	929
.91-6FS22	40	1200	884	1326	857	1286	768	1537	842	1263
<b>575 V, 2Q</b>										
.25-6GS22	45	60	51.4	77.1	50.2	75.3	46.4	92.8	51.4	77.1
.31-6GS22	45	125	106	159	103	155	96.3	192	106	159
.75-6GS22	40	210	164	247	161	242	136	273	157	236
.81-6GS22	40	400	290	435	282	423	244	488	278	417
.85-6GS22	40	600	462	693	446	669	413	826	443	665
.87-6GS22	40	800	607	911	581	872	559	1118	578	867
.90-6GS22	40	1100	804	1207	782	1173	689	1379	766	1150
.93-4GS22	40	1600	1255	1883	1213	1819	1139	2279	1190	1785
.95-4GS22	40	2000	1663	2494	1591	2386	1568	3136	1569	2354
.96-4GS22	40	2200	1779	2669	1699	2549	1697	3394	1678	2517
.97-4GS22	40	2800	2136	3204	2044	3066	2022	4044	2024	3036
<b>690 V, 2Q</b>										
.86-6KS22	40	720	553	829	527	791	515	1031	525	788
.90-6KS22	40	1000	737	1105	715	1072	639	1279	702	1053
.93-4KS22	40	1500	1171	1757	1140	1710	1036	2073	1116	1674
.95-4KS22	40	2000	1589	2383	1522	2283	1505	3011	1503	2255
.97-4KS22	40	2600	1992	2989	1906	2859	1887	3774	1876	2815
<b>830 V, 2Q</b>										
.88-6LS22	40	950	700	1051	679	1019	607	1215	667	1001
.93-4LS22	40	1500	1171	1757	1140	1710	1036	2073	1116	1674
.95-4LS22	40	1900	1485	2228	1421	2132	1396	2793	1414	2121
<b>950 V, 2Q</b>										
.96-4MS22	40	2200	1674	2511	1603	2404	1570	3141	1588	2382

### 4.3 Duty cycles for 4Q applications

Table 4- 3 Duty cycles for 4Q applications

SINAMICS DCM	Duty cycles									
	T <sub>u</sub>	DC I continuous	DC II		DC III		DC IV		US rating T <sub>u</sub> = 45 °C	
			15 min 100%	60 s 150%	15 min 100%	120 s 150%	15 min 100%	10 s 200%	15 min 100%	60 s 150%
6RA80..	°C	A	A	A	A	A	A	A	A	A
<b>400 V, 4Q</b>										
.13-6DV62	45	15	13.9	20.8	13.5	20.2	12.6	25.2	13.9	20.8
.18-6DV62	45	30	24.9	37.3	24.2	36.3	22.4	44.8	24.9	37.3
.25-6DV62	45	60	53.1	79.6	51.8	77.7	47.2	94.4	53.1	79.6
.28-6DV62	45	90	78.2	117	76.0	114	72.2	144	78.2	117
.31-6DV62	45	125	106	159	103	155	95.4	190	106	159
.75-6DV62	40	210	164	247	161	242	136	273	157	236
.78-6DV62	40	280	226	340	219	328	201	402	215	323
.81-6DV62	40	400	300	450	292	438	247	494	285	428
.85-6DV62	40	600	470	706	453	680	410	820	450	675
.87-6DV62	40	850	658	987	634	951	579	1159	626	939
.91-6DV62	40	1200	884	1326	857	1286	768	1537	842	1263
.93-4DV62	40	1600	1255	1883	1213	1819	1139	2279	1190	1785
.95-4DV62	40	2000	1477	2216	1435	2152	1326	2653	1404	2106
.98-4DV62	40	3000	2288	3432	2189	3283	2164	4328	2178	3267
<b>480 V, 4Q</b>										
.13-6FV62	45	15	13.9	20.8	13.5	20.2	12.6	25.2	13.9	20.8
.18-6FV62	45	30	24.9	37.3	24.2	36.3	22.4	44.8	24.9	37.3
.25-6FV62	45	60	53.1	79.6	51.8	77.7	47.2	94.4	53.1	79.6
.28-6FV62	45	90	78.2	117	76	114	72.2	144	78.2	117
.31-6FV62	45	125	106	159	103	155	95.4	190	106	159
.75-6FV62	40	210	164	247	161	242	136	273	157	236
.78-6FV62	40	280	226	340	219	328	201	402	215	323
.82-6FV62	40	450	320	480	311	466	274	548	306	460
.85-6FV62	40	600	470	706	453	680	410	820	450	675
.87-6FV62	40	850	658	987	634	951	579	1159	626	939
.91-6FV62	40	1200	884	1326	857	1286	768	1537	842	1263

<b>575 V, 4Q</b>										
.25-6GV62	45	60	53.1	79.6	51.8	77.7	47.2	94.4	53.1	79.6
.31-6GV62	45	125	106	159	103	155	95.4	190	106	159
.75-6GV62	40	210	164	247	161	242	136	273	157	236
.81-6GV62	40	400	300	450	292	438	247	494	285	428
.85-6GV62	40	600	470	706	453	680	410	820	450	675
.87-6GV62	40	850	658	987	634	951	579	1159	626	939
.90-6GV62	40	1100	804	1207	782	1173	689	1379	766	1150
.93-4GV62	40	1600	1255	1883	1213	1819	1139	2279	1190	1785
.95-4GV62	40	2000	1663	2494	1591	2386	1568	3136	1569	2354
.96-4GV62	40	2200	1779	2669	1699	2549	1697	3394	1678	2517
.97-4GV62	40	2800	2136	3204	2044	3066	2022	4044	2024	3036
<b>690 V, 4Q</b>										
.86-6KV62	40	760	598	898	575	863	532	1065	569	853
.90-6KV62	40	1000	737	1105	715	1072	639	1279	702	1053
.93-4KV62	40	1500	1171	1757	1140	1710	1036	2073	1116	1674
.95-4KV62	40	2000	1589	2383	1522	2283	1505	3011	1503	2255
.97-4KV62	40	2600	1992	2989	1906	2859	1887	3774	1876	2815
<b>830 V, 4Q</b>										
.88-6LV62	40	950	700	1051	679	1019	607	1215	667	1001
.93-4LV62	40	1500	1171	1757	1140	1710	1036	2073	1116	1674
.95-4LV62	40	1900	1485	2228	1421	2132	1396	2793	1414	2121
<b>950 V, 4Q</b>										
.96-4MV62	40	2200	1674	2511	1603	2404	1570	3141	1588	2382

## 4.4 Environmental requirements

### Environmental classes according to EN 60721-3

Table 4- 4 Environmental classes

Use	Environmental condition	Environmental class	Comment
Operation	Mechanical stability	See remark	<ul style="list-style-type: none"> <li>Vibratory load (test and measuring procedure according to EN 60068-2-6, Fc): Constant deflection = 0.075 mm at 10 ... 58 Hz Constant acceleration = 10 m/s<sup>2</sup> at 58 ... 200 Hz</li> <li>Shock load (test and measuring procedure according to EN 60068-2-27, Ea): Acceleration = 150 m/s<sup>2</sup> at 11 ms</li> </ul>
	Climatic influences	3K3	No condensation, splash water, or icing allowed. For air temperature, see "Ambient temperature" below
	Biological influences	3B1	-
	Hazardous chemical substances	3C1	-
	Mechanically hazardous materials	3S2	-
Transportation	Mechanical stability	2M2	Tipping is not permitted.
	Climatic influences	2K2	Air temperature of -40 °C to +70 °C is permitted <sup>1)</sup>
	Biological influences	2B1	-
	Hazardous chemical substances	2C1	-
	Mechanically hazardous materials	2S1	-
Storage	Mechanical stability	1M2	Tipping is not permitted.
	Climatic influences	1K3	Air temperature of -40 °C to +70 °C is permitted <sup>1)</sup>
	Biological influences	1B1	-
	Hazardous chemical substances	1C1	-
	Mechanically hazardous materials	1S1	-

<sup>1)</sup> Only applies when product is in its original packing

### Ambient temperature

Table 4- 5 Ambient temperature Tu

Use	Tu [°C]	Comment
Storage	-40 ... +70	Only applies when product is in its original packing
Transportation	-40 ... +70	Only applies when product is in its original packing
Operation	0 ... +45	For units with a rated DC current ≤ 125 A (self-ventilated units), at rated DC current
	0 ... +40	For units with a rated DC current ≥ 210 A (force ventilated units), at rated DC current
	0 ... +55	With derating, see Section "Derating (Page 75)"

## Installation altitude above sea level

- ≤ 1,000 m With rated DC current
- > 1,000 m With derating, see Section "Derating (Page 75)"

## 4.5 Unit data

For dimension drawings, please refer to Chapter "Installation (Page 77)".

Explanation of footnotes following tables

3-ph. 400 V AC, 2Q devices			
6RA8025-6DS22-0AA0	6RA8028-6DS22-0AA0	6RA8031-6DS22-0AA0	6RA8075-6DS22-0AA0
6RA8078-6DS22-0AA0	6RA8081-6DS22-0AA0	6RA8085-6DS22-0AA0	6RA8087-6DS22-0AA0
6RA8091-6DS22-0AA0			
6RA8093-4DS22-0AA0	6RA8095-4DS22-0AA0	6RA8098-4DS22-0AA0	

Table 4- 6 Technical data for 3-ph. 400 V AC, 2Q devices

Common data		
Rated armature supply voltage <sup>1)</sup>	V	3 AC 400 (+15% / -20%) for device 6RA8098-4DS22-0AA0: +10% / -20%
Electronic power supply, rated supply voltage	V	2 AC 380 (-25%) to 480 V AC (+10%); In = 1 A or 1 AC 190 (-25%) to 240 V AC (+10%); In = 2 A (-35% for 1 min.) With option L05: 18 to 30 DC; In = 5 A
Rated DC voltage <sup>1)</sup>	V	485
Rated frequency	Hz	45 to 65 <sup>10)</sup>
Overload possibility <sup>6)</sup>		Max. 1.8x rated DC current
Closed-loop control constancy		$\Delta n = 0.006\%$ of the rated motor speed during operation with incremental encoder <b>and</b> digital setpoint $\Delta n = 0.1\%$ of the rated motor speed during operation with analog tachometer <b>or</b> analog setpoint <sup>5)</sup>
Degree of protection		IP00 according to EN 60529
Protection class		Class I (with protective conductor system) and class III (PELV) according to EN 61800-5-1

Technical data

4.5 Unit data

Table 4-7 Technical data for 3-ph. 400 V AC, 60 to 210 A, 2Q devices

Article number 6RA80 ..		..25-6DS22-...	..28-6DS22-...	..31-6DS22-...	..75-6DS22-...
Rated DC current	A	60	90	125	210
Rated armature input current <sup>2)</sup>	A	49.8	74.7	104	174
Rated power	kW	29.1	43.7	60.6	102
Power loss at rated DC current (approx.)	W	250	356	409	689
Rated field supply voltage <sup>1)</sup>	V	2-ph. 400 V AC (+15% / -20%)			
Rated field DC voltage <sup>1)</sup>	V	325	325	325	325
Rated field DC current	A	10	10	10	15
Type of cooling		Self-ventilated	Self-ventilated	Self-ventilated	Forced ventilation
Rated fan supply voltage	V	-	-	-	Fan with internal power supply
Fan air flow	m <sup>3</sup> /h	-	-	-	300
Fan noise level	dB(A)	-	-	-	70.3
Dimensions (WxHxD)	mm	268x385x252	268x385x252	268x385x252	268x385x252
Weight (approx.)	kg	11	14	14	14
Rated DC voltage for single-phase operation	V	320	320	320	-
Rated DC current for single-phase operation	A	42.0	63.0	87.5	-



Table 4- 8 Technical data for 3-ph. 400 V AC, 280 to 850 A, 2Q devices

Article number 6RA80 ..			..78-6DS22-...	..81-6DS22-...	..85-6DS22-...	..87-6DS22-...
Rated DC current	A		280	400	600	850
Rated armature input current <sup>2)</sup>	A		232	332	498	706
Rated power	kW		136	194	291	412
Power loss at rated DC current (approx.)	W		812	1375	1844	2467
Rated field supply voltage <sup>1)</sup>	V		2-ph. 400 V AC (+15% / -20%)			
Rated field DC voltage <sup>1)</sup>	V		325	325	325	325
Rated field DC current	A		15	25	25	30
Type of cooling			Forced ventilation	Forced ventilation	Forced ventilation	Forced ventilation
Rated fan supply voltage	V		Fan with internal power supply	3-ph. 400 V AC (±15%) 50 Hz / clockwise phase sequence 3-ph. 460 V AC (±10%) 60 Hz / clockwise phase sequence With option L21: 1-ph. 230 V AC (±10%)		
Rated fan current	50 Hz	A	-	0.23 <sup>8)</sup>	0.23 <sup>8)</sup>	0.23 <sup>8)</sup>
	60 Hz			0.26 <sup>8)</sup>	0.26 <sup>8)</sup>	0.26 <sup>8)</sup>
Rated fan current with option L21	50 Hz	A	-	0.51 <sup>8)</sup>	0.51 <sup>8)</sup>	0.51 <sup>8)</sup>
	60 Hz			0.72 <sup>8)</sup>	0.72 <sup>8)</sup>	0.72 <sup>8)</sup>
Fan air flow	m <sup>3</sup> /h		300	600	600	600
Fan noise level	50 Hz	dB(A)	70.3	70.3	70.3	70.3
	60 Hz		70.3	74.4	74.4	74.4
Dimensions (WxHxD)	mm		268x385x252	268x625x275	268x625x275	268x700x311
Weight (approx.)	kg		15	26	28	38

Technical data

4.5 Unit data

Table 4- 9 Technical data for 3-ph. 400 V AC, 1200 A, 2Q devices

Article number 6RA80 ..		..91-6DS22-...	
Rated DC current		A	1200
Rated armature input current <sup>2)</sup>		A	995
Rated power		kW	582
Power loss at rated DC current (approx.)		W	4107
Rated field supply voltage <sup>1)</sup>		V	2-ph. 480 V AC (+10% / -20%)
Rated field DC voltage <sup>1)</sup>		V	390
Rated field DC current		A	40
Type of cooling			Forced ventilation
Rated fan supply voltage		V	3-ph. 400 V AC (±10%) 50 Hz / clockwise phase sequence 3-ph. 460 V AC (±10%) 60 Hz / clockwise phase sequence with option L21: 1-ph. 230 V AC (±10%)
Rated fan current	50 Hz	A	0.38 <sup>9)</sup>
	60 Hz		
Rated fan current with option L21	50 Hz	A	1.16 <sup>9)</sup>
	60 Hz		
Fan air flow		m <sup>3</sup> /h	1000
Fan noise level	50 Hz	dB(A)	70.4
	60 Hz		
Dimensions (WxHxD)		mm	268x785x435
Weight (approx.)		kg	78

Table 4- 10 Technical data for 3-ph. 400 V AC, 1600 A to 3000 A, 2Q devices

Article number 6RA80 ..		..93-4DS22-...	..95-4DS22-...	..98-4DS22-...
Rated DC current	A	1600	2000	3000
Rated armature input current <sup>2)</sup>	A	1328	1660	2490
Rated power	kW	776	970	1455
Power loss at rated DC current (approx.)	W	5678	6781	10640
Rated field supply voltage <sup>1)</sup>	V	2-ph. 480 V AC (+10% / -20%)		
Rated field DC voltage <sup>1)</sup>	V	390	390	390
Rated field DC current	A	40	40	40
Type of cooling		Forced ventilation	Forced ventilation	Forced ventilation
Rated fan supply voltage	V	3-ph. 400 V AC (±10%) 50 Hz / clockwise phase sequence 3-ph. 460 V AC (±10%) 60 Hz / clockwise phase sequence		
Rated fan current	50 Hz 60 Hz	A	0.95 <sup>9)</sup> 1.25 <sup>9)</sup>	0.95 <sup>9)</sup> 1.25 <sup>9)</sup>
Fan air flow	m <sup>3</sup> /h	2400	2400	2400
Fan noise level	50 Hz 60 Hz	dB(A)	80.8 83.2	80.8 83.2
Dimensions (WxHxD)	mm	453x883x505	453x883x505	453x883x505
Weight (approx.)	kg	135	135	165

Technical data

4.5 Unit data

**3-ph. 480 V AC, 2Q devices**

<i>6RA8025-6FS22-0AA0</i>	<i>6RA8028-6FS22-0AA0</i>	<i>6RA8031-6FS22-0AA0</i>	
<i>6RA8075-6FS22-0AA0</i>	<i>6RA8078-6FS22-0AA0</i>		
<i>6RA8082-6FS22-0AA0</i>	<i>6RA8085-6FS22-0AA0</i>	<i>6RA8087-6FS22-0AA0</i>	<i>6RA8091-6FS22-0AA0</i>

Table 4- 11 Technical data for 3-ph. 480 V AC, 2Q devices

Common data		
Rated armature supply voltage <sup>1)</sup>	V	3-ph. 480 V AC (+10% / -20%)
Rated field supply voltage <sup>1)</sup>	V	2-ph. 480 V AC (+10% / -20%)
Electronic power supply, rated supply voltage	V	2 AC 380 (-25%) to 480 V AC (+10%); In = 1 A or 1 AC 190 (-25%) to 240 V AC (+10%); In = 2 A (-35% for 1 min.) With option L05: 18 to 30 DC; In = 5 A
Rated DC voltage <sup>1)</sup>	V	575
Rated field DC voltage <sup>1)</sup>	V	390
Rated frequency	Hz	45 to 65 <sup>10)</sup>
Overload possibility <sup>6)</sup>		Max. 1.8x rated DC current
Closed-loop control constancy		$\Delta n = 0.006\%$ of the rated motor speed during operation with incremental encoder <b>and</b> digital setpoint $\Delta n = 0.1\%$ of the rated motor speed during operation with analog tachometer <b>or</b> analog setpoint <sup>5)</sup>
Degree of protection		IP00 according to EN 60529
Protection class		Class I (with protective conductor system) and class III (PELV) according to EN 61800-5-1

Table 4- 12 Technical data for 3-ph. 480 V AC, 60 A to 125 A, 2Q devices

Article number 6RA80 ..		..25-6FS22-...	..28-6FS22-...	..31-6FS22-...
Rated DC current	A	60	90	125
Rated armature input current <sup>2)</sup>	A	49.8	74.7	104
Rated power	kW	34.5	51.8	71.9
Power loss at rated DC current (approx.)	W	299	378	431
Rated field DC current	A	10	10	10
Type of cooling		Self-ventilated	Self-ventilated	Self-ventilated
Dimensions (WxHxD)	mm	268x385x252	268x385x252	268x385x252
Weight (approx.)	kg	11	14	14
Rated DC voltage for single-phase operation	V	385	385	385
Rated DC current for single-phase operation	A	42.0	63.0	87.5

Table 4- 13 Technical data for 3-ph. 480 V AC, 210 A to 280 A, 2Q devices

Article number 6RA80 ..		..75-6FS22-...	..78-6FS22-...
Rated DC current	A	210	280
Rated armature input current <sup>2)</sup>	A	174	232
Rated power	kW	121	161
Power loss at rated DC current (approx.)	W	720	811
Rated field DC current	A	15	15
Type of cooling		Forced ventilation	Forced ventilation
Rated fan supply voltage	V	Fan with internal power supply	Fan with internal power supply
Fan air flow	m <sup>3</sup> /h	300	300
Fan noise level	dB(A)	70.3	70.3
Dimensions (WxHxD)	mm	268x385x252	268x385x252
Weight (approx.)	kg	14	15

Table 4- 14 Technical data for 3-ph. 480 V AC, 450 A to 1200 A, 2Q devices

Article number 6RA80 ..		..82-6FS22-...	..85-6FS22-...	..87-6FS22-...	..91-6FS22-...	
Rated DC current	A	450	600	850	1200	
Rated armature input current <sup>2)</sup>	A	374	498	706	996	
Rated power	kW	259	345	489	690	
Power loss at rated DC current (approx.)	W	1583	1909	2597	4237	
Rated field DC current	A	25	25	30	40	
Type of cooling		Forced ventilation	Forced ventilation	Forced ventilation	Forced ventilation	
Rated fan supply voltage	50 Hz	V	3-ph. 400 V AC (±15%)	3-ph. 400 V AC (±15%)	3-ph. 400 V AC (±15%)	3-ph. 400 V AC (±10%)
	60 Hz	V	3-ph. 460 V AC (±10%)	3-ph. 460 V AC (±10%)	3-ph. 460 V AC (±10%)	3-ph. 460 V AC (±10%)
		V	With option L21: 1-ph. 230 V AC (±10%)			
Rated fan current	50 Hz	A	0.27	0.27	0.27	0.38
	60 Hz		0.33	0.33	0.33	0.5
Rated fan current with option L21	50 Hz	A	0.68	0.68	0.68	1.16
	60 Hz		0.95	0.95	0.95	1.7
Fan air flow		m <sup>3</sup> /h	600	600	600	1000
Fan noise level	50 Hz	dB(A)	70.3	70.3	70.3	70.4
	60 Hz		74.4	74.4	74.4	74.2
Dimensions (WxHxD)		mm	268x625x275	268x625x275	268x700x311	268x785x435
Weight (approx.)		kg	28	28	38	78

Technical data

4.5 Unit data

3-ph. 575 V AC, 2Q devices			
6RA8025-6GS22-0AA0	6RA8031-6GS22-0AA0	6RA8075-6GS22-0AA0	
6RA8081-6GS22-0AA0	6RA8085-6GS22-0AA0	6RA8087-6GS22-0AA0	6RA8090-6GS22-0AA0
6RA8093-4GS22-0AA0	6RA8095-4GS22-0AA0	6RA8096-4GS22-0AA0	6RA8097-4GS22-0AA0

Table 4- 15 Technical data for 3-ph. 575 V AC, 2Q devices

Common data		
Rated armature supply voltage <sup>1)</sup>	V	3-ph. 575 V AC (+10% / -20%)
Rated field supply voltage <sup>1)</sup>	V	2-ph. 480 V AC (+10% / -20%)
Electronic power supply, rated supply voltage	V	2 AC 380 (-25%) to 480 V AC (+10%); In = 1 A or 1 AC 190 (-25%) to 240 V AC (+10%); In = 2 A (-35% for 1 min.) With option L05: 18 to 30 DC; In = 5 A
Rated DC voltage <sup>1)</sup>	V	690
Rated field DC voltage <sup>1)</sup>	V	390
Rated frequency	Hz	45 to 65 <sup>10)</sup>
Overload possibility <sup>6)</sup>		Max. 1.8x rated DC current
Closed-loop control constancy		$\Delta n = 0.006\%$ of the rated motor speed during operation with incremental encoder <b>and</b> digital setpoint $\Delta n = 0.1\%$ of the rated motor speed during operation with analog tachometer <b>or</b> analog setpoint <sup>5)</sup>
Degree of protection		IP00 according to EN 60529
Protection class		Class I (with protective conductor system) and class III (PELV) according to EN 61800-5-1

Table 4- 16 Technical data for 3-ph. 575 V AC, 60 A to 210 A, 2Q devices

Article number 6RA80 ..		..25-6GS22-...	..31-6GS22-...	..75-6GS22-...
Rated DC current	A	60	125	210
Rated armature input current <sup>2)</sup>	A	49.8	104	174
Rated power	kW	41.4	86.3	145
Power loss at rated DC current (approx.)	W	274	463	742
Rated field DC current	A	10	10	15
Type of cooling		Self-ventilated	Self-ventilated	Forced ventilation
Rated fan supply voltage	V	-	-	Fan with internal power supply
Fan air flow	m <sup>3</sup> /h	-	-	300
Fan noise level	dB(A)	-	-	70.3
Dimensions (WxHxD)	mm	268x385x252	268x385x252	268x385x252
Weight (approx.)	kg	11	14	14
Rated DC voltage for single-phase operation	V	460	460	-
Rated DC current for single-phase operation	A	42.0	87.5	-

Table 4- 17 Technical data for 3-ph. 575 V AC, 400 A to 1100 A, 2Q devices

Article number 6RA80 ..		..81-6GS22-...	..85-6GS22-...	..87-6GS22-...	..90-6GS22-...
	A	400	600	800	1100
Rated armature input current <sup>2)</sup>	A	332	498	664	913
Rated power	kW	276	414	552	759
Power loss at rated DC current (approx.)	W	1598	2002	2686	4022
Rated field DC current	A	25	25	30	40
Type of cooling		Forced ventilation	Forced ventilation	Forced ventilation	Forced ventilation
Rated fan supply voltage	50 Hz	V 3-ph. 400 V AC (±15%) clockwise phase sequence	V 3-ph. 400 V AC (±15%) clockwise phase sequence	V 3-ph. 400 V AC (±15%) clockwise phase sequence	V 3-ph. 400 V AC (±10%) clockwise phase sequence
	60 Hz	V 3-ph. 460 V AC (±10%) clockwise phase sequence	V 3-ph. 460 V AC (±10%) clockwise phase sequence	V 3-ph. 460 V AC (±10%) clockwise phase sequence	V 3-ph. 460 V AC (±10%) clockwise phase sequence
With option L21: 1-ph. 230 V AC (±10%)					
Rated fan current	50 Hz	A 0.27 <sup>8)</sup>	A 0.27 <sup>8)</sup>	A 0.27 <sup>8)</sup>	A 0.38 <sup>9)</sup>
	60 Hz	0.33	0.33	0.33	0.5
Rated fan current with option L21	50 Hz	A 0.68	A 0.68	A 0.68	A 1.16
	60 Hz	0.95	0.95	0.95	1.7
Fan air flow	m <sup>3</sup> /h	600	600	600	1000
Fan noise level	50 Hz	dB(A) 70.3	70.3	70.3	70.4
	60 Hz	74.4	74.4	74.4	74.2
Dimensions (WxHxD)	mm	268x625x275	268x625x275	268x700x311	268x785x435
Weight (approx.)	kg	26	28	38	78

Technical data

4.5 Unit data

Table 4- 18 Technical data for 3-ph. 575 V AC, 1600 A to 2800 A, 2Q devices

Article number 6RA80 ..			..93-4GS22-...	..95-4GS22-...	..96-4GS22-...	..97-4GS22-...
Rated DC current		A	1600	2000	2200	2800
Rated armature input current <sup>2)</sup>		A	1328	1660	1826	2324
Rated power		kW	1104	1380	1518	1932
Power loss at rated DC current (approx.)		W	6036	7073	7391	10530
Rated field DC current		A	40	40	40	40
Type of cooling			Forced ventilation	Forced ventilation	Forced ventilation	Forced ventilation
Rated fan supply voltage		V	3-ph. 400 V AC ( $\pm 10\%$ ) 50 Hz / clockwise phase sequence 3-ph. 460 V AC ( $\pm 10\%$ ) 60 Hz / clockwise phase sequence			
Rated fan current	50 Hz	A	0.95 <sup>9)</sup>	0.95 <sup>9)</sup>	0.95 <sup>9)</sup>	0.95 <sup>9)</sup>
	60 Hz		1.25	1.25	1.25	1.25
Fan air flow		m <sup>3</sup> /h	2400	2400	2400	2400
Fan noise level	50 Hz	dB(A)	80.3	80.3	80.3	80.3
	60 Hz		83.2	83.2	83.2	83.2
Dimensions (WxHxD)		mm	453x883x505	453x883x505	453x883x505	453x883x505
Weight (approx.)		kg	135	135	165	165



**3-ph. 690 V AC, 2Q devices**

6RA8086-6KS22-0AA0

6RA8090-6KS22-0AA0

6RA8093-4KS22-0AA0

6RA8095-4KS22-0AA0

6RA8097-4KS22-0AA0

Table 4- 19 Technical data for 3-ph. 690 V AC, 2Q devices

**Common data**

Rated armature supply voltage <sup>1)</sup>	V	3-ph. 690 V AC (+10% / -20%)
Rated field supply voltage <sup>1)</sup>	V	2-ph. 480 V AC (+10% / -20%)
Electronic power supply, rated supply voltage	V	2 AC 380 (-25%) to 480 V AC (+10%); In = 1 A or 1 AC 190 (-25%) to 240 V AC (+10%); In = 2 A (-35% for 1 min.) With option L05: 18 to 30 DC; In = 5 A
Rated DC voltage <sup>1)</sup>	V	830
Rated field DC voltage <sup>1)</sup>	V	390
Rated frequency	Hz	45 to 65 <sup>10)</sup>
Overload possibility <sup>6)</sup>		Max. 1.8x rated DC current
Closed-loop control constancy		$\Delta n = 0.006\%$ of the rated motor speed during operation with incremental encoder <b>and</b> digital setpoint $\Delta n = 0.1\%$ of the rated motor speed during operation with analog tachometer <b>or</b> analog setpoint <sup>5)</sup>
Degree of protection		IP00 according to EN 60529
Protection class		Class I (with protective conductor system) and class III (PELV) according to EN 61800-5-1

Technical data

4.5 Unit data

Table 4- 20 Technical data for 3-ph. 690 V AC, 720 A to 1000 A, 2Q devices

Article number 6RA80 ..		..86-6KS22-...		..90-6KS22-...	
Rated DC current	A	720		1000	
Rated armature input current <sup>2)</sup>	A	598		830	
Rated power	kW	598		830	
Power loss at rated DC current (approx.)	W	2767		3963	
Rated field DC current	A	30		40	
Type of cooling		Forced ventilation		Forced ventilation	
Rated fan supply voltage	V	3-ph. 400 V AC (±15%) 50 Hz / clockwise phase sequence 3-ph. 460 V AC (±10%) 60 Hz / clockwise phase sequence With option L21: 1-ph. 230 V AC (±10%)		3-ph. 400 V AC (±10%) 50 Hz / clockwise phase sequence 3-ph. 460 V AC (±10%) 60 Hz / clockwise phase sequence With option L21: 1-ph. 230 V AC (±10%)	
Rated fan current	50 Hz 60 Hz	A	0.27 <sup>8)</sup> 0.33	0.38 <sup>9)</sup> 0.5	
Rated fan current with option L21	50 Hz 60 Hz	A	0.68 0.95	1.16 1.7	
Fan air flow		m <sup>3</sup> /h	600	1000	
Fan noise level	50 Hz 60 Hz	dB(A)	70.3 74.4	70.4 74.2	
Dimensions (WxHxD)		mm	268x700x311		268x785x435
Weight (approx.)		kg	38		78

Table 4- 21 Technical data for 3-ph. 690 V AC, 1500 A to 2600 A, 2Q devices

Article number 6RA80 ..		..93-4KS22-...		..95-4KS22-...		..97-4KS22-...	
Rated DC current	A	1500		2000		2600	
Rated armature input current <sup>2)</sup>	A	1245		1660		2158	
Rated power	kW	1245		1660		2158	
Power loss at rated DC current (approx.)	W	6675		8158		10300	
Rated field DC current	A	40		40		40	
Type of cooling		Forced ventilation		Forced ventilation		Forced ventilation	
Rated fan supply voltage	V	3-ph. 400 V AC (±10%) 50 Hz / clockwise phase sequence 3-ph. 460 V AC (±10%) 60 Hz / clockwise phase sequence					
Rated fan current	50 Hz 60 Hz	A	0.95 <sup>9)</sup> 1.25	0.95 <sup>9)</sup> 1.25		0.95 <sup>9)</sup> 1.25	
Fan air flow		m <sup>3</sup> /h	2400	2400		2400	
Fan noise level	50 Hz 60 Hz	dB(A)	80.8 83.2	80.8 83.2		80.8 83.2	
Dimensions (WxHxD)		mm	453x883x505		453x883x505		453x883x505
Weight (approx.)		kg	135		135		165

**3-ph. 830 V AC, 2Q devices**

6RA8088-6LS22-0AA0

6RA8093-4LS22-0AA0

6RA8095-4LS22-0AA0

Table 4- 22 Technical data for 3-ph. 830 V AC, 2Q devices

<b>Common data</b>		
Rated armature supply voltage <sup>1)</sup>	V	3-ph. 830 V AC (+10% / -20%)
Rated field supply voltage <sup>1)</sup>	V	2-ph. 480 V AC (+10% / -20%)
Electronic power supply, rated supply voltage	V	2 AC 380 (-25%) to 480 V AC (+10%); In = 1 A or 1 AC 190 (-25%) to 240 V AC (+10%); In = 2 A (-35% for 1min.) With option L05: 18 to 30 DC; In = 5 A
Rated DC voltage <sup>1)</sup>	V	1000
Rated field DC voltage <sup>1)</sup>	V	390
Rated frequency	Hz	45 to 65 <sup>10)</sup>
Overload possibility <sup>6)</sup>		Max. 1.8x rated DC current
Closed-loop control constancy		$\Delta n = 0.006\%$ of the rated motor speed during operation with incremental encoder <b>and</b> digital setpoint $\Delta n = 0.1\%$ of the rated motor speed during operation with analog tachometer <b>or</b> analog setpoint <sup>5)</sup>
Degree of protection		IP00 according to EN 60529
Protection class		Class I (with protective conductor system) and class III (PELV) according to EN 61800-5-1

Technical data

4.5 Unit data

Table 4- 23 Technical data for 3-ph. 830 V AC, 900 A to 1900 A, 2Q devices

Article number 6RA80 ..			..88-6LS22-....	..93-4LS22-...	..95-4LS22-...
Rated DC current		A	950	1500	1900
Rated armature input current <sup>2)</sup>		A	789	1245	1577
Rated power		kW	950	1500	1900
Power loss at rated DC current (approx.)		W	4221	7122	8669
Rated field DC current		A	40	40	40
Type of cooling			Forced ventilation	Forced ventilation	Forced ventilation
Rated fan supply voltage	50 Hz	V	3-ph. 400 V AC ( $\pm 10\%$ ) / clockwise phase sequence		
	60 Hz		3-ph. 460 V AC ( $\pm 10\%$ ) / clockwise phase sequence		
			With option L21: 1-ph. 230 V AC ( $\pm 10\%$ )		
Rated fan current	50 Hz	A	0.38 <sup>9)</sup>	0.95 <sup>9)</sup>	0.95 <sup>9)</sup>
	60 Hz		0.5	1.25	1.25
Rated fan current with option L21	50 Hz	A	1.16	-	-
	60 Hz		1.7		
Fan air flow		m <sup>3</sup> /h	1000	2400	2400
Fan noise level	50 Hz	dB(A)	70.4	80.8	80.8
	60 Hz		74.2	83.2	83.2
Dimensions (WxHxD)		mm	268x785x435	453x883x505	453x883x505
Weight (approx.)		kg	78	135	135

**3-ph. 400 V AC, 4Q devices**

<i>6RA8013-6DV62-0AA0</i>	<i>6RA8018-6DV62-0AA0</i>	<i>6RA8025-6DV62-0AA0</i>	<i>6RA8028-6DV62-0AA0</i>
<i>6RA8031-6DV62-0AA0</i>	<i>6RA8075-6DV62-0AA0</i>	<i>6RA8078-6DV62-0AA0</i>	
<i>6RA8081-6DV62-0AA0</i>	<i>6RA8085-6DV62-0AA0</i>	<i>6RA8087-6DV62-0AA0</i>	
<i>6RA8091-6DV62-0AA0</i>			
<i>6RA8093-4DV62-0AA0</i>	<i>6RA8095-4DV62-0AA0</i>	<i>6RA8098-4DV62-0AA0</i>	

Table 4- 24 Technical data for 3-ph. 400 V AC, 4Q devices

<b>Common data</b>		
Rated armature supply voltage <sup>1)</sup>	V	3 AC 400 (+15% / -20%) for devices 6RA8098-4DV62-0AA0: +10% / -20%
Electronic power supply, rated supply voltage	V	2 AC 380 (-25%) to 480 V AC (+10%); In = 1 A or 1 AC 190 (-25%) to 240 V AC (+10%); In = 2 A (-35% for 1 min.) With option L05: 18 to 30 DC; In = 5 A
Rated DC voltage <sup>1)</sup>	V	420
Rated frequency	Hz	45 to 65 <sup>10)</sup>
Overload possibility <sup>6)</sup>		Max. 1.8x rated DC current
Closed-loop control constancy		$\Delta n = 0.006\%$ of the rated motor speed during operation with incremental encoder <b>and</b> digital setpoint $\Delta n = 0.1\%$ of the rated motor speed during operation with analog tachometer <b>or</b> analog setpoint <sup>5)</sup>
Degree of protection		IP00 according to EN 60529
Protection class		Class I (with protective conductor system) and class III (PELV) according to EN 61800-5-1

Table 4- 25 Technical data for 3-ph. 400 V AC, 15 A to 90 A, 4Q devices

Article number 6RA80 ..		..13-6DV62-...	..18-6DV62-...	..25-6DV62-...	..28-6DV62-...
Rated DC current	A	15	30	60	90
Rated armature input current <sup>2)</sup>	A	12.5	24.9	49.8	74.7
Rated power	kW	6.3	12.6	25.2	37.8
Power loss at rated DC current (approx.)	W	131	180	250	321
Rated field supply voltage <sup>1)</sup>	V	2-ph. 400 V AC (+15% / -20%)			
Rated field DC voltage <sup>1)</sup>	V	325	325	325	325
Rated field DC current	A	3	5	10	10
Type of cooling		Self-ventilated	Self-ventilated	Self-ventilated	Self-ventilated
Dimensions (WxHxD)	mm	268x385x221	268x385x221	268x385x252	268x385x252
Weight (approx.)	kg	11	11	11	14
Rated DC voltage for single-phase operation	V	280	280	280	280
Rated DC current for single-phase operation	A	10.5	21.0	42.0	63.0

Technical data

4.5 Unit data

Table 4- 26 Technical data for 3-ph. 400 V AC, 125 A to 280 A, 4Q devices

Article number 6RA80 ..		..31-6DV62-...	..75-6DV62-...	..78-6DV62-...
Rated DC current	A	125	210	280
Rated armature input current <sup>2)</sup>	A	104	174	232
Rated power	kW	52.5	88.2	118
Power loss at rated DC current (approx.)	W	409	689	812
Rated field supply voltage <sup>1)</sup>	V	2-ph. 400 V AC (+15% / -20%)		
Rated field DC voltage <sup>1)</sup>	V	325	325	325
Rated field DC current	A	10	15	15
Type of cooling		Self-ventilated	Forced ventilation	Forced ventilation
Rated fan supply voltage	V	-	Fan with internal power supply	Fan with internal power supply
Fan air flow	m <sup>3</sup> /h	-	300	300
Fan noise level	dB(A)	-	70.3	70.3
Dimensions (WxHxD)	mm	268x385x252	268x385x252	268x385x252
Weight (approx.)	kg	14	15	15
Rated DC voltage for single-phase operation	V	280	-	-
Rated DC current for single-phase operation	A	87.5	-	-

Table 4- 27 Technical data for 3-ph. 400 V AC, 400 A to 850 A, 4Q devices

Article number 6RA80 ..			..81-6DV62-...	..85-6DV62-...	..87-6DV62-...
Rated DC current	A		400	600	850
Rated armature input current <sup>2)</sup>	A		332	498	706
Rated power	kW		168	252	357
Power loss at rated DC current (approx.)	W		1375	1844	2467
Rated field supply voltage <sup>1)</sup>	V		2-ph. 400 V AC (+15% / -20%)		
Rated field DC voltage <sup>1)</sup>	V		325	325	325
Rated field DC current	A		25	25	30
Type of cooling			Forced ventilation	Forced ventilation	Forced ventilation
Rated fan supply voltage	V		3-ph. 400 V AC (±15%) 50 Hz / clockwise phase sequence 3-ph. 460 V AC (±10%) 60 Hz / clockwise phase sequence With option L21: 1-ph. 230 V AC (±10%)		
Rated fan current	50 Hz	A	0.27 <sup>8)</sup>	0.27 <sup>8)</sup>	0.27 <sup>8)</sup>
	60 Hz		0.33	0.33	0.33
Rated fan current with option L21	50 Hz	A	0.68	0.68	0.68
	60 Hz		0.95	0.95	0.95
Fan air flow	m <sup>3</sup> /h		600	600	600
Fan noise level	50 Hz	dB(A)	70.3	70.3	70.3
	60 Hz		74.4	74.4	74.4
Dimensions (WxHxD)	mm		268x625x275	268x625x275	268x700x311
Weight (approx.)	kg		26	31	42

Technical data

4.5 Unit data

Table 4- 28 Technical data for 3-ph. 400 V AC, 1200 A, 4Q devices

Article number 6RA80 ..		..91-6DV62-...	
Rated DC current		A	1200
Rated armature input current <sup>2)</sup>		A	996
Rated power		kW	504
Power loss at rated DC current (approx.)		W	4107
Rated field supply voltage <sup>1)</sup>		V	2-ph. 480 V AC (+10% / -20%)
Rated field DC voltage <sup>1)</sup>		V	390
Rated field DC current		A	40
Type of cooling			Forced ventilation
Rated fan supply voltage		V	3-ph. 400 V AC (±10%) 50 Hz / clockwise phase sequence 3-ph. 460 V AC (±10%) 60 Hz / clockwise phase sequence with option L21: 1-ph. 230 V AC (±10%)
Rated fan current	50 Hz	A	0.38 <sup>9)</sup>
	60 Hz		
Rated fan current with option L21	50 Hz	A	1.16
	60 Hz		
Fan air flow		m <sup>3</sup> /h	1000
Fan noise level	50 Hz	dB(A)	70.4
	60 Hz		
Dimensions (WxHxD)		mm	268x785x435
Weight (approx.)		kg	78



Table 4- 29 Technical data for 3-ph. 400 V AC, 1600 A to 3000 A, 4Q devices

Article number 6RA80 ..		..93-4DV62-...	..95-4DV62-...	..98-4DV62-...
Rated DC current	A	1600	2000	3000
Rated armature input current <sup>2)</sup>	A	1328	1660	2490
Rated power	kW	672	840	1260
Power loss at rated DC current (approx.)	W	5678	6781	10640
Rated field supply voltage <sup>1)</sup>	V	2-ph. 480 V AC (+10% / -20%)		
Rated field DC voltage <sup>1)</sup>	V	390	390	390
Rated field DC current	A	40	40	40
Type of cooling		Forced ventilation	Forced ventilation	Forced ventilation
Rated fan supply voltage	V	3-ph. 400 V AC ( $\pm 10\%$ ) 50 Hz / clockwise phase sequence 3-ph. 460 V AC ( $\pm 10\%$ ) 60 Hz / clockwise phase sequence		
Rated fan current	50 Hz 60 Hz	A	0.95 <sup>9)</sup> 1.25 <sup>9)</sup>	0.95 <sup>9)</sup> 1.25 <sup>9)</sup>
Fan air flow	m <sup>3</sup> /h	2400	2400	2400
Fan noise level	50 Hz 60 Hz	dB(A)	80.8 83.2	80.8 83.2
Dimensions (WxHxD)	mm	453x883x505	453x883x505	453x883x505
Weight (approx.)	kg	155	155	185

4.5 Unit data

3-ph. 480 V AC, 4Q devices			
6RA8013-6FV62-0AA0	6RA8018-6FV62-0AA0	6RA8025-6FV62-0AA0	6RA8028-6FV62-0AA0
6RA8031-6FV62-0AA0	6RA8075-6FV62-0AA0	6RA8078-6FV62-0AA0	
6RA8082-6FV62-0AA0	6RA8085-6FV62-0AA0	6RA8087-6FV62-0AA0	6RA8091-6FV62-0AA0

Table 4- 30 Technical data for 3-ph. 480 V AC, 4Q devices

Common data		
Rated armature supply voltage <sup>1)</sup>	V	3-ph. 480 V AC (+10% / -20%)
Rated field supply voltage <sup>1)</sup>	V	2-ph. 480 V AC (+10% / -20%)
Electronic power supply, rated supply voltage	V	2 AC 380 (-25%) to 480 V AC (+10%); In = 1 A or 1 AC 190 (-25%) to 240 V AC (+10%); In = 2 A (-35% for 1 min.) With option L05: 18 to 30 DC; In = 5 A
Rated DC voltage <sup>1)</sup>	V	500
Rated field DC voltage <sup>1)</sup>	V	390
Rated frequency	Hz	45 to 65 <sup>10)</sup>
Overload possibility <sup>6)</sup>		Max. 1.8x rated DC current
Closed-loop control constancy		$\Delta n = 0.006\%$ of the rated motor speed during operation with incremental encoder <b>and</b> digital setpoint $\Delta n = 0.1\%$ of the rated motor speed during operation with analog tachometer <b>or</b> analog setpoint <sup>5)</sup>
Degree of protection		IP00 according to EN 60529
Protection class		Class I (with protective conductor system) and class III (PELV) according to EN 61800-5-1

Table 4- 31 Technical data for 3-ph. 480 V AC, 15 A to 90 A, 4Q devices

Article number 6RA80 ..		..13-6FV62-...	..18-6FV62-...	..25-6FV62-...	..28-6FV62-...
Rated DC current	A	15	30	60	90
Rated armature input current <sup>2)</sup>	A	12.5	24.9	49.8	74.7
Rated power	kW	6.3	15	30	45
Power loss at rated DC current (approx.)	W	131	190	299	343
Rated field DC current	A	3	5	10	10
Type of cooling		Self-ventilated	Self-ventilated	Self-ventilated	Self-ventilated
Dimensions (WxHxD)	mm	268x385x221	268x385x221	268x385x252	268x385x252
Weight (approx.)	kg	11	11	11	14
Rated DC voltage for single-phase operation	V	335	335	335	335
Rated DC current for single-phase operation	A	10.5	21.0	42.0	63.0

Table 4- 32 Technical data for 3-ph. 480 V AC, 125 A to 280 A, 4Q devices

Article number 6RA80 ..		..31-6FV62-...	..75-6FV62-...	..78-6FV62-...
Rated DC current	A	125	210	280
Rated armature input current <sup>2)</sup>	A	104	174	232
Rated power	kW	62.5	105	140
Power loss at rated DC current (approx.)	W	431	720	811
Rated field DC current	A	10	15	15
Type of cooling		Self-ventilated	Forced ventilation	Forced ventilation
Rated fan supply voltage	V	-	Fan with internal power supply	Fan with internal power supply
Fan air flow	m <sup>3</sup> /h	-	300	300
Fan noise level	dB(A)	-	70.3	70.3
Dimensions (WxHxD)	mm	268x385x252	268x385x252	268x385x252
Weight (approx.)	kg	14	15	15
Rated DC voltage for single-phase operation	V	335	-	-
Rated DC current for single-phase operation	A	87.5	-	-

Table 4- 33 Technical data for 3-ph. 480 V AC, 450 A to 1200 A, 4Q devices

Article number 6RA80 ..		..82-6FV62-...	..85-6FV62-...	..87-6FV62-...	..91-6FV62-...	
Rated DC current	A	450	600	850	1200	
Rated armature input current <sup>2)</sup>	A	374	498	706	996	
Rated power	kW	225	300	425	600	
Power loss at rated DC current (approx.)	W	1583	1909	2597	4237	
Rated field DC current	A	25	25	30	40	
Type of cooling		Forced ventilation	Forced ventilation	Forced ventilation	Forced ventilation	
Rated fan supply voltage	50 Hz	V	3-ph. 400 V AC (±15%) clockwise phase sequence	3-ph. 400 V AC (±15%) clockwise phase sequence	3-ph. 400 V AC (±15%) clockwise phase sequence	3-ph. 400 V AC (±10%) clockwise phase sequence
	60 Hz	V	3-ph. 460 V AC (±10%) clockwise phase sequence	3-ph. 460 V AC (±10%) clockwise phase sequence	3-ph. 460 V AC (±10%) clockwise phase sequence	3-ph. 460 V AC (±10%) clockwise phase sequence
		V	With option L21: 1-ph. 230 V AC (±10%)			
Rated fan current	50 Hz	A	0.27	0.27	0.27	0.38
	60 Hz		0.33	0.33	0.33	0.5
Rated fan current with option L21	50 Hz	A	0.68	0.68	0.68	1.16
	60 Hz		0.95	0.95	0.95	1.7
Fan air flow	m <sup>3</sup> /h	600	600	600	1000	
Fan noise level	50 Hz	dB(A)	70.3	70.3	70.3	70.4
	60 Hz		74.4	74.4	74.4	74.2
Dimensions (WxHxD)	mm	268x625x275	268x625x275	268x700x311	268x785x435	
Weight (approx.)	kg	31	31	42	78	

Technical data

4.5 Unit data

**3-ph. 575 V AC, 4Q devices**

<i>6RA8025-6GV62-0AA0</i>	<i>6RA8031-6GV62-0AA0</i>	<i>6RA8075-6GV62-0AA0</i>	
<i>6RA8081-6GV62-0AA0</i>	<i>6RA8085-6GV62-0AA0</i>	<i>6RA8087-6GV62-0AA0</i>	<i>6RA8090-6GV62-0AA0</i>
<i>6RA8093-4GV62-0AA0</i>	<i>6RA8095-4GV62-0AA0</i>	<i>6RA8096-4GV62-0AA0</i>	<i>6RA8097-4GV62-0AA0</i>

Table 4- 34 Technical data for 3-ph. 575 V AC, 4Q devices

**Common data**

Rated armature supply voltage <sup>1)</sup>	V	3-ph. 575 V AC (+10% / -20%)
Rated field supply voltage <sup>1)</sup>	V	2-ph. 480 V AC (+10% / -20%)
Electronic power supply, rated supply voltage	V	2 AC 380 (-25%) to 480 V AC (+10%); In = 1 A or 1 AC 190 (-25%) to 240 V AC (+10%); In = 2 A (-35% for 1 min.) With option L05: 18 to 30 DC; In = 5 A
Rated DC voltage <sup>1)</sup>	V	600
Rated field DC voltage <sup>1)</sup>	V	390
Rated frequency	Hz	45 to 65 <sup>10)</sup>
Overload possibility <sup>6)</sup>		Max. 1.8x rated DC current
Closed-loop control constancy		$\Delta n = 0.006\%$ of the rated motor speed during operation with incremental encoder <b>and</b> digital setpoint $\Delta n = 0.1\%$ of the rated motor speed during operation with analog tachometer <b>or</b> analog setpoint <sup>5)</sup>
Degree of protection		IP00 according to EN 60529
Protection class		Class I (with protective conductor system) and class III (PELV) according to EN 61800-5-1

Table 4- 35 Technical data for 3-ph. 575 V AC, 60 A to 210 A, 4Q devices

Article number 6RA80 ..		..25-6GV62-...	..31-6GV62-...	..75-6GV62-...
Rated DC current	A	60	125	210
Rated armature input current <sup>2)</sup>	A	49.8	104	174
Rated power	kW	35	75	126
Power loss at rated DC current (approx.)	W	274	463	742
Rated field DC current	A	10	10	15
Type of cooling		Self-ventilated	Self-ventilated	Forced ventilation
Rated fan supply voltage	V	-	-	Fan with internal power supply
Fan air flow	m <sup>3</sup> /h	-	-	300
Fan noise level	dB(A)	-	-	70.3
Dimensions (WxHxD)	mm	268x385x252	268x385x252	268x385x252
Weight (approx.)	kg	11	14	15
Rated DC voltage for single-phase operation	V	400	400	-
Rated DC current for single-phase operation	A	42.0	87.5	-

Table 4- 36 Technical data for 3-ph. 575 V AC, 400 A to 1100 A, 4Q devices

Article number 6RA80 ..		..81-6GV62-...	..85-6GV62-...	..87-6GV62-...	..90-6GV62-...	
Rated DC current	A	400	600	850	1100	
Rated armature input current <sup>2)</sup>	A	332	498	706	913	
Rated power	kW	240	360	510	660	
Power loss at rated DC current (approx.)	W	1598	2002	2826	4022	
Rated field DC current	A	25	25	30	40	
Type of cooling		Forced ventilation	Forced ventilation	Forced ventilation	Forced ventilation	
Rated fan supply voltage	50 Hz	V	3-ph. 400 V AC (±15%) clockwise phase sequence	3-ph. 400 V AC (±15%) clockwise phase sequence	3-ph. 400 V AC (±15%) clockwise phase sequence	3-ph. 400 V AC (±10%) clockwise phase sequence
	60 Hz	V	3-ph. 460 V AC (±10%) clockwise phase sequence	3-ph. 460 V AC (±10%) clockwise phase sequence	3-ph. 460 V AC (±10%) clockwise phase sequence	3-ph. 460 V AC (±10%) clockwise phase sequence
		V	With option L21: 1-ph. 230 V AC (±10%)			
Rated fan current	50 Hz	A	0.27 <sup>8)</sup>	0.27 <sup>8)</sup>	0.27 <sup>8)</sup>	0.38 <sup>9)</sup>
	60 Hz		0.33	0.33	0.33	0.5
Rated fan current with option L21	50 Hz	A	0.68	0.68	0.68	1.16
	60 Hz		0.95	0.95	0.95	1.7
Fan air flow	m <sup>3</sup> /h		600	600	600	1000
Fan noise level	50 Hz	dB(A)	70.3	70.3	70.3	70.4
	60 Hz		74.4	74.4	74.4	74.2
Dimensions (WxHxD)	mm	268x625x275	268x625x275	268x700x311	268x785x435	
Weight (approx.)	kg	26	31	42	78	

Technical data

4.5 Unit data

Table 4- 37 Technical data for 3-ph. 575 V AC, 1600 A to 2800 A, 4Q devices

Article number 6RA80 ..			..93-4GV62-...	..95-4GV62-...	..96-4GV62-...	..97-4GV62-...
Rated DC current	A		1600	2000	2200	2800
Rated armature input current <sup>2)</sup>	A		1328	1660	1826	2324
Rated power	kW		960	1200	1320	1680
Power loss at rated DC current (approx.)	W		6036	7073	7391	10530
Rated field DC current	A		40	40	40	40
Type of cooling			Forced ventilation	Forced ventilation	Forced ventilation	Forced ventilation
Rated fan supply voltage	V		3-ph. 400 V AC ( $\pm 10\%$ ) 50 Hz / clockwise phase sequence 3-ph. 460 V AC ( $\pm 10\%$ ) 60 Hz / clockwise phase sequence			
Rated fan current	50 Hz	A	0.95 <sup>9)</sup>	0.95 <sup>9)</sup>	0.95 <sup>9)</sup>	0.95 <sup>9)</sup>
	60 Hz		1.25	1.25	1.25	1.25
Fan air flow	m <sup>3</sup> /h		2400	2400	2400	2400
Fan noise level	50 Hz	dB(A)	80.3	80.3	80.3	80.3
	60 Hz		83.2	83.2	83.2	83.2
Dimensions (WxHxD)	mm		453x883x505	453x883x505	453x883x505	453x883x505
Weight (approx.)	kg		155	155	185	185

**3-ph. 690 V AC, 4Q devices**

<i>6RA8086-6KV62-0AAA0</i>	<i>6RA8090-6KV62-0AAA0</i>	
<i>6RA8093-4KV62-0AAA0</i>	<i>6RA8095-4KV62-0AAA0</i>	<i>6RA8097-4KV62-0AAA0</i>

Table 4- 38 Technical data for 3-ph. 690 V AC, 4Q devices

<b>Common data</b>		
Rated armature supply voltage <sup>1)</sup>	V	3-ph. 690 V AC (+10% / -20%)
Rated field supply voltage <sup>1)</sup>	V	2-ph. 480 V AC (+10% / -20%)
Electronic power supply, rated supply voltage	V	2 AC 380 (-25%) to 480 V AC (+10%); In = 1 A or 1 AC 190 (-25%) to 240 V AC (+10%); In = 2 A (-35% for 1 min.) With option L05: 18 to 30 DC; In = 5 A
Rated DC voltage <sup>1)</sup>	V	725
Rated field DC voltage <sup>1)</sup>	V	390
Rated frequency	Hz	45 to 65 <sup>10)</sup>
Overload possibility <sup>6)</sup>		Max. 1.8x rated DC current
Closed-loop control constancy		$\Delta n = 0.006\%$ of the rated motor speed during operation with incremental encoder <b>and</b> digital setpoint $\Delta n = 0.1\%$ of the rated motor speed during operation with analog tachometer <b>or</b> analog setpoint <sup>5)</sup>
Degree of protection		IP00 according to EN 60529
Protection class		Class I (with protective conductor system) and class III (PELV) according to EN 61800-5-1

Technical data

4.5 Unit data

Table 4- 39 Technical data for 3-ph. 690 V AC, 760 A to 1000 A, 4Q devices

Article number 6RA80 ..		..86-6KV62-...		..90-6KV62-...	
Rated DC current		A	760		1000
Rated armature input current <sup>2)</sup>		A	631		830
Rated power		kW	551		725
Power loss at rated DC current (approx.)		W	2897		3963
Rated field DC current		A	30		40
Type of cooling			Forced ventilation		Forced ventilation
Rated fan supply voltage	V		3-ph. 400 V AC (±15%) 50 Hz / clockwise phase sequence 3-ph. 460 V AC (±10%) 60 Hz / clockwise phase sequence With option L21: 1-ph. 230 V AC (±10%)		3-ph. 400 V AC (±10%) 50 Hz / clockwise phase sequence 3-ph. 460 V AC (±10%) 60 Hz / clockwise phase sequence With option L21: 1-ph. 230 V AC (±10%)
Rated fan current	50 Hz 60 Hz	A	0.27 <sup>8)</sup> 0.33		0.38 <sup>9)</sup> 0.5
Rated fan current with option L21	50 Hz 60 Hz	A	0.38 0.5		1.16 1.7
Fan air flow		m <sup>3</sup> /h	600		1000
Fan noise level	50 Hz 60 Hz	dB(A)	70.3 74.4		70.4 74.2
Dimensions (WxHxD)		mm	268x700x311		268x785x435
Weight (approx.)		kg	42		78

Table 4- 40 Technical data for 3-ph. 690 V AC, 1500 A to 2600 A, 4Q devices

Article number 6RA80 ..		..93-4KV62-...		..95-4KV62-...		..97-4KV62-...	
Rated DC current		A	1500		2000		2600
Rated armature input current <sup>2)</sup>		A	1245		1660		2158
Rated power		kW	1088		1450		1885
Power loss at rated DC current (approx.)		W	6675		8158		10300
Rated field DC current		A	40		40		40
Type of cooling			Forced ventilation		Forced ventilation		Forced ventilation
Rated fan supply voltage	V		3-ph. 400 V AC (±10%) 50 Hz / clockwise phase sequence 3-ph. 460 V AC (±10%) 60 Hz / clockwise phase sequence				
Rated fan current	50 Hz 60 Hz	A	0.95 <sup>9)</sup> 1.25		0.95 <sup>9)</sup> 1.25		0.95 <sup>9)</sup> 1.25
Fan air flow		m <sup>3</sup> /h	2400		2400		2400
Fan noise level	50 Hz 60 Hz	dB(A)	80.8 83.2		80.8 83.2		80.8 83.2
Dimensions (WxHxD)		mm	453x883x505		453x883x505		453x883x505
Weight (approx.)		kg	155		155		185



**3-ph. 830 V AC, 4Q devices**

6RA8088-6LV62-0AA0

6RA8093-4LV62-0AA0

6RA8095-4LV62-0AA0

Table 4- 41 Technical data for 3-ph. 830 V AC, 4Q devices

<b>Common data</b>		
Rated armature supply voltage <sup>1)</sup>	V	3-ph. 830 V AC (+10% / -20%)
Rated field supply voltage <sup>1)</sup>	V	2-ph. 480 V AC (+10% / -20%)
Electronic power supply, rated supply voltage	V	2 AC 380 (-25%) to 480 V AC (+10%); In = 1 A or 1 AC 190 (-25%) to 240 V AC (+10%); In = 2 A (-35% for 1 min.) With option L05: 18 to 30 DC; In = 5 A
Rated DC voltage <sup>1)</sup>	V	875
Rated field DC voltage <sup>1)</sup>	V	390
Rated frequency	Hz	45 to 65 <sup>10)</sup>
Overload possibility <sup>6)</sup>		Max. 1.8x rated DC current
Closed-loop control constancy		$\Delta n = 0.006\%$ of the rated motor speed during operation with incremental encoder <b>and</b> digital setpoint $\Delta n = 0.1\%$ of the rated motor speed during operation with analog tachometer <b>or</b> analog setpoint <sup>5)</sup>
Degree of protection		IP00 according to EN 60529
Protection class		Class I (with protective conductor system) and class III (PELV) according to EN 61800-5-1

Technical data

4.5 Unit data

Table 4- 42 Technical data for 3-ph. 830 V AC, 950 A to 1900 A, 4Q devices

Article number 6RA80 ..			..88-6LV62-....	..93-4LV62-...	..95-4LV62-...
Rated DC current		A	950	1500	1900
Rated armature input current <sup>2)</sup>		A	789	1245	1577
Rated power		kW	831	1313	1663
Power loss at rated DC current (approx.)		W	4221	7122	8669
Rated field DC current		A	40	40	40
Type of cooling			Forced ventilation	Forced ventilation	Forced ventilation
Rated fan supply voltage	50 Hz	V	3-ph. 400 V AC ( $\pm 10\%$ ) / clockwise phase sequence		
	60 Hz		3-ph. 460 V AC ( $\pm 10\%$ ) / clockwise phase sequence		
			With option L21: 1-ph. 230 V AC ( $\pm 10\%$ )		
Rated fan current	50 Hz	A	0.38 <sup>9)</sup>	0.95 <sup>9)</sup>	0.95 <sup>9)</sup>
	60 Hz		0.5	1.25	1.25
Rated fan current with option L21	50 Hz	A	1.16	-	-
	60 Hz		1.7		
Fan air flow		m <sup>3</sup> /h	1000	2400	2400
Fan noise level	50 Hz	dB(A)	70.4	80.8	80.8
	60 Hz		74.2	83.2	83.2
Dimensions (WxHxD)		mm	268x785x435	453x883x505	453x883x505
Weight (approx.)		kg	78	155	155

**3-ph. 950 V AC, 2Q and 4Q devices**

6RA8096-4MS22-0AA0

6RA8096-4MV62-0AA0

Table 4- 43 Technical data for 3-ph. 950 V AC, 2Q and 4Q devices

Common data		
Rated armature supply voltage <sup>1)</sup>	V	3-ph. 950 V AC (+15% / -20%)
Rated field supply voltage <sup>1)</sup>	V	2-ph. 480 V AC (+10% / -20%)
Electronic power supply, rated supply voltage	V	2 AC 380 (-25%) to 480 V AC (+10%); In = 1 A or 1 AC 190 (-25%) to 240 V AC (+10%); In = 2 A (-35% for 1 min.) With option L05: 18 to 30 DC; In = 5 A
Rated field DC voltage <sup>1)</sup>	V	390
Rated frequency	Hz	45 to 65 <sup>10)</sup>
Overload possibility <sup>6)</sup>		Max. 1.8x rated DC current
Closed-loop control constancy		$\Delta n = 0.006\%$ of the rated motor speed during operation with incremental encoder <b>and</b> digital setpoint $\Delta n = 0.1\%$ of the rated motor speed during operation with analog tachometer <b>or</b> analog setpoint <sup>5)</sup>
Degree of protection		IP00 according to EN 60529
Protection class		Class I (with protective conductor system) and class III (PELV) according to EN 61800-5-1

Table 4- 44 Technical data for 3-ph. 950 V AC, 2200 A, 2Q and 4Q devices

Article number 6RA80 ..		..96-4MS22-...	..96-4MV62-...
Rated DC current	A	2200	2200
Rated DC voltage <sup>1)</sup>	V	1140	1000
Rated armature input current <sup>2)</sup>	A	1826	1826
Rated power	kW	2508	2200
Power loss at rated DC current (approx.)	W	11340	11340
Rated field DC current	A	40	40
Type of cooling		Forced ventilation	Forced ventilation
Rated fan supply voltage	V	3-ph. 400 V AC ( $\pm 10\%$ ) 50 Hz / clockwise phase sequence 3-ph. 460 V AC ( $\pm 10\%$ ) 60 Hz / clockwise phase sequence	
Rated fan current	50 Hz 60 Hz	A	0.95 <sup>9)</sup> 1.25
Fan air flow	m <sup>3</sup> /h		2400
Fan noise level	50 Hz 60 Hz	dB(A)	80.8 83.2
Dimensions (WxHxD)	mm	453x883x505	453x883x505
Weight (approx.)	kg	165	185

Footnotes:

- 1) The specified rated DC voltage can only be reached if the undervoltage does not exceed 5%.  
For 2Q devices, the specified rated DC voltage can only be achieved if the  $\alpha_c$  limit (p50150) is set to 5°.  
Note:  
Option L04 is available for armature infeed with extra-low voltage (ordering data for options, see Chapter "Type spectrum, ordering information (Page 25)").
- 2) Values apply to rated DC output current
- 5) Conditions:  
The closed-loop control (closed-loop PI control) constancy is related to the rated motor speed and applies when the SINAMICS DC MASTER is at the operating temperature. This is subject to the following preconditions:
  - Temperature changes of  $\pm 10$  °K  
Changes to the line voltage of +10% / -5% of the rated input voltage
  - Temperature coefficient of tachometer generator with temperature compensation: 0.15‰ every 10 °K (with analog tachometer generator only)
  - Constant setpoint (14-bit resolution)
- 6) For dynamic overload capability, see also Chapter "Dynamic overload capability of the power unit (Page 591)"
- 8) 9) See also "UL 508 C-compliant cabinet installation for a SINAMICS DC MASTER" in Chapter "Installation (Page 77)"
- 10) The option of operating in an extended frequency range can be provided on request.

## 4.6 Derating

Depending on the ambient temperature and the installation altitude, a derating is required for the maximum permissible load of the SINAMICS DC MASTER.

The derating factor can be taken from the following tables and should be set via p50077. Intermediate values can be obtained through linear interpolation.

---

### Note

**Units with option L15 and use of the SINAMICS DCM in a SINAMICS DCM Cabinet drive cabinet with option L99**

In these cases, p50077 should be set according to Chapter "Sensor for the ambient and/or air intake temperature (Page 595)".

---

Table 4- 45 Derating factor for units up to 125 A (with natural air cooling, cooling type AN)

Installation altitude above sea level	Ambient or coolant temperature								
	15 °C	20 °C	25 °C	30 °C	35 °C	40 °C	45 °C	50 °C	55 °C
Up to 1000 m	1.00	1.00	1.00	1.00	1.00	1.00	1.00	0.94	0.88
Up to 2000 m	1.00	1.00	1.00	1.00	1.00	0.94	0.88	0.82	x
Up to 3000 m	1.00	1.00	1.00	0.96	0.90	0.84	x	x	x
Up to 4000 m	1.00	0.98	0.92	0.86	0.80	x	x	x	x
Up to 5000 m	0.92	0.86	0.80	x	x	x	x	x	x
x ... SINAMICS DCM operation not possible									

Table 4- 46 Derating factor for units from 210 A (with forced air cooling, cooling type AF)

Installation altitude above sea level	Ambient or coolant temperature								
	15 °C	20 °C	25 °C	30 °C	35 °C	40 °C	45 °C	50 °C	55 °C
Up to 1000 m	1.00	1.00	1.00	1.00	1.00	1.00	0.95	0.90	x
Up to 2000 m	1.00	1.00	1.00	0.98	0.93	0.88	0.83	0.78	x
Up to 3000 m	1.00	0.98	0.93	0.88	0.83	0.78	x	x	x
Up to 4000 m	0.93	0.88	0.83	0.78	0.73	x	x	x	x
Up to 5000 m	0.83	0.78	0.73	x	x	x	x	x	x
x ... SINAMICS DCM operation not possible									

### Voltage derating depending on the installation altitude

The series of SINAMICS DCM units fulfill overvoltage category III according to EN 61800-5-1 for line supply circuits with respect to the environment (other line supply circuits, housing, electronics).

For electronics and field supplies with voltages of 2-ph. 480 V AC (line-to-line; maximum 300 V AC to ground), operation is permitted up to 4500 m above sea level. A maximum of 2-ph. 400 V AC (line-to-line; maximum 230 V AC to ground) is permitted up to 5000 m.

All units, with 400 V up to 575 V as well as also with 690 V to 950 V rated armature supply voltage, can be operated up to a maximum of 4000 m above sea level without voltage derating.

For units with rated armature supply voltages of 690 V to 950 V, up to 4500 m a maximum 930 V AC and up to 5000 m, a maximum 880 V AC is permissible as armature supply voltage.

For units with rated armature supply voltages of 400 V to 575 V, up to 4500 m a maximum 550 V AC and up to 5000 m, a maximum 500 V AC is permissible as armature supply voltage.

If the specified voltages with respect to ground are exceeded or the installation altitude is exceeded, then a reduction of the overvoltage category to II must be applied. As a consequence, operation up to 6000 m without derating is permissible.

The overvoltage category of the line supply can be reduced to II using an appropriate surge arrester, filter or isolation transformer. If this is not realized, then there is no longer safe electrical separation of the electronics (interface connections on the CUD) with respect to the line supply.

According to EN 61800-5-1, operation of units without "safe electrical separation" is permissible only if it can be absolutely excluded that persons are in danger by being able to directly touch or indirectly touch parts, i.e. in operation, none of the CUD interfaces can be touched. A digital connection can be realized using an optical isolation.

# Transportation, unpacking, installation

## 5.1 Transportation, unpacking

The SINAMICS DC MASTER is packaged at the manufacturer's site in accordance with the order specification. A product packaging label is located on the carton.

Avoid heavy vibration and severe shocks during transportation, e.g. when lowering into position.


Follow the instructions on the packaging concerning transportation, storage and proper handling.

The SINAMICS DC MASTER can be installed once it has been unpacked, and you have checked that the delivery is complete and the unit is intact.

The packaging materials consist of the carton and corrugated cardboard. And can be disposed of in accordance with local regulations for cardboard packaging.

If you discover any damage that has occurred in transit, please inform your shipping agent immediately.

## 5.2 Installation

 <b>WARNING</b>
<b>Failure to observe general safety instructions and residual risks</b>
If the general safety instructions and remaining risks are not observed, accidents can occur involving severe injuries or death.
<ul style="list-style-type: none"><li>• Observe the general safety instructions.</li><li>• When assessing the risk, take into account remaining risks.</li></ul>

### Options for lifting units with a 1500 to 3000 A rated DC current

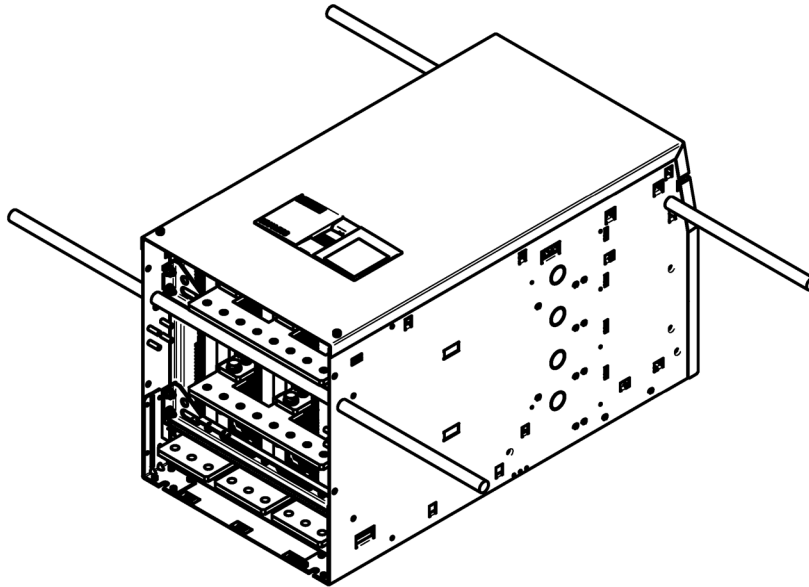



Figure 5-1 Options for lifting units with 1500 - 3000 A currents

### UL-508C-compliant cabinet installation for a SINAMICS DC MASTER

- If this unit is to be installed in a cabinet, the cabinet must be sufficiently ventilated and of "type 1" in accordance with standard UL 508C.
- To install the unit, the cabinet must have minimum dimensions of 600 mm x 2200 mm x 600 mm (W x H x TD).



Cabinet installation for units with a 1500 to 3000 A rated DC current

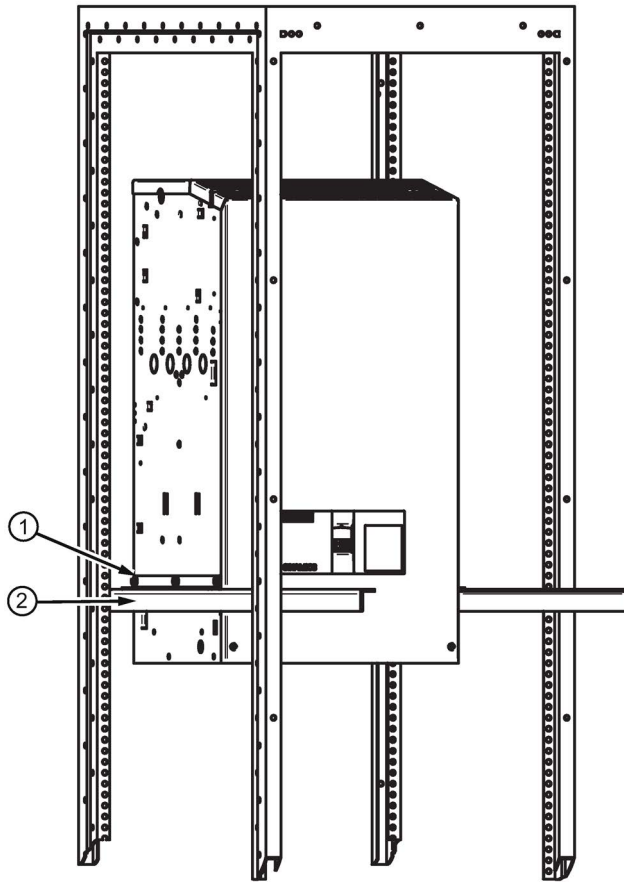

- The scope of delivery for these units includes 2 brackets ① that can be attached to the SINAMICS DC MASTER using 3 M8 hexagon bolts (also supplied) to facilitate installation.
- In this way, the unit can be pushed onto 2 additional brackets ② (not supplied) in the control cabinet.
- The units then have to be fixed to the rear cabinet wall using 4 attachments.
- Removing brackets ① and ②

Figure 5-2 Cabinet installation

**! WARNING**

**Fire due to inadequate ventilation clearances**

Inadequate ventilation clearances can cause overheating of components with subsequent fire and smoke. This can cause severe injury or even death. This can also result in increased downtime and reduced service lives for devices/systems.

- Maintain a minimum ventilation clearance of 100 mm above and below the device.

5.2 Installation

5.2.1 Dimension drawings

All dimensions in mm

Tolerance of the outer dimensions, +2 mm

Tolerance of the distances of the busbar holes for customer connections, ±1.5 mm

15 to 30 A, 4Q units

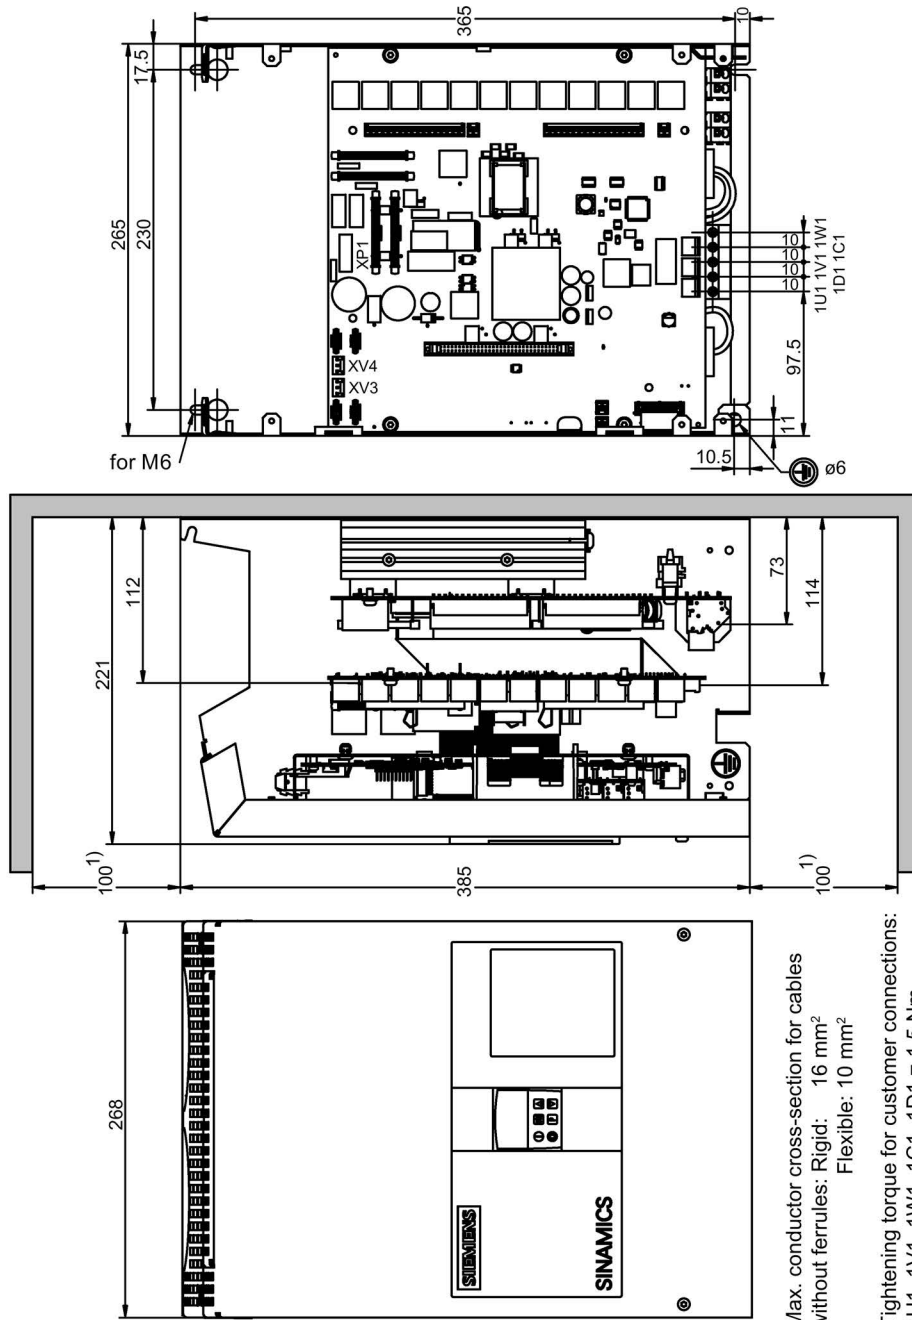


Figure 5-3 Dimension drawing, 15 A to 30 A, 4Q

60 to 280 A, 2Q units

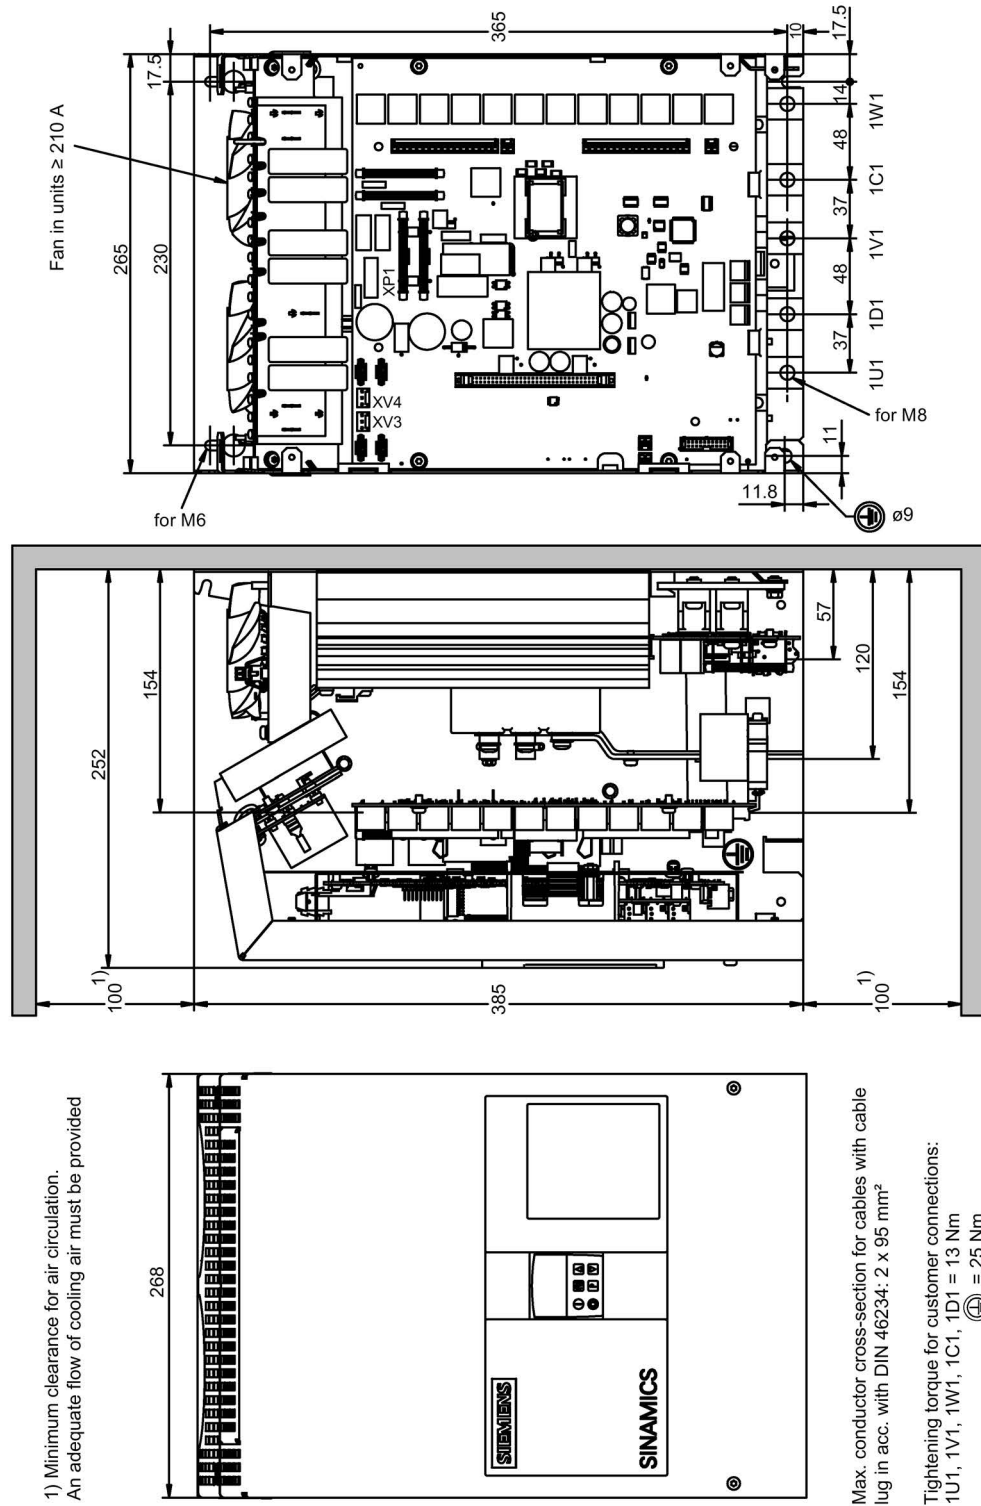


Figure 5-4 Dimension drawing, 60 A to 280 A, 2Q

5.2 Installation

60 to 280 A, 4Q units

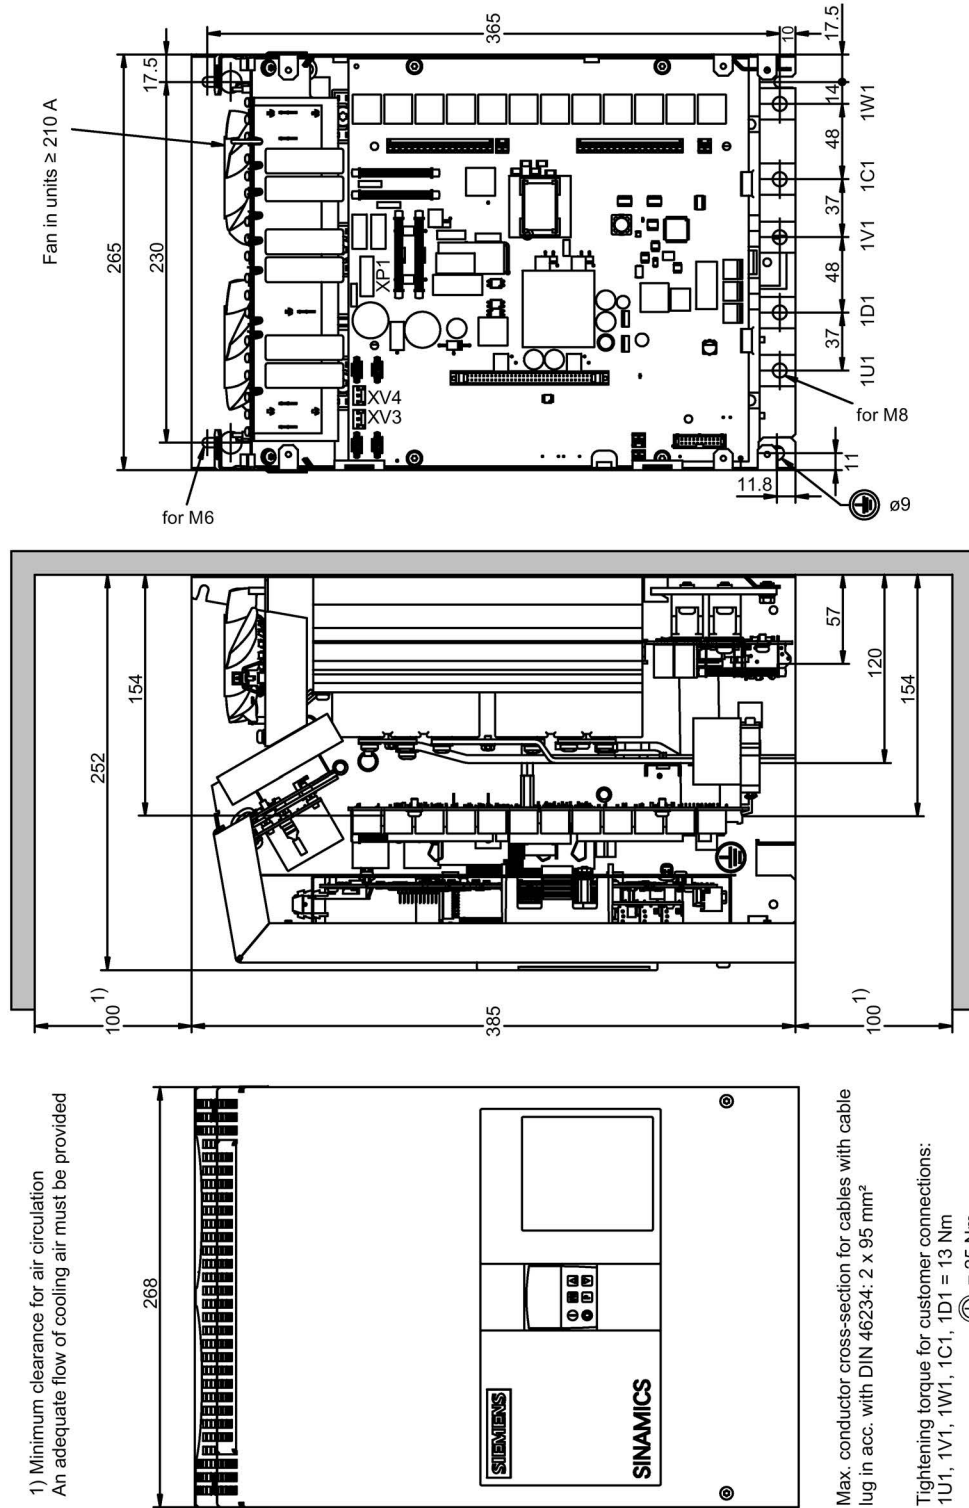


Figure 5-5 Dimension drawing, 60 A to 280 A, 4Q

400 to 600 A, 2Q units

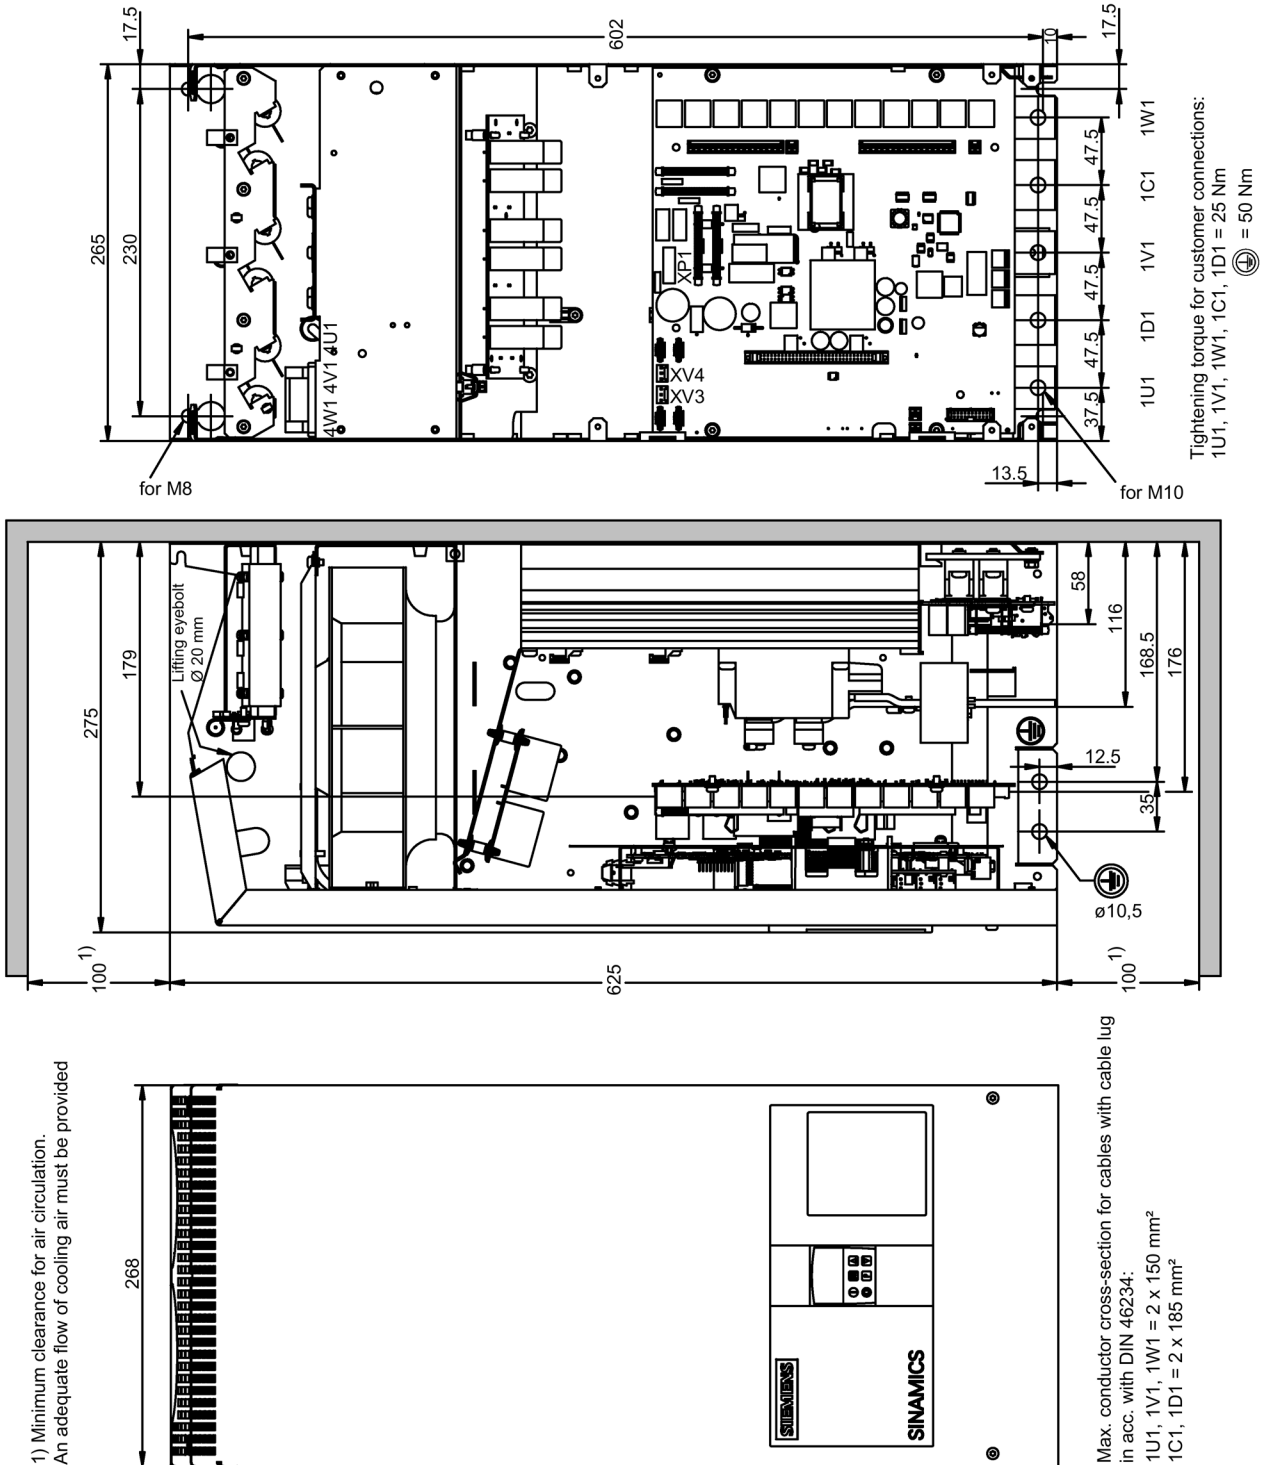


Figure 5-6 Dimension drawing, 400 to 600 A, 2Q

5.2 Installation

400 to 600 A, 4Q units

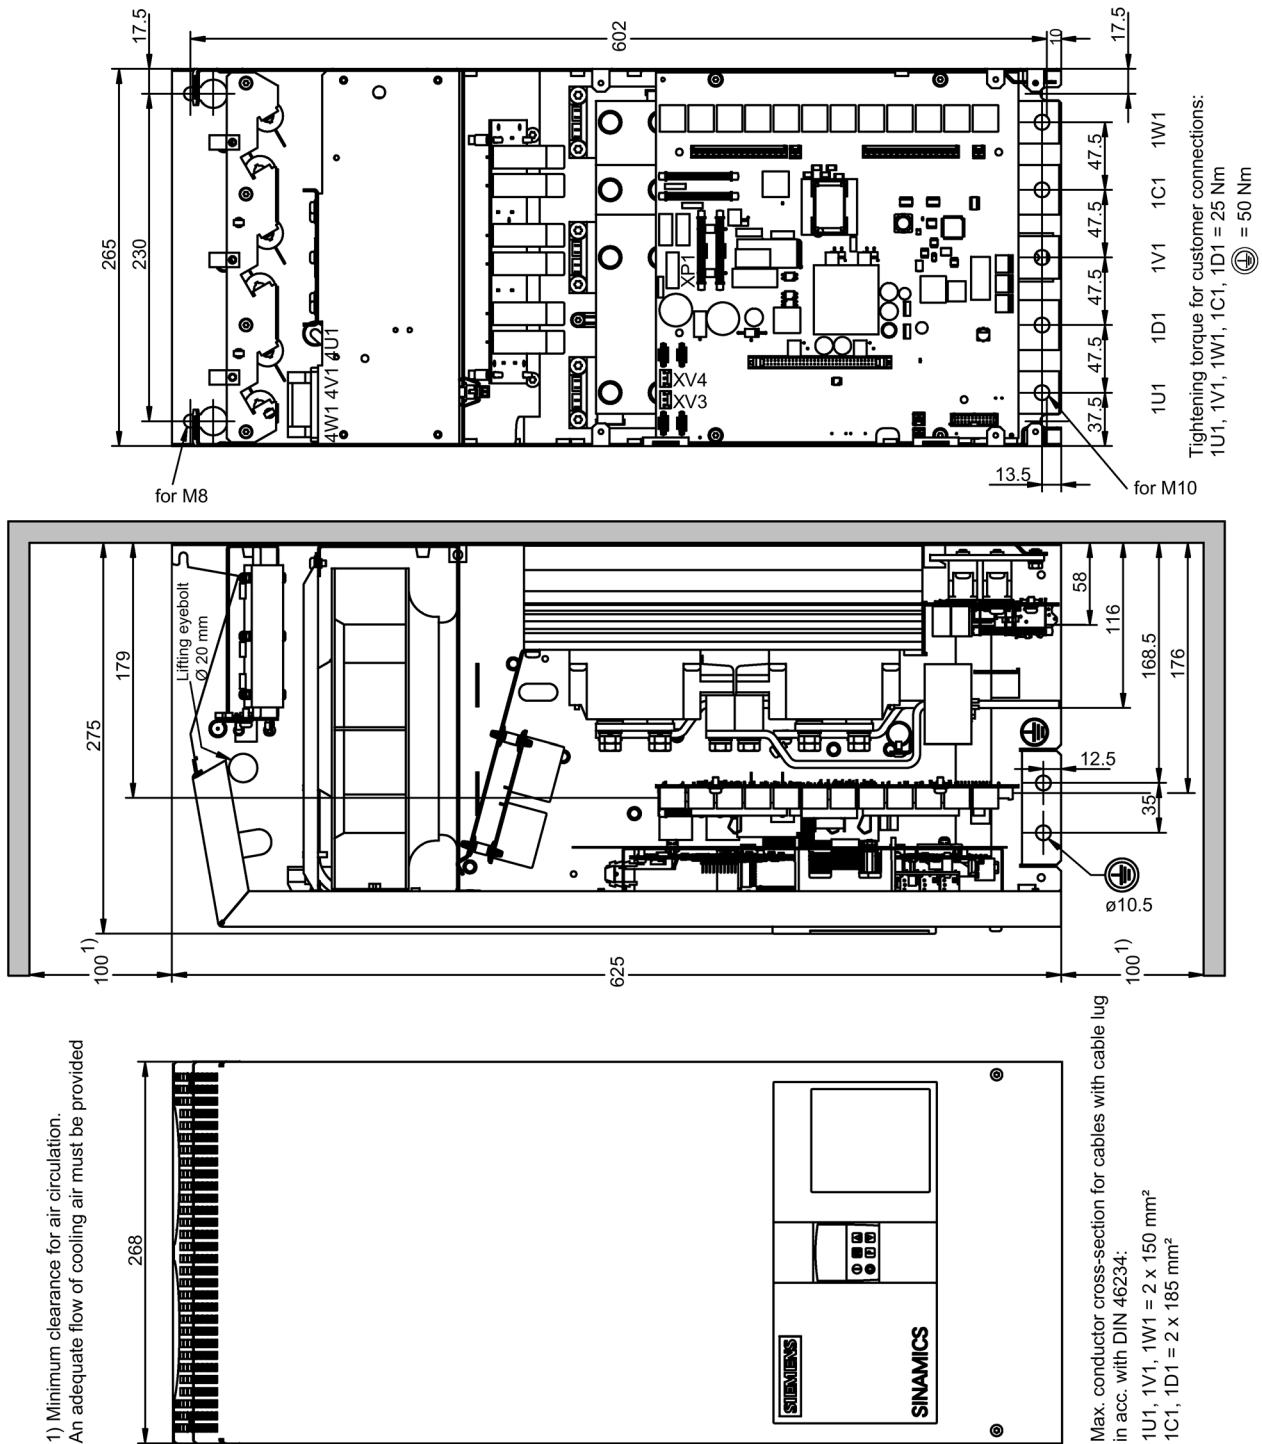


Figure 5-7 Dimension drawing, 400 A to 600 A, 4Q

720 to 850 A, 2Q units



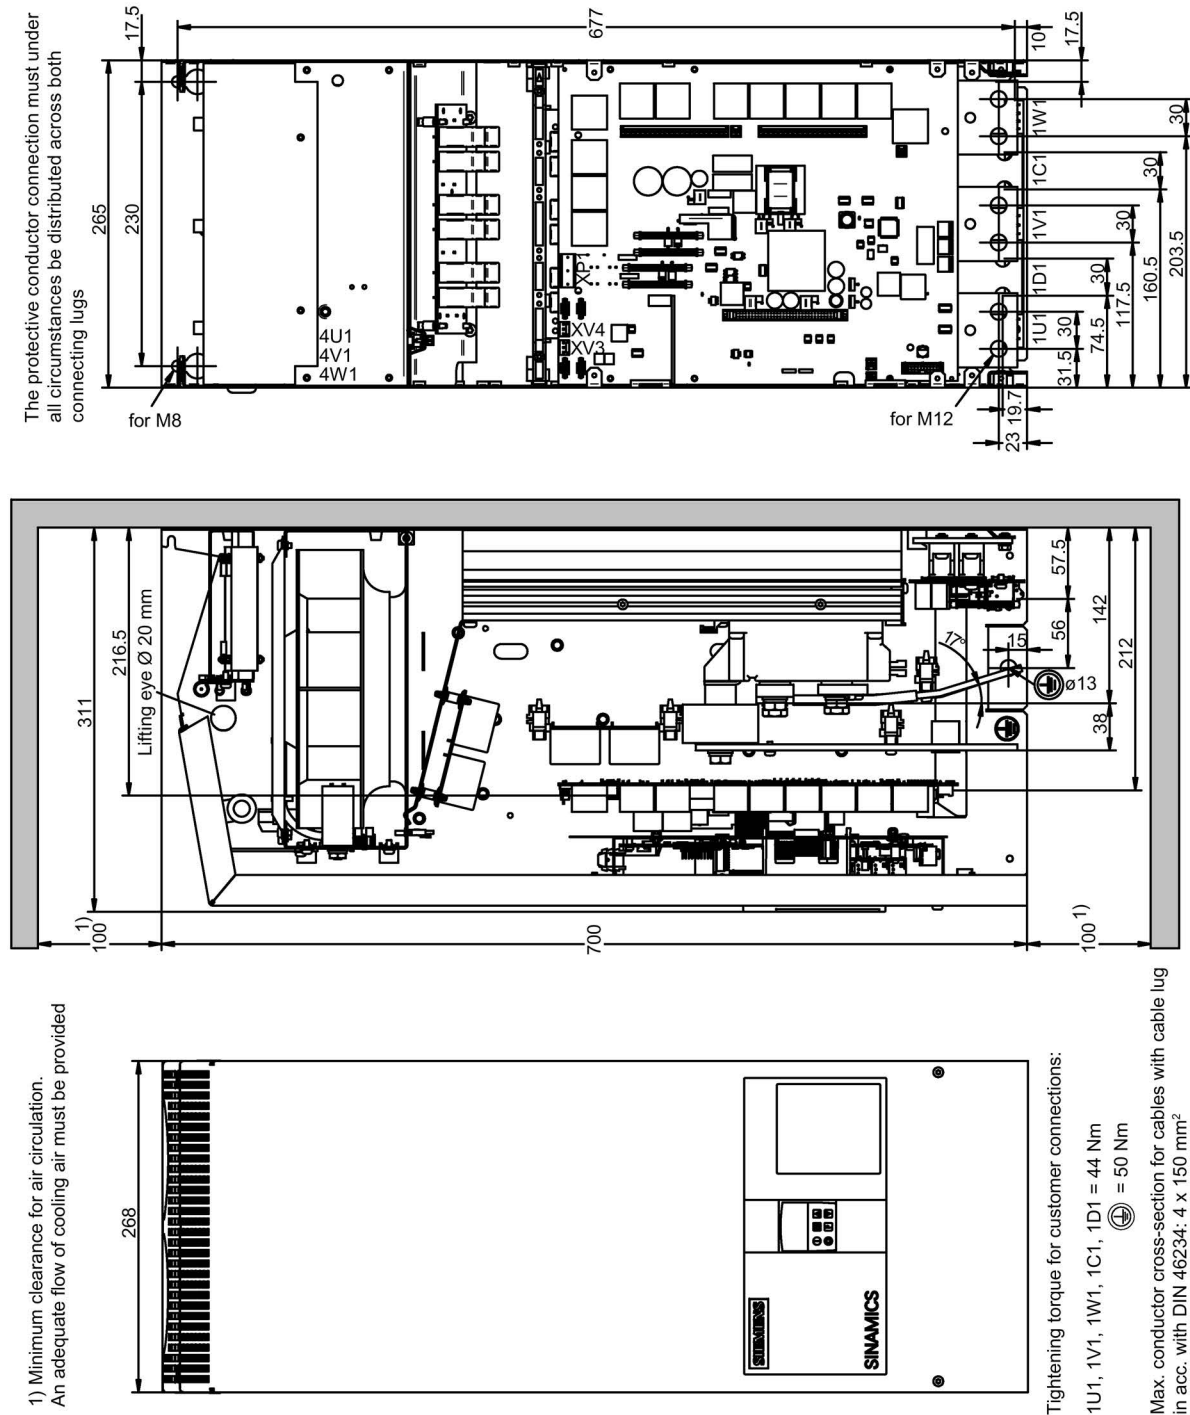



Figure 5-8 Dimension drawing, 720 to 850 A, 2Q

5.2 Installation

760 to 850 A, 4Q units

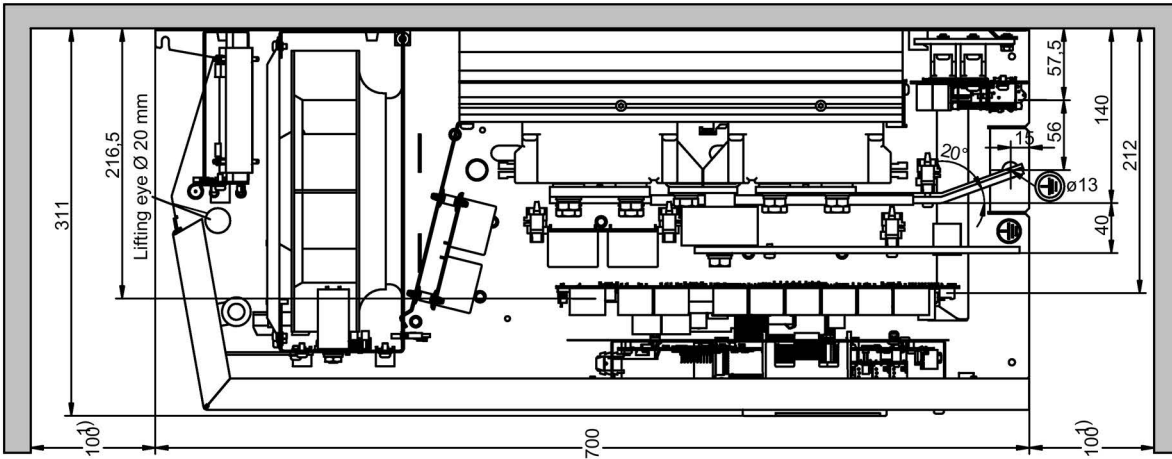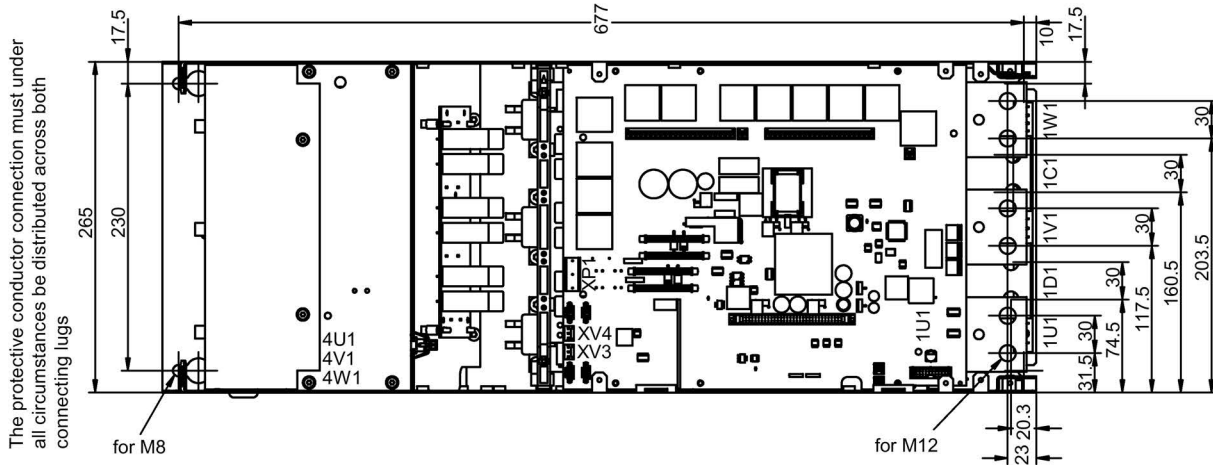

1) Minimum clearance for air circulation. An adequate flow of cooling air must be provided

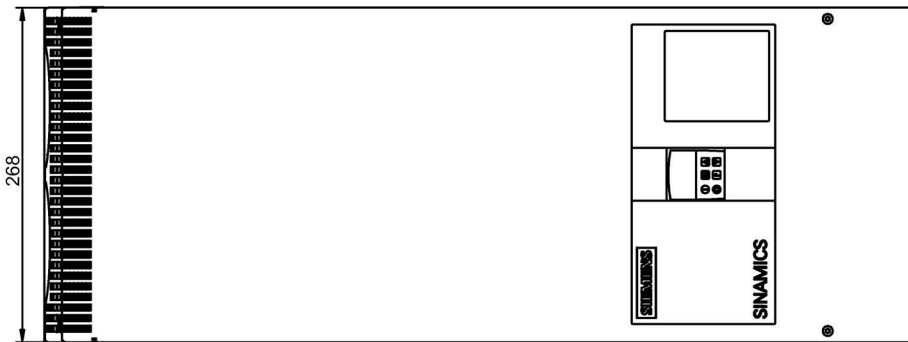

Tightening torque for customer connections:

1U1, 1V1, 1W1, 1C1, 1D1 = 44 Nm

$\oplus$  = 50 Nm

Max. conductor cross-section for cables with cable lug in acc. with DIN 46234: 4 x 150 mm<sup>2</sup>

Figure 5-9 Dimension drawing, 760 to 850 A, 4Q



900 to 1200 A units

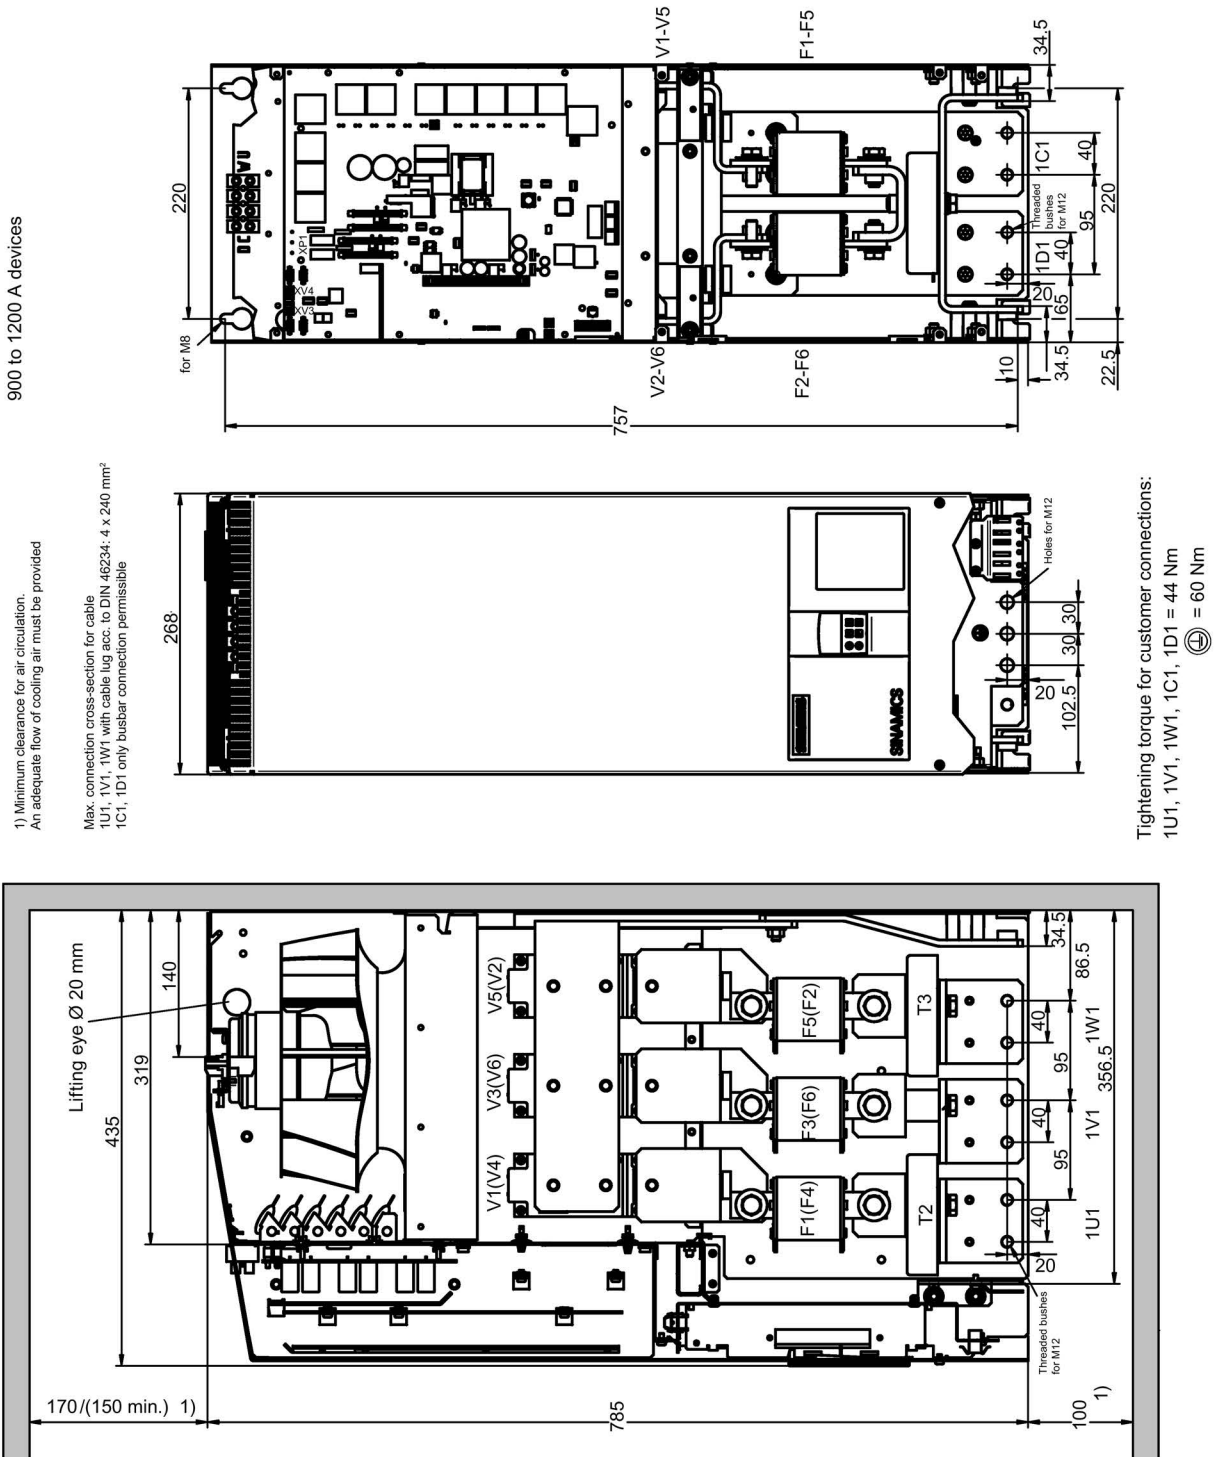


Figure 5-10 Dimension drawing, 900 to 1200 A

5.2 Installation

1500 to 3000 A units

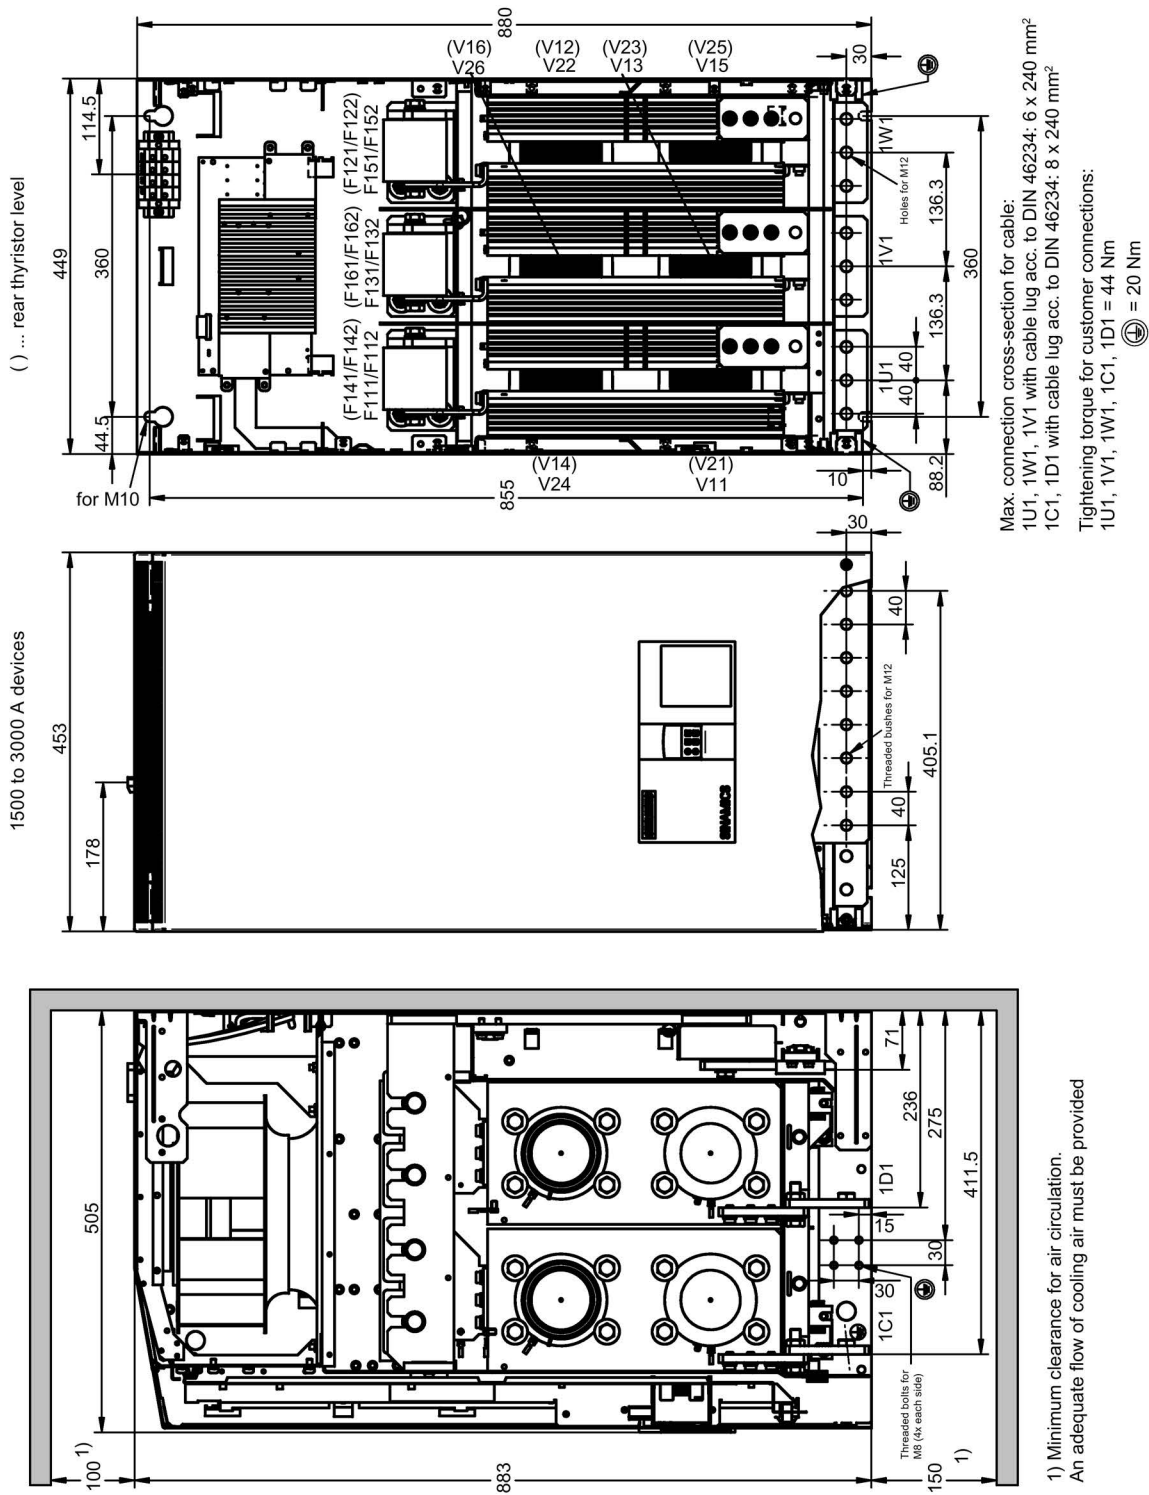


Figure 5-11 Dimension drawing, 1500 to 3000 A

## 5.2.2 Installing options and accessories

### 5.2.2.1 AOP30 operator panel

Installation cut-out required in the cabinet door: 197.5 × 141.5 mm

### 5.2.2.2 Installing a second CUD


#### NOTICE

#### Electrostatic-sensitive devices (ESD)

Note the information provided on "Electrostatic sensitive devices (ESD)" in Chapter 1.


#### Note

Use the supplied mounting aid. See Chapter "Replacing the CUD (Page 700)".

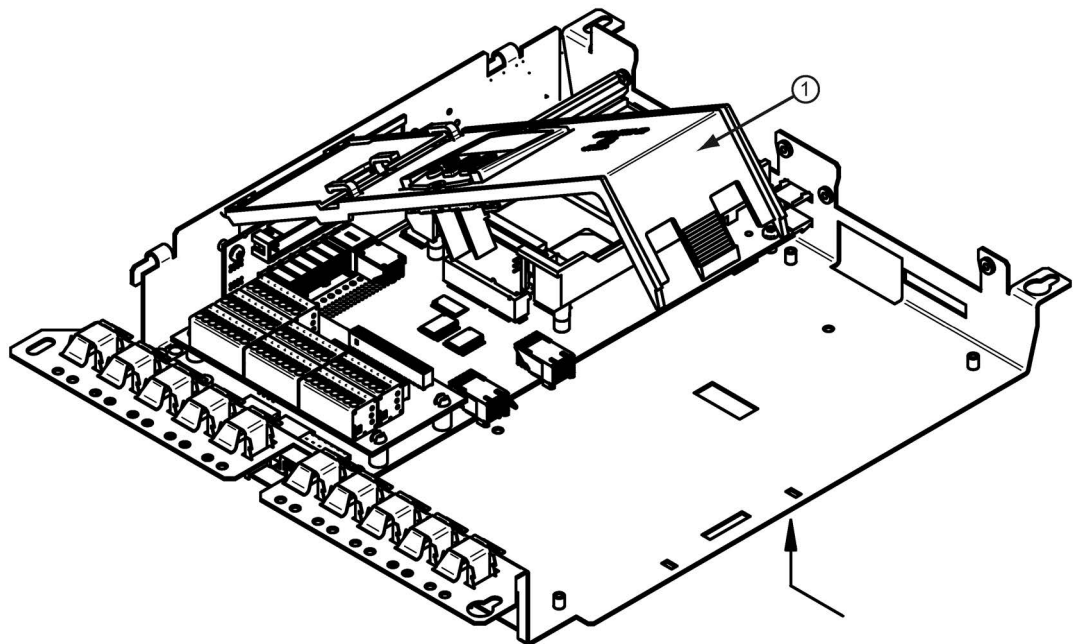


1. Unlock and tilt up the BOP support ①.

Figure 5-12 Installing a second CUD (1)

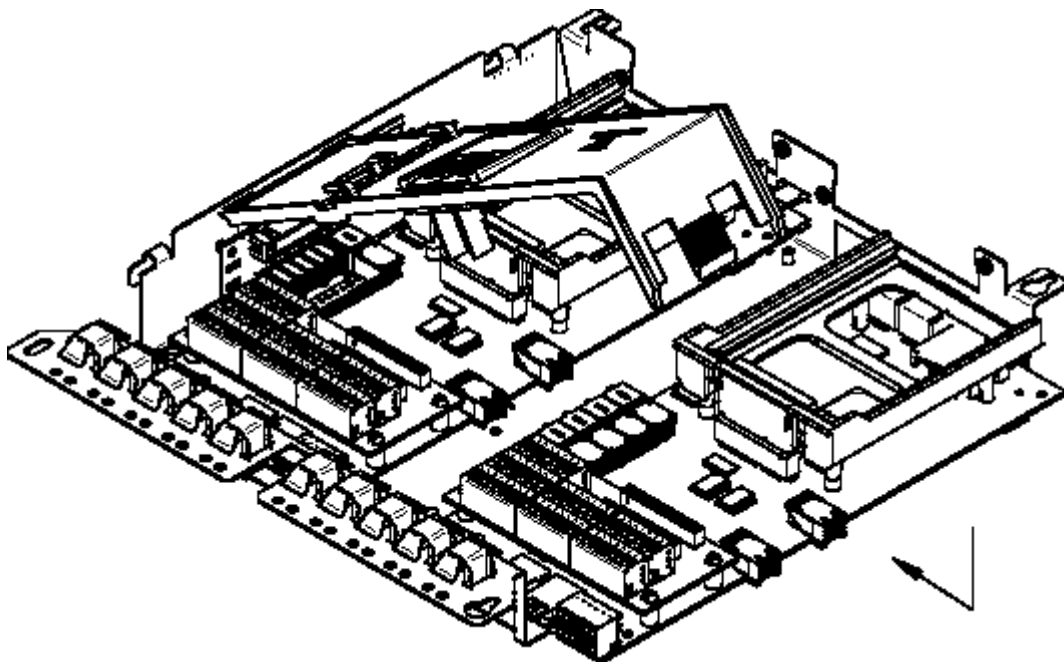

- 2. Mount the CUD and push it into the connectors for the left-hand CUD.
- 3. Secure the CUD using four screws (screw and washer assembly, M3×6), tightening torque 1 Nm

Figure 5-13 Installing a second CUD (2)

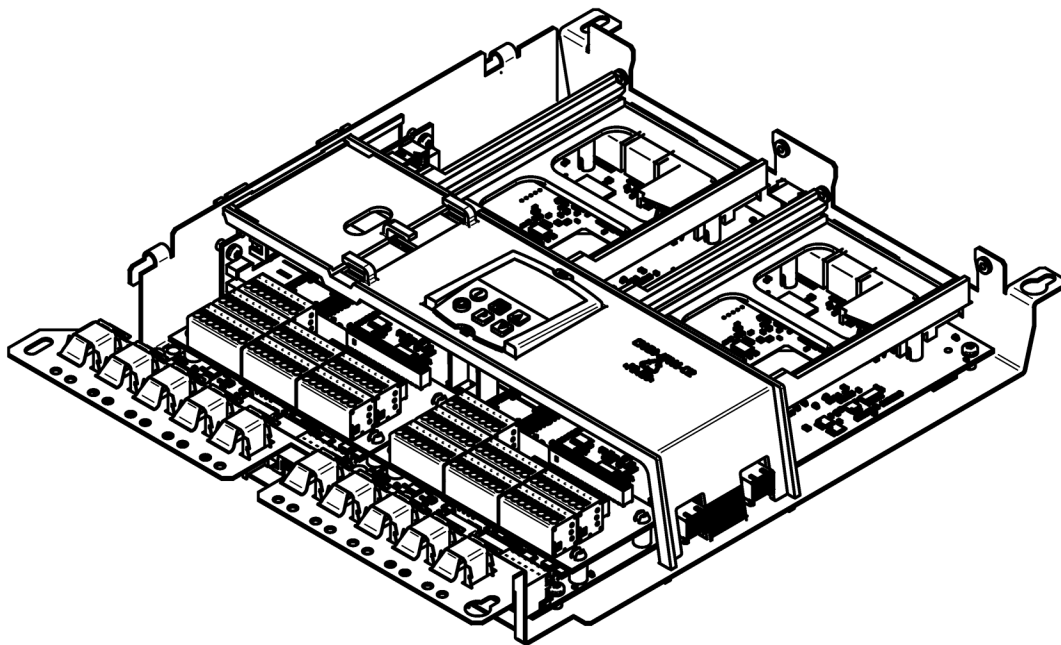

- 4. Lock the BOP support again.  
CAUTION: Do not clamp the BOP cable

Figure 5-14 Installing a second CUD (3)

---

**Note****Information on connecting the unit**

The inside front cover of the SINAMICS DC MASTER Operating Instructions contains a summary of the key information required for connecting the unit.

---

 **WARNING****Failure to observe general safety instructions and residual risks**

If the general safety instructions and remaining risks are not observed, accidents can occur involving severe injuries or death.

- Observe the general safety instructions.
- When assessing the risk, take into account remaining risks.

 **WARNING****Electric shock due to the residual charge of the capacitors**

Because of the capacitors, a hazardous voltage is still present for a period of time after the power supply has been switched off.

If live components are touched then this can result in severe injury or death.

- Open the unit only after the time specified on the warning label has elapsed.
- Before starting work, check the absence of voltage by measuring all poles, also to ground.

The devices may be connected to a line supply with residual current operated circuit breaker if a universal current sensitive device is being used, which in the case of a ground fault, can also detect a DC component in the fault current. We recommend a residual current operated circuit breaker with an operating current  $\geq 300$  mA, which means that it is not suitable to protect personnel. If you have additional questions, please contact Technical Support.

The power and control terminals may be live even when the motor is not running.

When handling the device while it is open, remember that live parts are exposed. The device must only be operated with the front covers provided by the factory fitted. When required, additional covers should be provided in the control cabinet (for example, in the area around the busbars).

To operate the SINAMICS DC MASTER, both front cover fixing screws must be tight.



<b>! WARNING</b>
<b>Electric shock when connecting a PROFIBUS cable under voltage</b>
When connecting the PROFIBUS cable while voltage is present, there is a danger of coming into contact with live components behind the terminal.
Touching live components can result in death or serious injury.
<ul style="list-style-type: none"><li>• Only connect the PROFIBUS cable to connector X126 when the device is in a no-voltage condition.</li></ul>

<b>NOTICE</b>
<b>Surge arresters</b>
Surge arresters must be in compliance with IEC 60364-5-53:2002.

## 6.1 Instructions for EMC-compliant drive installation

### Note

These installation instructions do not claim to contain all details and versions of devices, or to take into account all conceivable operational cases and applications.

Should you require further information or encounter specific problems which have not been dealt with in enough detail for your field of application, please contact your local Siemens office.

### 6.1.1 Basic information about EMC

#### What is EMC?

EMC stands for "electromagnetic compatibility" and describes the capability of a device to function satisfactorily in an electromagnetic environment without itself causing interference unacceptable for other devices in the environment. Therefore, the various devices used should not cause interference to one another.

Within the context of the EMC Directive, the SINAMICS DC MASTER devices described in this document are not "devices" at all, but are instead "components" that are intended to be installed in an overall system or overall plant. For reasons of clarity, however, the generic term "devices" is used in many cases.

## Interference emissions and interference immunity

EMC is dependent upon two properties demonstrated by the devices involved in the system: interference emissions and interference immunity. Electrical devices may be sources of interference (senders) and/or potentially susceptible equipment (receivers).

Electromagnetic compatibility is ensured when the existing sources of interference do not impair the function of potentially susceptible equipment.

A device may even be a source of interference and potentially susceptible equipment at the same time: For example, the power unit of a converter should be viewed as a source of interference and the control unit as potentially susceptible equipment (interference sink).

## Product standard EN 61800-3

Product standard EN 61800-3 describes the EMC requirements placed on "Variable-speed drive systems" (power drive systems). A variable-speed drive system (or Power Drive System PDS) consists of the drive converter and the electric motor including cables. The driven machine is not part of the drive system. EN 61800-3 defines different limits for the immunity to electromagnetic interference depending on the installation site of the drive system, referred to as the first and second environments.

Residential buildings or locations at which the drive system is directly connected to a public low-voltage network without an intermediate transformer are defined as the **first environment**.

The term **second environment** refers to all locations outside residential areas. These are basically industrial areas which are powered from the medium-voltage network via their own transformers.

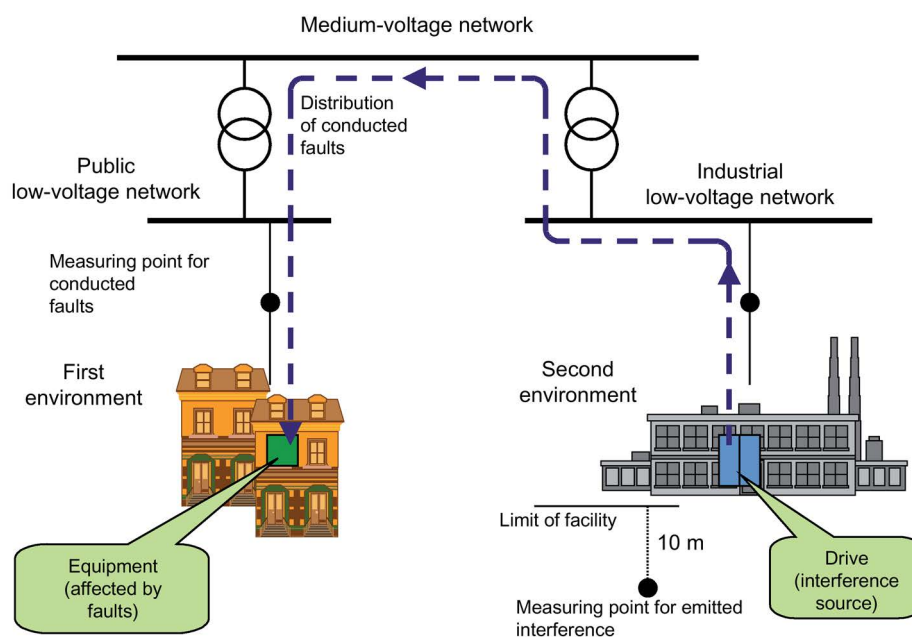


Figure 6-1 Definition of the first and second environments

Depending on the installation site and the drive power, four different categories are defined in EN 61800-3 with regard to the limit values for interference emission and two (operating) environments with regard to the requirements on interference immunity:

- Category C1: Drive systems for rated voltages < 1000 V for unrestricted use in the first environment.
- Category C2: Stationary drive systems for rated voltages < 1000 V for use in the second environment. Use in the first environment is possible if the drive system is distributed and installed by qualified personnel. The warning information and installation instructions supplied by the manufacturer must be observed.
- Category C3: Drive systems for rated voltages < 1000 V for exclusive use in the second environment
- Category C4: Drive systems for rated voltages  $\geq$  1000 V or for rated currents  $\geq$  400 A for use in complex systems in the second environment

The figure below shows how the four categories are assigned to the first and second environments:

First environment	C1	Second environment
	C2	
	C3	
	C4	

Figure 6-2 Definition of categories C1 to C4

SINAMICS DC MASTER devices are nearly always used in the second environment (categories C3 and C4).

RFI suppression filters and line reactors are required whenever they are to be used in Category C2.

The SINAMICS DC MASTER conform to the interference immunity requirements defined in EN 61800-3 for the second environment, and thus also with the lower interference immunity requirements for the first environment.

### SINAMICS DC MASTER: Industrial applications

Industrial applications demand that devices demonstrate an extremely high level of interference immunity, but by contrast place very low requirements on them in terms of interference emission levels.

SINAMICS DC MASTER converters are components of an electrical drive, such as contactors and switches. Qualified personnel must install them into a drive system which, as an absolute minimum, consists of the converter, motor cables, and motor. Line reactors and fuses are also required in most cases. Therefore, whether or not a limit value is adhered to is determined by the components being installed correctly. In order to limit the interference emission in compliance with the limit value for category C2 according to EN 61800-3, RFI suppression filters are required in the mains supply conductors for the armature and field power units and the line reactors. Without RFI suppression filters, the interference emission of SINAMICS DC MASTER converters exceeds the limit value for category C2.



If the drive forms part of a system, it does not initially need to fulfill any interference emission requirements, but the EMC Directive does require the system as a whole to be electro-magnetically compatible with its environment.

### Non-grounded networks

Non-grounded networks (IT systems) are used in some branches of industry in order to increase the availability of the plant. In the event of a ground fault, no fault current flows and the plant can continue with production. If RFI suppression filters are brought into the equation, however, a fault current does flow in the event of a ground fault, which may cause the drives to shut down or the RFI suppression filter to potentially be destroyed. For this reason, the product standard does not define any limit values for these networks. From an economical perspective, any necessary EMC conformance measures should be taken on the grounded primary side of the supply transformer.

### EMC planning

If two devices are not electromagnetically compatible, you can reduce the interference emission level of the source of interference or increase the interference immunity of the potentially susceptible equipment. Sources of interference are generally power electronics devices with high power consumption; reducing their interference emission levels requires complex filters. Potentially susceptible equipment usually refers to control gear and sensors, including their evaluation circuit. There is less work involved in increasing the interference immunity of inefficient devices, meaning that – economically speaking – increasing interference immunity is generally a more favorable option for industrial applications than reducing the interference emission level.

In industrial applications, EMC between devices should be based on a carefully-balanced combination of the interference emission and interference immunity levels.

The most cost-effective measure that can be put in place to achieve EMC conformance is to physically separate sources of interference and potentially susceptible equipment – provided that you have taken this option into account during the planning stage of your machine/plant. In the first instance, it is necessary to determine whether each device used is a potential source of interference or potentially susceptible equipment. Within this context, converter units and contactors, for example, can be counted as sources of interference. While examples of potentially susceptible equipment (interference sink) include PLCs, encoders and sensors.

The components in the control cabinet (sources of interference and potentially susceptible equipment) must be physically separated, by means of partition plates if necessary, or by installing them in metal enclosures.

## 6.1.2 EMC-compliant drive installation (installation instructions)

### General information

Not only are drives operated in a wide variety of environments, but the electrical components used (controllers, switch mode power supplies, and so on) can also differ widely with respect to interference immunity and interference emission levels, meaning that all installation guidelines of any kind can offer is a practical compromise. For this reason, EMC rules do not need to be implemented to the letter in all cases, provided that measures are tested on a case-by-case basis.

In order to ensure electromagnetic compatibility (EMC) in your control cabinets in rugged electrical environments and adhere to the standards required by the relevant legislating body, the EMC rules listed below should be followed during the construction and design stages.

Rules 1 to 10 apply on a general level. Rules 11 to 15 must be followed in order to fulfill interference emission standards.

### Rules for EMC-compliant installation

- 1 Connect all metallic parts of the control cabinet to one another over a flat area with good conductivity (not paint against paint!). Use contact or scratch washers if necessary. The cabinet door must be connected to the cabinet using the shortest possible ground strips (at the top, center, and bottom).
- 2 Contactors, relays, solenoid valves, electromechanical operating hours counters, etc., in the cabinet and – where applicable – in neighboring cabinets – must be provided with quenching combinations such as RC elements, varistors, and diodes. These must be connected directly at the appropriate coil.
- 3 Whenever possible, guide signal cables <sup>1)</sup> into the cabinet at one level only.
- 4 Unshielded cables in the same circuit (outgoing/incoming conductors) must be twisted where possible, or the area between them minimized, to prevent unnecessary frame antennae.
- 5 Connect spare wires to the cabinet ground <sup>2)</sup> at both ends. This achieves an additional shielding effect.
- 6 Avoid unnecessary cable lengths in order to keep coupling capacities and inductances low.
- 7 Crosstalk is generally reduced if the cables are laid close to the control cabinet ground. Do not, therefore, route cables freely around the cabinet, but lay them as close as possible to the cabinet enclosure/mounting plates. This also applies to spare cables.
- 8 Signal and power cables must be physically separated (to prevent coupling paths). Minimum clearance: You should aim for a minimum of 20 cm.  
If it is not possible to physically separate the encoder and motor cables, the encoder cable must be decoupled either using a metal partition or by laying it in a metal conduit. The partition or metal conduit must be grounded at several points.
- 9 Ground the shields of digital signal cables at both ends (source and destination), ensuring maximum contact area and good conductivity. In the event of poor equipotential bonding between the shield connections, run an additional equalizing conductor with a cross-section of at least 10 mm<sup>2</sup> parallel to the shield for the purpose of reducing the shield current. Generally speaking, the shields may also be connected to the cabinet enclosure (ground) <sup>2)</sup> at several points, and connected at several points outside the control cabinet.  
Foil shields should be avoided as they are at least 5 times less effective than braided shields.

- 10 Shields for analog signal cables may be connected to ground at both ends if equipotential bonding is good (this must be done over a large area with good conductivity). It can be assumed that equipotential bonding is good if all metal parts are well interconnected and the electronics components are supplied from a single source.  
Connecting a shield at one end prevents low-frequency, capacitive interference from being coupled in (e.g. 50 Hz hum). In this case, the shield should be connected in the control cabinet; a sheath wire may also be used for this purpose.  
The cable to the temperature sensor on the motor (X177:53 to 55) must be shielded. The shield must be connected to ground at both ends.
- 11 Ensure that the RFI suppression filter is always located close to the suspected source of interference. The filter must be attached to the cabinet enclosure, mounting plate, etc., over a flat area. Incoming and outgoing cables must be physically separated.
- 12 RFI suppression filters must be used in order to conform to limit value class A1. Additional loads must be connected upstream of the filter (on the line side). The controller used and the manner in which the rest of the control cabinet is wired will determine whether an additional line filter needs to be installed.
- 13 A line reactor must be included in the field circuit for controlled field power supplies.
- 14 A line reactor must be included in the armature circuit of the converter.
- 15 The motor cables do not have to be shielded. There must be a clearance of at least 20 cm between the line supply feeder cable and the motor cables (field, armature). Use a partition if necessary.

#### Footnotes

- 1) Signal cables are defined as:  
Digital signal cables: e.g. cables for incremental encoders  
Analog signal cables: e.g.  $\pm 10$  V setpoint cable  
Serial interfaces: e.g. PROFIBUS-DP
- 2) Generally speaking, "ground" refers to all metallic conductive parts that can be connected to a protective conductor, such as the cabinet enclosure, motor enclosure or foundation ground.

## Cabinet configuration and shielding

The cabinet configuration image below is intended to help the user become familiar with EMC-critical parts. This example does not claim to show all possible cabinet components or configuration options.

Later figures show details that are not made immediately clear by the overview image and which may also have an effect on the cabinet's resistance/interference emission levels, as well as shield connection techniques.

## Arrangement of RFI suppression filters and line reactors

Another section shows how the RFI suppression filters and line reactors are arranged in a SINAMICS DC MASTER. The order in which the reactors and filters are installed must be adhered to. The filter cables on the line side and unit side must be physically separated. For information on selecting fuses for semiconductor protection, please refer to the Chapter titled "Fuses (Page 149)".

### 6.1.3 Example of a cabinet configuration

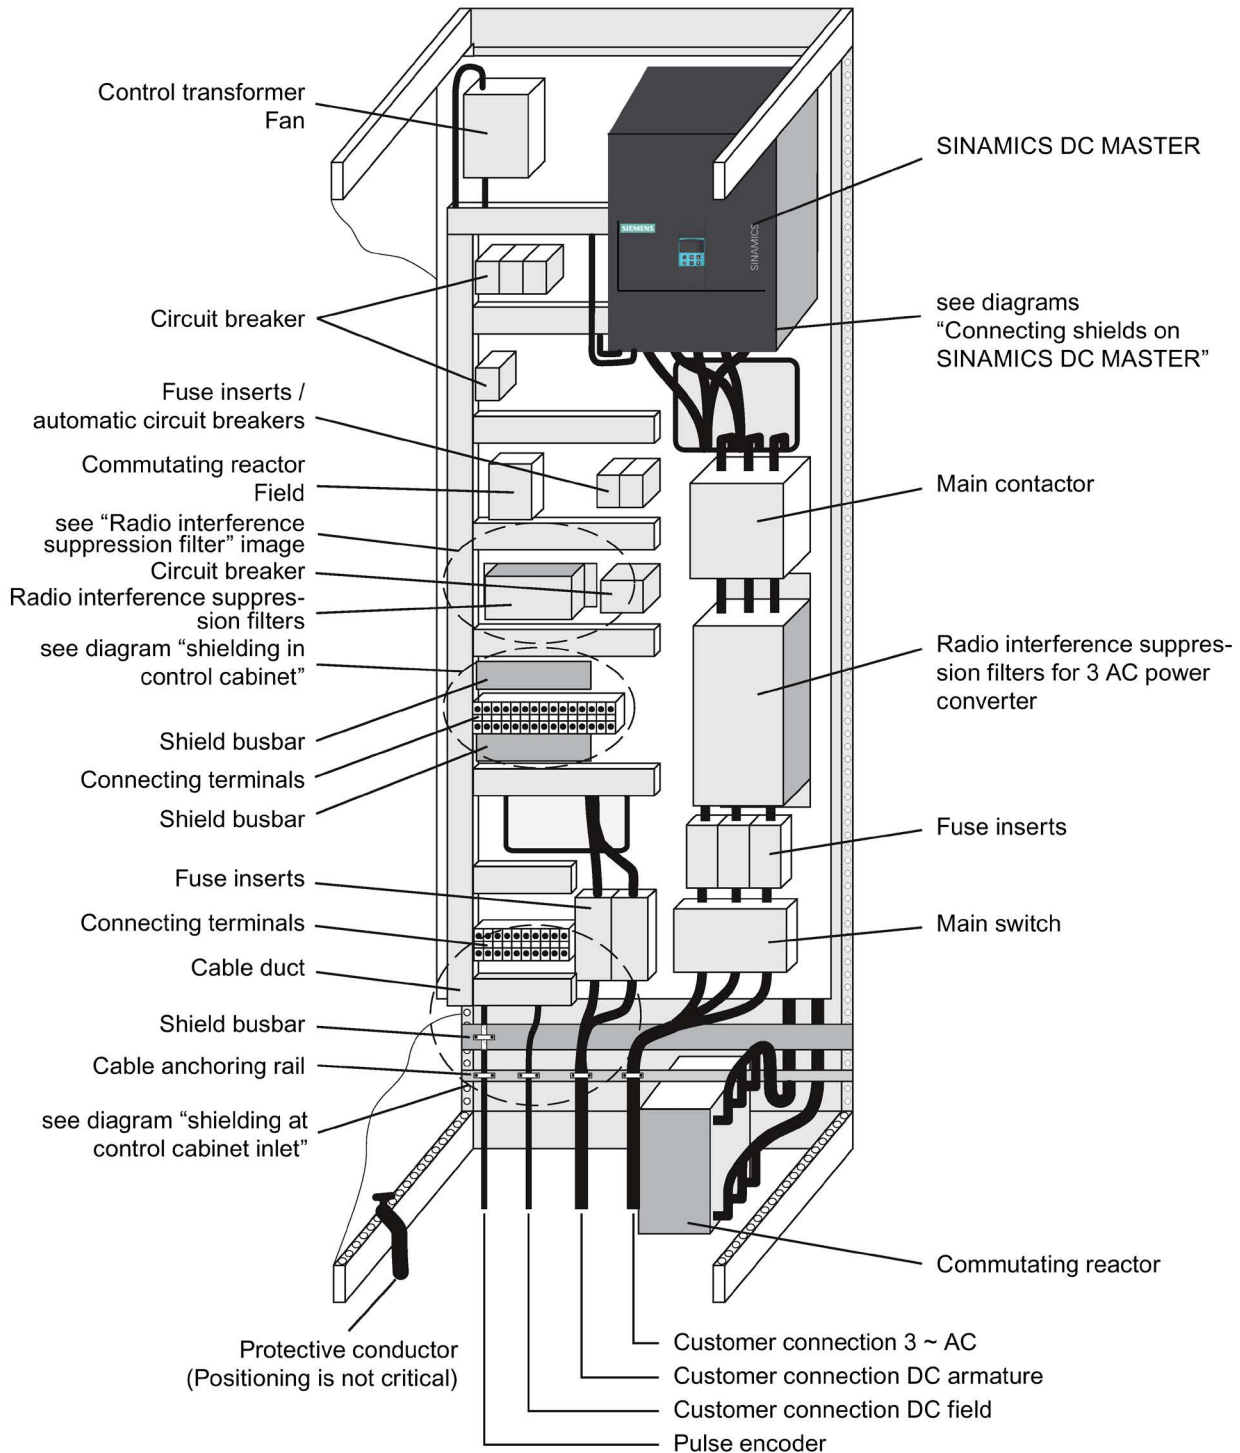


Figure 6-3 Example of a cabinet configuration with a SINAMICS DC MASTER of up to 850 A

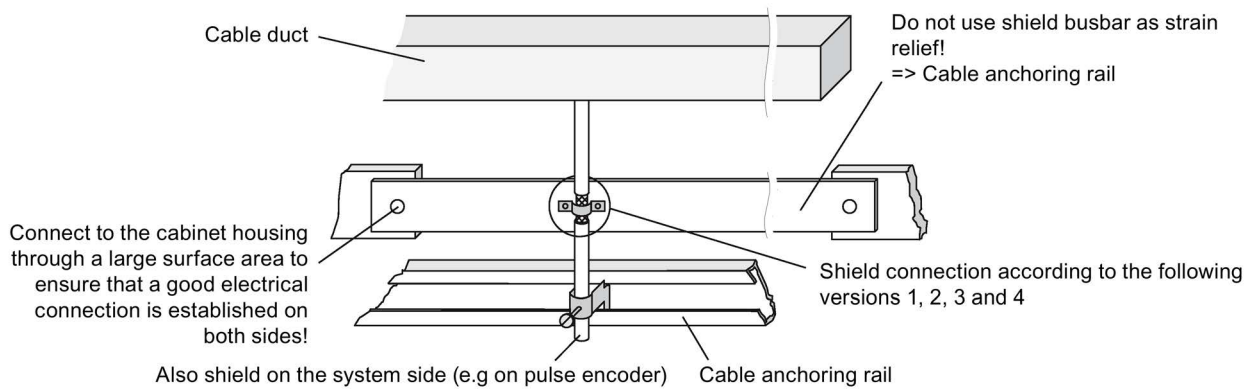


Figure 6-4 Shielding at control cabinet inlet

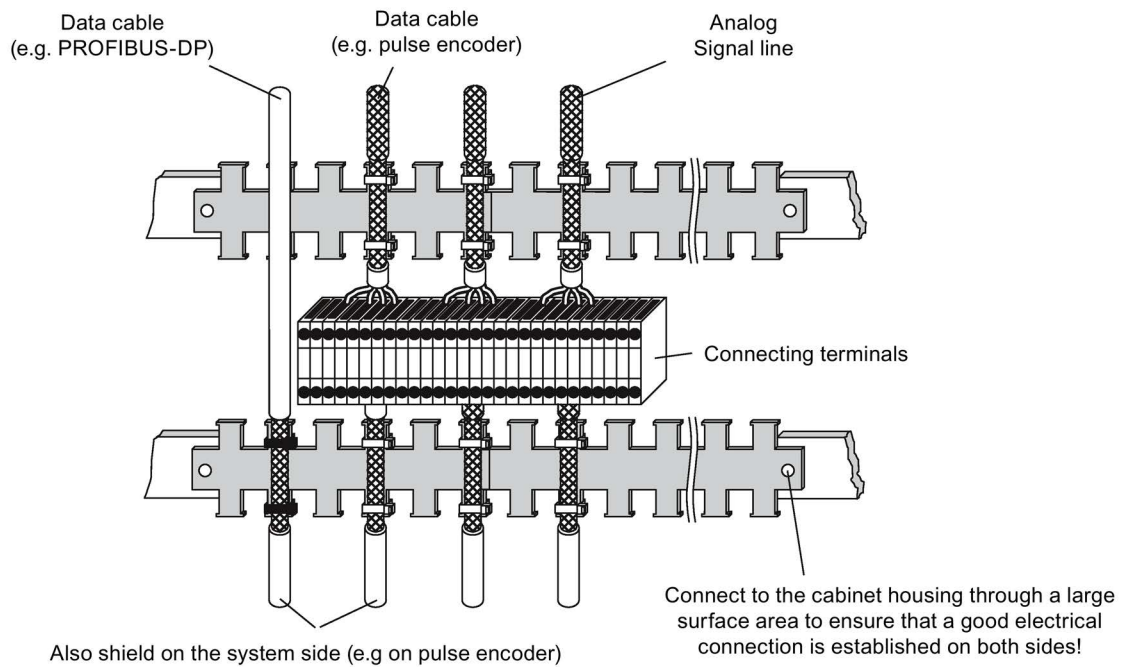


Figure 6-5 Shielding in control cabinet

### Connecting shields on the SINAMICS DC MASTER

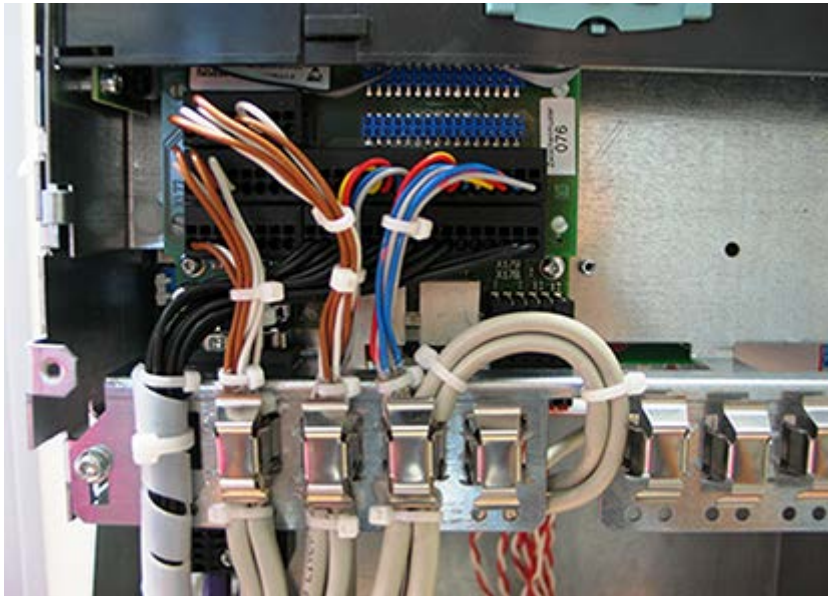


Figure 6-6 Connecting shields

#### Note

The strain relief of shielded cables and the shield support must be mechanically decoupled from one another.

### Radio interference suppression filters for the field circuit

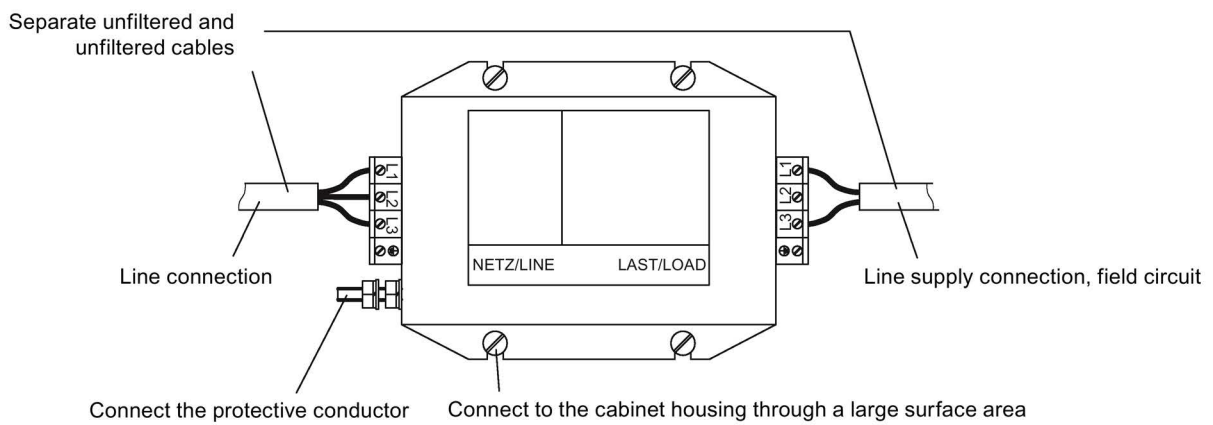
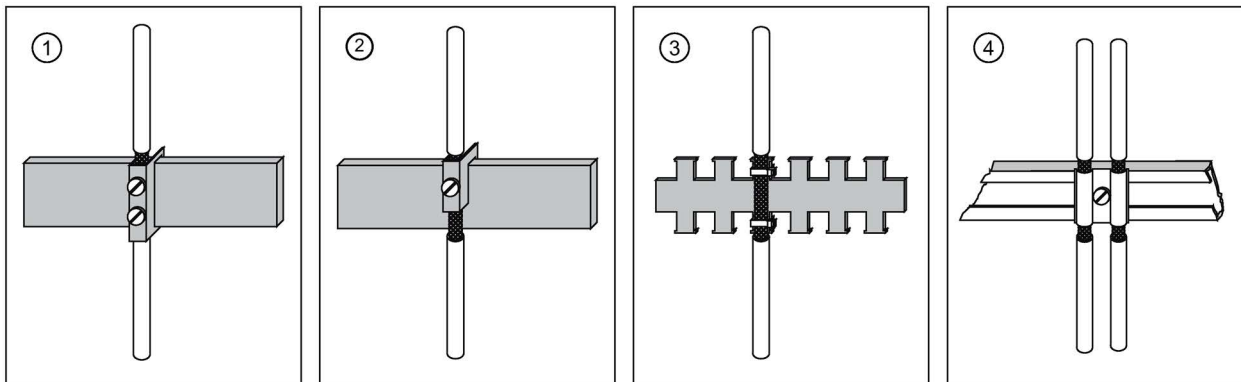



Figure 6-7 RFI suppression filter

**Shield connection**

- ① Connecting terminal on copper bar, max. cable diameter 15 mm  
Notice! Risk of pinching cable if screws tightened too much
- ② Bus-mounting terminal on copper bar, max. cable diameter 10 mm  
Notice! Risk of pinching cable if screws tightened too much
- ③ Metallic tube or cable tie on bare metallic comb-type/toothed bar
- ④ Clamp with metallic backing plate on cable support rail

Figure 6-8 Shield connection

### 6.1.4 Arranging components for converter units

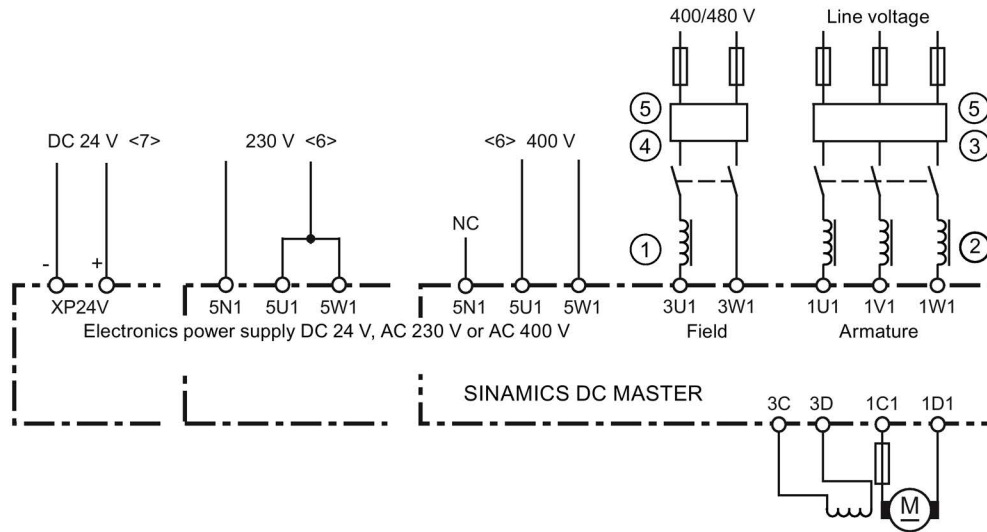

- ① The line reactor in the field circuit is dimensioned for the rated current of the motor field.
  - ② The line reactor in the armature circuit is dimensioned for the rated motor current in the armature.  
The line current equals 0.82 times the DC current.
  - ③ The RFI suppression filter for the armature circuit is dimensioned for the rated motor current in the armature.  
The line current equals 0.82 times the DC current.
  - ④ The RFI suppression filter for the field circuit is dimensioned for the motor field's rated current.
  - ⑤ If the supply supply voltage for the armature circuit and field circuit are the same, the supply voltage for the field can also be taken after the radio interference suppression filter for the armature circuit. In this case, the radio interference suppression filter must be dimensioned for the sum of the rated armature current times 0.82 and the rated field current. The armature circuit and field circuit must be separately protected.
- <6> Devices with "Power interface with AC electronic power supply"  
 <7> Devices with "Power interface with DC electronic power supply"  
 All of the voltages are rated supply values. For tolerances, see Chapter "Unit data (Page 45)".

Figure 6-9 Arrangement of reactors and RFI suppression filters

**NOTICE**

**Use of radio interference suppression filters**

Whenever RFI suppression filters are used, line reactors are required between the filter and device input for the purpose of decoupling the TSE circuit and providing protection for the X capacitors.

An incorrect arrangement can destroy a thyristor (short-circuit) and rupture a fuse.

- The components must be wired in the following order:  
 Line supply – radio interference suppression filter – commutating reactor – SINAMICS DCM.



## 6.1.5 RFI suppression filter

Table 6- 1 Recommended RFI suppression filter from EPCOS

Rated AC current Radio interference suppression filter A	TN / TT line supply V	Weight kg	IT line system V	Terminal cross-section mm <sup>2</sup> Hole for the screw M*	Article number EPCOS	Article number SIEMENS
<b>Line filters for armature circuit</b>						
25	760/440	4	580/335	Terminal 10 mm <sup>2</sup>	B84143A0025R021	-
50	760/440	4	580/335	Terminal 10 mm <sup>2</sup>	B84143A0050R021	-
80	760/440	9.5	630/365	Terminal 25 mm <sup>2</sup>	B84143A0080R021	6RX1800 - 0LF03
120	760/440	10	630/365	Terminal 50 mm <sup>2</sup>	B84143A0120R021	6RX1800 - 0LF13
180	-	13	690/400	M10	B84143B0180S024	6RX1800 - 0KF00
180	520/300	5	360/208	M10	B84143B0180S080	6RX1800 - 0GF00
180	760/440	5	560/320	M10	B84143B0180S081	6RX1800 - 0LF04
250	520/300	5	360/208	M10	B84143B0250S080	6RX1800 - 0GF01
250	760/440	5	560/320	M10	B84143B0250S081	6RX1800 - 0LF14
400	-	21	690/400	M10	B84143B0400S024	6RX1800 - 0KF02
400	520/300	7.5	360/208	M10	B84143B0400S080	6RX1800 - 0GF03
400	760/440	7.5	560/320	M10	B84143B0400S081	6RX1800 - 0LF07
600	-	22	690/400	M10	B84143B0600S024	6RX1800 - 0KF03
600	520/300	7.8	360/208	M10	B84143B0600S080	6RX1800 - 0GF04
600	760/440	7.8	560/320	M10	B84143B0600S081	6RX1800 - 0LF08
1000	-	28	690/400	M12	B84143B1000S024	6RX1800 - 0KF04
1000	520/300	18.5	360/208	M12	B84143B1000S080	6RX1800 - 0GF05
1000	760/440	18.5	560/320	M12	B84143B1000S081	6RX1800 - 0LF10
1600	-	34	690/400	2 x M12	B84143B1600S024	6RX1800 - 0KF05
1600	520/300	24.5	360/208	2 x M12	B84143B1600S080	6RX1800 - 0GF06
1600	760/440	24.5	560/320	2 x M12	B84143B1600S081	6RX1800 - 0LF11
2500	530/310	105	460/265	4 x M12	B84143B2500S020	6RX1800 - 0GF07
2500	760/440	105	560/320	4 x M12	B84143B2500S021	6RX1800 - 0LF12
2500	-	105	690/400	4 x M12	B84143B2500S024	6RX1800 - 0KF06
<b>Line filters for auxiliary power supply</b>						
25 A	520/300 A	1.1	440/255 A	Terminal 4 mm <sup>2</sup>	B84143A0025R105	6RX1800 - 1GF00
50 A	520/300 A	1.75	440/255 A	Terminal 10 mm <sup>2</sup>	B84143A0050R105	-
66 A	520/300 A	2.70	440/255 A	Terminal 16 mm <sup>2</sup>	B84143A0066R105	6RX1800 - 1GF02
90 A	520/300 A	4.20	440/255 A	Terminal 35 mm <sup>2</sup>	B84143A0090R105	-
120 A	520/300 A	4.90	440/255 A	Terminal 35 mm <sup>2</sup>	B84143A0120R105	6RX1800 - 1GF04

Operating temperature 0 °C to 40 °C.

Rated frequency 50/60 Hz (± 6%).

Further information on the RFI suppression filters can be found on the Internet page of Epcos (Epcos (<http://en.tdk.eu>))

Radio interference suppression filters generate leakage currents. In accordance with EN 61800-5-1, a PE connection with a cross-section of 10 mm<sup>2</sup> is required. For the filters to have maximum effect, it is absolutely essential that they and the device are installed on a single metal plate.

In the case of converters with a 3-phase connection, the minimum rated current of the filter is the same as the device's input current or output DC current, as specified on the device rating plate (see Armature Input and Armature Output respectively), times 0.82.

In the case of a two-phase connection (field supply), only two phases are connected to the three-phase radio interference suppression filter. In this case, the minimum rated current of the filter is the same as the input current (see Field input) or field DC current specified on the device rating plate.

### 6.1.6 Information on line-side harmonics produced by converter units in a fully-controlled two-pulse bridge circuit configuration (B6C and (B6)A(B6)C)

The majority of converter units for medium-power applications have a fully-controlled three-phase bridge circuit. Below is an example of the harmonics that can be found in a typical system configuration for two firing angles ( $\alpha = 20^\circ$  and  $\alpha = 60^\circ$ ).

The values have been taken from a previous publication, "Oberschwingungen im netzseitigen Strom sechspulsiger netzgeführter Stromrichter (Harmonics in the Line-Side Current of Six-Pulse, Line-Commutated Converters)" by H. Arremann and G. Möltgen, Siemens Research and Development Division, Volume 7 (1978) No. 2, © Springer-Verlag 1978.

In addition, the formulas are specified which, depending on the actual operating data in use [line voltage (no-load voltage  $U_{V0}$ ), line frequency  $f_N$ , and DC current  $I_d$ ], can be used to calculate the short-circuit power  $S_K$  and armature inductance  $L_a$  for the motor for which the specified harmonics spectrum applies. If the actual line short-circuit power and/or actual armature inductance deviate from the values calculated in this way, then they will need to be calculated on a case-by-case basis.

The harmonics spectrum listed below is produced if the values for the short-circuit power  $S_K$  at the connection point of the device and the armature inductance  $L_a$  of the motor, calculated using the formulas below, match the actual system values. If the values do not match, the harmonics will have to be calculated separately.

a) $\alpha = 20^\circ$				b) $\alpha = 60^\circ$			
Fundamental factor $g = 0.962$				Fundamental factor $g = 0.953$			
v	$I_v / I_1$	v	$I_v / I_1$	v	$I_v / I_1$	v	$I_v / I_1$
5	0.235	29	0.018	5	0.283	29	0.026
7	0.100	31	0.016	7	0.050	31	0.019
11	0.083	35	0.011	11	0.089	35	0.020
13	0.056	37	0.010	13	0.038	37	0.016
17	0.046	41	0.006	17	0.050	41	0.016
19	0.035	43	0.006	19	0.029	43	0.013
23	0.028	47	0.003	23	0.034	47	0.013
25	0.024	49	0.003	25	0.023	49	0.011

The fundamental component of current  $I_1$  as a reference variable is calculated using the following formula

$$I_1 = g \times 0.817 \times I_d$$

where  $I_d$  is the DC current of the operating point under investigation and where  $g$  is the fundamental factor (see previous table)

The harmonic currents calculated according to the previous table **only** apply for:

### I.) Short-circuit power $S_K$ at the location where the converter is connected

$$S_K = U_{v0}^2 / X_N \text{ (VA)}$$

with

$$X_N = X_K - X_D = 0.03526 \times U_{v0} / I_d - 2\pi f_N \times L_D \text{ (}\Omega\text{)}$$

and

$U_{v0}$  No-load voltage on the power unit terminal V

$I_d$  Direct current of the operating point examined in A

$f_N$  Line frequency in Hz

$L_D$  Inductance of the commutating reactors used in H

$X_D$  Impedance of the commutating reactor

$X_N$  Impedance of the line

$X_K$  Impedance at the unit terminals

### II.) Armature inductance $L_a$

$$L_a = 0.0488 \times U_{v0} / (f_N \times I_d) \text{ (H)}$$

If the actual values for the short-circuit power  $S_K$  and/or armature inductance  $L_a$  deviate from the values calculated using the previous formulas, a separate calculation procedure will need to be carried out.

#### Example:

Let us assume a drive with the following data:

$$U_{v0} = 400 \text{ V}$$

$$I_d = 150 \text{ A}$$

$$f_N = 50 \text{ Hz}$$

$$L_D = 0.169 \text{ mH (4EU2421-7AA10 with } I_{L_N} = 125 \text{ A)}$$

With

$$X_N = 0.03536 \times 400 / 150 - 2\pi \times 50 \times 0.169 \times 10^{-3} = 0.0412 \Omega$$

the network short-circuit power at the converter unit terminal is as follows:

$$S_K = 400^2 / 0.0412 = 3.88 \text{ MVA}$$

and the armature inductance of the motor is as follows:

$$L_a = 0.0488 \times 400 / (50 \times 150) = 2.60 \text{ mH}$$

The harmonic currents  $I_v$  (with  $I_1 = g \times 0.817 \times I_d$  for firing angles  $\alpha = 20^\circ$  and  $\alpha = 60^\circ$ ) that can be taken from the tables, **only** apply for the values  $S_K$  and  $L_a$  that have been calculated in this way. If the actual values deviate from these, a separate calculation will have to be made.

For the purpose of dimensioning filters and compensation equipment with reactors, it is only possible to draw on the information provided by the harmonics values calculated in this way if the values calculated for  $S_K$  and  $L_a$  match the actual drive values. In all other cases, a separate calculation procedure needs to be carried out (this particularly applies when using machines with compensation, as they demonstrate a very low armature inductance level).

### 6.1.7 Data on the line-side harmonics from converter units in a fully-controlled AC bridge circuit B2C

Converter units for lower power ratings can be connected and parameterized as fully-controlled AC bridge circuit.

Below is an example for the current harmonics of a typical system configuration of a field excitation controller (this is a system with a large DC circuit inductance). The case with the highest harmonic load of the line supply has been selected here.

For every motor used, a separate investigation must be performed to determine the actual harmonic load. In any case, the result will be less than in the example shown.

For comparison purposes, the table also includes the harmonic load of a B6C three-phase bridge at the same operating point as the field excitation controller.

Harmonic order	B2C <sup>2)</sup>	B6C <sup>2)</sup>	Harmonic order	B2C <sup>2)</sup>	B6C <sup>2)</sup>
v	Iv / I	Iv / I	v	Iv / I	Iv / I
1 <sup>1)</sup>	90.1%	95.6%	27	3.3%	
3	30.0%		29	3.1%	3.3%
5	18.0%	19.1%	31	2.9%	3.1%
7	12.9%	13.7%	33	2.7%	
9	10.0%		35	2.6%	2.7%
11	8.2%	8.7%	37	2.4%	2.6%
13	6.9%	7.4%	39	2.3%	
15	6.0%		41	2.2%	2.3%
17	5.3%	5.6%	43	2.1%	2.2%
19	4.7%	5.0%	45	2.0%	
21	4.3%		47	1.9%	2.0%
23	3.9%	4.2%	49	1.8%	2.0%
25	3.6%	3.8%			

1) Fundamental content

2) converter circuit

## 6.2 Cable routing into the unit

### Cable routing example

---

#### Note

Cables, which are not mechanically fixed in the device, must be externally fixed.

---


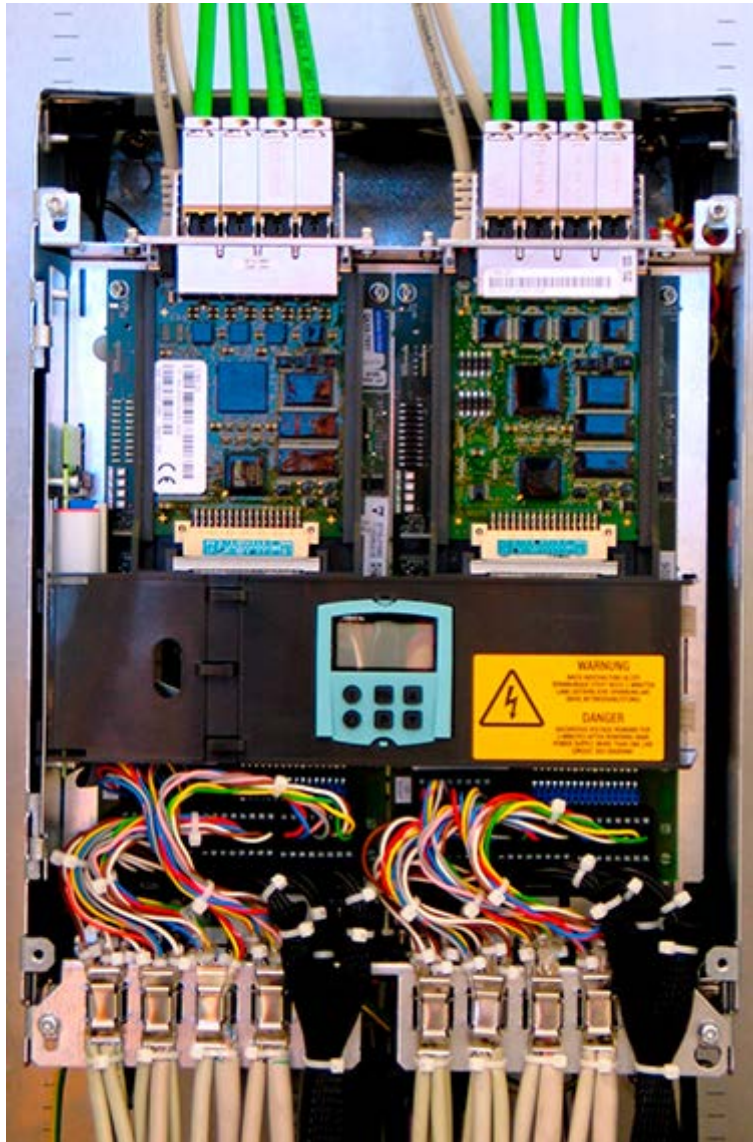


Figure 6-10 Example for cable routing when fully expanded

**Note**

For units with a rated DC current  $\leq 280$  A, the PROFINET and DRIVE-CLiQ cables must be routed into the unit from the top (PROFINET is only available with Communication Board(s) CBE20).

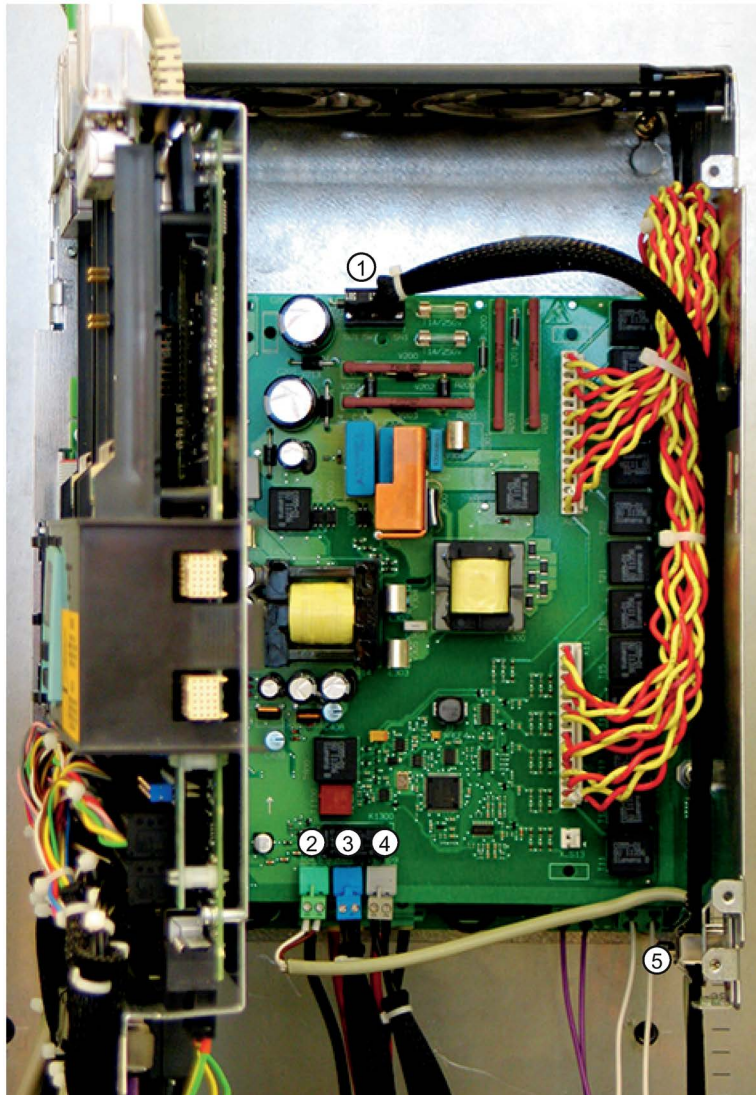


- ① Connection for the electronic power supply (XP1). Mechanically attach the cable using one of the shield clamps ⑤ at the side of the enclosure. Two holes on the printed-circuit board to attach the cable using cable ties.
- ② Connection for the analog tachometer (XT1) Connect the shield to one of the shield clamps ⑤ on the side of the enclosure.
- ③ Connection for E-STOP (XS1). Route the cable into the device from the bottom.
- ④ Connection for the floating relay output for the line contactor (XR1). Route the cable into the device from the bottom.

Figure 6-11 Cable routing, power interface

### Option L05: Connecting the electronic power supply

Devices with "Power interface with DC electronic power supply"

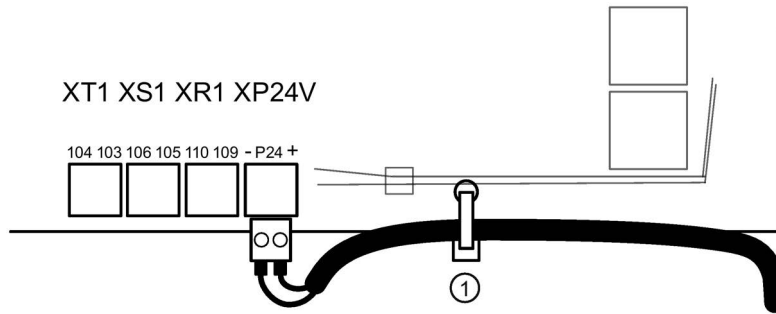


① Use a cable tie to attach the cable to the circuit board (Power Interface)

Figure 6-12 Option L05, electronic power supply

The maximum cable length is 30 m.

### Connection for the PROFIBUS cable

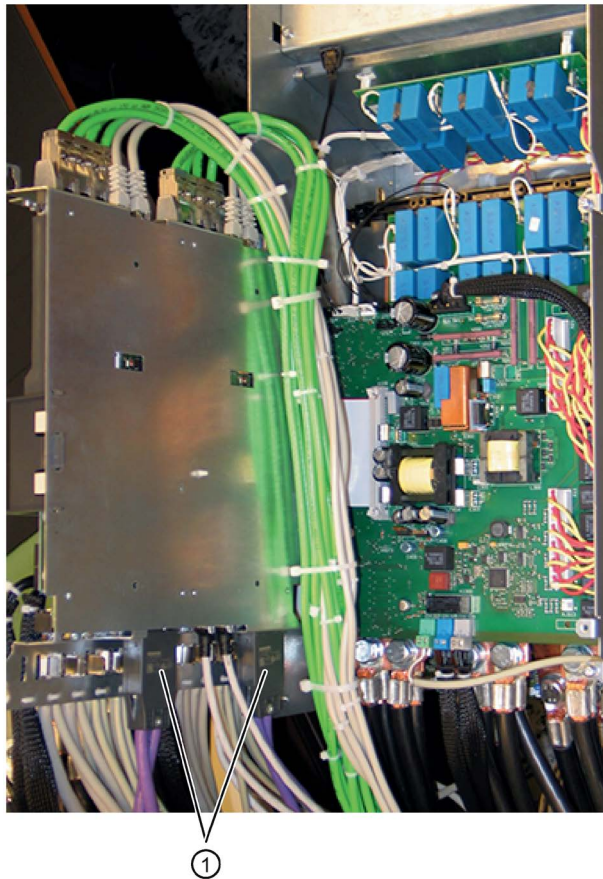

① PROFIBUS connections

Figure 6-13 Positions of the PROFIBUS connections

1. Route the PROFIBUS cable into the device from the bottom
2. Screw the PROFIBUS bus connector to connector X126 at the CUD using the two screws
3. It is not necessary to have a shield support in the device, it is recommended that the shield is connected in the cabinet



**⚠ WARNING**

**Electric shock during connection while voltage is present**

When connecting the PROFIBUS cable while voltage is present, there is a danger of coming into contact with live components behind the terminal.

Touching live components can result in death or serious injury.

- Only connect the PROFIBUS cable to connector X126 when the unit is in a de-energized state.

---

**Note**

**Routing the PROFIBUS connection**


If the PROFIBUS bus connector is connected and removed in a system during operation, the system manufacturer must ensure that the PROFIBUS connection is routed outwards.

---





## Routing PROFINET cables

Note: PROFINET is only available with Communication Board(s) CBE20

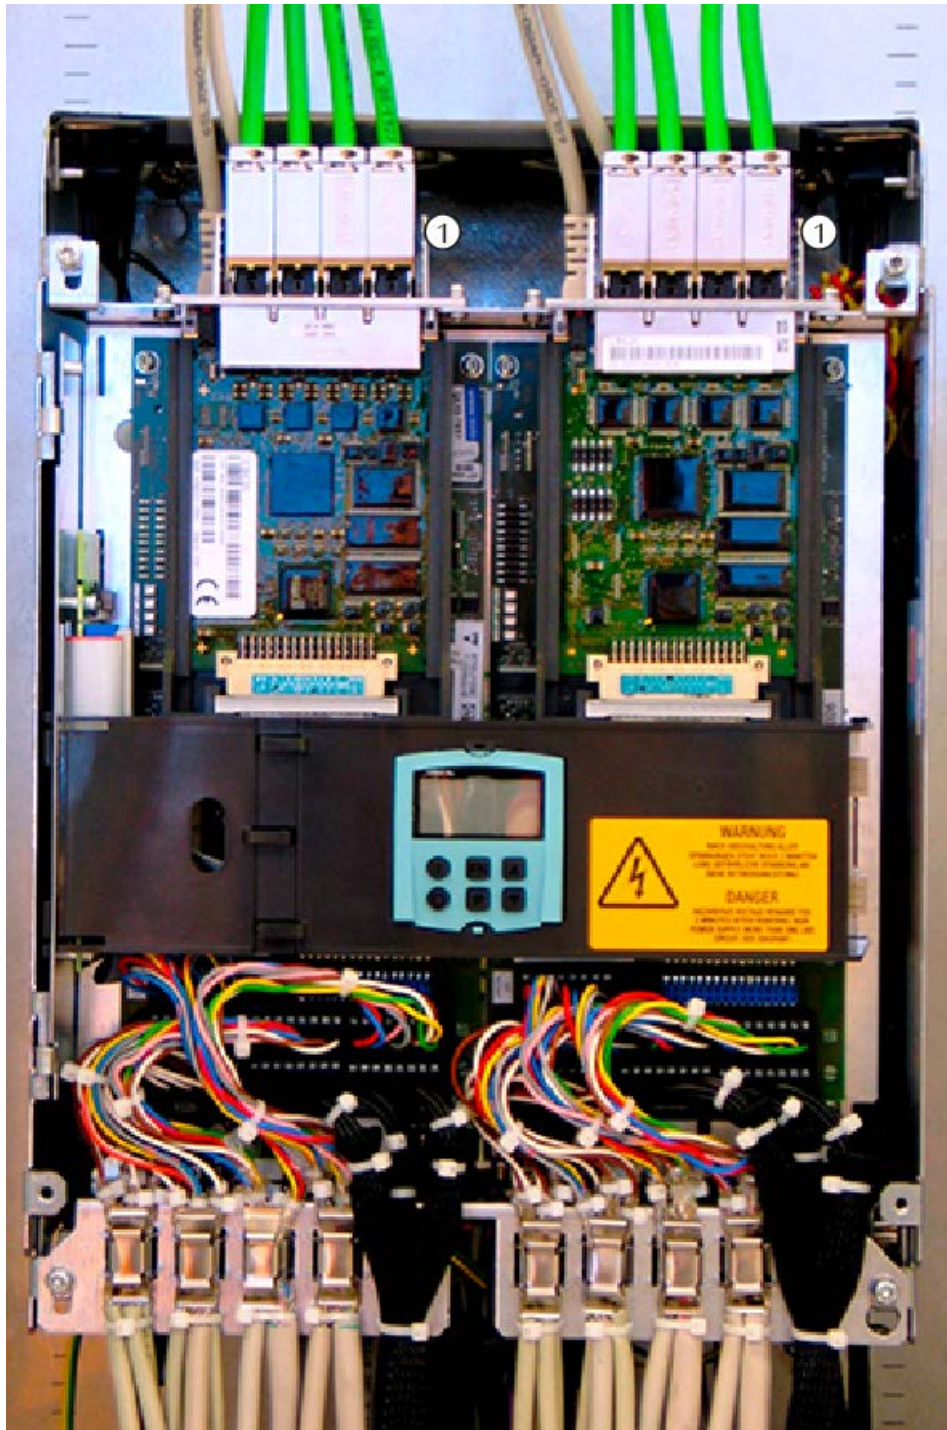

① PROFINET cable (4 connections on each CBE20)


Figure 6-14 Routing PROFINET cables in devices  $\leq 280$  A

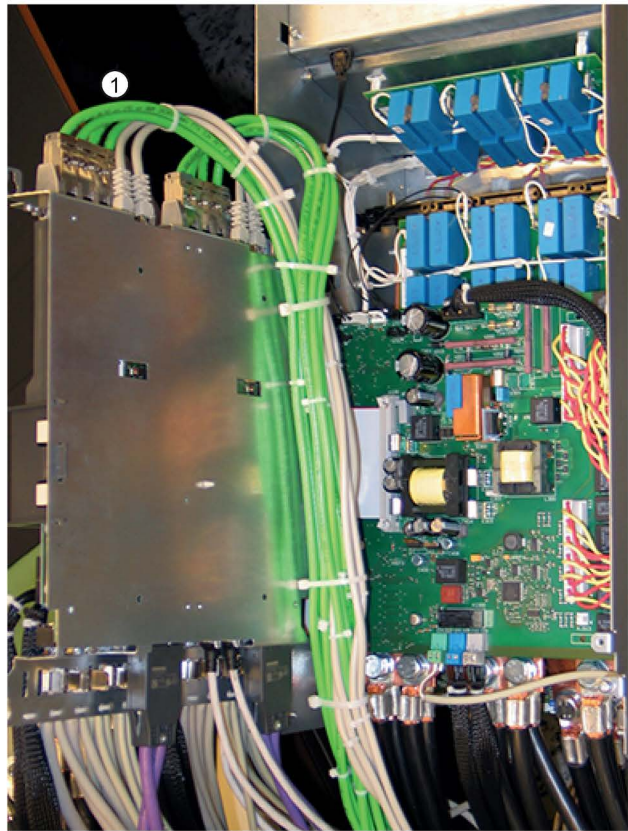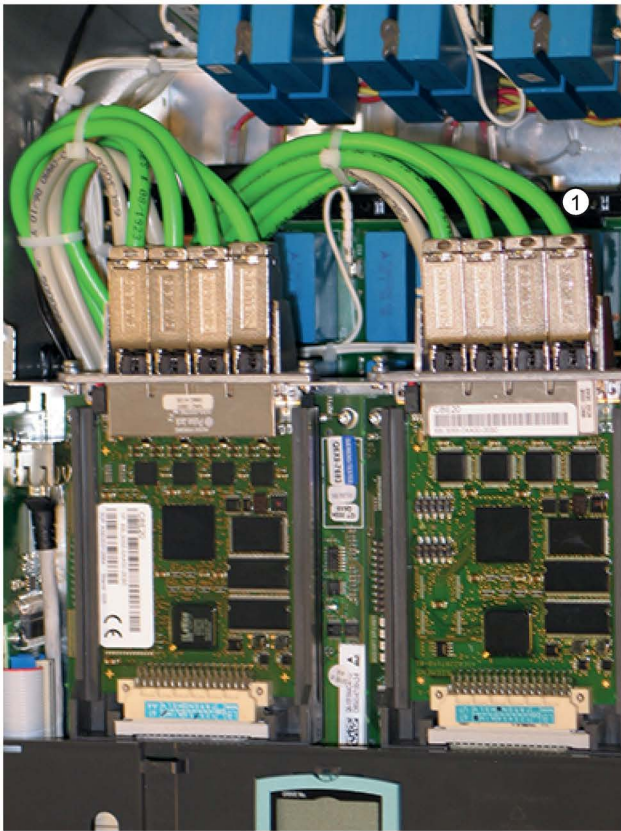

① PROFINET cable (4 connections on each CBE20)

Figure 6-15 Routing PROFINET cables in devices > 280 A

## Routing the functional safety cable

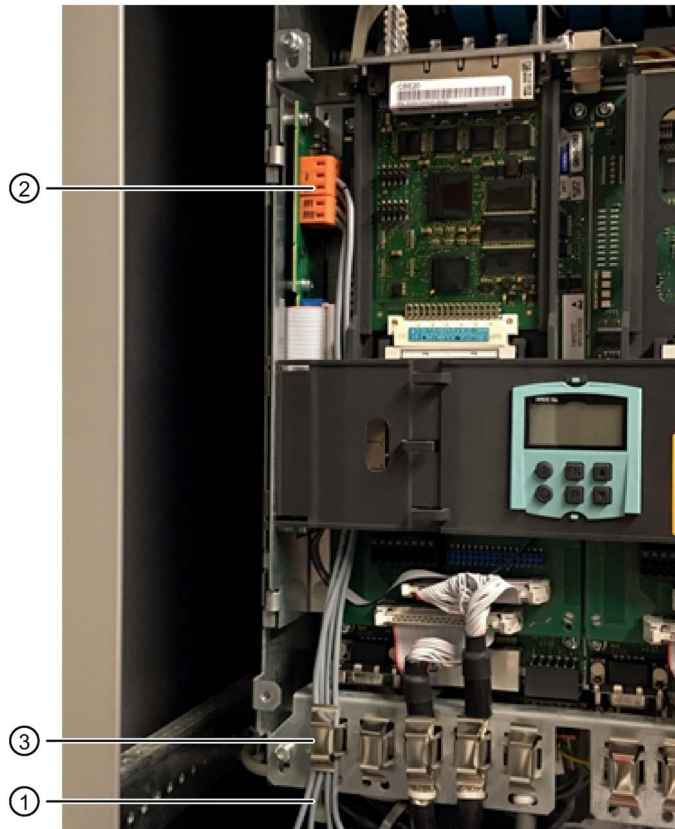

- ① Route the cable into the device from the bottom.
- ② Connect the cable to terminals X200, X201.
- ③ Strain relief of the cables through positioning on shield clamps on the lower edge of the housing.

Figure 6-16 Routing the functional safety cable

---

### Note

It is not required to use shielded cables and shield connection in the device.

---

### 6.3 Block diagram with connection suggestion

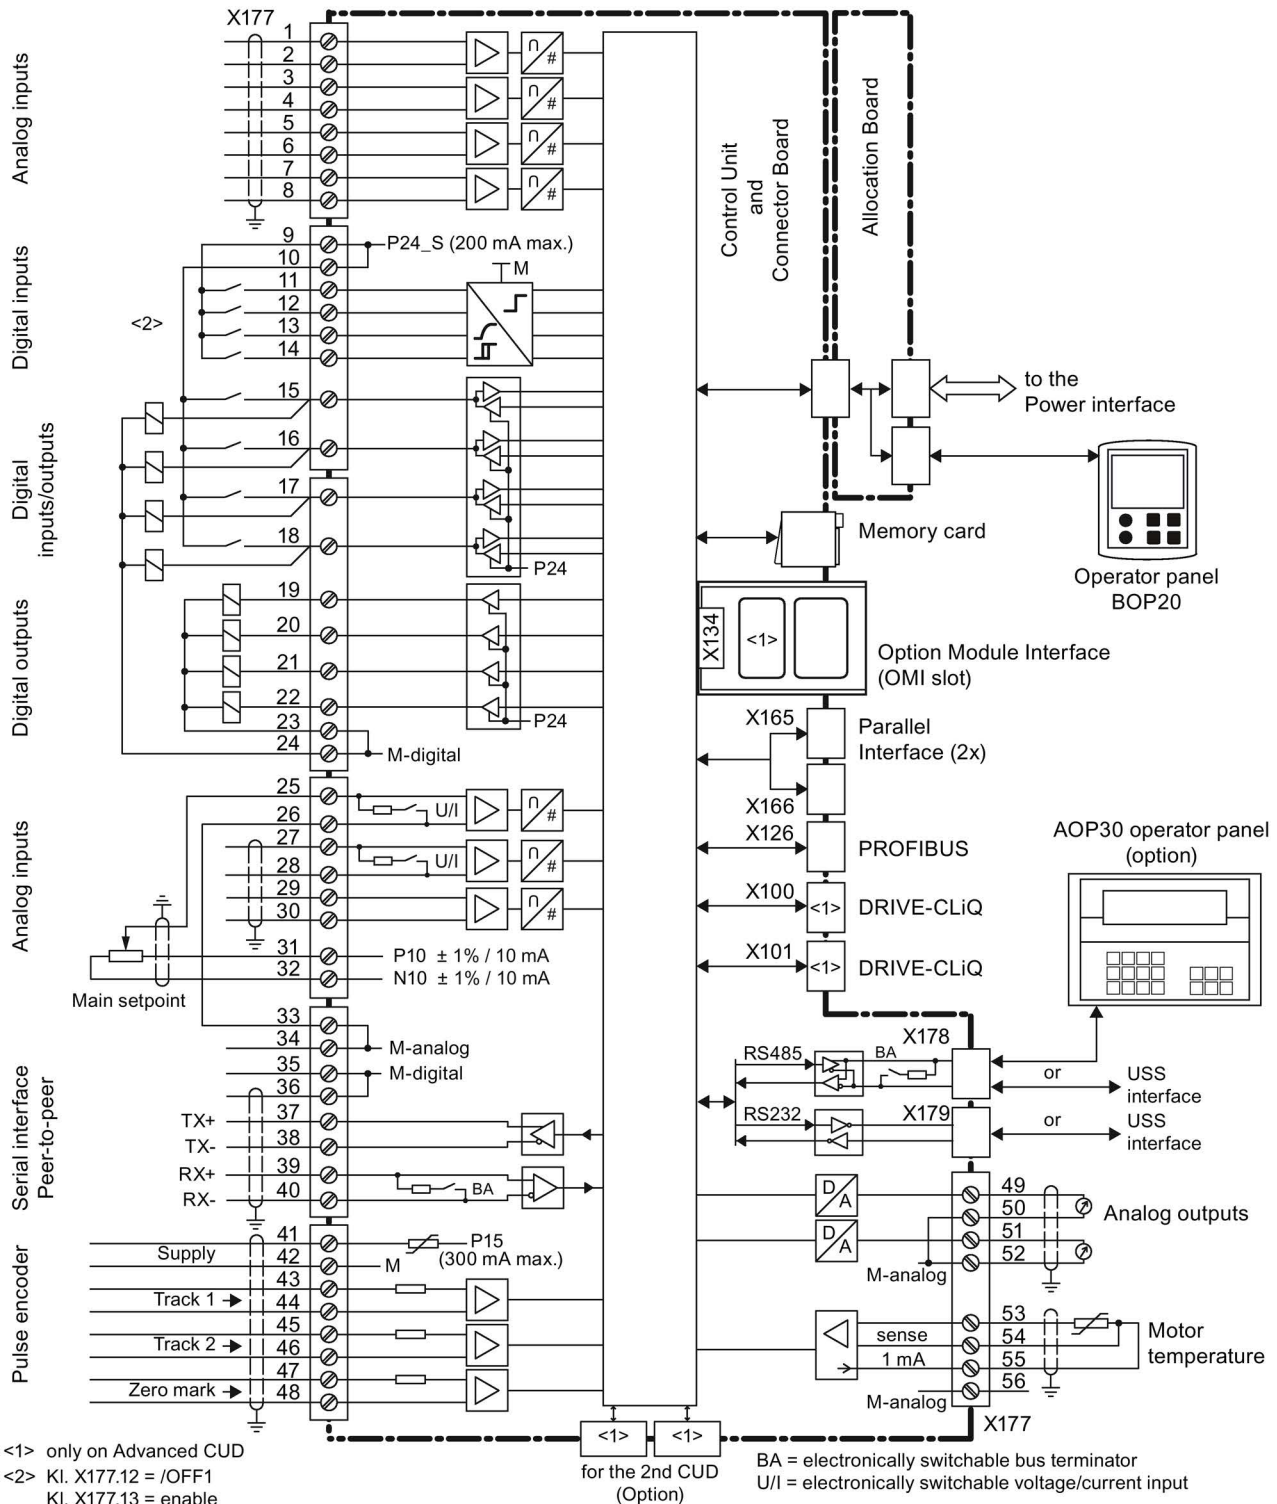


Figure 6-17 Open-loop/closed-loop control section block diagram

Connecting the electronic power supply

<p>1-ph. AC electronic power supply Devices with "Power interface with AC electronic power supply"</p>	<p>2-ph. AC electronic power supply Devices with "Power interface with AC electronic power supply"</p>

With option L05

<p>Electronic power supply for connection to DC devices with "Power interface with DC electronic power supply"</p>

15 to 30 A devices

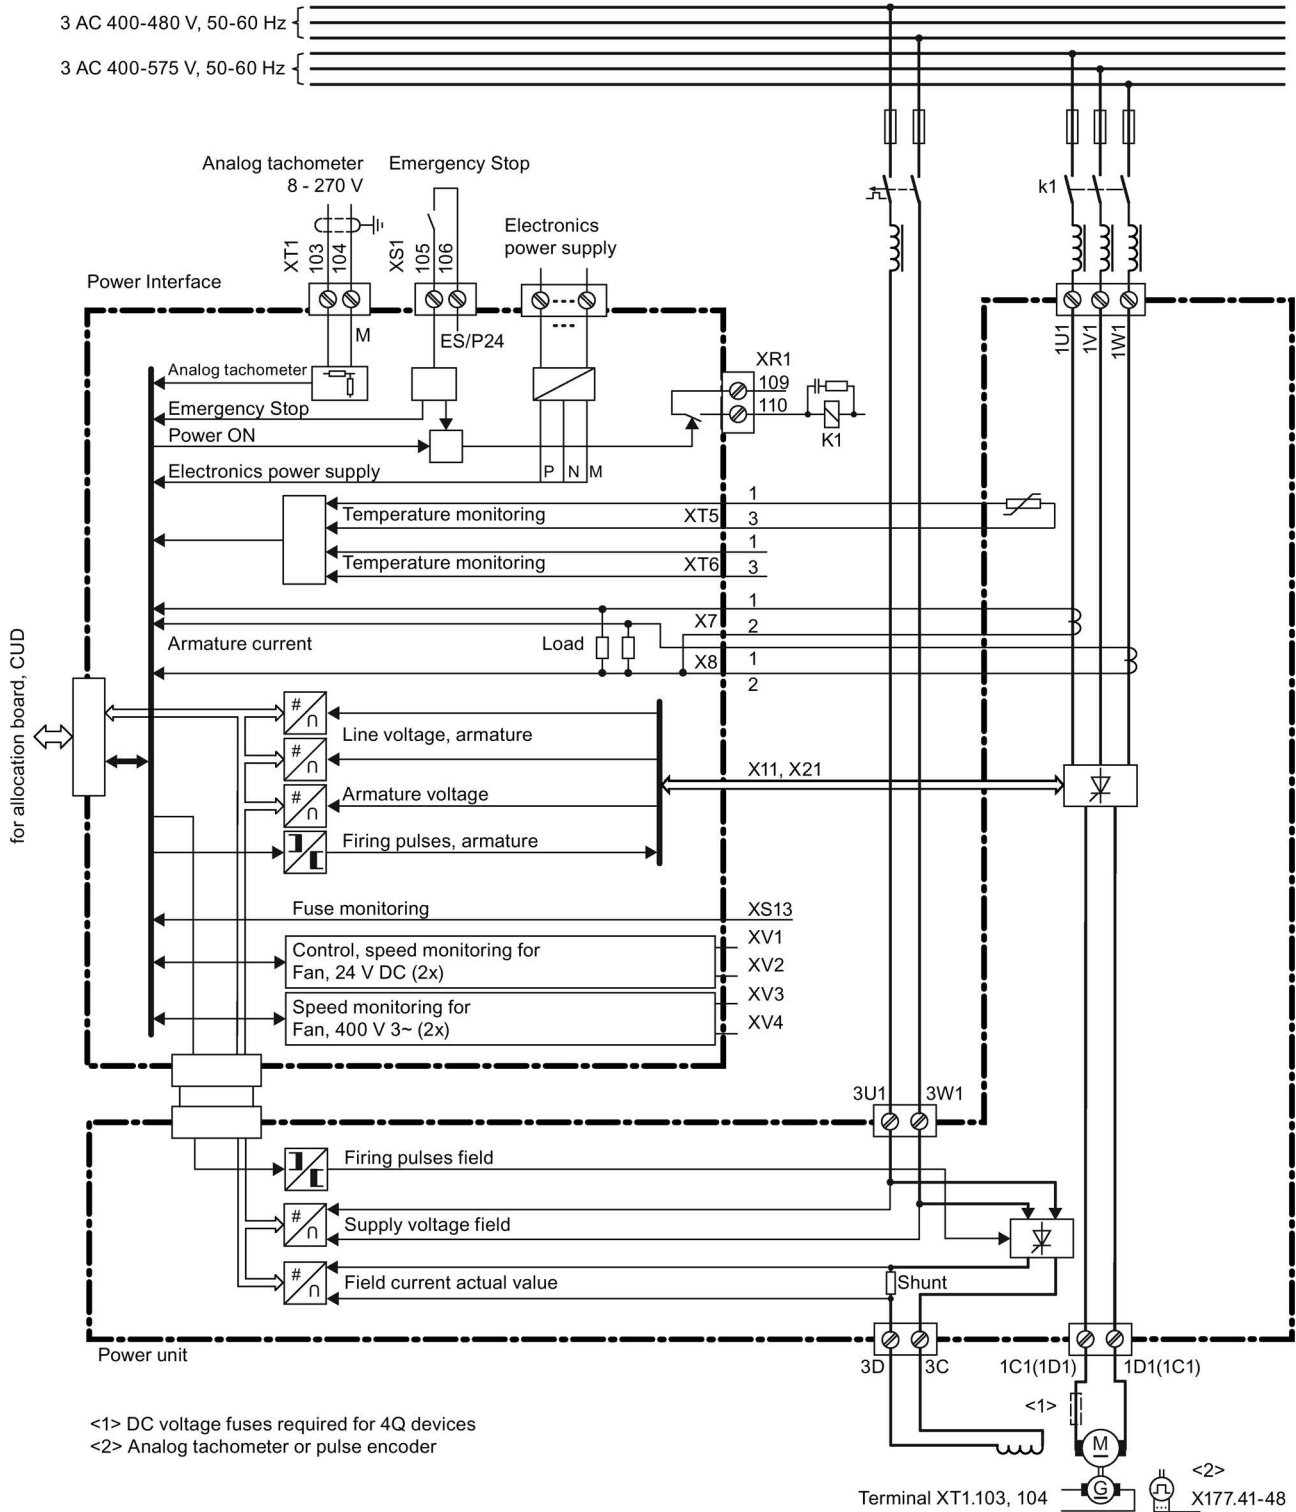


Figure 6-18 Block diagram for 15 to 30 A devices

60 to 125 A devices

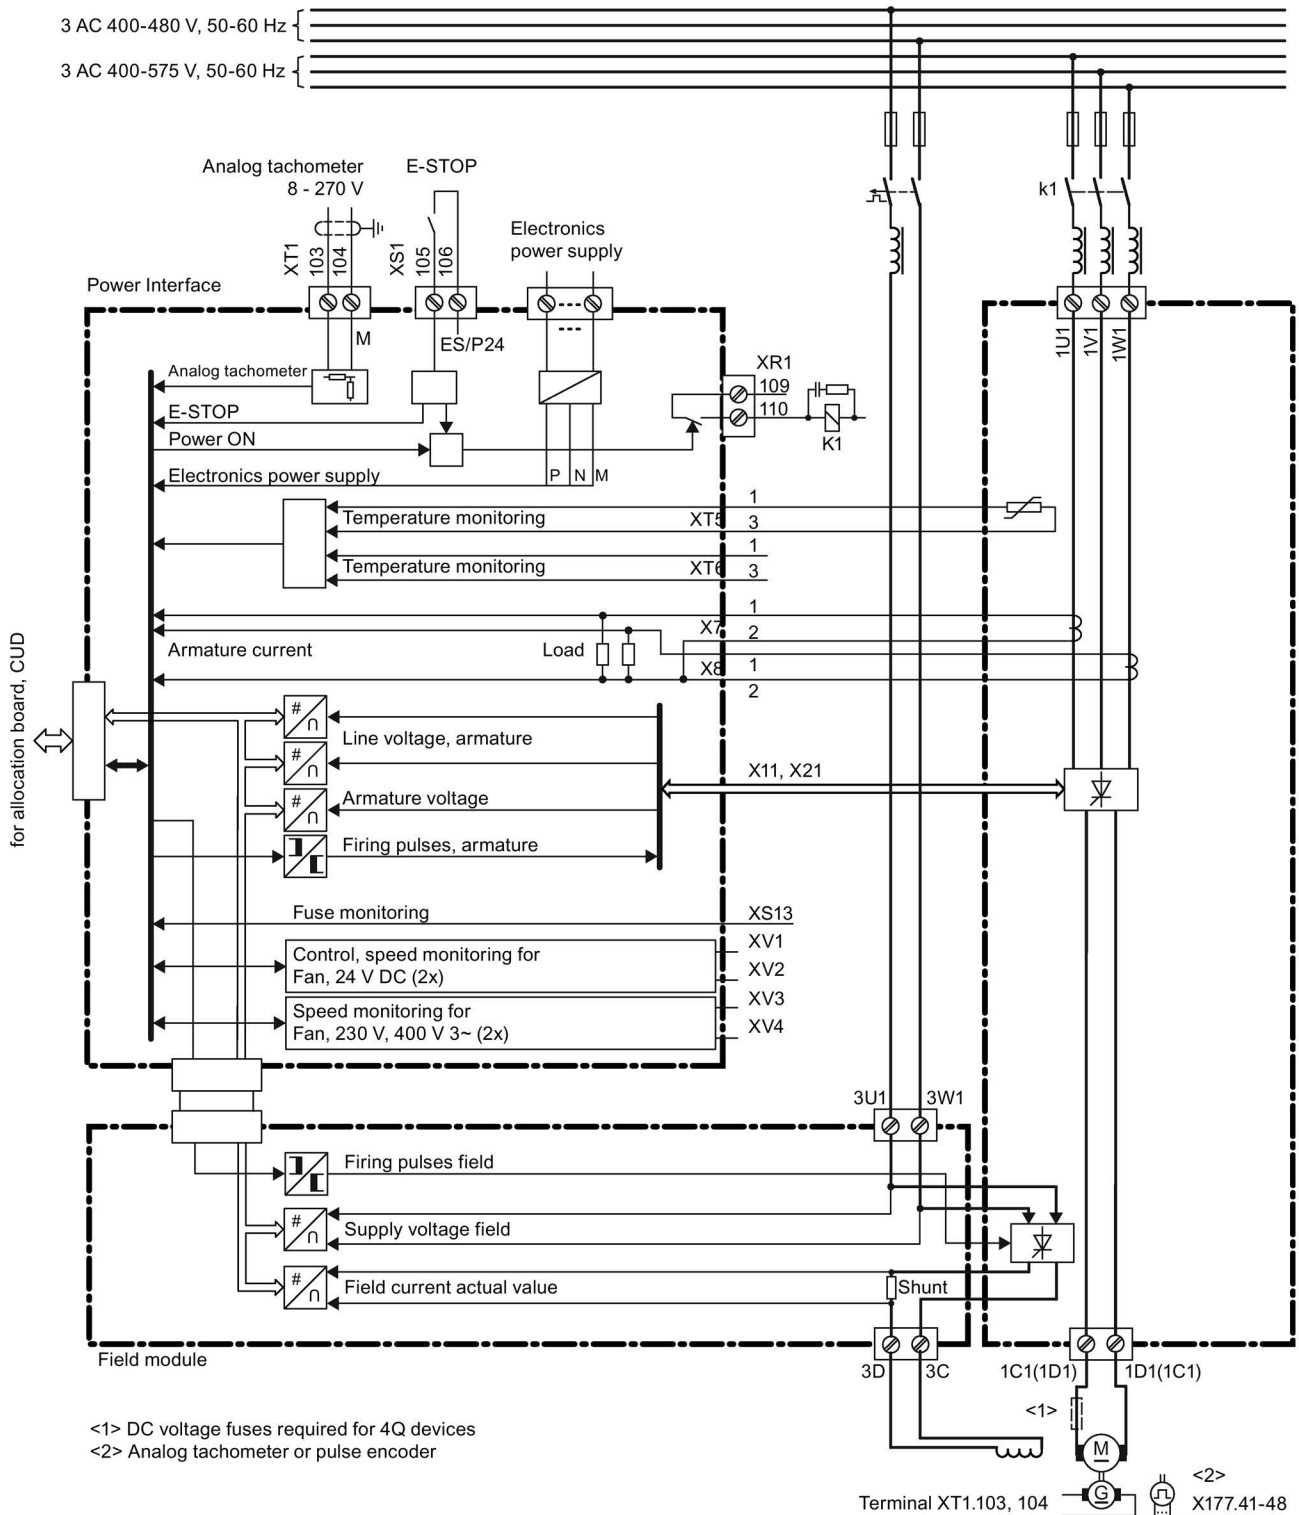


Figure 6-19 Block diagram for 60 to 125 A devices

210 to 280 A devices

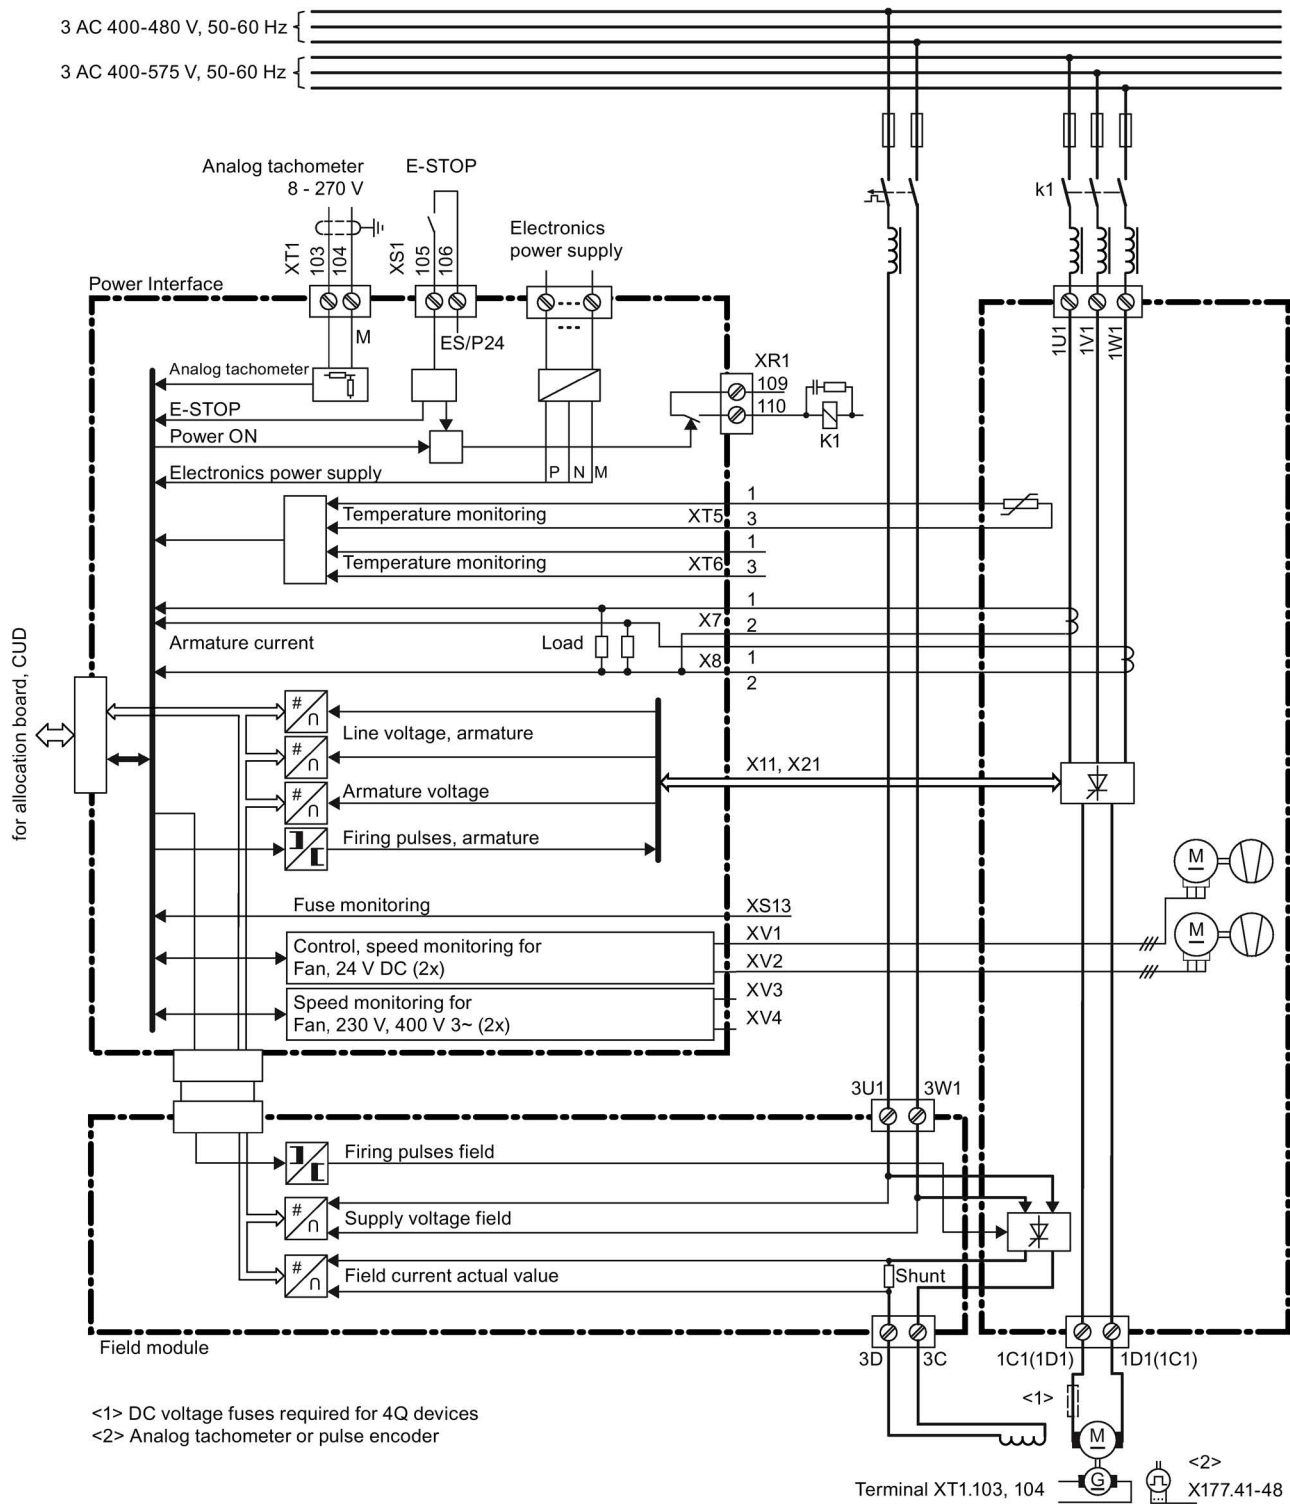


Figure 6-20 Block diagram for 210 to 280 A devices



400 A to 850 A devices, three-phase fan connection

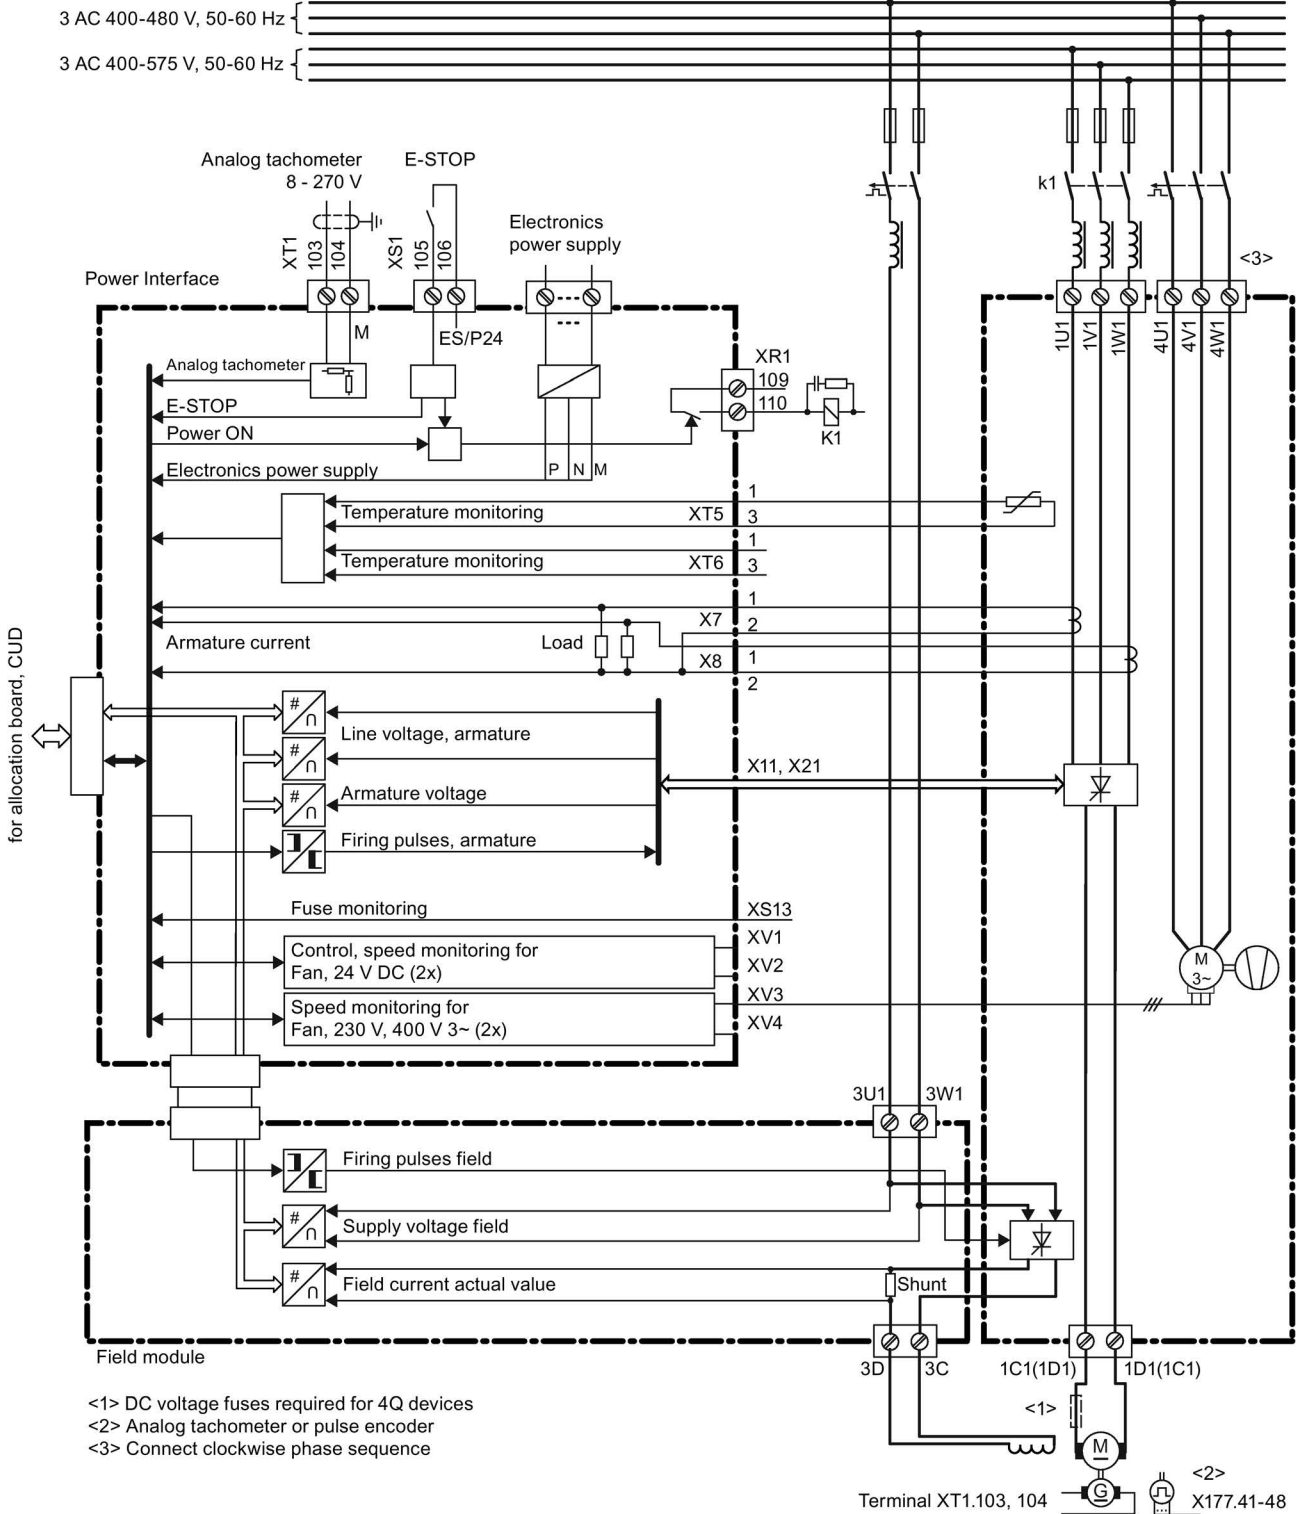


Figure 6-21 Block diagram for 400 to 850 A devices, 3-phase fan connection

900 A to 3000 A devices, three-phase fan connection

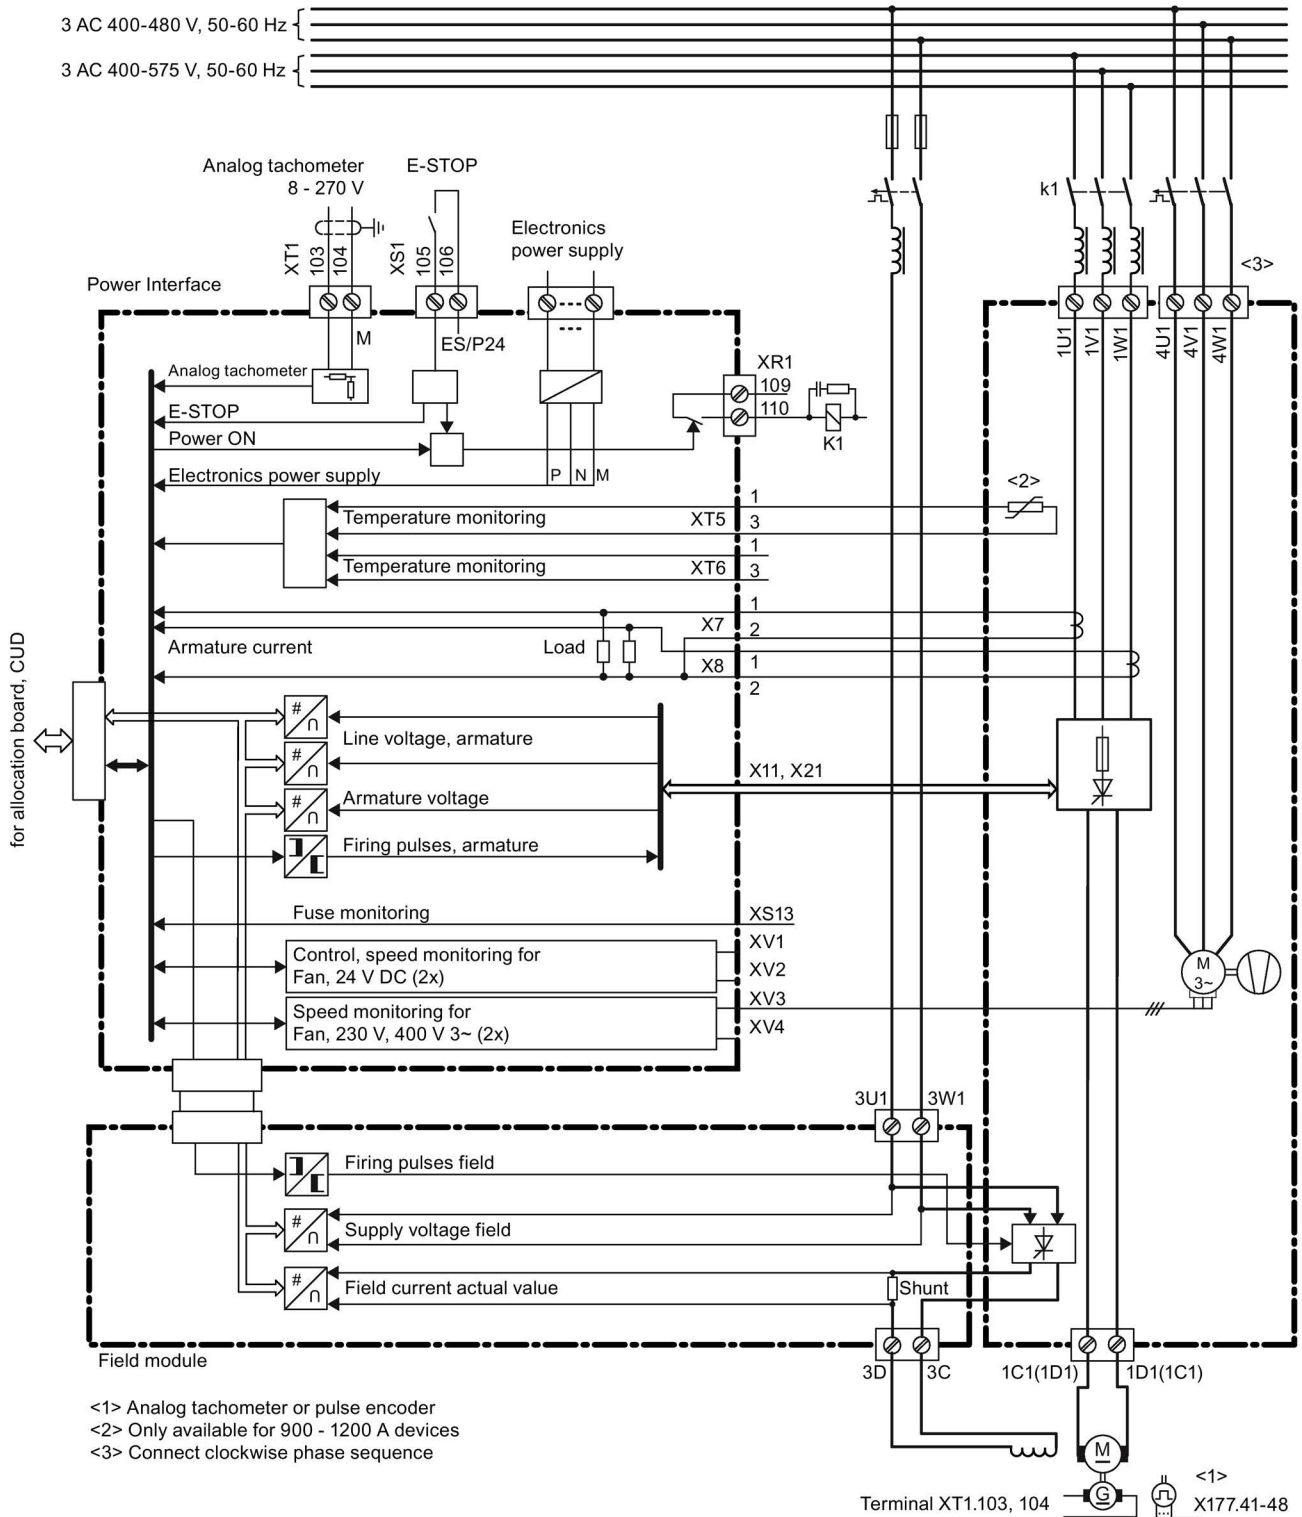


Figure 6-22 Block diagram for 900 to 3000 A devices, 3-phase fan connection

400 A to 850 A devices with option L21, single-phase fan connection

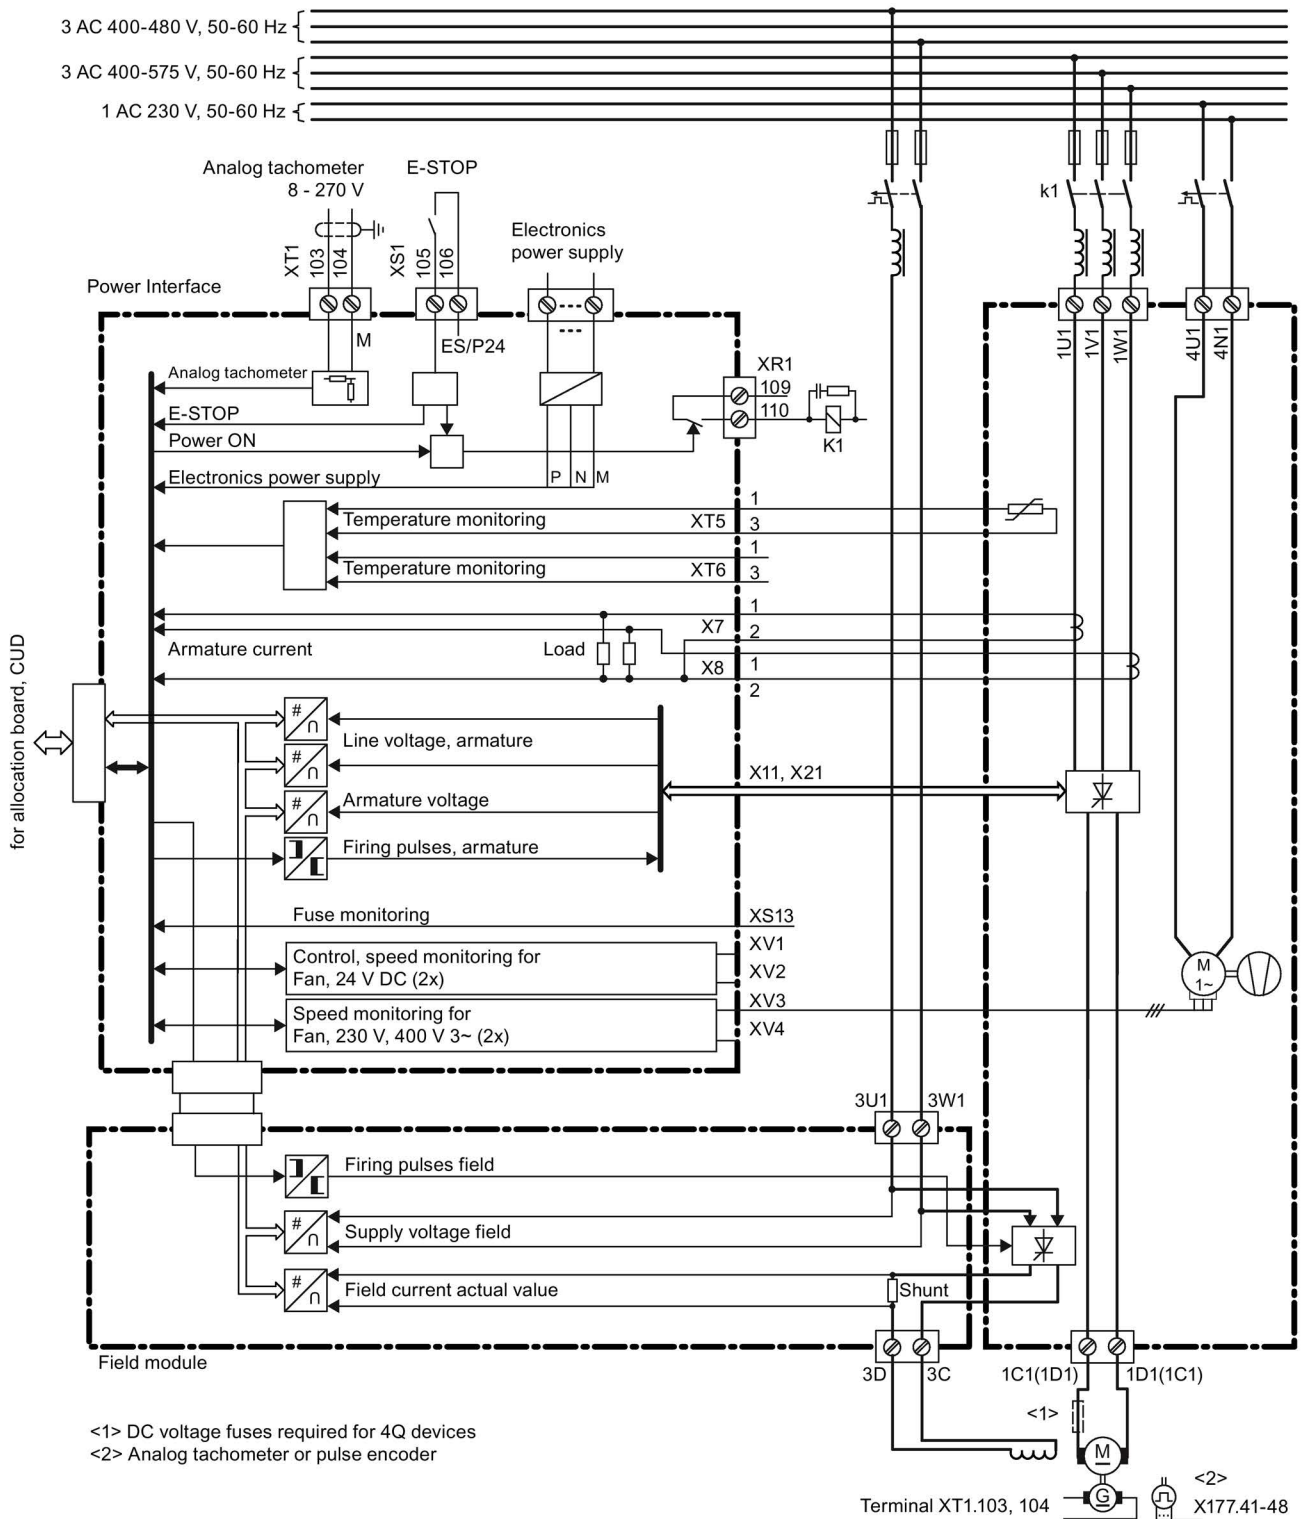


Figure 6-23 Block diagram for 400 to 850 A devices, 1-phase fan connection

900 A to 1200 A devices with option L21, single-phase fan connection

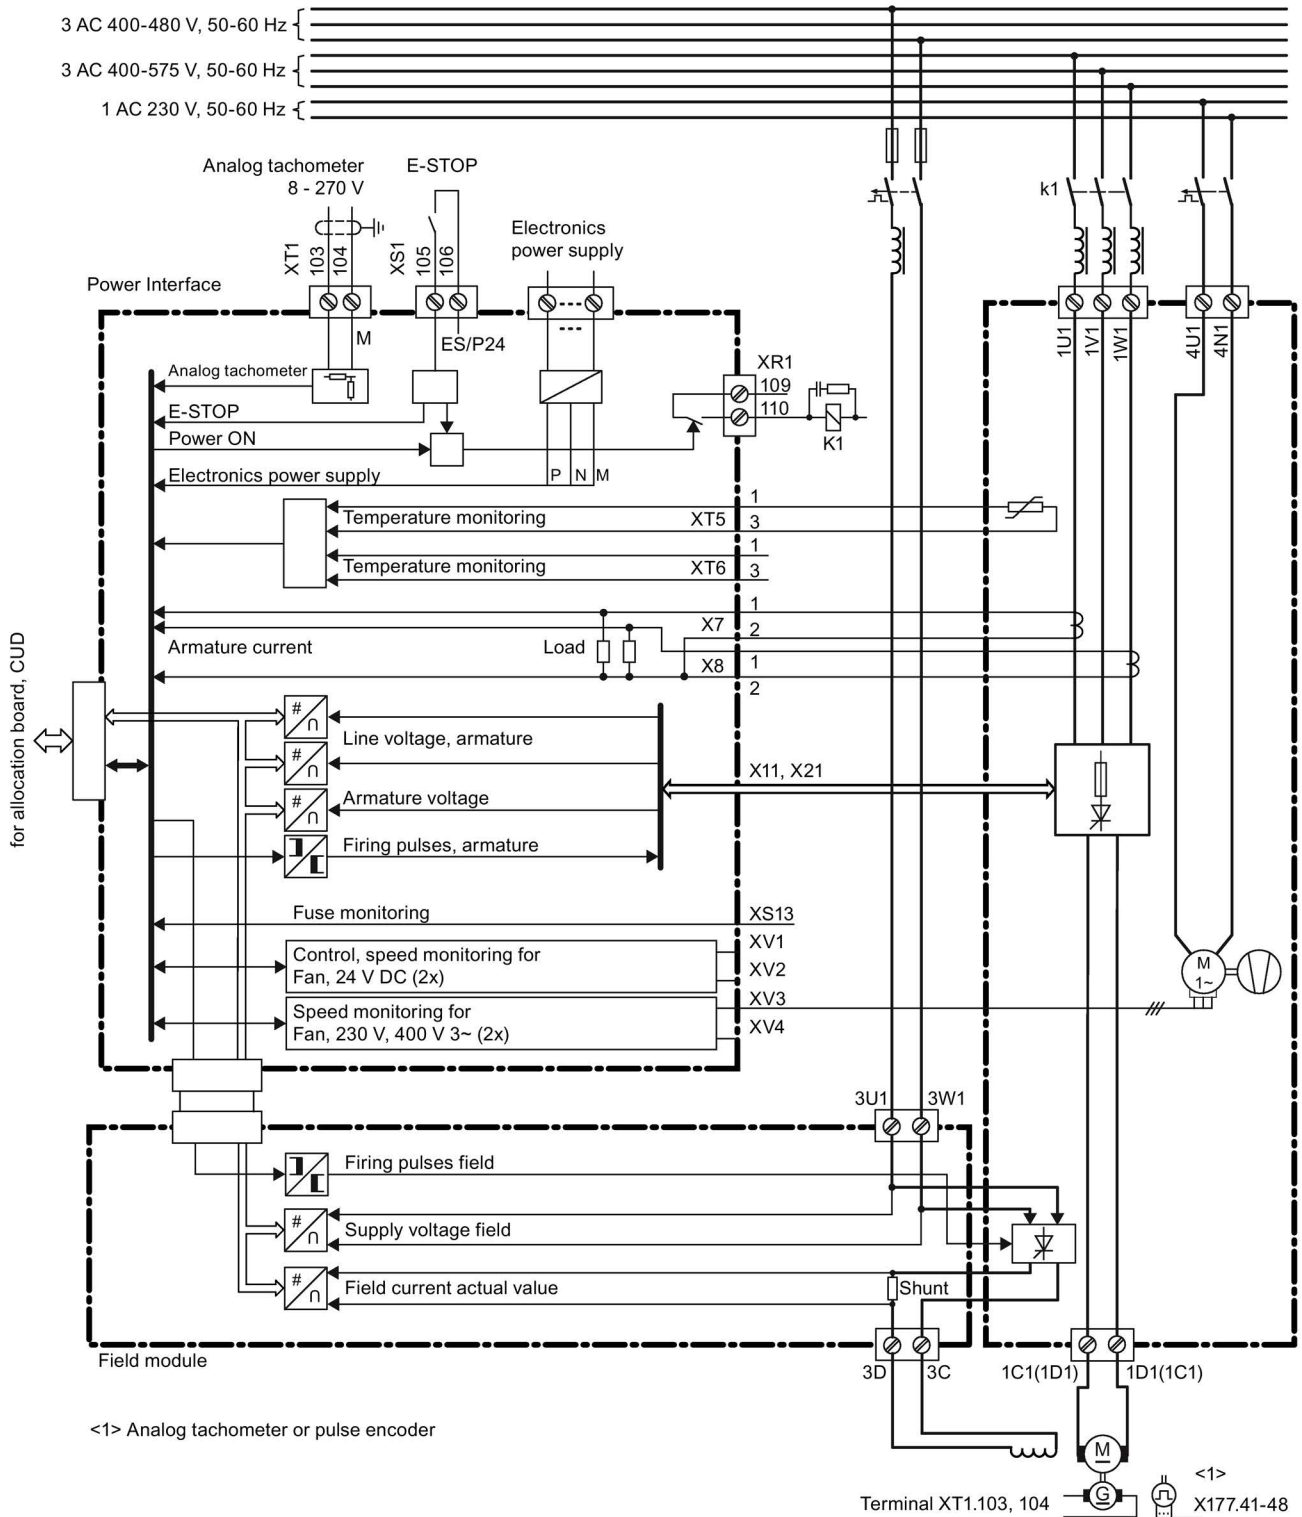


Figure 6-24 Block diagram for 900 to 1200 A devices, 1-phase fan connection

**For 15 A to 125 A, the following applies:**

The fuses are not integrated in the device. The externally required semiconductor fuses 1NE1... are also suitable for the conductor protection.

**For 210 A to 850 A, the following applies:**

The fuses are not integrated in the device. The externally required semiconductor fuses are **not** suitable for the conductor protection. Fuses for the conductor protection must be provided separately.

**For 900 A to 3000 A, the following applies:**

The required semiconductor fuses are integrated in the device and external fuses must be provided for the conductor protection.

## 6.4 Power connections

Explanations for the connection diagrams

- G Gate cables
- K Cathode cables
- a Copper/aluminum busbar
- b Copper/aluminum busbar
- c Raychem 44A0311-20-9

Firing cables (G, K):

In devices with a rated armature supply voltage of < 690 V:  
Betatherm 145, 0.5 mm<sup>2</sup>, UL


In devices with a rated armature supply voltage of ≥ 690 V:  
Radox 125, 0.75 mm<sup>2</sup>



Cable ends are marked as specified.

60 A/2Q devices

6RA8025-6DS22-0AA0, 6RA8025-6FS22-0AA0, 6RA8025-6GS22-0AA0

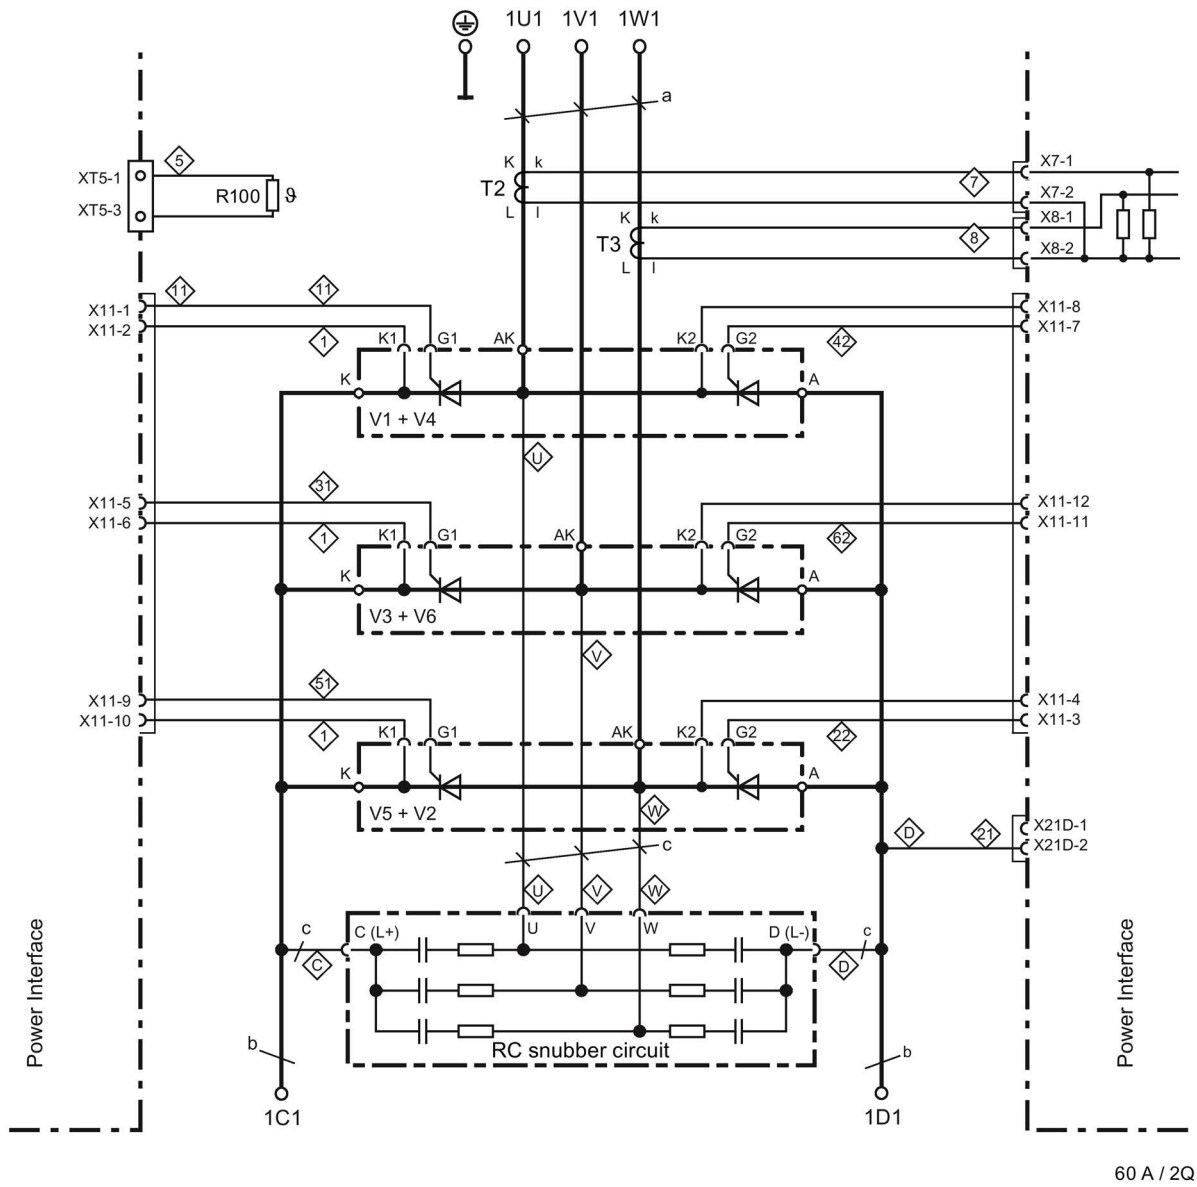


a = 20 x 3 mm, b = 20 x 5 mm

Figure 6-25 Power connections for 60 A/2Q devices

90 to 280 A/2Q devices

6RA8028-6DS22-0AA0, 6RA8028-6FS22-0AA0, 6RA8031-6DS22-0AA0,  
 6RA8031-6FS22-0AA0, 6RA8031-6GS22-0AA0, 6RA8075-6DS22-0AA0,  
 6RA8075-6FS22-0AA0, 6RA8075-6GS22-0AA0, 6RA8078-6DS22-0AA0,  
 6RA8078-6FS22-0AA0

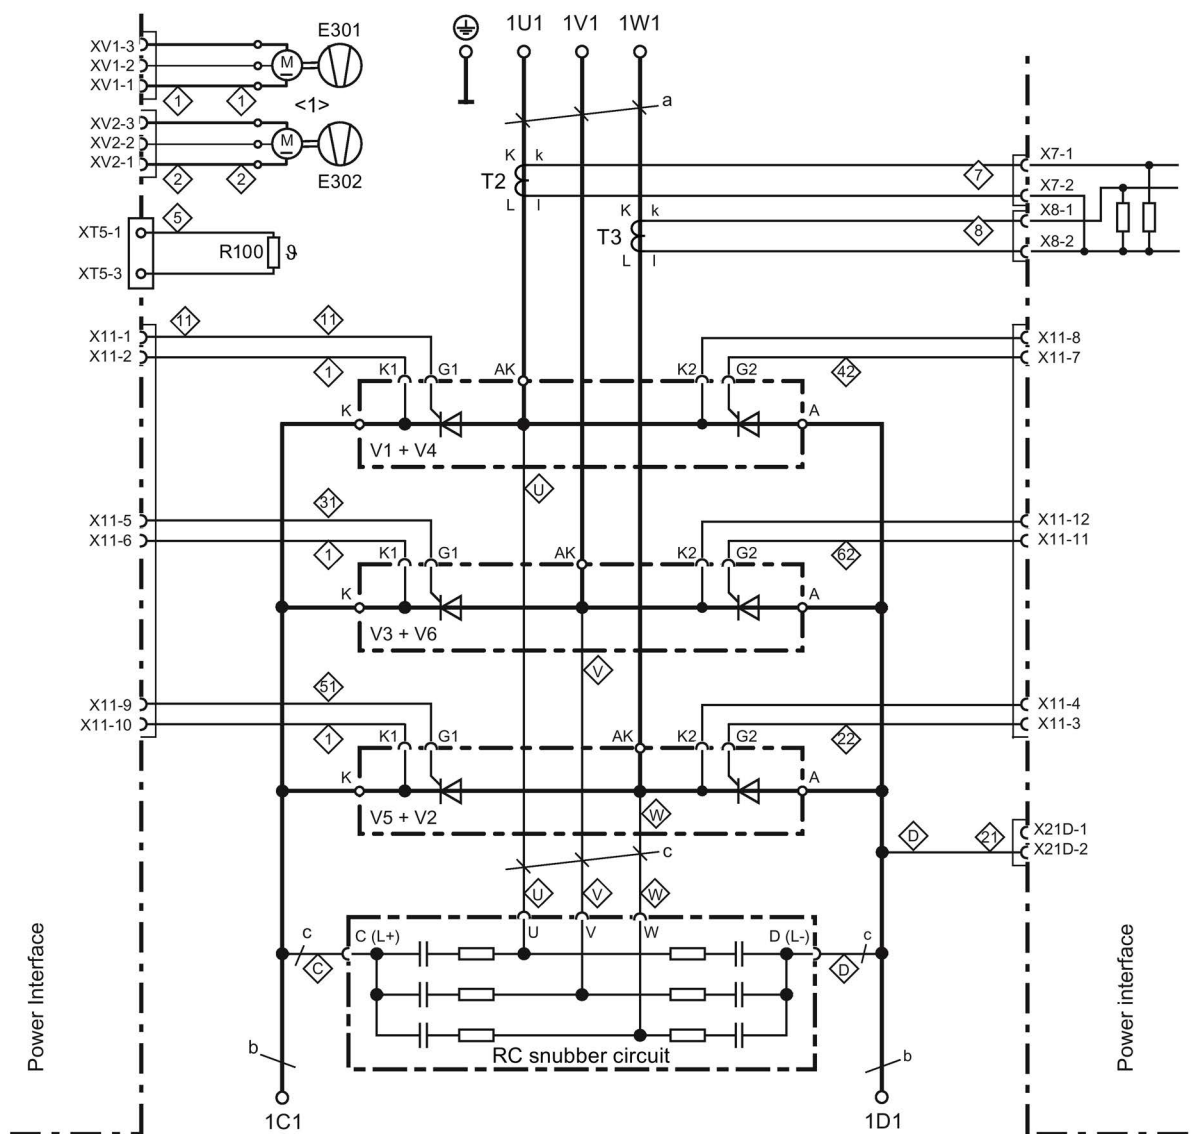

90 A - 280 A / 2Q


<1> Fan configuration for devices of 210 A and above

a = 20 x 3 mm, b = 20 x 5 mm

Figure 6-26 Power connections for 90 to 280 A/2Q devices

400 to 600 A/2Q devices

6RA8081-6DS22-0AA0, 6RA8081-6GS22-0AA0, 6RA8082-6FS22-0AA0,  
6RA8085-6DS22-0AA0, 6RA8085-6FS22-0AA0, 6RA8085-6GS22-0AA0

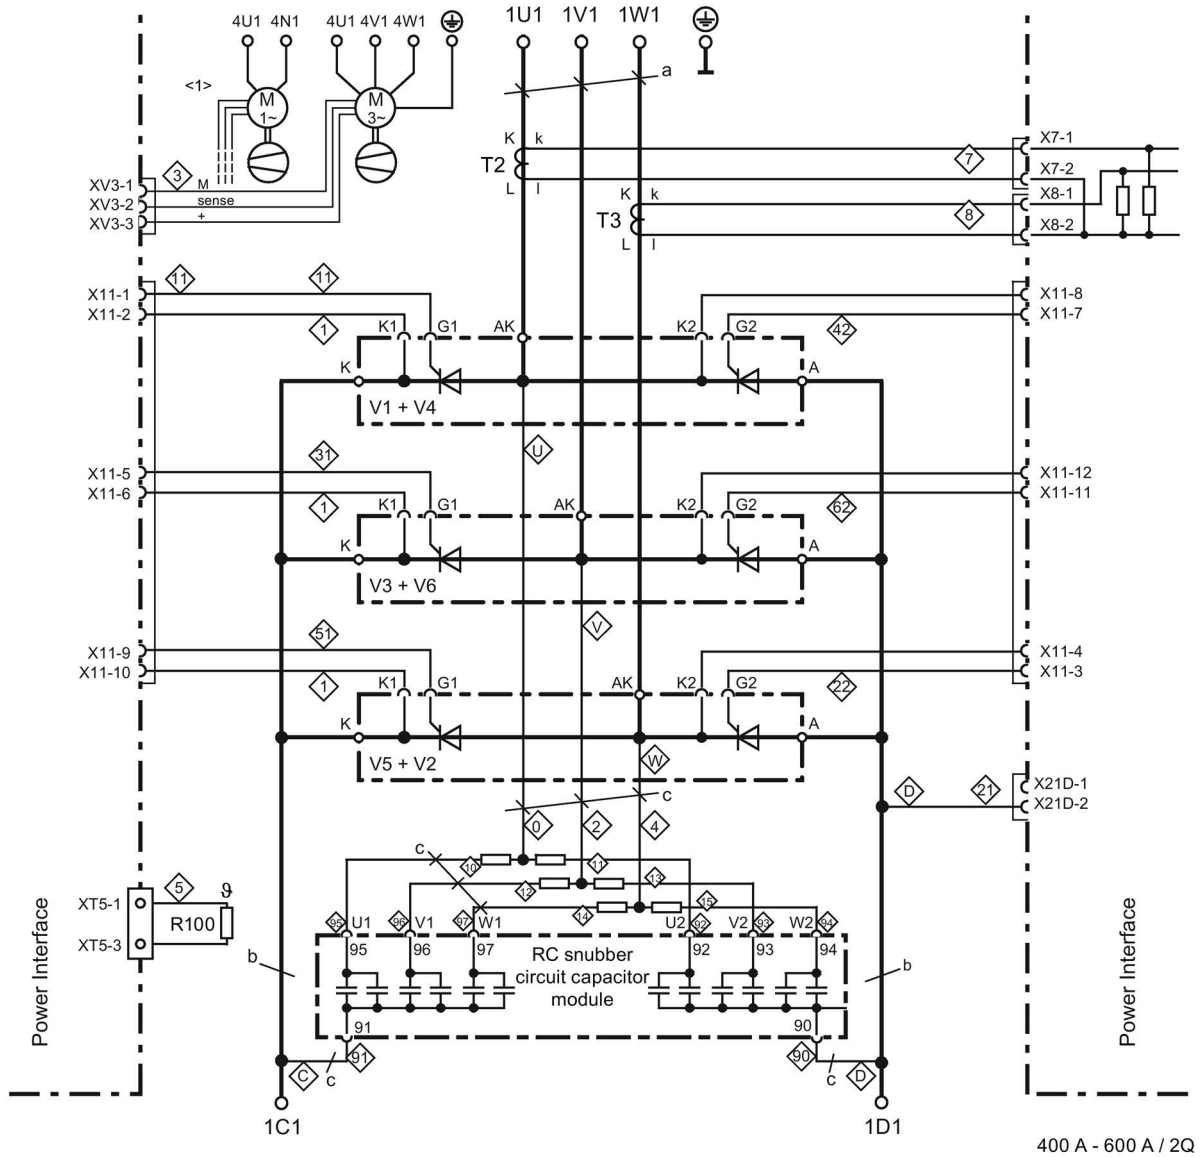

<1> Fan with single-phase connection for devices with option L21


a = 30 x 5 mm, b = 35 x 5 mm

Figure 6-27 Power connections for 400 to 600 A/2Q devices



720 to 850 A/2Q devices

6RA8086-6KS22-0AA0, 6RA8087-6DS22-0AA0, 6RA8087-6FS22-0AA0,  
6RA8087-6GS22-0AA0

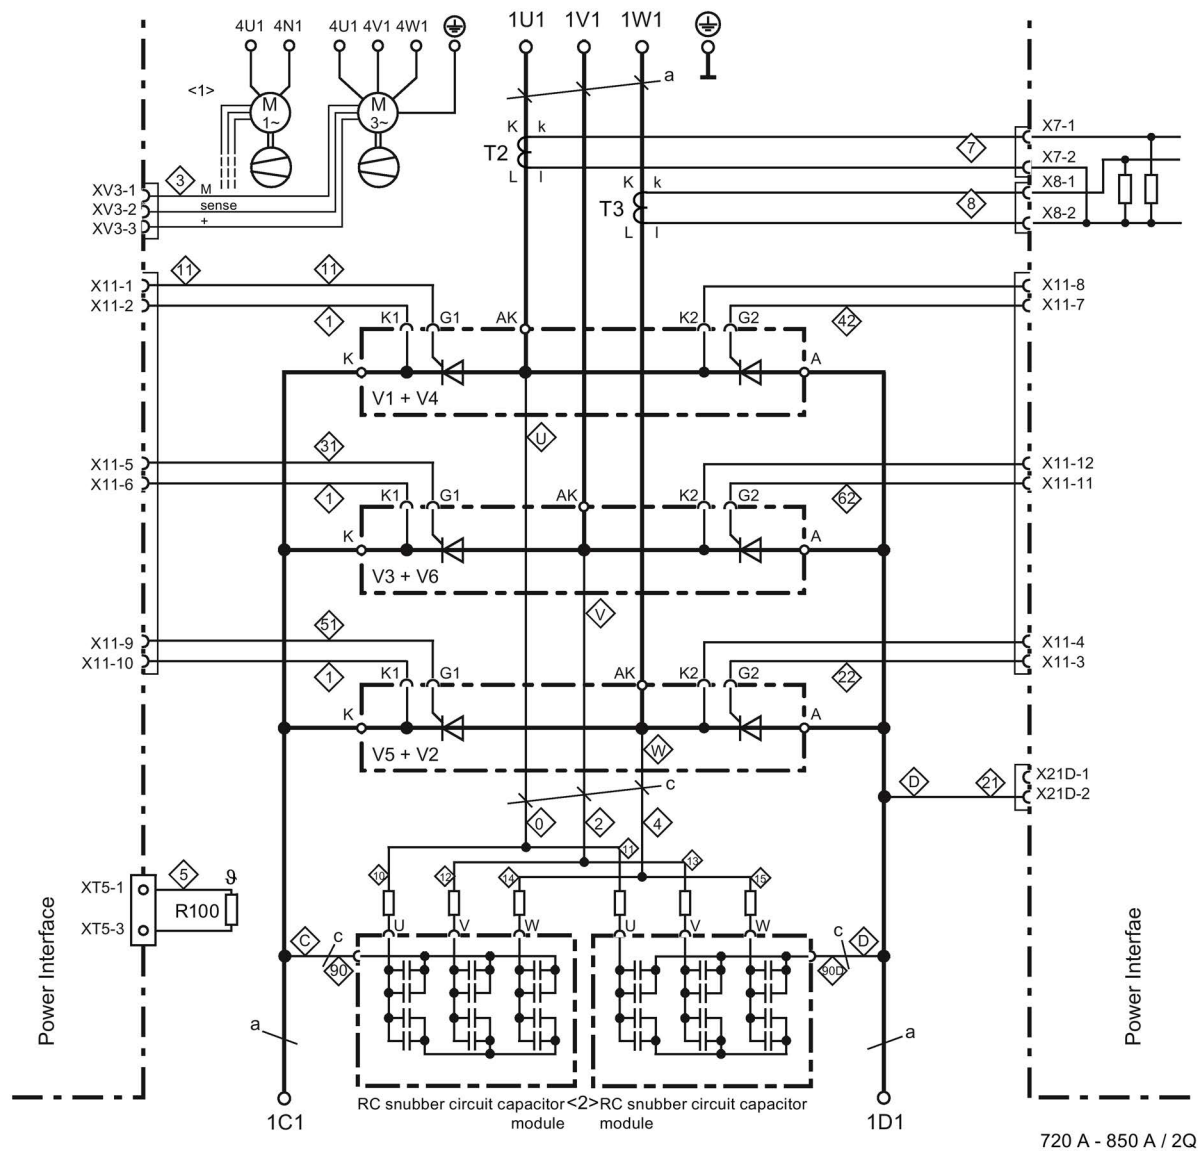

a = 60 x 5 mm

<1> Fan with single-phase connection for devices with option L21

<2> TSE capacitor module connections:


720 A devices: U = 91 V = 99 W = 98 C, D = 90

800 to 850 A devices: U = 92 V = 93 W = 94 C, D = 90

Figure 6-28 Power connections for 720 to 850 A/2Q devices

900 to 1200 A/2Q devices

6RA8088-6KS22-0AA0, 6RA8088-6LS22-0AA0, 6RA8090-6GS22-0AA0,  
6RA8091-6DS22-0AA0, 6RA8091-6FS22-0AA0

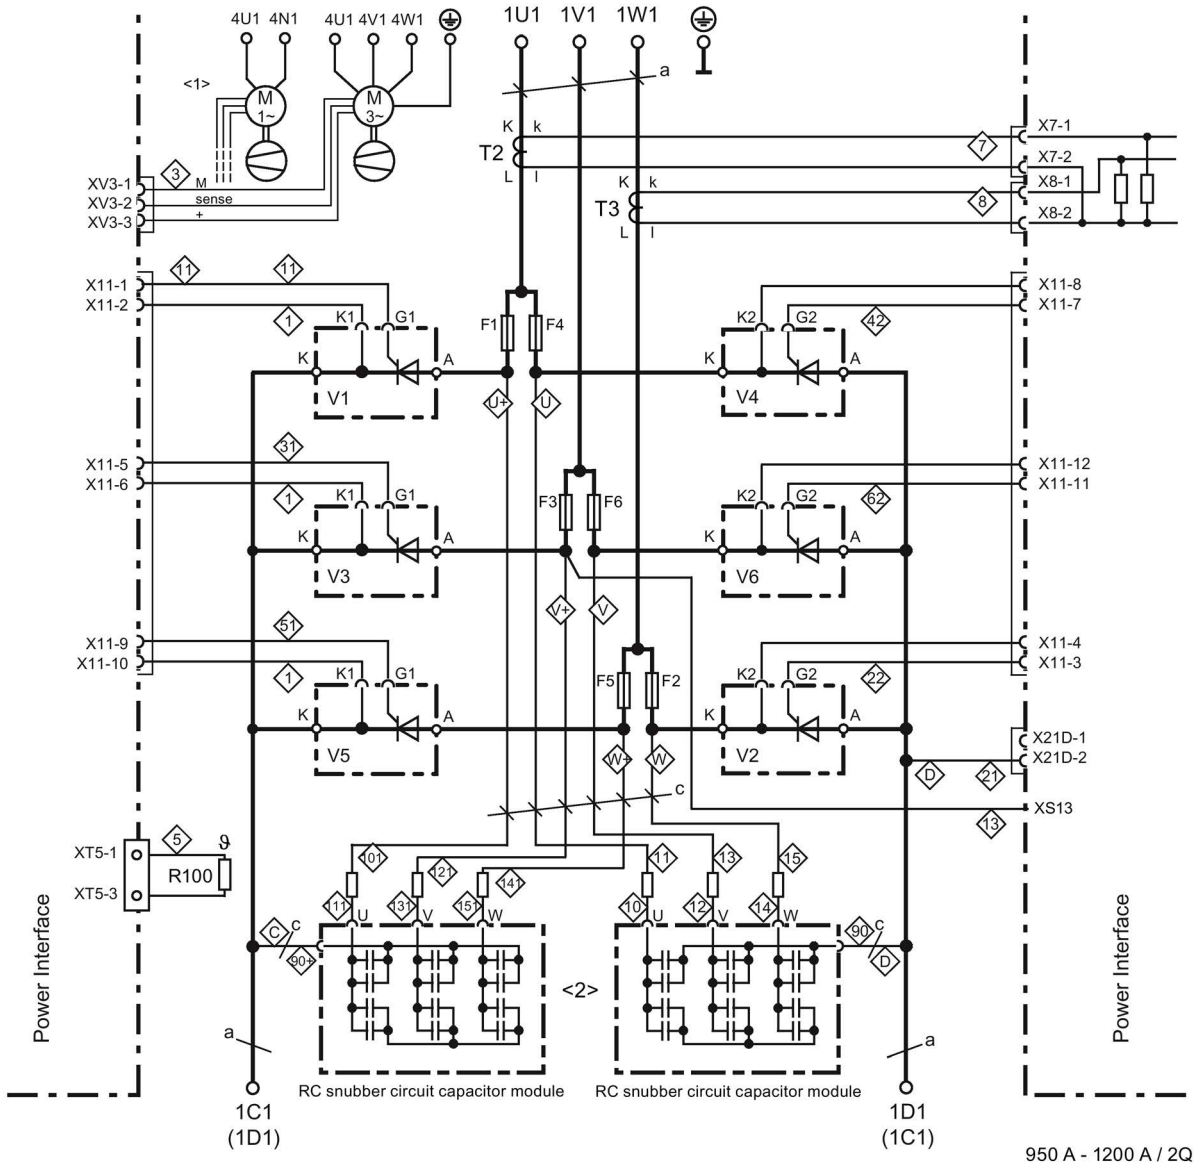

a = 80 x 6 mm

<1> Fan with single-phase connection for devices with option L21


<2> TSE capacitor module connections:

<1100 A devices:	U = 91	V = 99	W = 98	C, D = 90
≥1100 A devices:	U = 92	V = 93	W = 94	C, D = 90

Figure 6-29 Power connections for 900 to 1200 A/2Q devices

1500 to 2000 A and 575 V/2200 A/2Q devices

6RA8093-4DS22-0AA0, 6RA8093-4GS22-0AA0, 6RA8093-4KS22-0AA0,  
 6RA8093-4LS22-0AA0, 6RA8095-4DS22-0AA0, 6RA8095-4GS22-0AA0,  
 6RA8095-4KS22-0AA0, 6RA8095-4LS22-0AA0, 6RA8096-4GS22-0AA0

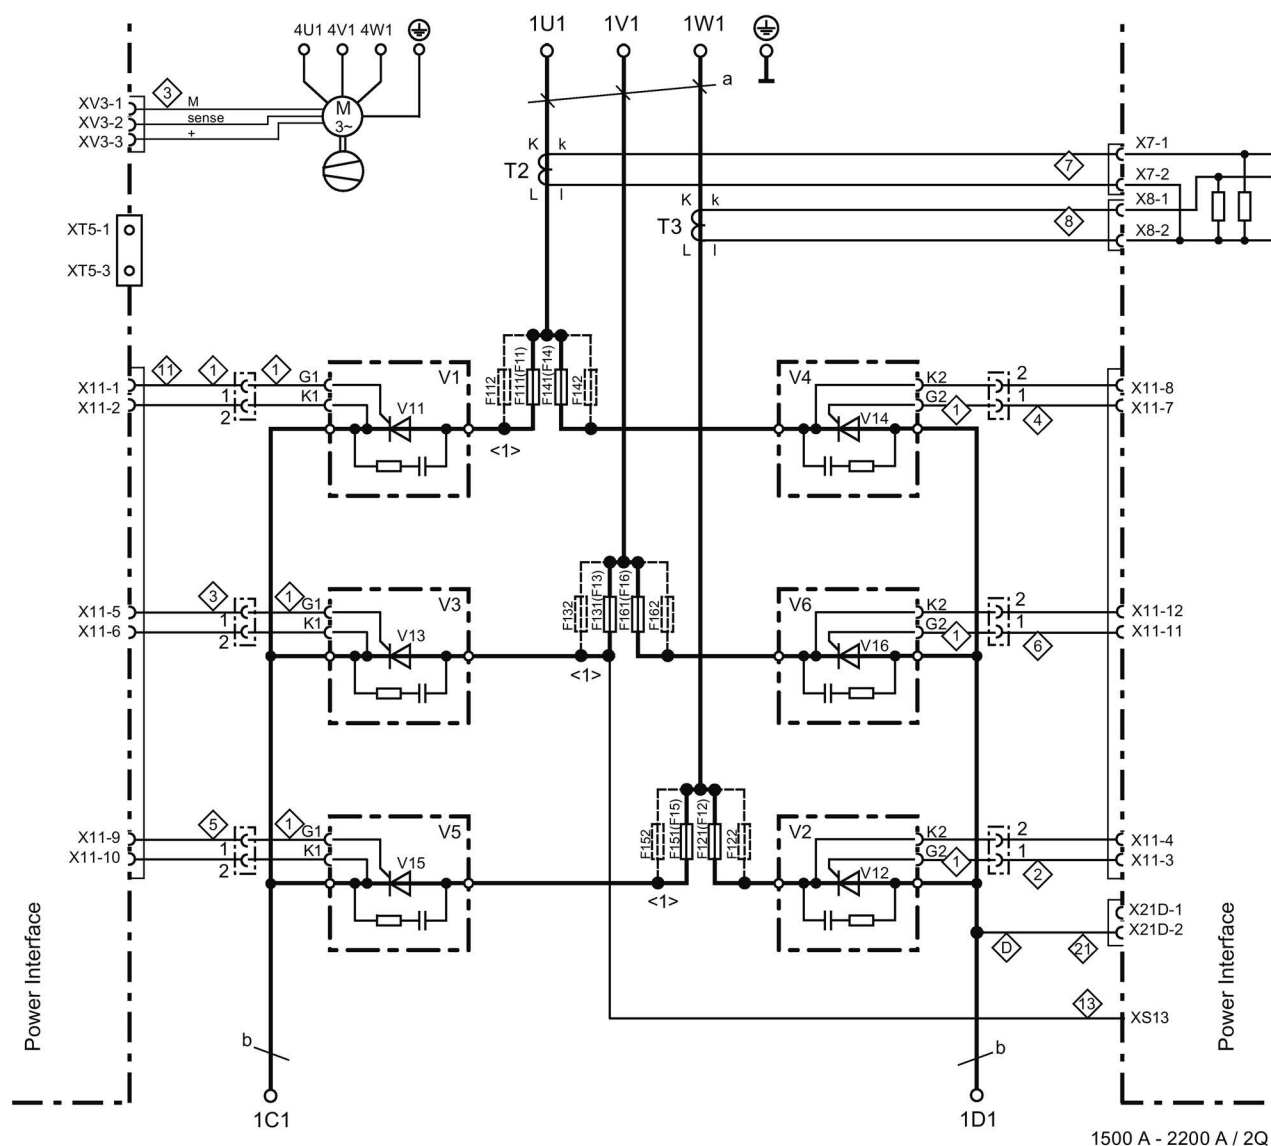


<1> For number of fuses, refer to the chapter "Fuses"

a = 120 x 10 mm, b = cross-section 60 x 10 mm / width 323 mm

Figure 6-30 Power connections for 1500 to 2000 A and 575 V/2200 A/2Q devices

400 V/3000 A, 575 V/2800 A, 690 V/2600 A, 950 V/2200 A/2Q devices

6RA8096-4MS22-0AA0, 6RA8097-4GS22-0AA0, 6RA8097-4KS22-0AA0,  
6RA8098-4DS22-0AA0

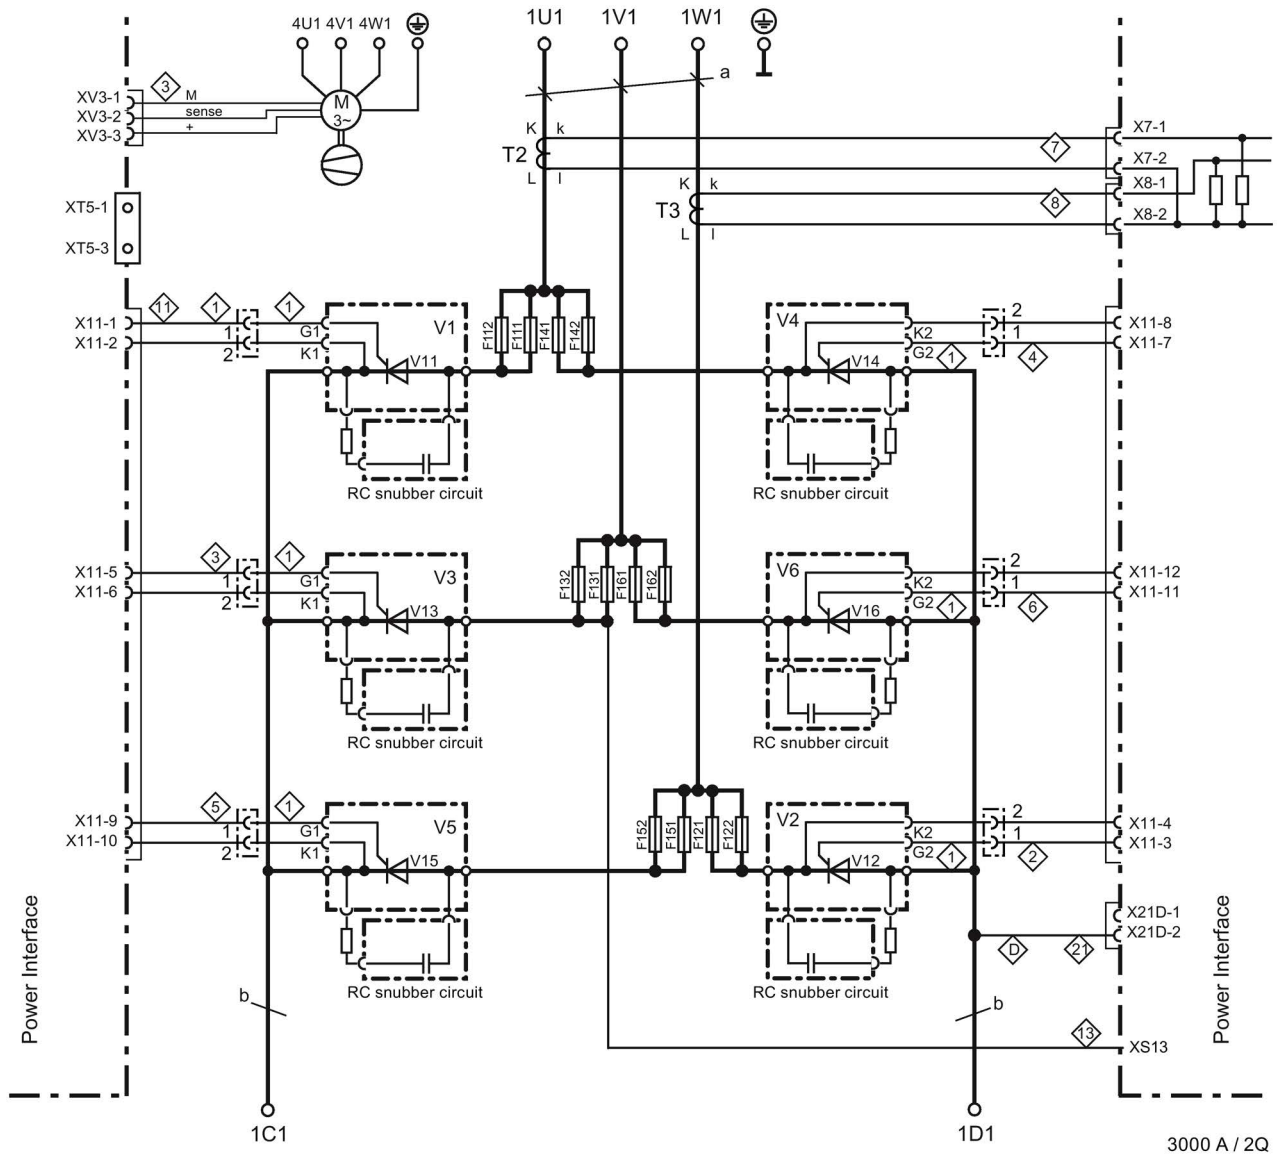

a = 120 x 10 mm, b = cross-section 60 x 10 mm / width 323 mm

Figure 6-31 Power connections for 2200 to 3000 A/2Q devices

15 to 30 A/4Q devices

6RA8013-6DV62-0AA0, 6RA8013-6FV62-0AA0, 6RA8018-6DV62-0AA0,  
6RA8018-6FV62-0AA0


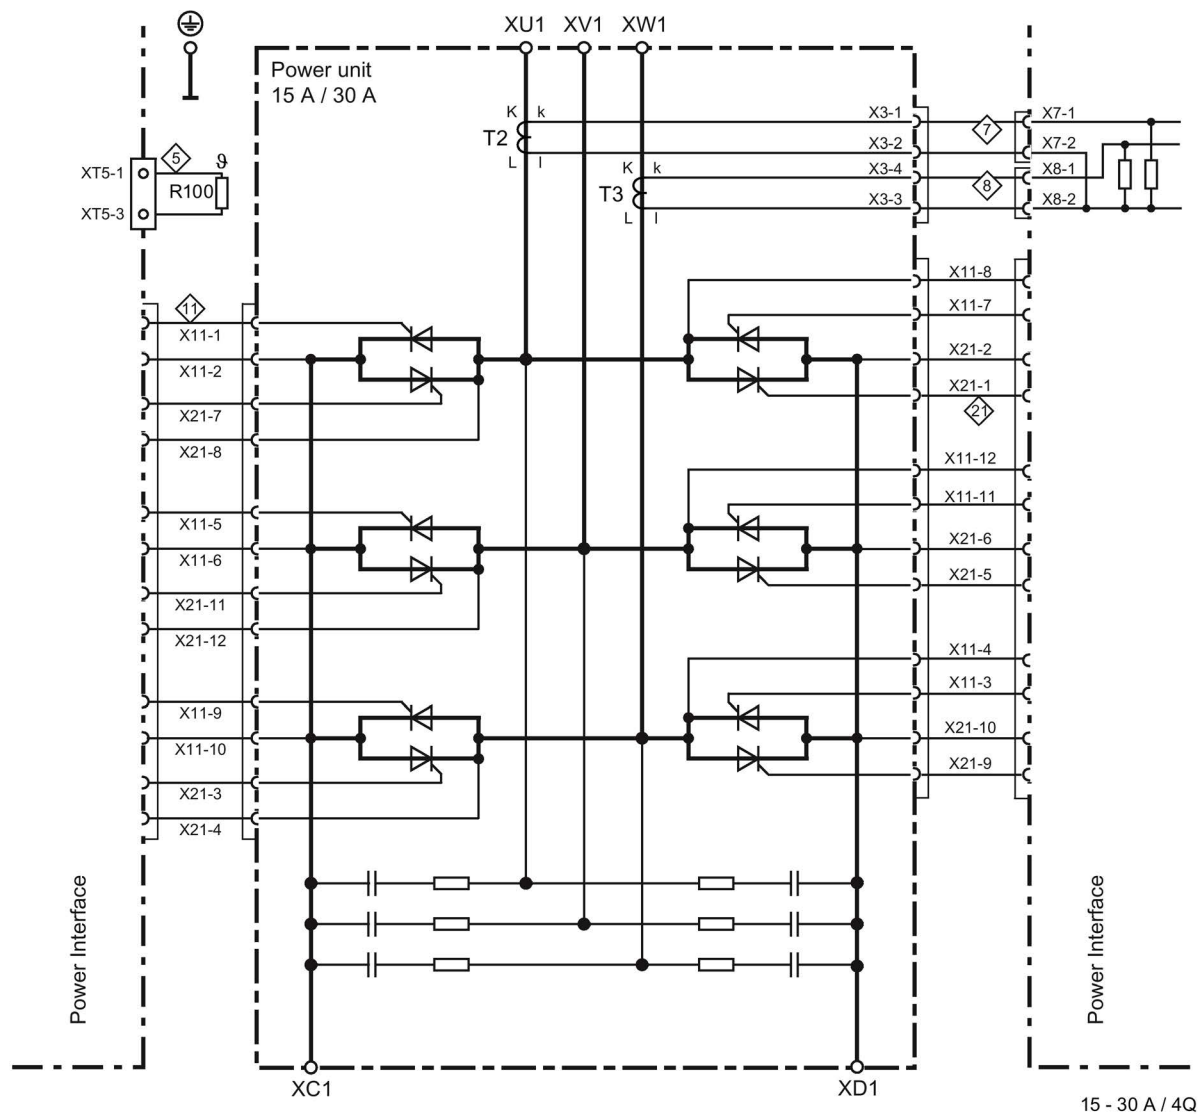


Figure 6-32 Power connections for 15 to 30 A/4Q devices

60 A/4Q devices

6RA8025-6DV62-0AA0, 6RA8025-6FV62-0AA0, 6RA8025-6GV62-0AA0

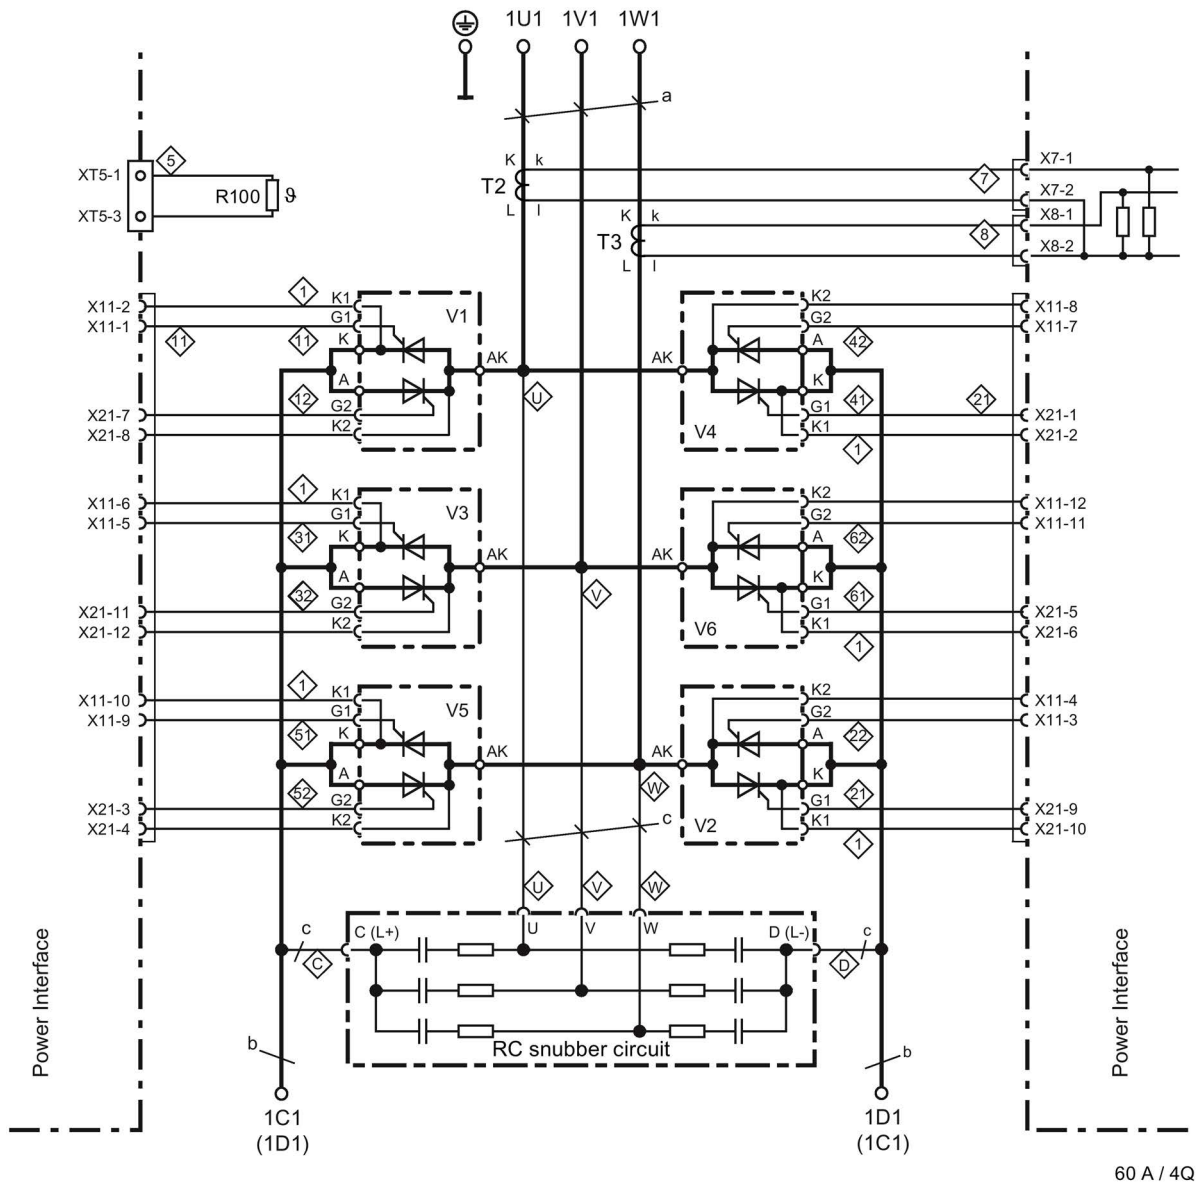


a = 20 x 3 mm, b = 20 x 5 mm

Figure 6-33 Power connections for 60 A/4Q devices

90 to 280 A/4Q devices

6RA8028-6DV62-0AA0, 6RA8028-6FV62-0AA0, 6RA8031-6DV62-0AA0,  
 6RA8031-6FV62-0AA0, 6RA8031-6GV62-0AA0, 6RA8075-6DV62-0AA0,  
 6RA8075-6FV62-0AA0, 6RA8075-6GV62-0AA0, 6RA8078-6DV62-0AA0,  
 6RA8078-6FV62-0AA0

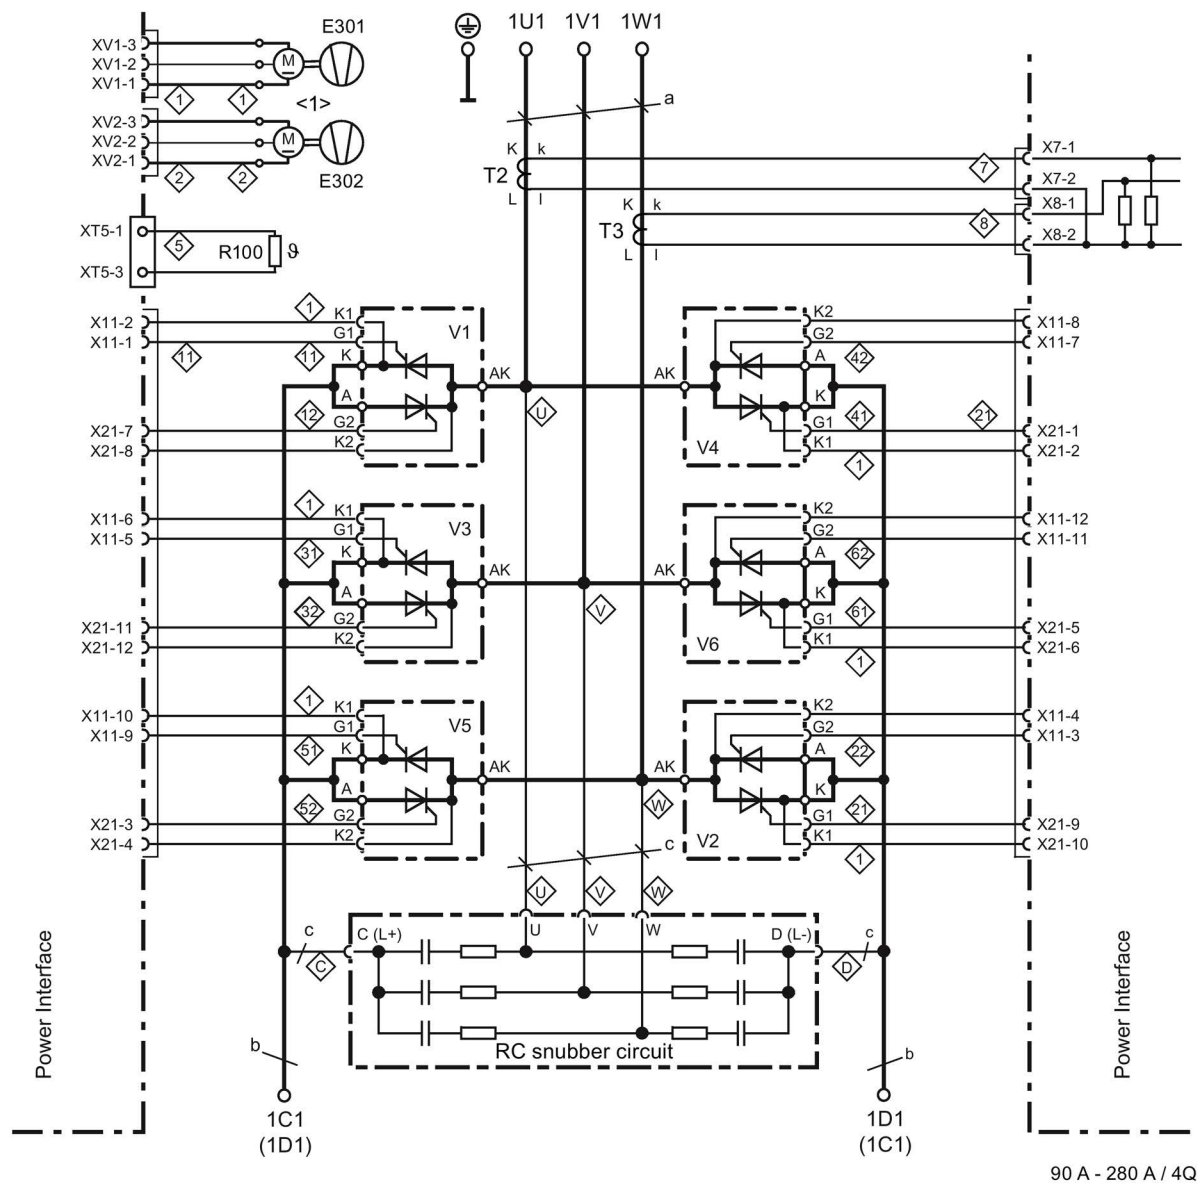

90 A - 280 A / 4Q


<1> Fan configuration for devices of 210 A and above

a = 20 x 3 mm, b = 20 x 5 mm

Figure 6-34 Power connections for 90 to 280 A/4Q devices

400 to 600 A/4Q devices

6RA8081-6DV62-0AA0, 6RA8081-6GV62-0AA0, 6RA8082-6FV62-0AA0,  
6RA8085-6DV62-0AA0, 6RA8085-6FV62-0AA0, 6RA8085-6GV62-0AA0

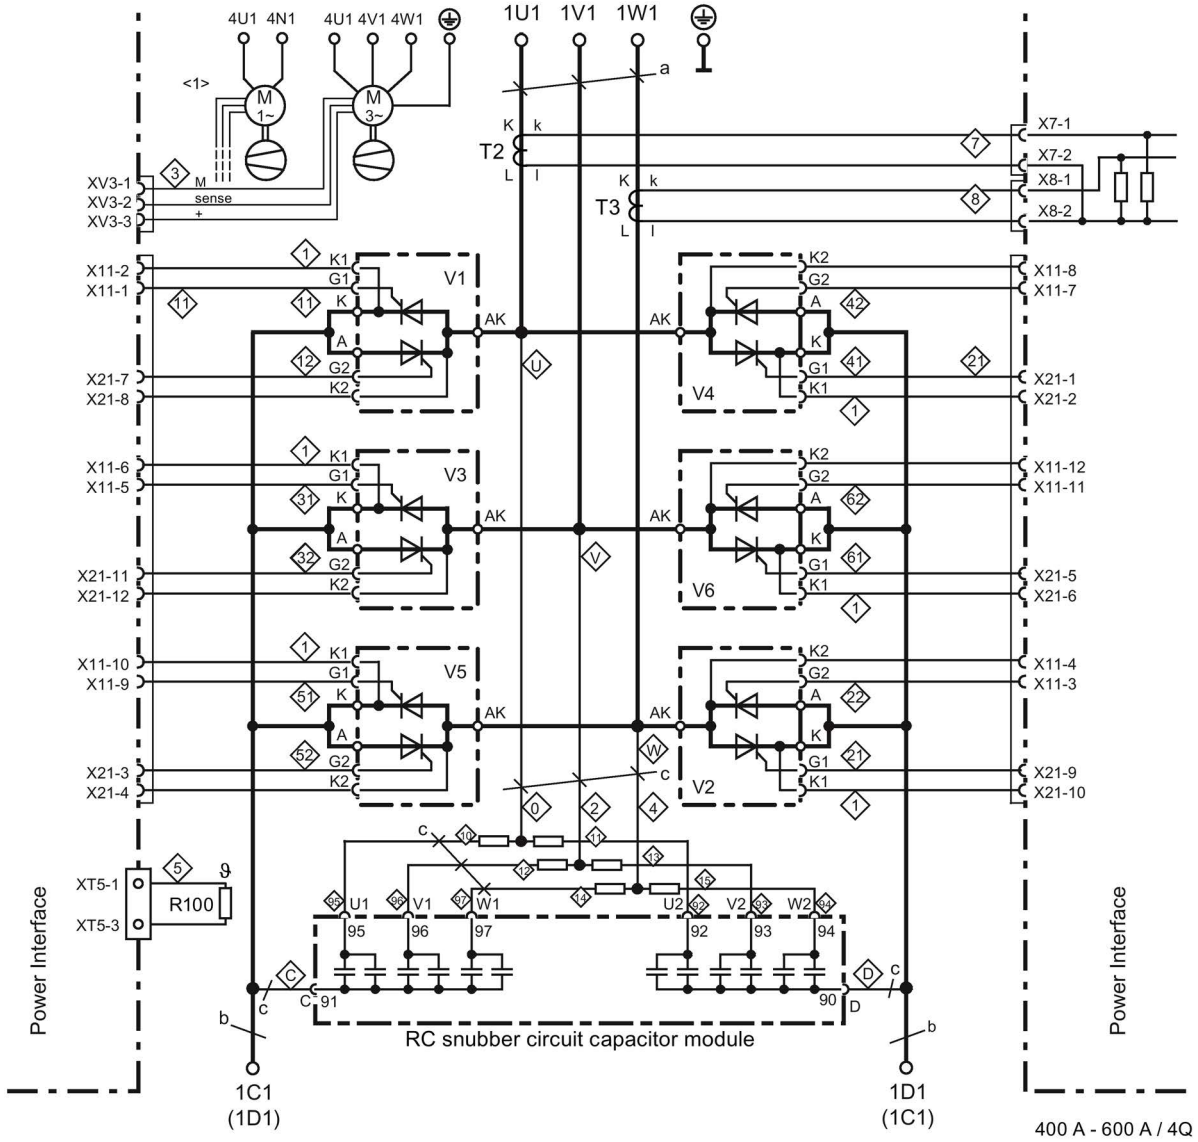

<1> Fan with single-phase connection for devices with option L21


a = 30 x 5 mm, b = 35 x 5 mm

Figure 6-35 Power connections for 400 to 600 A/4Q devices



760 to 850 A/4Q devices

6RA8086-6KV62-0AA0, 6RA8087-6DV62-0AA0, 6RA8087-6FV62-0AA0,  
6RA8087-6GV62-0AA0

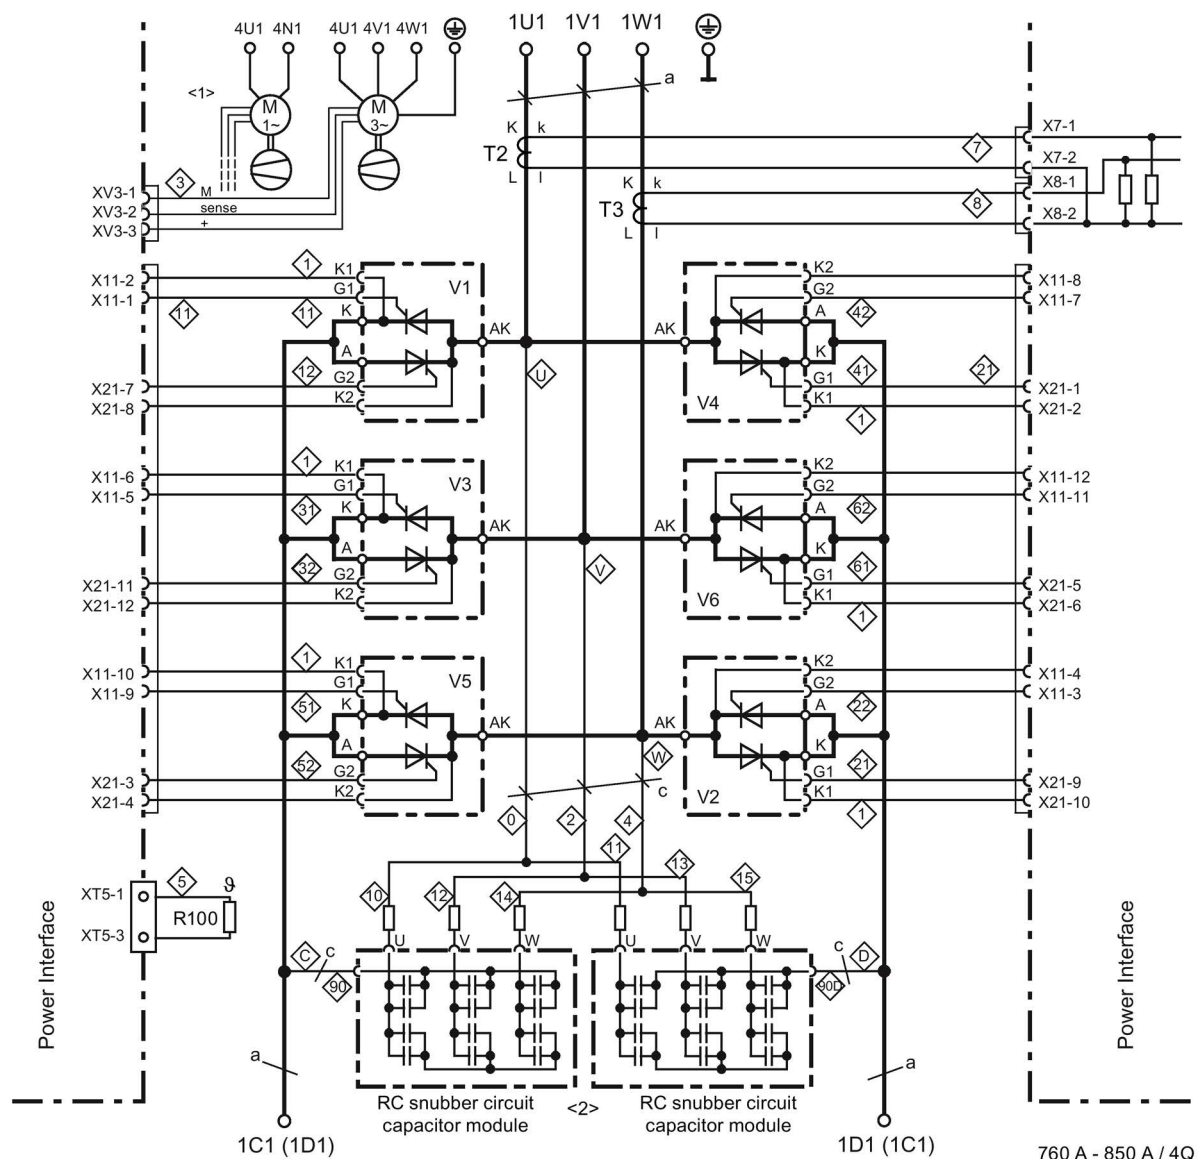

a = 60 x 5 mm

<1> Fan with single-phase connection for devices with option L21


<2> TSE capacitor module connections:

760 A devices:	U = 91	V = 99	W = 98	C, D = 90
850 A devices:	U = 92	V = 93	W = 94	C, D = 90

Figure 6-36 Power connections for 760 to 850 A/4Q devices

900 to 1200 A/4Q devices

6RA8088-6LV62-0AA0, 6RA8090-6GV62-0AA0, 6RA8090-6KV62-0AA0,  
6RA8091-6DV62-0AA0, 6RA8091-6FV62-0AA0

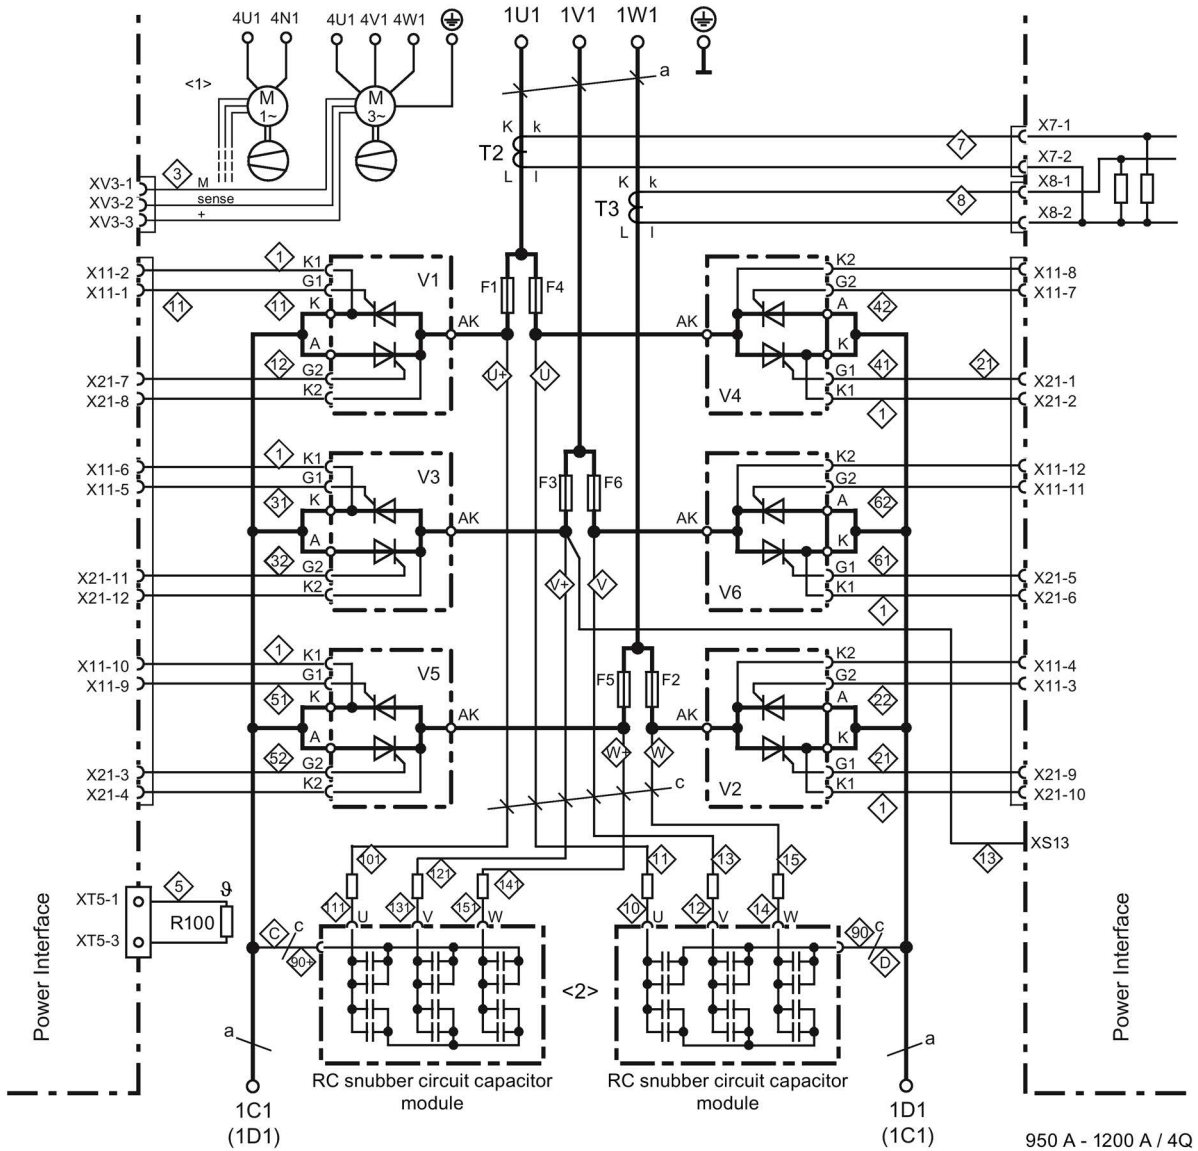

a = 80 x 6 mm

<1> Fan with single-phase connection for devices with option L21


<2> TSE capacitor module connections:

<1100 A devices:	U = 91	V = 99	W = 98	C, D = 90
≥1100 A devices:	U = 92	V = 93	W = 94	C, D = 90

Figure 6-37 Power connections for 900 to 1200 A/4Q devices

1500 to 2000 A and 575 V/2200 A/4Q devices

6RA8093-4DV62-0AA0, 6RA8093-4GV62-0AA0, 6RA8093-4KV62-0AA0,  
6RA8093-4LV62-0AA0, 6RA8095-4DV62-0AA0, 6RA8095-4GV62-0AA0,  
6RA8095-4KV62-0AA0, 6RA8095-4LV62-0AA0, 6RA8096-4GV62-0AA0

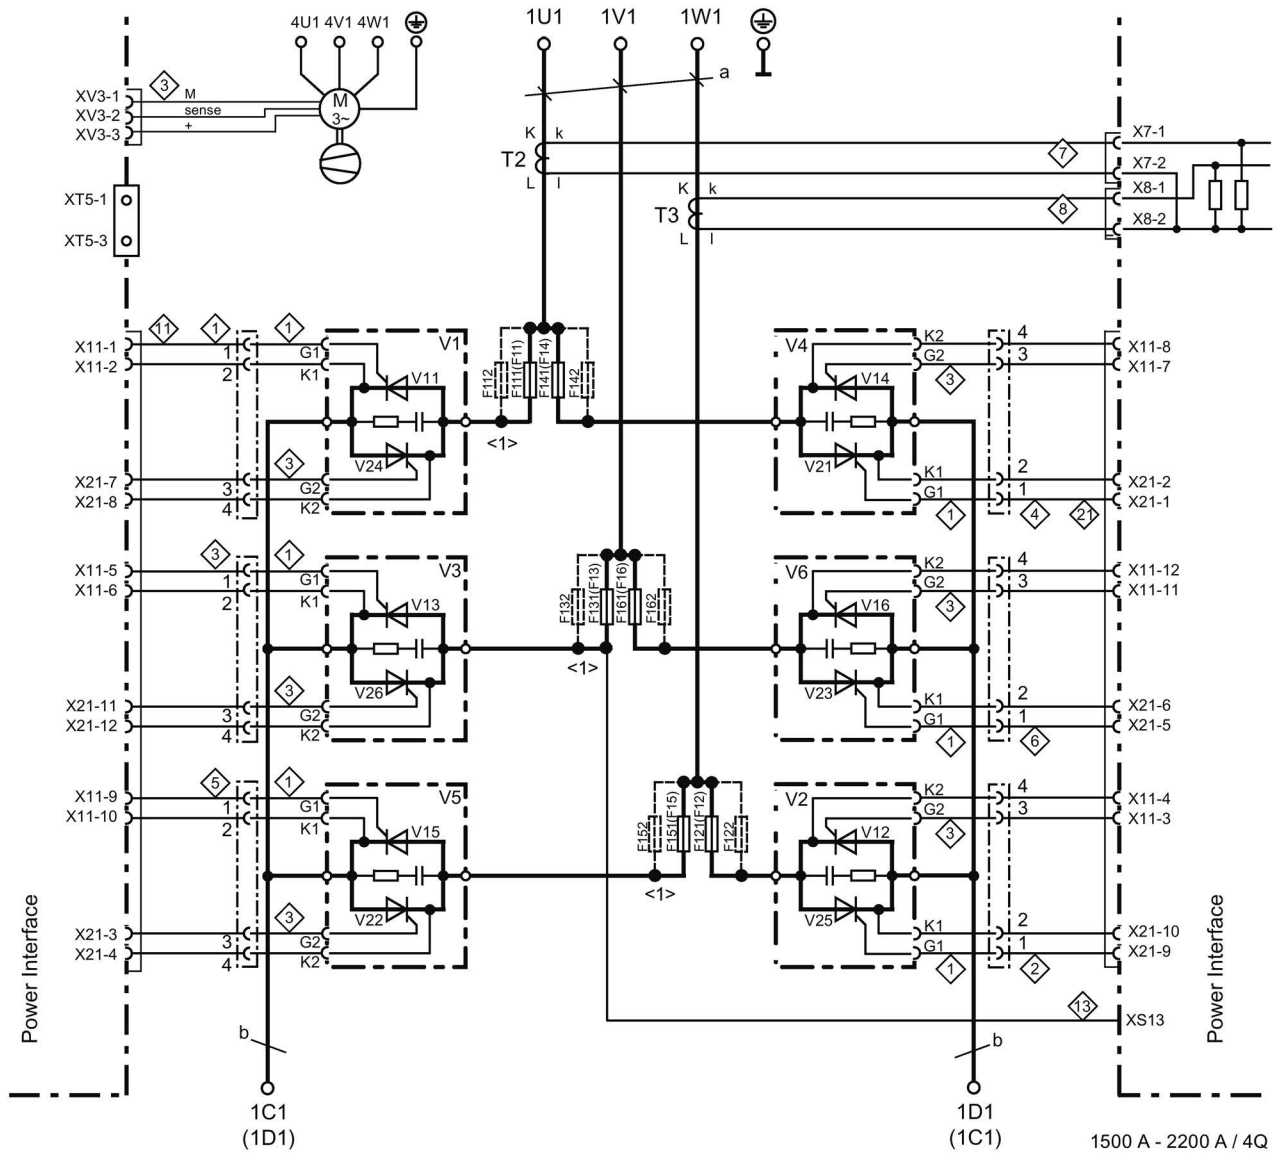


<1> For number of fuses, refer to the chapter "Fuses"

a = 120 x 10 mm, b = cross-section 60 x 10 mm / width 323 mm

Figure 6-38 Power connections for 1500 to 2000 A and 575 V/2200 A/4Q devices

400 V/3000 A, 575 V/2800 A, 690 V/2600 A, 950 V/2200 A/4Q devices

6RA8096-4MV62-0AA0, 6RA8097-4GV62-0AA0, 6RA8097-4KV62-0AA0,  
6RA8098-4DV62-0AA0

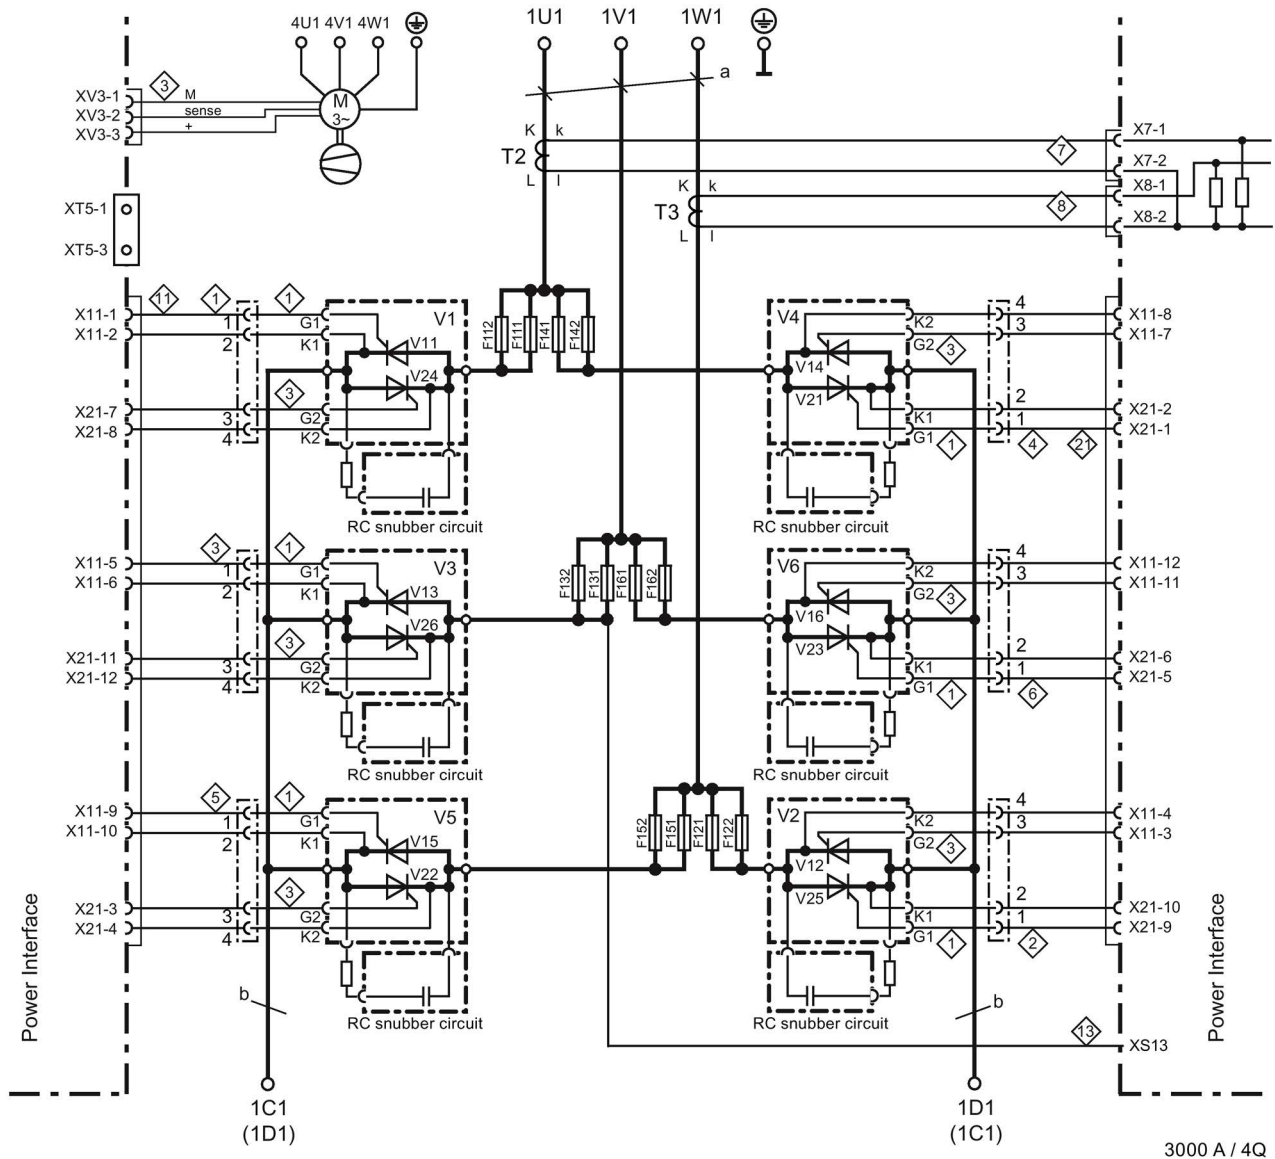

a = 120 x 10 mm, b = cross-section 60 x 10 mm / width 323 mm


Figure 6-39 Power connections for 2200 to 3000 A/4Q devices


## Arrangement of thyristor modules

### Note


The following drawings only show how the thyristor modules are arranged and the positions of the connections. They do not take into account the frame sizes of the modules.

### 2Q devices

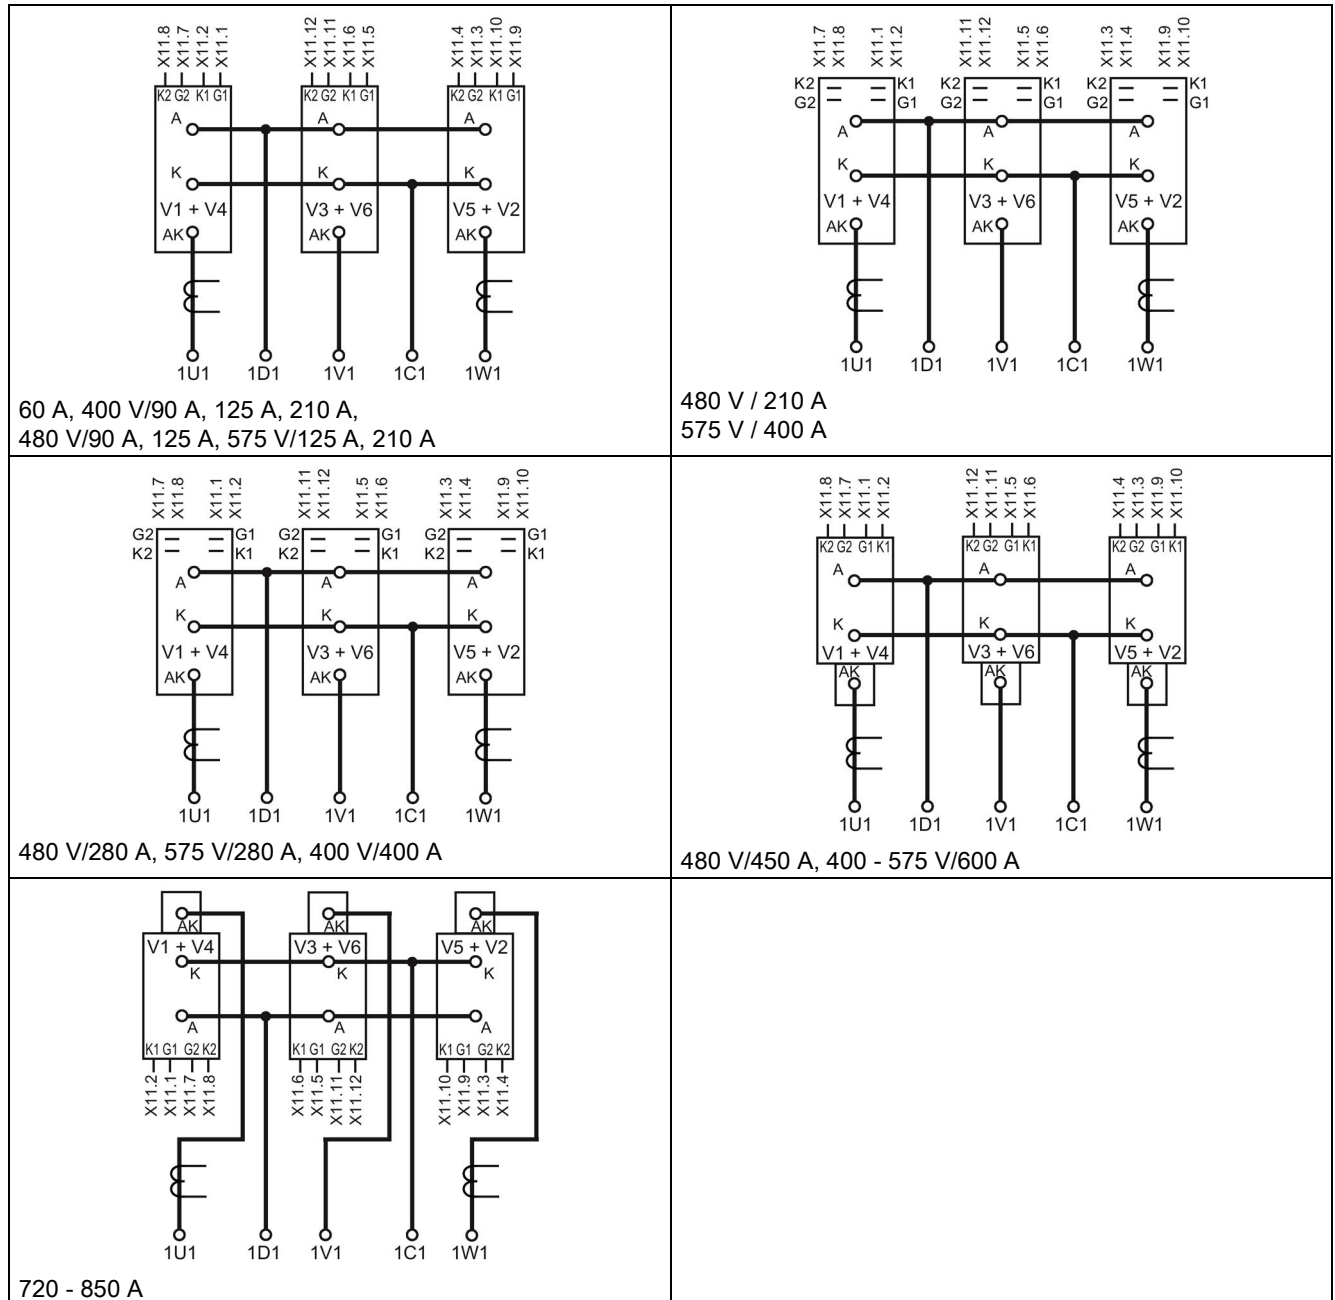

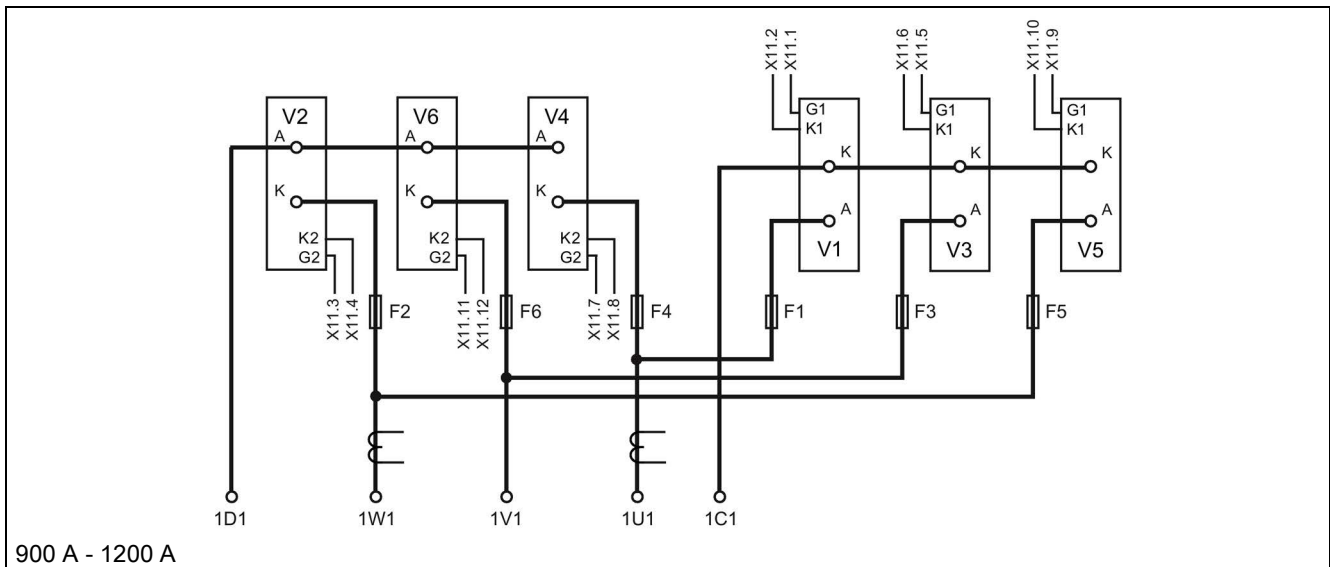


900 A - 1200 A

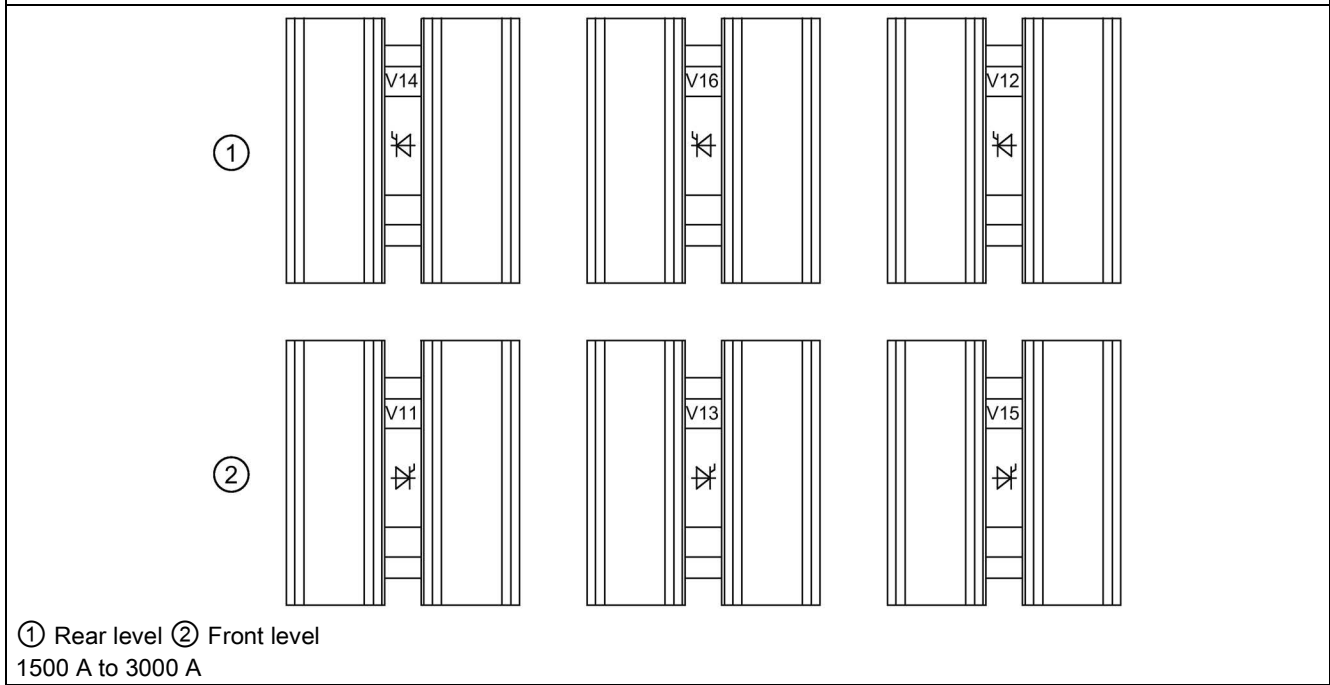


① Rear level ② Front level  
1500 A to 3000 A


4Q devices

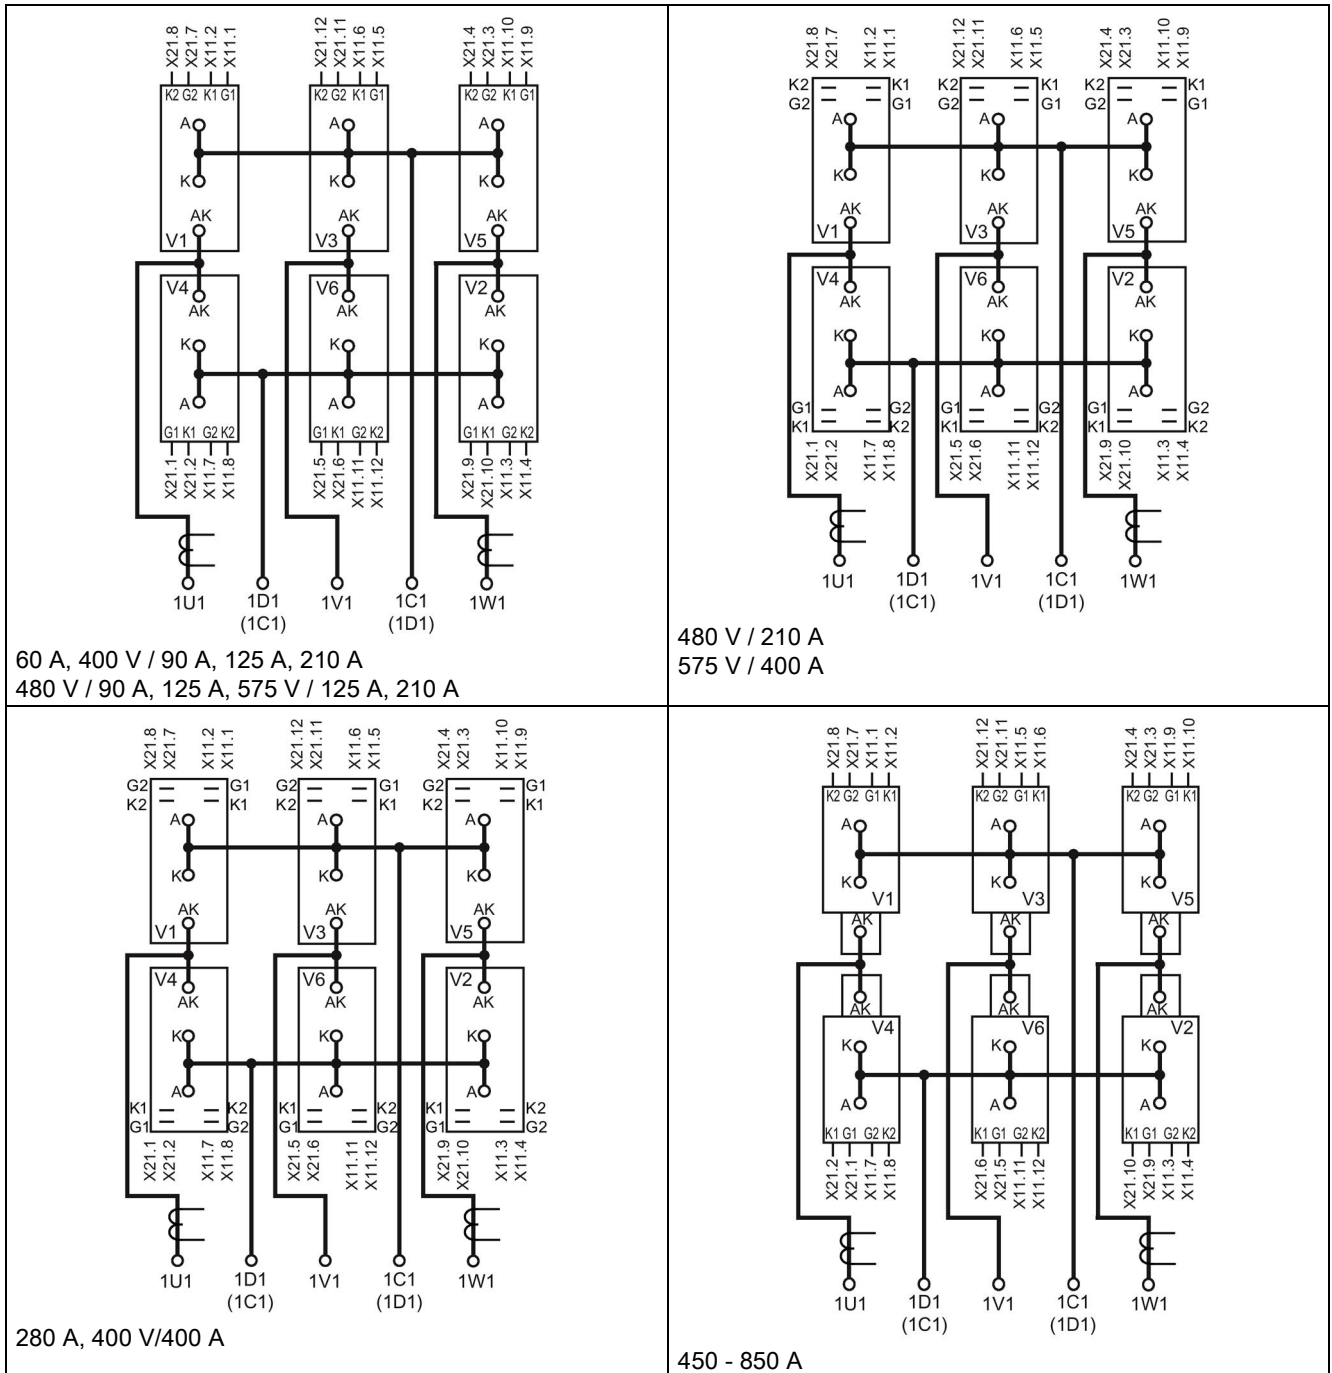

6.4 Power connections

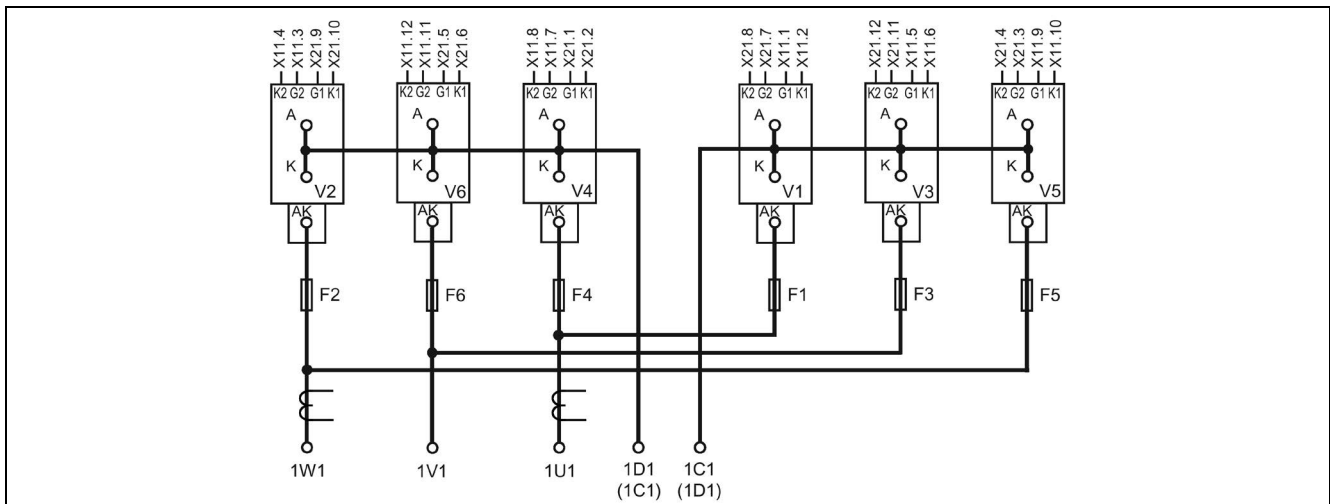

900 A - 1200 A

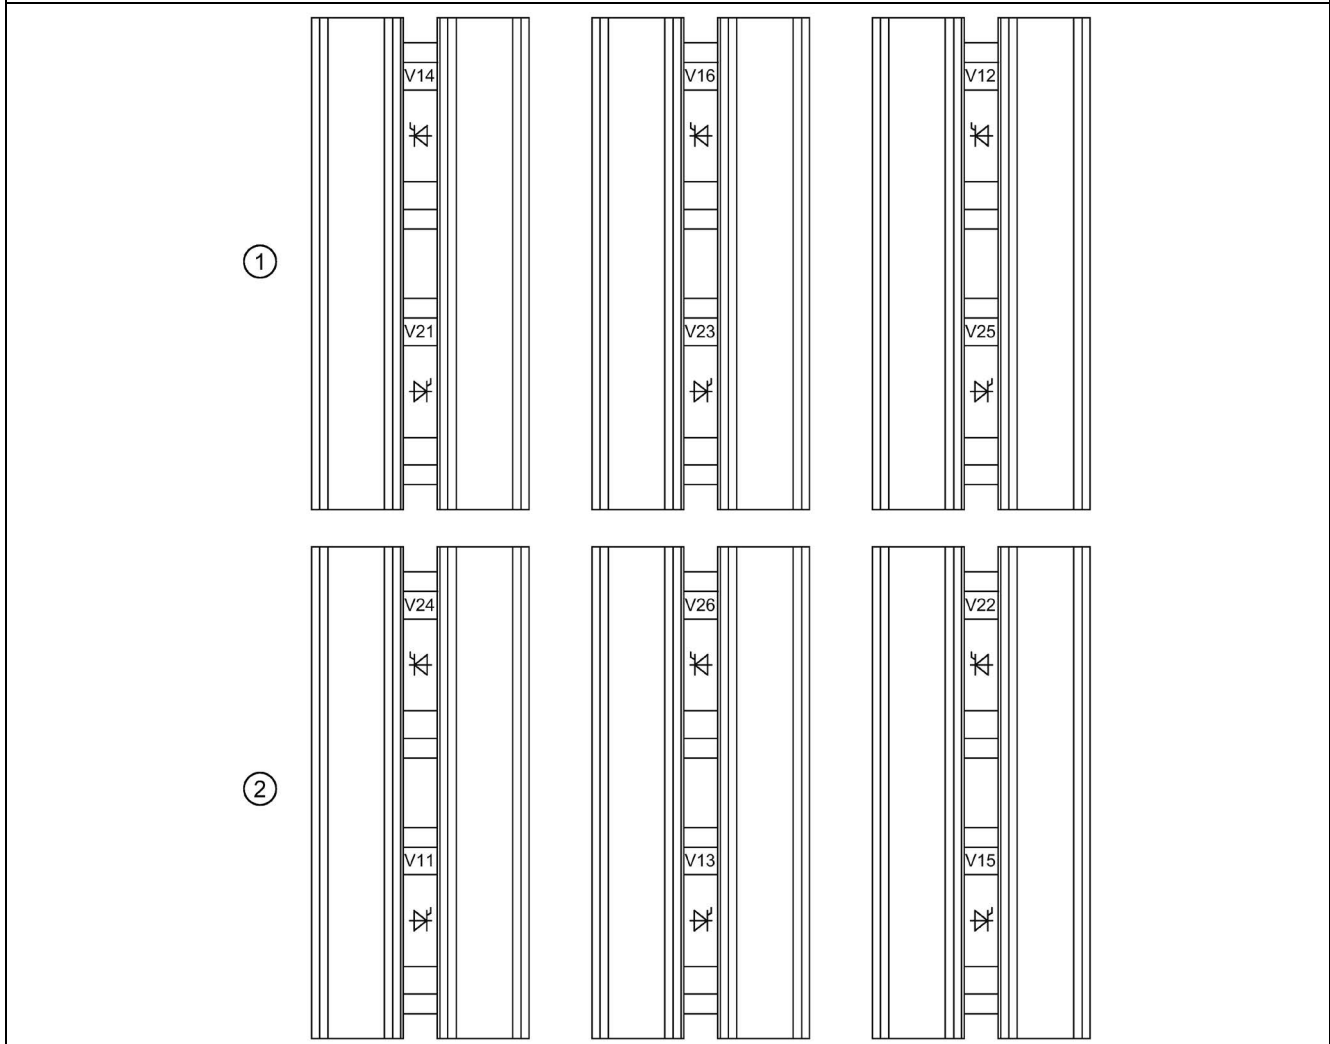

① Rear level ② Front level  
1500 A to 3000 A units



## 6.5 Field supply

### 15 to 30 A devices

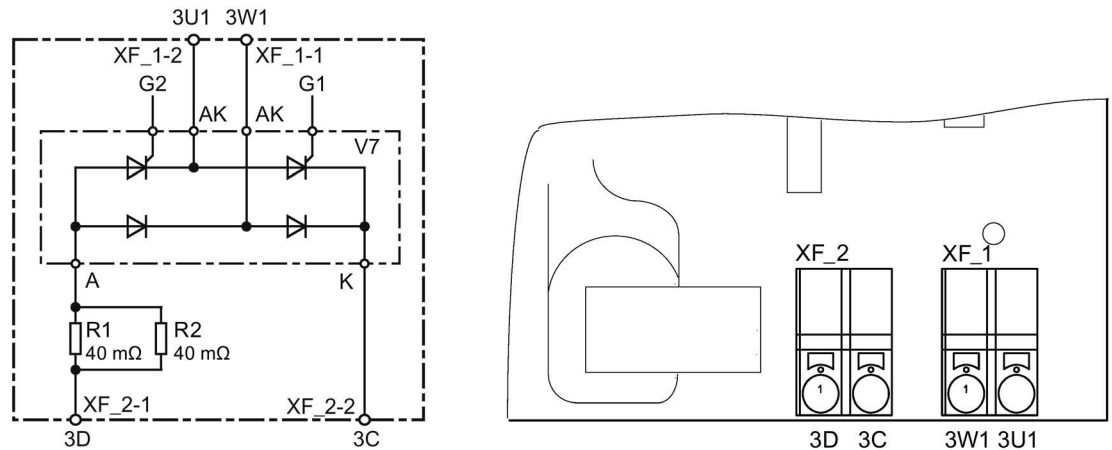


Figure 6-40 15 - 30 A devices, 1Q field

Table 6-2 R1, R2 equipment

Rated armature DC current	Rated field DC current	Module	R1	R2
15 A	3 A	15 A power unit	x	-
30 A	5 A	30 A power unit	x	x

### 60 to 850 A devices

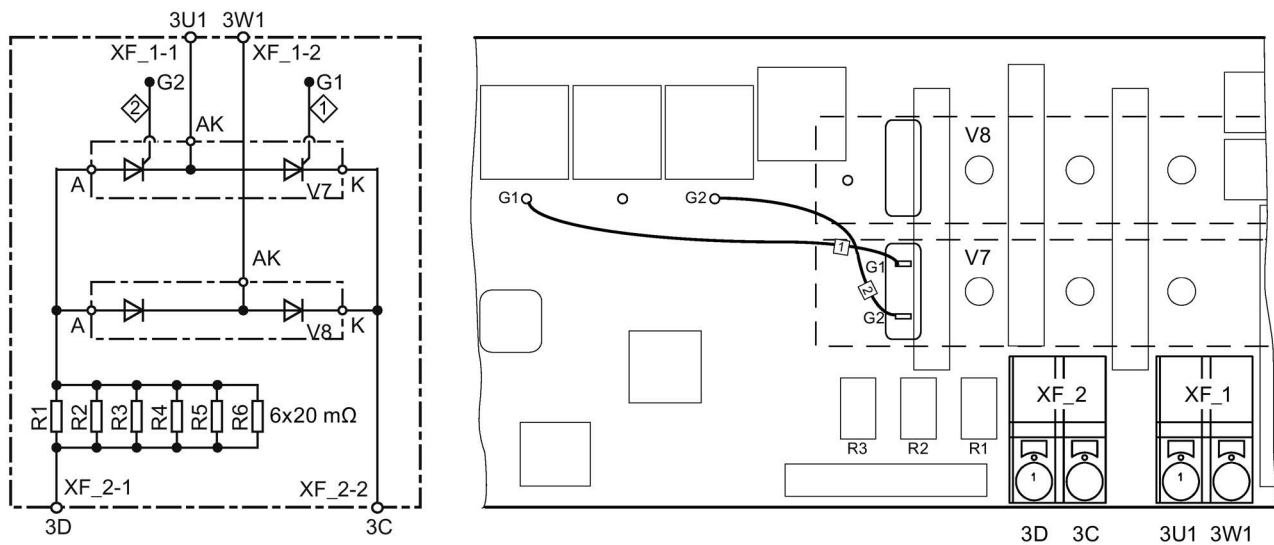


Figure 6-41 60 - 850 A devices, 1Q field module

6.5 Field supply

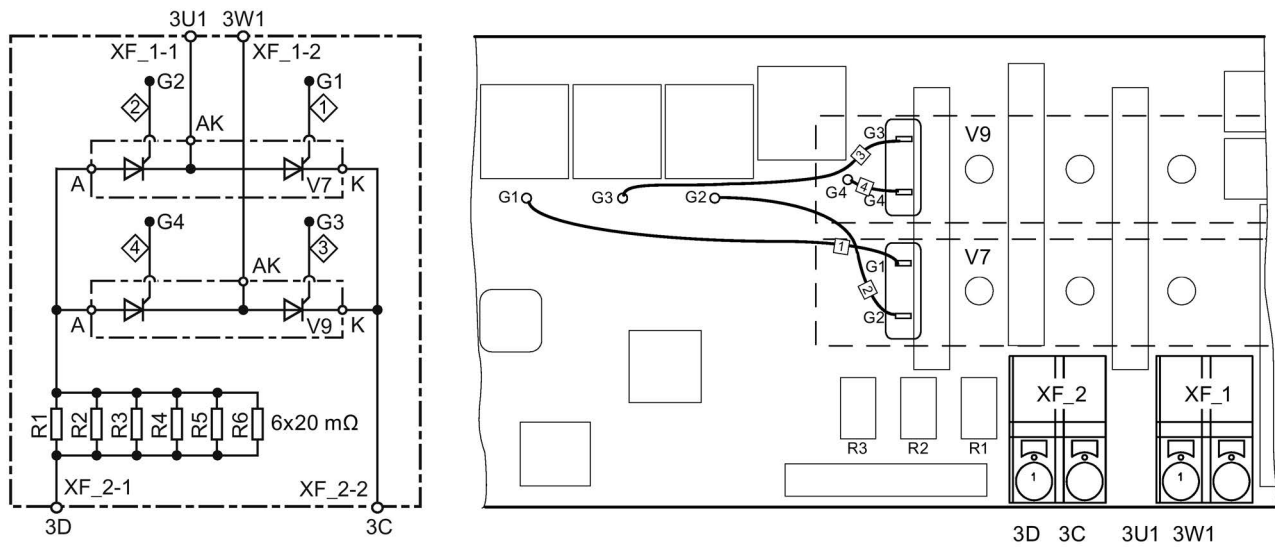



Figure 6-42 60 - 850 A devices, 2Q field module (option)

Gate cables: Betatherm 145 0.5 mm<sup>2</sup>, UL

Table 6-3 R1 to R6 equipment

Rated armature DC current	Rated field DC current	Module	R1	R2	R3	R4	R5	R6
60 A ... 125 A	10 A	10 A field module	x	x	-	-	-	-
210 A ... 280 A	15 A	15 to 30 A field module	x	x	x	x	x	x
400 A ... 600 A	25 A	15 to 30 A field module	x	x	x	x	x	x
720 A ... 850 A	30 A	15 to 30 A field module	x	x	x	x	x	x

900 to 3000 A devices

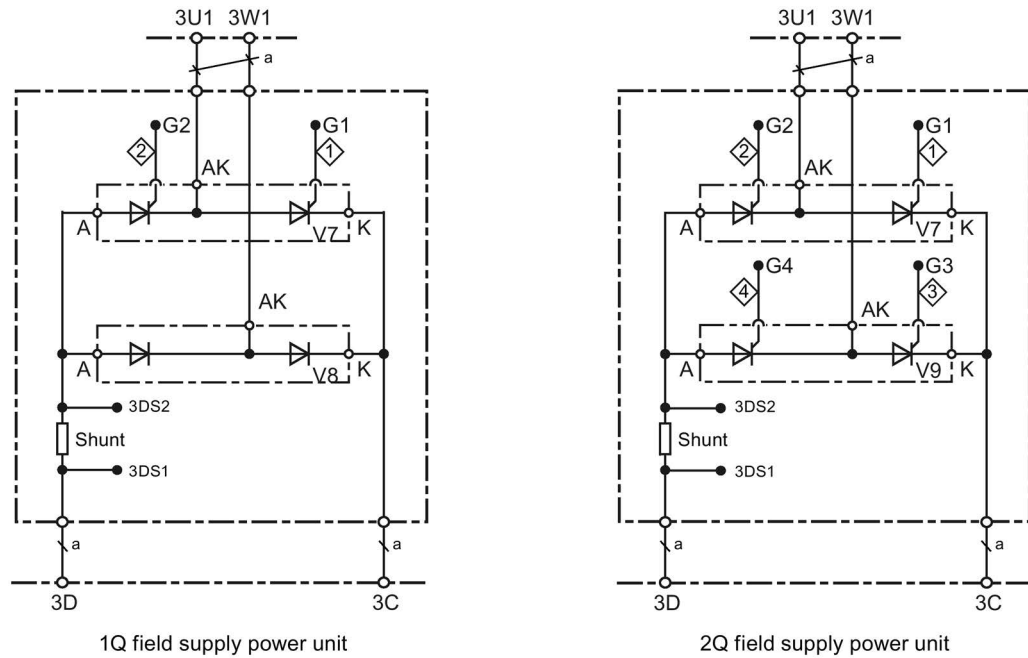

Gate cables: Betatherm 145 0.5 mm<sup>2</sup>, UL

Rated field DC current = 40 A:

Shunt = 2 mΩ; a = Betatherm 145 6 mm<sup>2</sup>, UL

Rated field DC current = 85 A (option):

Shunt = 1 mΩ; a = Betatherm 145 10 mm<sup>2</sup>, UL

Figure 6-43 900 - 3000 A devices, 1Q/2Q field

## 6.6 Line reactors

The line impedance, with line reactors factored in, should be between 4% and 10% of the short-circuit voltage.

Line inductances always need to be provided in the infeed in order to limit voltage dips and ensure that the SINAMICS DCM functions correctly. In the most straightforward situations this can be done by using a 4% line reactor.

The only situations in which a line reactor is not required are when the converter is supplied as the only load by means of a separate transformer winding (converter transformer adapted to the power level).

Where several converters are used on a transformer winding, line reactors must be used upstream of every converter.

### NOTICE

#### Sequence of the wiring

Semiconductor fuses should be installed in the converter system upstream of the reactor. The break times are then achieved by the normally used semiconductor fuses

An incorrect arrangement can destroy a thyristor (short-circuit) and rupture a fuse.

### Line reactor selection list

Table 6-4 3-phase line reactors, rated voltage = 400 V AC, uk = 4%

Article number	Rated current	Inductance	Copper losses	Total losses	SCCR	Weight	Rated insulation voltage
6RX1800-4DK00	13 A AC	2.315 mH	22.8 W	33.1 W	2.0 kA (20 ms)	2.9 kg	600 V
6RX1800-4DK01	25 A AC	1.158 mH	30.8 W	53.2 W	5.0 kA (20 ms)	4.4 kg	600 V
6RX1800-4DK02	51 A AC	0.579 mH	43.5 W	73.2 W	6.5 kA (100 ms)	10.9 kg	600 V
6RX1800-4DK03	76 A AC	0.386 mH	64.4 W	118.5 W	9.0 kA (100 ms)	13.8 kg	600 V
6RX1800-4DK04	106 A AC	0.278 mH	51.3 W	119.3 W	15 kA (100 ms)	23.9 kg	600 V
6RX1800-4DK05	174 A AC	0.169 mH	164.8 W	206.4 W	15 kA (100 ms)	24.0 kg	600 V
6RX1800-4DK06	232 A AC	0.127 mH	197.4 W	256.2 W	20 kA (100 ms)	26.8 kg	600 V
6RX1800-4DK07	332 A AC	0.089 mH	190.7 W	251.1 W	24 kA (200 ms)	45.8 kg	600 V
6RX1800-4DK08	374 A AC	0.079 mH	186.7 W	251.7 W	24 kA (200 ms)	56.8 kg	600 V
6RX1800-4DK10	498 A AC	0.059 mH	277.0 W	357.4 W	35 kA (200 ms)	60.0 kg	600 V
6RX1800-4DK11	706 A AC	0.042 mH	329.4 W	424.8 W	55 kA (200 ms)	81.6 kg	1000 V
6RX1800-4DK12	996 A AC	0.030 mH	390.3 W	562.8 W	75 kA (200 ms)	100.1 kg	1000 V
6RX1800-4DK13	1328 A AC	0.022 mH	339.3 W	554.5 W	75 kA (200 ms)	138.8 kg	1000 V
6RX1800-4DK14	1660 A AC	0.018 mH	369.3 W	591.9 W	75 kA (200 ms)	210.7 kg	1000 V
6RX1800-4DK15	2490 A AC	0.012 mH	587.3 W	1038.3 W	75 kA (200 ms)	205.6 kg	1000 V

Table 6- 5 3-phase line reactors, rated voltage = 480 V AC, uk = 4%

Article number	Rated current	Inductance	Copper losses	Total losses	SCCR	Weight	Rated insulation voltage
6RX1800-4FK00	13 A AC	2.779 mH	27.4 W	39.2 W	2.0 kA (20 ms)	2.9 kg	600 V
6RX1800-4FK01	25 A AC	1.389 mH	34.8 W	57.8 W	5.0 kA (20 ms)	6.0 kg	600 V
6RX1800-4FK02	51 A AC	0.695 mH	42.3 W	77.2 W	6.5 kA (100 ms)	11.8 kg	600 V
6RX1800-4FK03	76 A AC	0.463 mH	56.3 W	118.0 W	9.0 kA (100 ms)	16.3 kg	600 V
6RX1800-4FK04	106 A AC	0.333 mH	68.8 W	152.9 W	15 kA (100 ms)	22.3 kg	600 V
6RX1800-4FK05	174 A AC	0.202 mH	204.6 W	255.6 W	15 kA (100 ms)	26.0 kg	600 V
6RX1800-4FK06	232 A AC	0.152 mH	178.3 W	231.4 W	20 kA (100 ms)	37.8 kg	600 V
6RX1800-4FK07	332 A AC	0.106 mH	193.7 W	261.5 W	24 kA (100 ms)	56.1 kg	600 V
6RX1800-4FK08	374 A AC	0.094 mH	189.1 W	279.2 W	24 kA (100 ms)	56.8 kg	600 V
6RX1800-4FK10	498 A AC	0.071 mH	313.8 W	396.9 W	35 kA (200 ms)	78.1 kg	1000 V
6RX1800-4FK11	664 A AC	0.053 mH	255.6 W	360.8 W	75 kA (200 ms)	96.6 kg	1000 V
6RX1800-4FK12	706 A AC	0.050 mH	293.9 W	404.1 W	75 kA (200 ms)	96.6 kg	1000 V
6RX1800-4FK13	913 A AC	0.039 mH	375.6 W	558.6 W	75 kA (200 ms)	114.5 kg	1000 V
6RX1800-4FK14	996 A AC	0.035 mH	332.7 W	532.8 W	75 kA (200 ms)	127.8 kg	1000 V
6RX1800-4FK15	1328 A AC	0.027 mH	320.4 W	573.7 W	75 kA (200 ms)	177.6 kg	1000 V
6RX1800-4FK16	1660 A AC	0.021 mH	436.5 W	819.0 W	75 kA (200 ms)	161.0 kg	1000 V
6RX1800-4FK17	1326 A AC	0.019 mH	464.7 W	819.9 W	75 kA (200 ms)	164.2 kg	1000 V
6RX1800-4FK18	2324 A AC	0.015 mH	671.8 W	1056.7 W	75 kA (200 ms)	258.2 kg	1000 V

Table 6- 6 3-phase line reactors, rated voltage = 575 V AC, uk = 4%

Article number	Rated current	Inductance	Copper losses	Total losses	SCCR	Weight	Rated insulation voltage
6RX1800-4GK00	51 A AC	0.832 mH	56.8 W	109.7 W	6.5 kA (100 ms)	13.6 kg	600 V
6RX1800-4GK01	106 A AC	0.399 mH	65.6 W	156.7 W	15 kA (100 ms)	26.4 kg	600 V
6RX1800-4GK02	174 A AC	0.243 mH	150.0 W	200.5 W	15 kA (100 ms)	34.5 kg	600 V
6RX1800-4GK03	332 A AC	0.127 mH	252.1 W	327.3 W	24 kA (200 ms)	63.1 kg	600 V
6RX1800-4GK04	498 A AC	0.085 mH	330.3 W	427.5 W	35 kA (200 ms)	86.0 kg	1000 V
6RX1800-4GK05	598 A AC	0.071 mH	339.6 W	455.5 W	55 kA (200 ms)	89.8 kg	1000 V
6RX1800-4GK06	631 A AC	0.067 mH	322.8 W	441.1 W	55 kA (200 ms)	95.7 kg	1000 V
6RX1800-4GK07	664 A AC	0.064 mH	380.7 W	547.2 W	75 kA (200 ms)	108.4 kg	1000 V
6RX1800-4GK08	706 A AC	0.060 mH	392.7 W	564.5 W	75 kA (200 ms)	120.6 kg	1000 V
6RX1800-4GK10	830 A AC	0.051 mH	308.1 W	498.3 W	75 kA (200 ms)	134.8 kg	1000 V
6RX1800-4GK11	913 A AC	0.046 mH	320.7 W	515.9 W	75 kA (200 ms)	143.9 kg	1000 V
6RX1800-4GK12	1245 A AC	0.034 mH	371.4 W	605.4 W	75 kA (200 ms)	206.1 kg	1000 V
6RX1800-4GK13	1328 A AC	0.032 mH	503.1 W	812.4 W	75 kA (200 ms)	160.9 kg	1000 V
6RX1800-4GK14	1660 A AC	0.025 mH	631.3 W	993.1 W	75 kA (200 ms)	202.0 kg	1000 V
6RX1800-4GK15	1826 A AC	0.023 mH	614.7 W	1006.9 W	75 kA (200 ms)	212.1 kg	1000 V
6RX1800-4GK16	2158 A AC	0.020 mH	534.6 W	1073.7 W	75 kA (200 ms)	303.0 kg	1000 V
6RX1800-4GK17	2324 A AC	0.018 mH	556.2 W	1110.0 W	75 kA (200 ms)	321.6 kg	1000 V

6.6 Line reactors

Table 6- 7 3-phase line reactors, rated voltage = 690 V AC, uk = 4%

Article number	Rated current	Inductance	Copper losses	Total losses	SCCR	Weight	Rated insulation voltage
6RX1800-4KK00	598 A AC	0.085 mH	388.2 W	562.1 W	55 kA (200 ms)	108.9 kg	1000 V
6RX1800-4KK01	631 A AC	0.080 mH	402.0 W	586.4 W	75 kA (200 ms)	113.3 kg	1000 V
6RX1800-4KK02	789 A AC	0.064 mH	362.7 W	564.6 W	75 kA (200 ms)	141.9 kg	1000 V
6RX1800-4KK03	830 A AC	0.061 mH	350.7 W	561.4 W	75 kA (200 ms)	153.4 kg	1000 V
6RX1800-4KK04	1245 A AC	0.041 mH	505.2 W	845.7 W	75 kA (200 ms)	169.7 kg	1000 V
6RX1800-4KK05	1577 A AC	0.032 mH	716.8 W	1093.8 W	75 kA (200 ms)	226.1 kg	1000 V
6RX1800-4KK06	1660 A AC	0.031 mH	596.0 W	1011.8 W	75 kA (200 ms)	257.2 kg	1000 V
6RX1800-4KK07	2158 A AC	0.024 mH	484.8 W	1185.6 W	75 kA (200 ms)	360.2 kg	1000 V

Table 6- 8 3-phase line reactors, rated voltage = 830/950 V AC, uk = 4%

Article number	Rated current	Inductance	Copper losses	Total losses	SCCR	Weight	Rated insulation voltage
830 V:							
6RX1800-4LK00	789 A AC	0.077 mH	312.0 W	532.1 W	75 kA (200 ms)	205.2 kg	1000 V
6RX1800-4LK01	1245 A AC	0.049 mH	692.4 W	1061.9 W	75 kA (200 ms)	222.4 kg	1000 V
6RX1800-4LK02	1577 A AC	0.039 mH	479.4 W	1059.6 W	75 kA (200 ms)	308.5 kg	1000 V
6RX1800-4LK03	1826 A AC	0.033 mH	585.6 W	1269.0 W	75 kA (200 ms)	372.5 kg	1000 V
950 V:							
6RX1800-4MK00	1826 A AC	0.038 mH	534.9 W	1303.5 W	75 kA (200 ms)	399.7 kg	1000 V

Table 6- 9 1-phase line reactors, rated voltage = 400 V AC, uk = 4%

Article number	Rated current	Inductance	Weight	Rated insulation voltage
6RX1800-4DE00	3 A AC	16.977 mH	0.7 kg	600 V
6RX1800-4DE01	5 A AC	10.186 mH	1.5 kg	600 V
6RX1800-4DE02	10 A AC	5.093 mH	2.0 kg	600 V
6RX1800-4DE03	15 A AC	3.395 mH	2.3 kg	600 V
6RX1800-4DE04	25 A AC	2.037 mH	3.0 kg	600 V
6RX1800-4DE05	30 A AC	1.698 mH	3.8 kg	600 V
6RX1800-4DE06	40 A AC	1.273 mH	5.2 kg	600 V
6RX1800-4DE07	85 A AC	0.599 mH	9.6 kg	600 V

**Connections:**

- 3-phase reactors with rated current ≤85 A: Terminal blocks
- 3-phase reactors with rated current >85 A: Connecting lugs
- 1-phase reactors with rated current ≤30 A: Terminal blocks
- 1-phase reactors with rated current >30 A: Connecting lugs

**Note**

3-phase line reactors with  $u_k = 2\%$  can be supplied on request.

The line reactors are suitable for 50 Hz and 60 Hz operation. In 60 Hz operation, the next highest voltage class should be selected.

e.g. 480 V at 50 Hz, 575 V at 60 Hz.

For SCCR specifications (time specifications 20 ms): These break times are achieved with the recommended semiconductor fuses

**Standards, approvals**

REACH, ROHS, CE, cULus

## 6.7 Fuses

For technical data, project engineering data, and dimension drawings for Siemens fuses, please refer to Chapter 4 of the BETA Catalog.

In order to ensure UL-compliant protection of units, it is essential that you use UL-listed or UL-recognized fuses.

### 6.7.1 Fuses for the field circuit

Table 6- 10 Recommended fuses for the field circuit

Rated DC current for converter	Max. field current	Siemens fuse		Siemens fuse for DCM packages		Bussmann fuse FWP 700V RU	
		Article number	A	Article number	A	Order number	A
15	3	5SD420	16	3NC1410	10	FWP-5B	5
30	5	5SD420	16	3NC1410	10	FWP-5B	5
60 - 125	10	5SD420	16	3NC1415	15	FWP-15B	15
210 - 280	15	5SD440	25	3NC1420	20	FWP-20B	20
400 - 600	25	5SD440	25	3NC1430	30	FWP-30B	30
710 - 850	30	5SD480	30	3NC1432	32	FWP-35B	35
900 - 3000	40	3NE1802-0 <sup>1)</sup>	40			FWP-50B	50
1500 ... 3000 with option L85	85	3NE8021-1 <sup>1)</sup>	100			FWP-100B	100

It is not permissible to use different fuse types together.

<sup>1)</sup> UL-recognized

## 6.7.2 Fuses for the armature circuit

2Q devices: 400 V, 575 V, 690 V, 830 V and 950 V

Table 6- 11 Phase fuses

Device		3 x phase fuses Siemens $\text{RU}$		3x phase fuses Siemens $\text{RU}$ for DCM packages	
Article number	I/U [A/V]	Article number	I/U [A/V]	Article number	I/U [A/V]
6RA8025-6DS22-0AA0	60 / 400	3NE1817-0	50 / 690	3NE1817-0	50 / 690
6RA8025-6GS22-0AA0	60 / 575	3NE1817-0	50 / 690	3NE1817-0	50 / 690
6RA8028-6DS22-0AA0	90 / 400	3NE1820-0	80 / 690	3NE1820-0	80 / 690
6RA8031-6DS22-0AA0	125 / 400	3NE1021-0	100 / 690	3NE1021-0	100 / 690
6RA8031-6GS22-0AA0	125 / 575	3NE1021-0	100 / 690	3NE1021-0	100 / 690
6RA8075-6DS22-0AA0	210 / 400	3NE3227	250 / 1000	3NE3227	250 / 1000
6RA8075-6GS22-0AA0	210 / 575	3NE3227	250 / 1000	3NE3227	250 / 1000
6RA8078-6DS22-0AA0	280 / 400	3NE3231	350 / 1000	3NE3231	350 / 1000
6RA8081-6DS22-0AA0	400 / 400	3NE3233	450 / 1000	3NE3333	450 / 1000
6RA8081-6GS22-0AA0	400 / 575	3NE3233	450 / 1000	3NE3333	450 / 1000
6RA8085-6DS22-0AA0	600 / 400	3NE3336	630 / 1000	3NE3336	630 / 1000
6RA8085-6GS22-0AA0	600 / 575	3NE3336	630 / 1000	3NE3336	630 / 1000
6RA8087-6DS22-0AA0	850 / 400	3NE3338-8	800 / 800	3NE3338-8	800 / 800
6RA8087-6GS22-0AA0	800 / 575	3NE3338-8	800 / 800	3NE3338-8	800 / 800
6RA8086-6KS22-0AA0	720 / 690	3NE3337-8	710 / 900	3NE3337-8	710 / 900

It is not permissible to use different fuse types together.

Table 6- 12 Arm fuses

Device		Siemens $\text{RU}$ arm fuses			
Article number	I/U [A/V]	Qty	Article number	I/U [A/V]	
6RA8091-6DS22-0AA0	1200 / 400	6	3NE3338-8	800 / 800	
6RA8090-6GS22-0AA0	1100 / 575	6	3NE3338-8	800 / 800	
6RA8090-6KS22-0AA0	1000 / 690	6	3NE3337-8	710 / 900	
6RA8088-6LS22-0AA0	950 / 830	6	3NE3337-8	710 / 900	
6RA8093-4DS22-0AA0	1600 / 400	6	6RY1702-0BA02	1000 / 660	
6RA8093-4GS22-0AA0	1600 / 575	6	6RY1702-0BA02	1000 / 660	
6RA8093-4KS22-0AA0	1500 / 690	6	6RY1702-0BA03	1000 / 1000	
6RA8093-4LS22-0AA0	1500 / 830	6	6RY1702-0BA03	1000 / 1000	
6RA8095-4DS22-0AA0	2000 / 400	6	6RY1702-0BA01	1250 / 660	
6RA8095-4GS22-0AA0	2000 / 575	6	6RY1702-0BA01	1250 / 660	
6RA8095-4KS22-0AA0	2000 / 690	12	6RY1702-0BA04	630 / 1000	
6RA8095-4LS22-0AA0	1900 / 830	12	6RY1702-0BA04	630 / 1000	
6RA8096-4GS22-0AA0	2200 / 575	6	6RY1702-0BA05	1500 / 660	



Device		Siemens RU arm fuses			
Article number	I/U [A/V]	Qty	Article number	I/U [A/V]	
6RA8096-4MS22-0AA0	2200 / 950	12	3NC3438-6	800 / 1100	
6RA8097-4KS22-0AA0	2600 / 690	12	3NC3341-6	1000 / 1000	
6RA8097-4GS22-0AA0	2800 / 575	12	3NC3341-6	1000 / 1000	
6RA8098-4DS22-0AA0	3000 / 400	12	3NC3341-6	1000 / 1000	

The arm fuses are included in the device. No external semiconductor fuses are required.  
It is not permissible to use different fuse types together.

## 2Q devices: 480 V

Table 6- 13 Phase fuses

Device		3 x phase fuses Siemens RU		3x phase fuses Siemens RU for DCM packages		3 x phase fuses Bussmann RU		3 x phase fuses Bussmann RU	
Article number	I/U [A/V]	Article number	I/U [A/V]	Article number	I/U [A/V]	Order No.	I/U [A/V]	Order No.	I/U [A/V]
6RA8025-6FS22-0AA0	60 / 480	3NE1817-0	50 / 690	3NE1817-0	50 / 690	170M1565	63 / 660	FWH-60B	60 / 500
6RA8028-6FS22-0AA0	90 / 480	3NE1820-0	80 / 690	3NE1820-0	80 / 690	170M1567	100 / 660	FWH-100B	100 / 500
6RA8031-6FS22-0AA0	125 / 480	3NE1021-0	100 / 690	3NE1021-0	100 / 690	170M1568	125 / 660	FWH-125B	125 / 500
6RA8075-6FS22-0AA0	210 / 480	3NE3227	250 / 1000	3NE3227	250 / 1000	170M3166	250 / 660	FWH-225A	225 / 500
6RA8078-6FS22-0AA0	280 / 480	3NE3231	350 / 1000	3NE3231	350 / 1000	170M3167	315 / 660	FWH-275A	275 / 500
6RA8082-6FS22-0AA0	450 / 480	3NE3233	450 / 1000	3NE3333	450 / 1000	170M3170	450 / 660	FWH-450A	450 / 500
6RA8085-6FS22-0AA0	600 / 480	3NE3336	630 / 1000	3NE3336	630 / 1000	170M4167	700 / 660	FWH-600A	600 / 500
6RA8087-6FS22-0AA0	850 / 480	3NE3338-8	800 / 800	3NE3338-8	800 / 800	170M5165	900 / 660	FWH-800A	800 / 500

FWH... and FWP... fuses are mechanically incompatible with 3NE... and 170M... fuses.  
It is not permissible to use different fuse types together.

Table 6- 14 Arm fuses

Device		Siemens RU arm fuses		
Article number	I/U [A/V]	Qty	Article number	I/U [A/V]
6RA8091-6FS22-0AA0	1200 / 480	6	3NE3338-8	800 / 800

The arm fuses are included in the device. No external semiconductor fuses are required.  
It is not permissible to use different fuse types together.

**4Q devices: 400 V, 575 V, 690 V, 830 V and 950 V**

Table 6- 15 Phase fuses, DC fuse

Device		3 x phase fuses Siemens RÜ		3x phase fuses Siemens RÜ for DCM packages		1 x DC fuse Siemens RÜ	
Article number	I/U [A/V]	Article number	I/U [A/V]	Article number	I/U [A/V]	Article number	I/U [A/V]
6RA8013-6DV62-0AA0	15 / 400	3NE1814-0	20 / 690	3NE1814-0	20 / 690	3NE1814-0	20 / 690
6RA8018-6DV62-0AA0	30 / 400	3NE8003-1	35 / 690	3NE8003-1	35 / 690	3NE4102	40 / 1000
6RA8025-6DV62-0AA0	60 / 400	3NE1817-0	50 / 690	3NE1817-0	50 / 690	3NE4120	80 / 1000
6RA8025-6GV62-0AA0	60 / 575	3NE1817-0	50 / 690	3NE1817-0	50 / 690	3NE4120	80 / 1000
6RA8028-6DV62-0AA0	90 / 400	3NE1820-0	80 / 690	3NE1820-0	80 / 690	3NE4122	125 / 1000
6RA8031-6DV62-0AA0	125 / 400	3NE1021-0	100 / 690	3NE1021-0	100 / 690	3NE4124	160 / 1000
6RA8031-6GV62-0AA0	125 / 575	3NE1021-0	100 / 690	3NE1021-0	100 / 690	3NE4124	160 / 1000
6RA8075-6DV62-0AA0	210 / 400	3NE3227	250 / 1000	3NE3227	250 / 1000	3NE3227	250 / 1000
6RA8075-6GV62-0AA0	210 / 575	3NE3227	250 / 1000	3NE3227	250 / 1000	3NE3227	250 / 1000
6RA8078-6DV62-0AA0	280 / 400	3NE3231	350 / 1000	3NE3231	350 / 1000	3NE3231	350 / 1000
6RA8081-6DV62-0AA0	400 / 400	3NE3233	450 / 1000	3NE3333	450 / 1000	3NE3233	450 / 1000
6RA8081-6GV62-0AA0	400 / 575	3NE3233	450 / 1000	3NE3333	450 / 1000	3NE3233	450 / 1000
6RA8085-6DV62-0AA0	600 / 400	3NE3336	630 / 1000	3NE3336	630 / 1000	3NE3336	630 / 1000
6RA8085-6GV62-0AA0	600 / 575	3NE3336	630 / 1000	3NE3336	630 / 1000	3NE3336	630 / 1000
6RA8087-6DV62-0AA0	850 / 400	3NE3338-8	800 / 800	3NE3338-8	800 / 800	3NE3334-0B <sup>1)</sup>	500 / 1000
6RA8087-6GV62-0AA0	850 / 575	3NE3338-8	800 / 800	3NE3338-8	800 / 800	3NE3334-0B <sup>1)</sup>	500 / 1000
6RA8086-6KV62-0AA0	760 / 690	3NE3337-8	710 / 900	3NE3337-8	710 / 900	3NE3334-0B <sup>1)</sup>	500 / 1000

It is not permissible to use different fuse types together.

<sup>1)</sup> Two fuses connected in parallel

Table 6- 16 Arm fuses

Device		Siemens RU arm fuses			
Article number	I/U [A/V]	Qty	Article number	I/U [A/V]	
6RA8091-6DV62-0AA0	1200 / 400	6	3NE3338-8	800 / 800	
6RA8090-6GV62-0AA0	1100 / 575	6	3NE3338-8	800 / 800	
6RA8090-6KV62-0AA0	1000 / 690	6	3NE3337-8	710 / 900	
6RA8088-6LV62-0AA0	950 / 830	6	3NE3337-8	710 / 900	
6RA8093-4DV62-0AA0	1600 / 400	6	6RY1702-0BA02	1000 / 660	
6RA8093-4GV62-0AA0	1600 / 575	6	6RY1702-0BA02	1000 / 660	
6RA8093-4KV62-0AA0	1500 / 690	6	6RY1702-0BA03	1000 / 1000	
6RA8093-4LV62-0AA0	1500 / 830	6	6RY1702-0BA03	1000 / 1000	
6RA8095-4DV62-0AA0	2000 / 400	6	6RY1702-0BA01	1250 / 660	
6RA8095-4GV62-0AA0	2000 / 575	6	6RY1702-0BA01	1250 / 660	
6RA8095-4KV62-0AA0	2000 / 690	12	6RY1702-0BA04	630 / 1000	
6RA8095-4LV62-0AA0	1900 / 830	12	6RY1702-0BA04	630 / 1000	
6RA8096-4GV62-0AA0	2200 / 575	6	6RY1702-0BA05	1500 / 660	
6RA8096-4MV62-0AA0	2200 / 950	12	3NC3438-6	800 / 1100	
6RA8097-4KV62-0AA0	2600 / 690	12	3NC3341-6	1000 / 1000	
6RA8097-4GV62-0AA0	2800 / 575	12	3NC3341-6	1000 / 1000	
6RA8098-4DV62-0AA0	3000 / 400	12	3NC3341-6	1000 / 1000	

The arm fuses are included in the device. No external semiconductor fuses are required.  
It is not permissible to use different fuse types together.

#### 4Q devices: 480 V

Table 6- 17 Phase fuses

Device		3 x phase fuses Siemens RU		3x phase fuses Siemens RU for DCM packages		3 x phase fuses Bussmann RU		3 x phase fuses Bussmann RU	
Article number	I/U [A/V]	Article number	I/U [A/V]	Article number	I/U [A/V]	Order No.	I/U [A/V]	Order No.	I/U [A/V]
6RA8013-6FV62-0AA0	15 / 480	3NE1814-0	20 / 690	3NE1814-0	20 / 690	170M1562	32 / 660	FWH-35B	35 / 500
6RA8018-6FV62-0AA0	30 / 480	3NE1815-0	25 / 690	3NE1815-0	25 / 690	170M1562	32 / 660	FWH-35B	35 / 500
6RA8025-6FV62-0AA0	60 / 480	3NE1817-0	50 / 690	3NE1817-0	50 / 690	170M1565	63 / 660	FWH-60B	60 / 500
6RA8028-6FV62-0AA0	90 / 480	3NE1820-0	80 / 690	3NE1820-0	80 / 690	170M1567	100 / 660	FWH-100B	100 / 500
6RA8031-6FV62-0AA0	125 / 480	3NE1021-0	100 / 690	3NE1021-0	100 / 690	170M1568	125 / 660	FWH-125B	125 / 500
6RA8075-6FV62-0AA0	210 / 480	3NE3227	250 / 1000	3NE3227	250 / 1000	170M3166	250 / 660	FWH-225A	225 / 500

6.7 Fuses

Device		3 x phase fuses Siemens RU		3x phase fuses Siemens RU for DCM packages		3 x phase fuses Bussmann RU		3 x phase fuses Bussmann RU	
Article number	I/U [A/V]	Article number	I/U [A/V]	Article number	I/U [A/V]	Order No.	I/U [A/V]	Order No.	I/U [A/V]
6RA8078-6FV62-0AA0	280 / 480	3NE3231	350 / 1000	3NE3231	350 / 1000	170M3167	315 / 660	FWH-275A	275 / 500
6RA8082-6FV62-0AA0	450 / 480	3NE3233	450 / 1000	3NE3333	450 / 1000	170M3170	450 / 660	FWH-450A	450 / 500
6RA8085-6FV62-0AA0	600 / 480	3NE3336	630 / 1000	3NE3336	630 / 1000	170M4167	700 / 660	FWH-600A	600 / 500
6RA8087-6FV62-0AA0	850 / 480	3NE3338-8	800 / 800	3NE3338-8	800 / 800	170M5165	900 / 660	FWH-800A	800 / 500

It is not permissible to use different fuse types together.

Table 6- 18 DC fuse

Device		1 x DC fuse Siemens RU		1 x DC fuse Bussmann RU	
Article number	I/U [A/V]	Article number	I/U [A/V]	Order No.	I/U [A/V]
6RA8013-6FV62-0AA0	15 / 480	3NE1814-0	20 / 690	FWP-35B	35 / 660
6RA8018-6FV62-0AA0	30 / 480	3NE4102	40 / 1000	FWP-35B	35 / 660
6RA8025-6FV62-0AA0	60 / 480	3NE4120	80 / 1000	FWP-70B	70 / 660
6RA8028-6FV62-0AA0	90 / 480	3NE4122	125 / 1000	FWP-125A	125 / 660
6RA8031-6FV62-0AA0	125 / 480	3NE4124	160 / 1000	FWP-150A	150 / 660
6RA8075-6FV62-0AA0	210 / 480	3NE3227	250 / 1000	FWP-250A	250 / 660
6RA8078-6FV62-0AA0	280 / 480	3NE3231	350 / 1000	FWP-350A	350 / 660
6RA8082-6FV62-0AA0	450 / 480	3NE3334-0B	500 / 1000	FWP-500A	500 / 660
6RA8085-6FV62-0AA0	600 / 480	3NE3336	630 / 1000	FWP-700A	700 / 660
6RA8087-6FV62-0AA0	850 / 480	3NE3334-0B <sup>1)</sup>	500 / 1000	FWP-1000A	1000 / 660

<sup>1)</sup> Two fuses connected in parallel  
FWH-... and FWP-... fuses are mechanically incompatible with 3NE... and 170M... fuses.  
It is not permissible to use different fuse types together.

Table 6- 19 Arm fuses

Device		Siemens RU arm fuses		
Article number	I/U [A/V]	Qty	Article number	I/U [A/V]
6RA8091-6FV62-0AA0	1200 / 480	6	3NE3338-8	800 / 800

The arm fuses are included in the device. No external semiconductor fuses are required.  
It is not permissible to use different fuse types together.

### 6.7.3 Fuses in the Power Interface

Only UL-listed or UL-recognized fuses may be used in UL-listed devices.

Table 6- 20 Power interface with AC electronic power supply: F200 and F201 fuses

Manufacturer	Type	Data	Dimensions	Order designation	UL
Littlefuse	239	1 A / 250 V, time-lag	5 x 20 mm	239 001, MXP	✓
Schurter	FST	1 A / 250 V, time-lag	5 x 20 mm	0034.3117	✓

#### With option L05

(Devices with "Power interface with DC electronic power supply", F200 fuse):

T 6.3 A / 250 V 5×20 mm (Slow-Acting Fuse)

e.g. Wickmann 193, Littlefuse 217P Series

## 6.8 Arrangement of terminals and connectors

### Module – Control Unit (CUD)

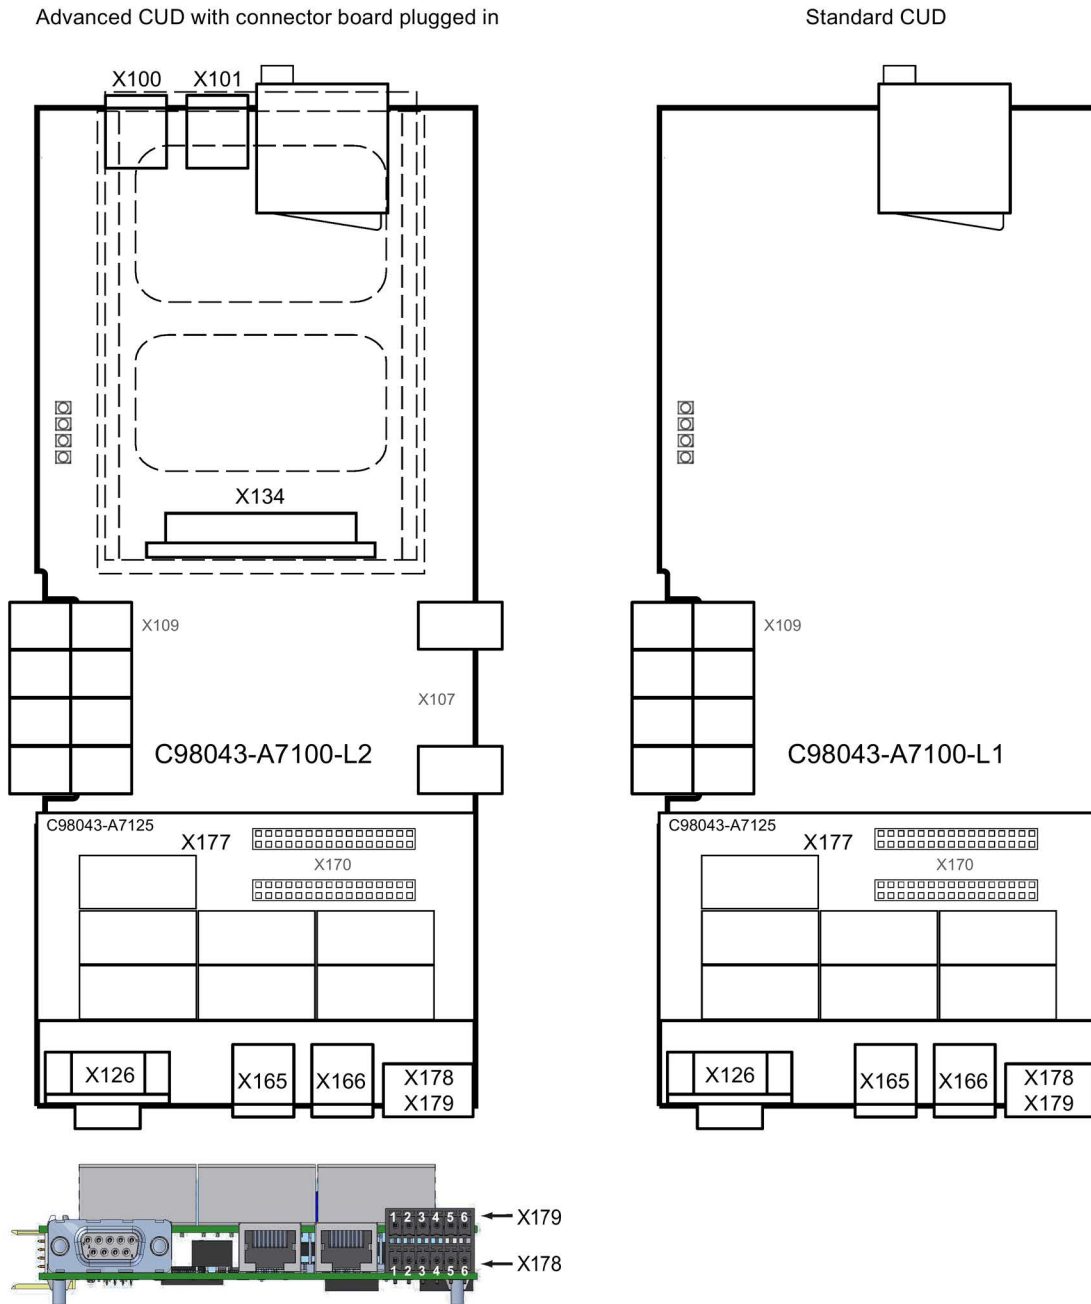


Figure 6-44 Terminal/connector arrangement on the "Control Unit (CUD)"

## Module – Allocation Board

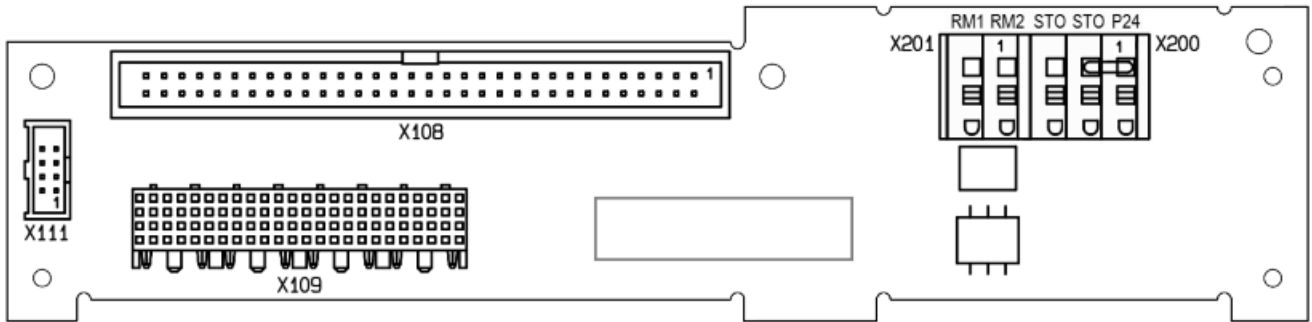


Figure 6-45 Terminal/connector assignment on the "Allocation Board"

---

### Note

#### Jumper STO to P24 for Functional Safety

The jumper STO to P24 must be removed for use of the safety function and the wiring performed according to one of the applications in Chapter "Functional safety (Page 709)" with a safety relay.

---

Module – Control Unit (CUD), option G63

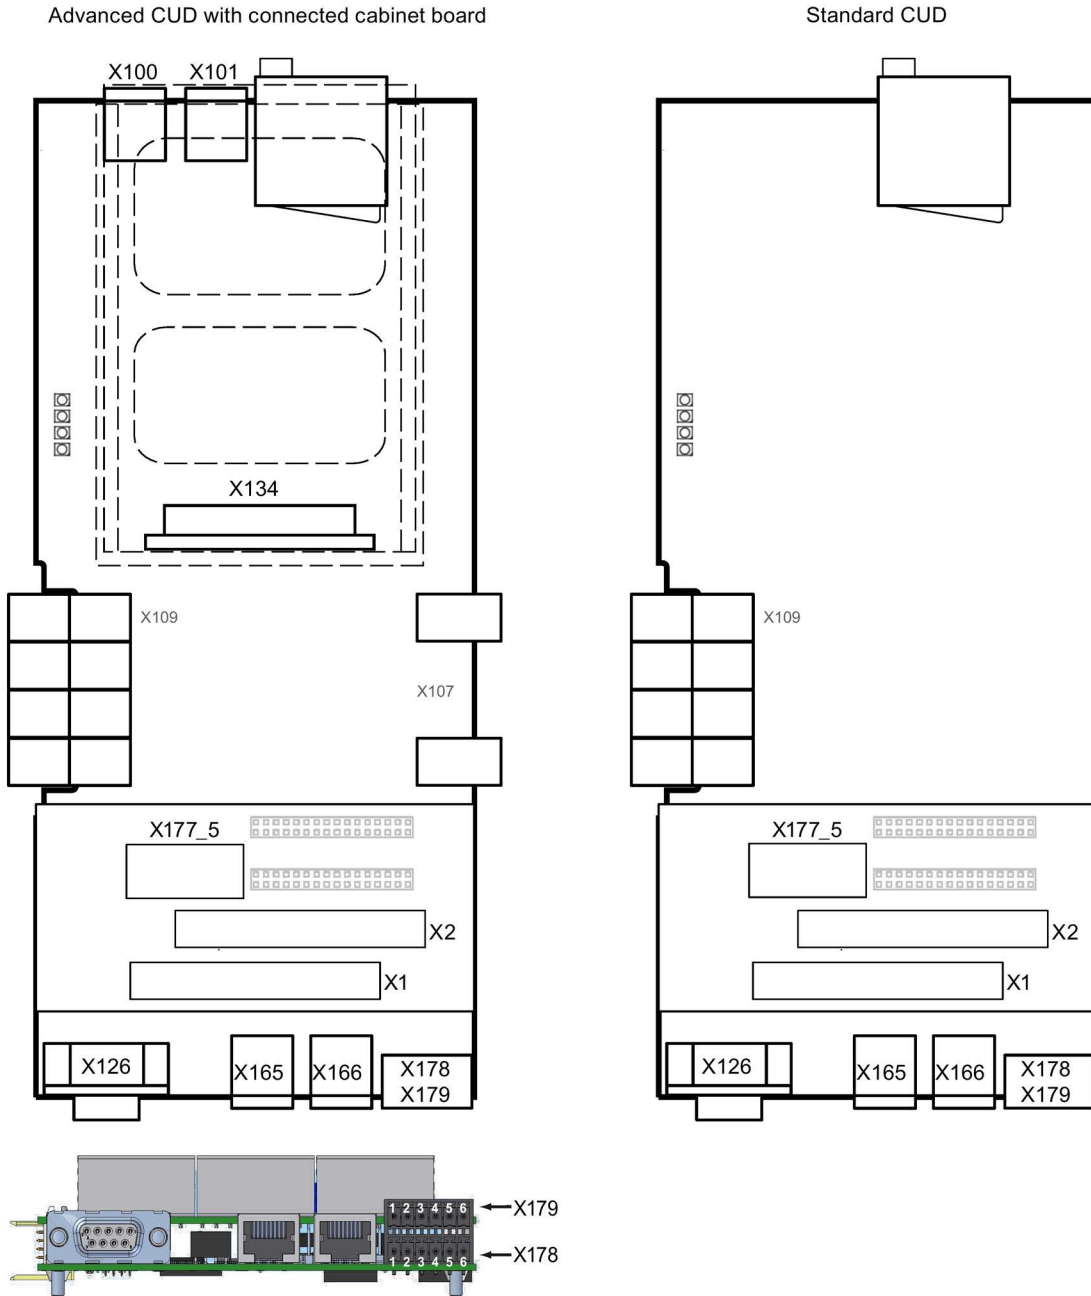


Figure 6-46 Terminal/connector arrangement on the "Control Unit (CUD)" – Option G63



Module – Power Interface for 2Q devices, 400 - 600 V with AC electronic power supply

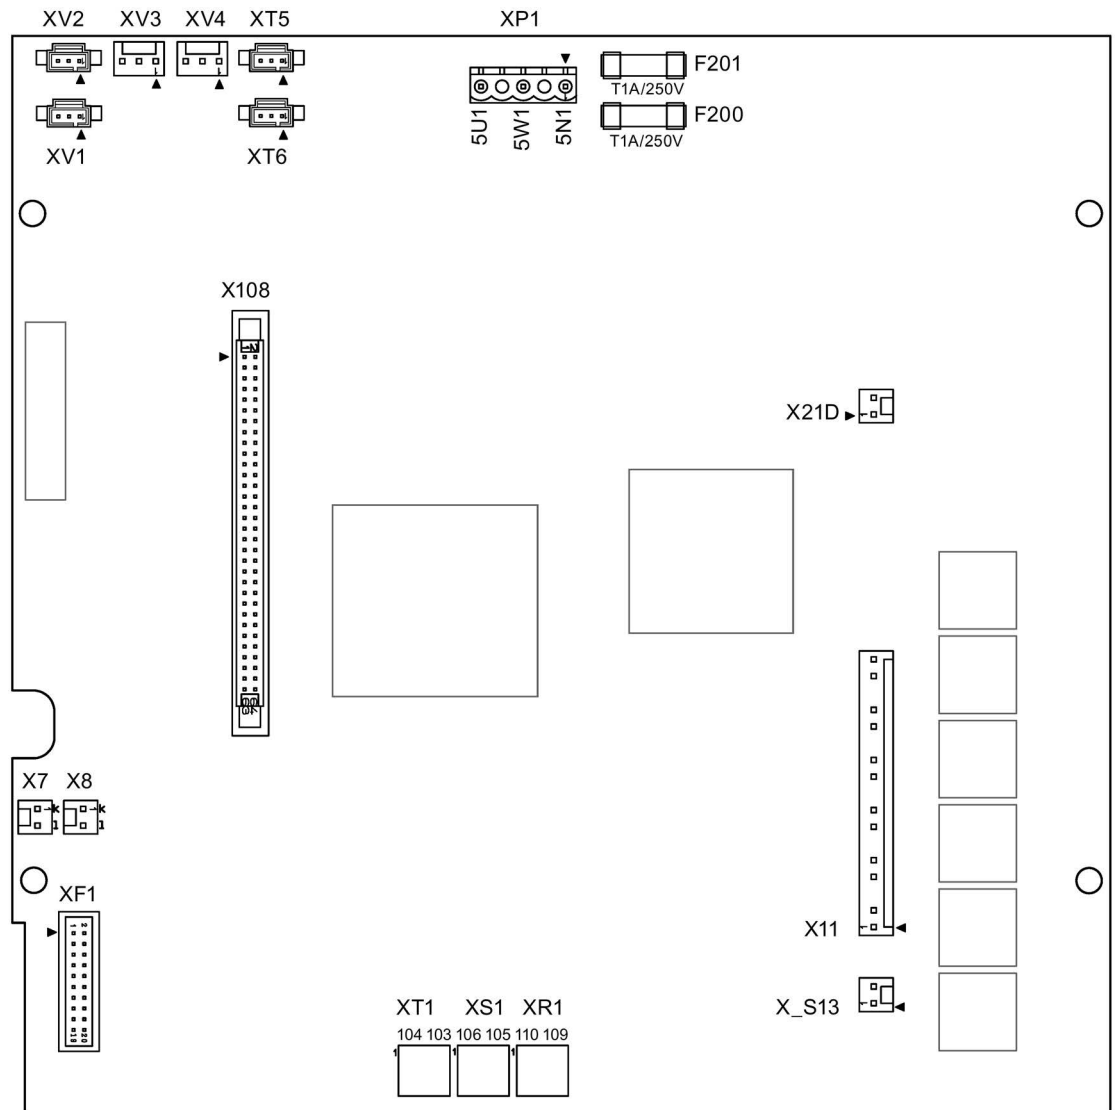


Figure 6-47 Terminal/connector arrangement on the "Power Interface for 2Q devices, 400 - 600 V with AC electronic power supply"

Module – Power Interface for 4Q devices, 400 - 600 V with AC electronic power supply


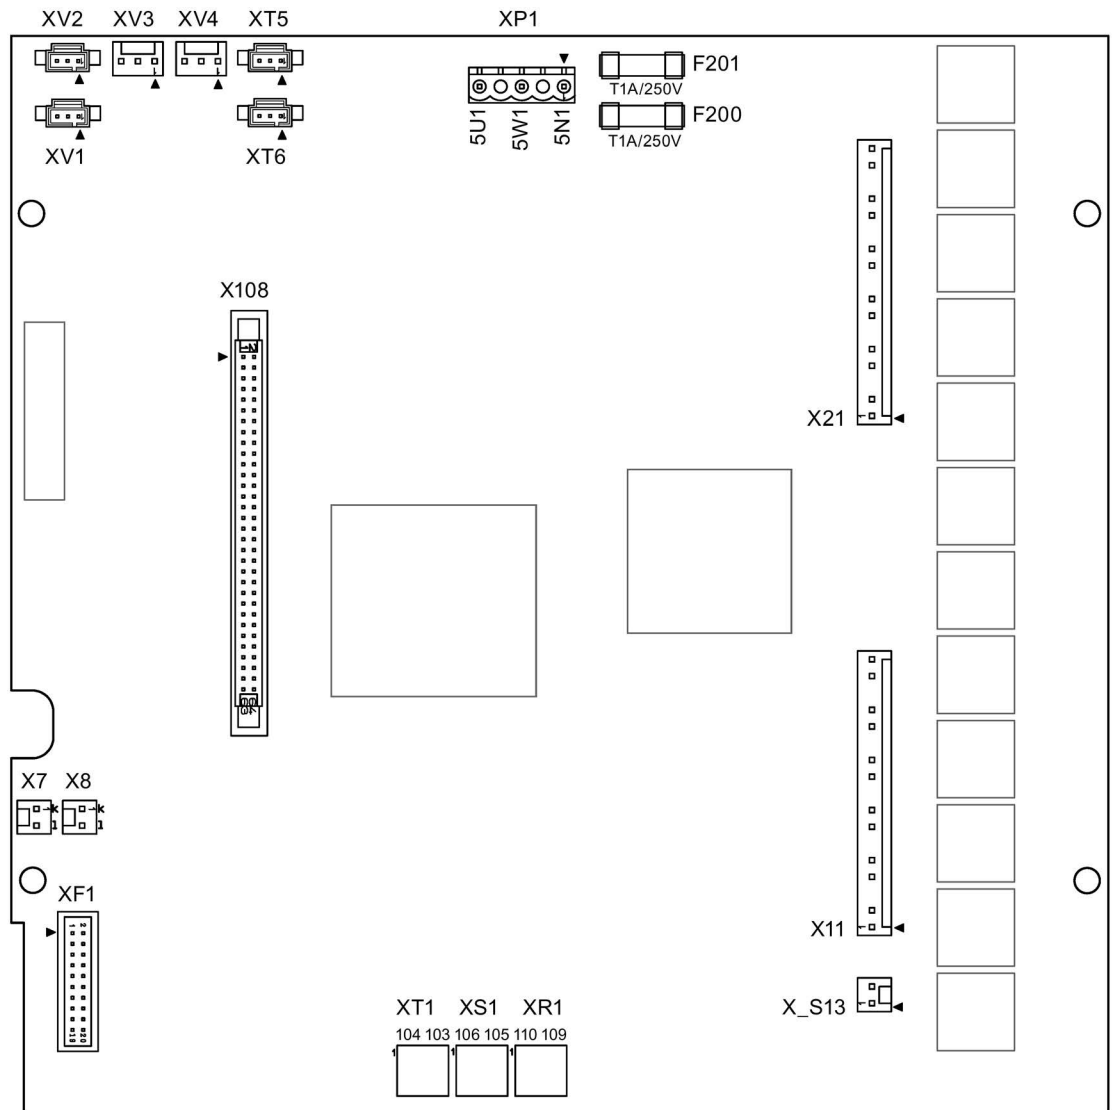


Figure 6-48 Terminal/conconnector arrangement on the "Power Interface for 4Q devices, 400 - 600 V with AC electronic power supply"

Module – Power Interface for 690 - 950 V devices with AC electronic power supply

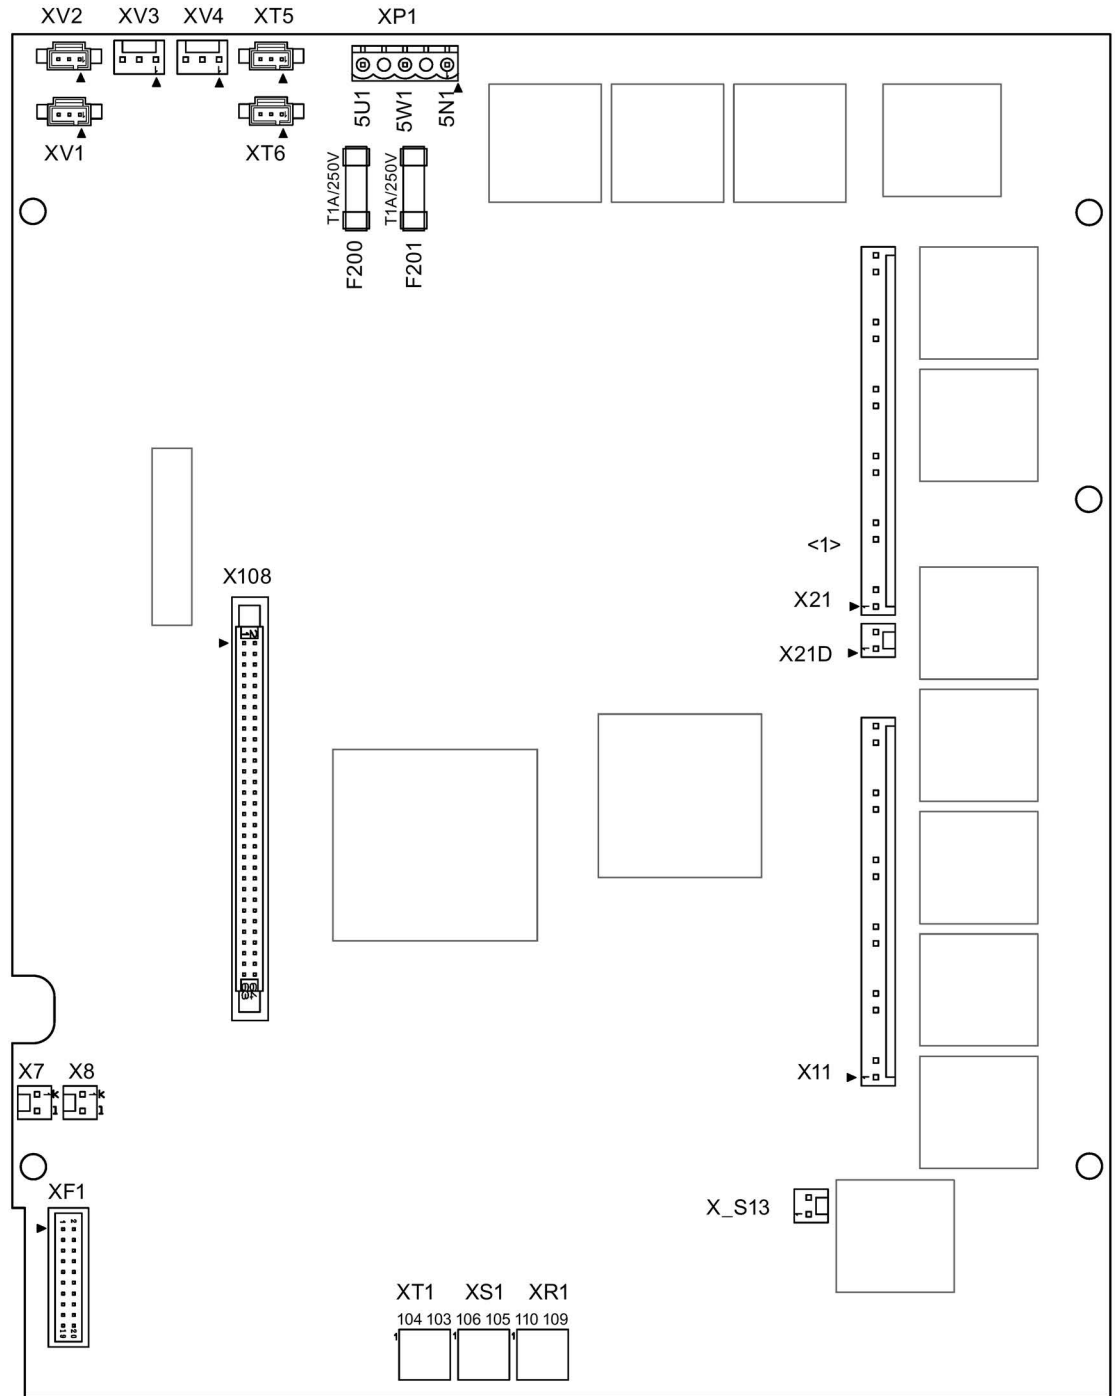

<1> Connector X21 not fitted on 2Q devices  
 Connector X21D not fitted on 4Q devices

Figure 6-49 Terminal/connector arrangement on the "Power Interface for 690 - 950 V devices with AC electronic power supply"

Module – Power Interface for 2Q devices, 400 - 600 V with DC electronic power supply

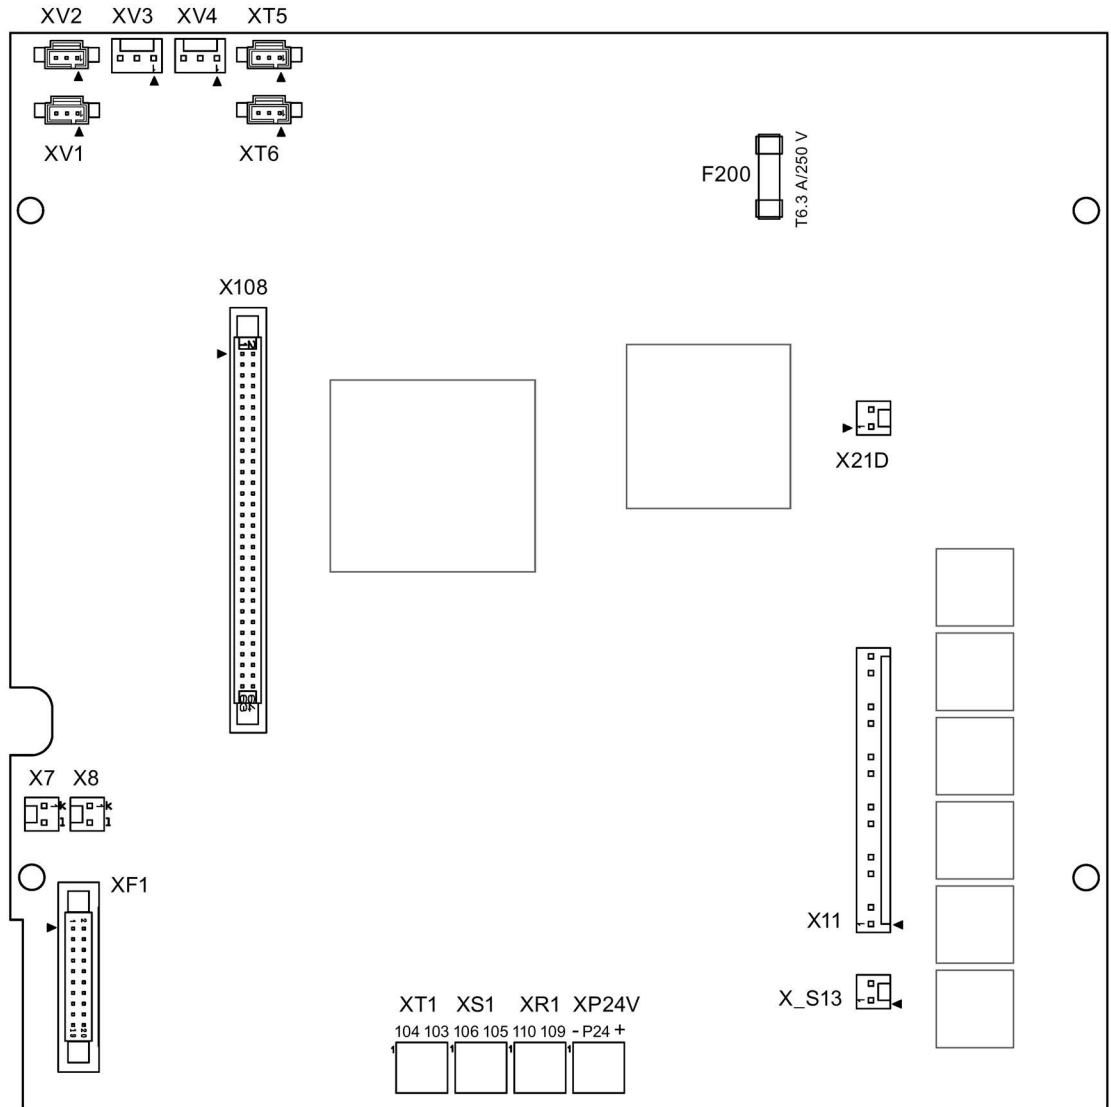


Figure 6-50 Terminal/conconnector arrangement on the "Power Interface for 2Q devices, 400 - 600 V with DC electronic power supply"

Module – Power Interface for 4Q devices, 400 - 600 V with DC electronic power supply


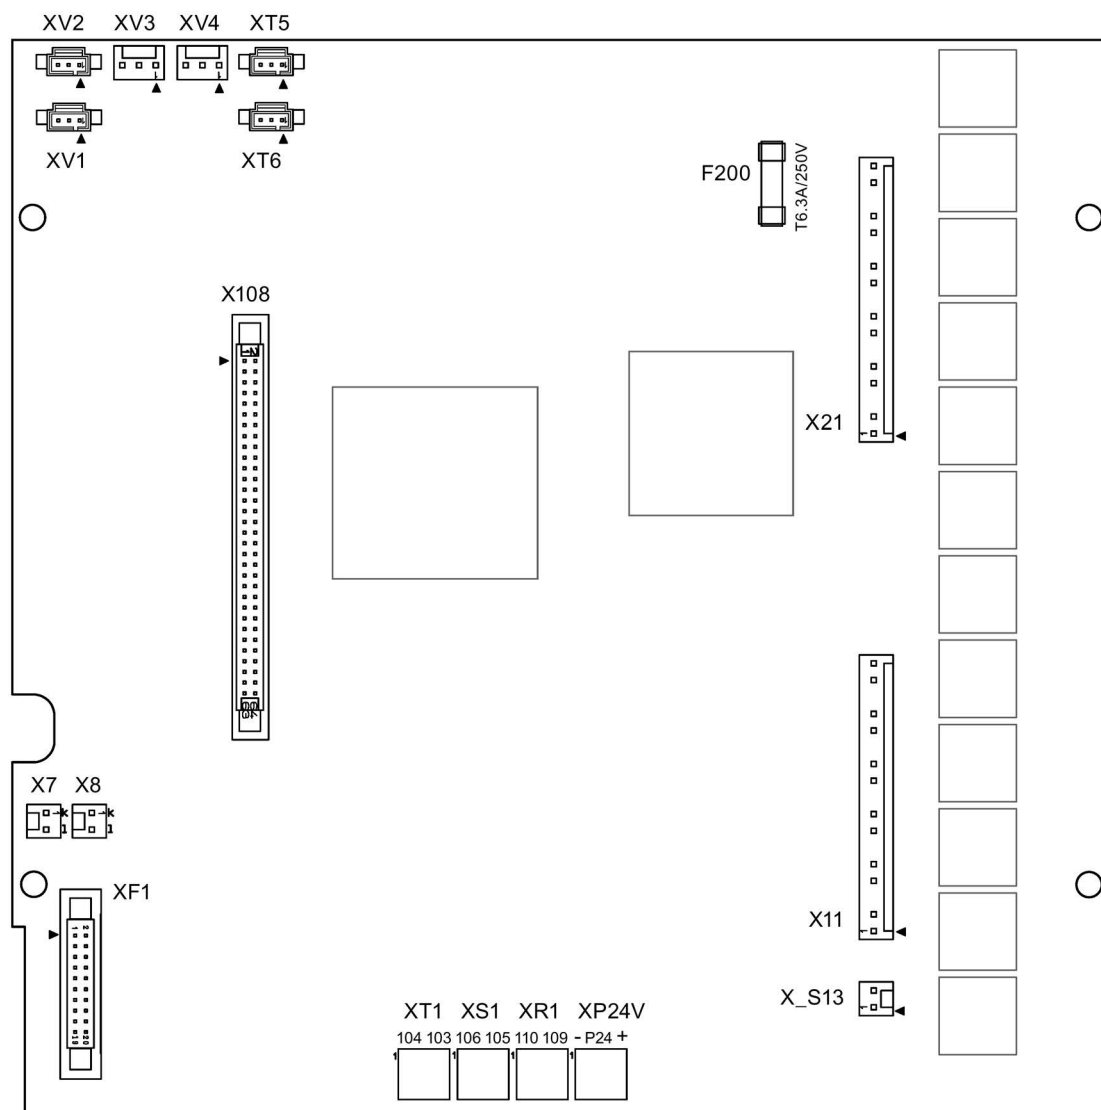


Figure 6-51 Terminal/conconnector arrangement on the "Power Interface for 4Q devices, 400 - 600 V with DC electronic power supply"

Module – Power Interface for 690 - 950 V devices with DC electronic power supply

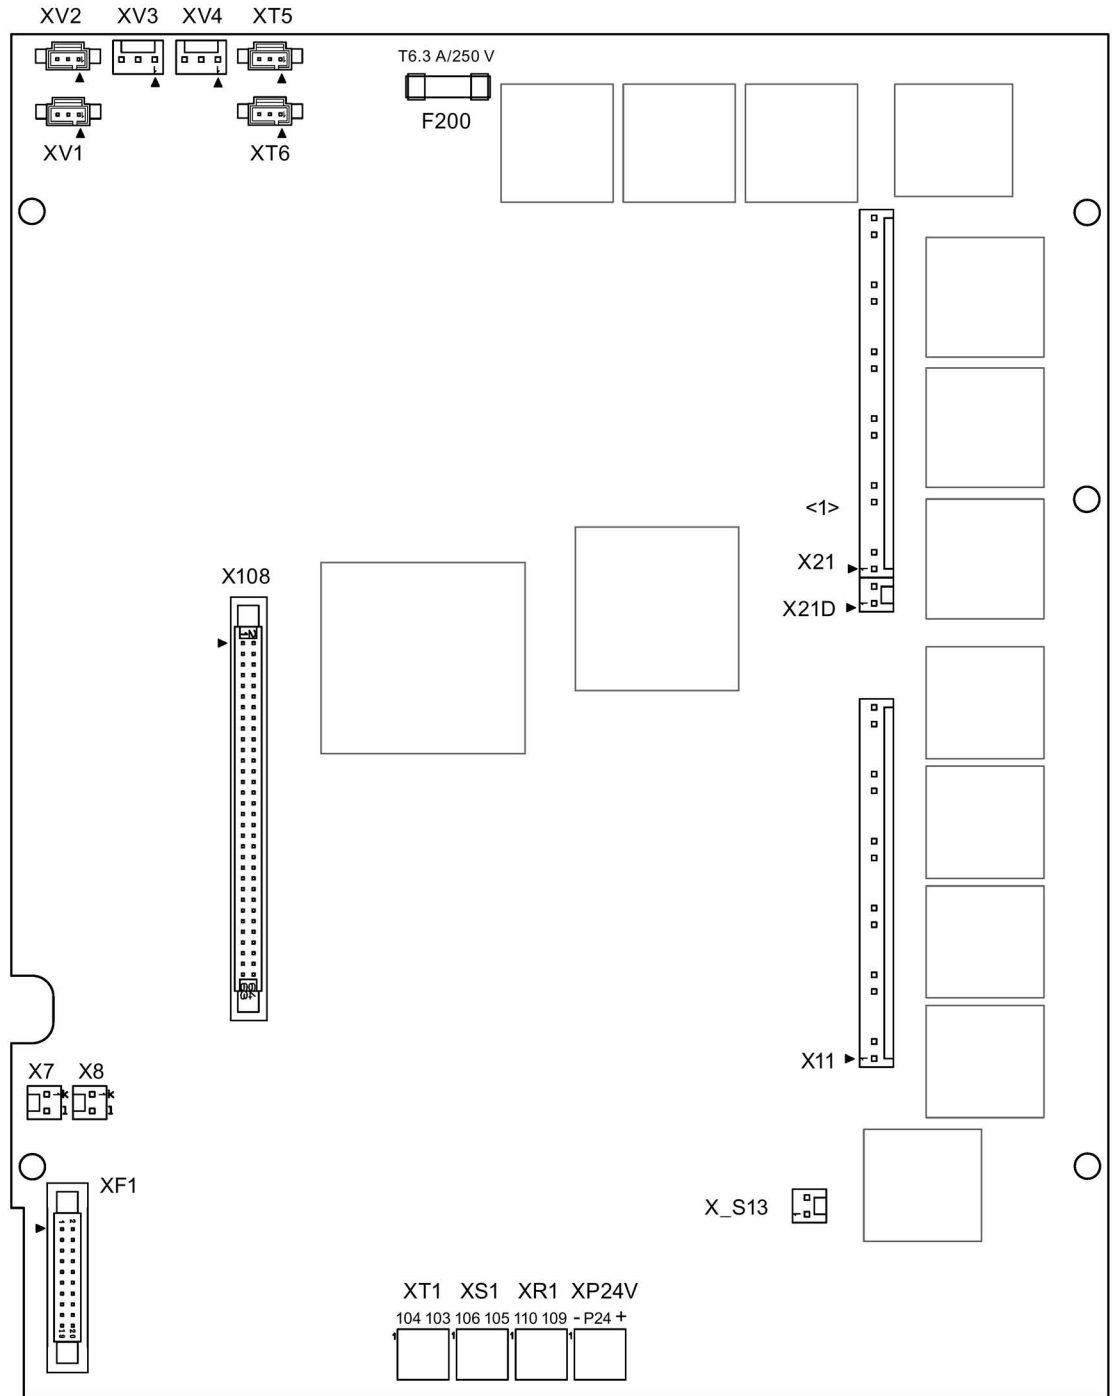

<1> Connector X21 not fitted on 2Q devices  
 Connector X21D not fitted on 4Q devices

Figure 6-52 Terminal/connector arrangement on the "Power Interface for 690 - 950 V devices with DC electronic power supply"

Module – 15/30 A power unit

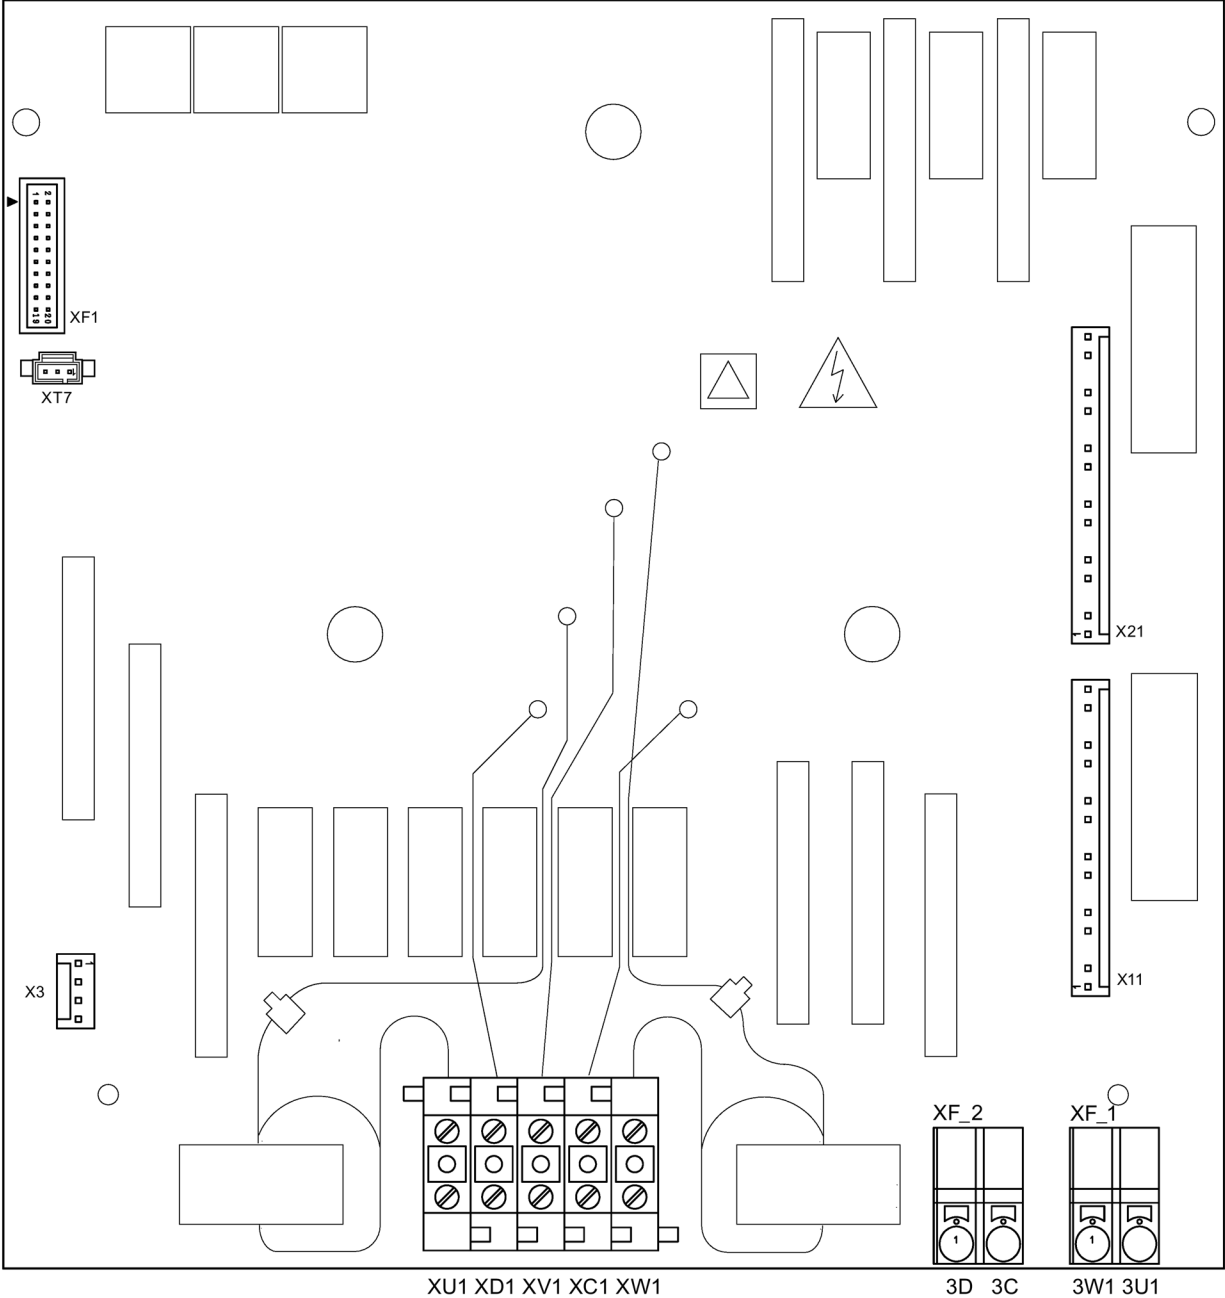


Figure 6-53 Terminal/connector arrangement on the "15/30 A power unit"

Modules for option G63

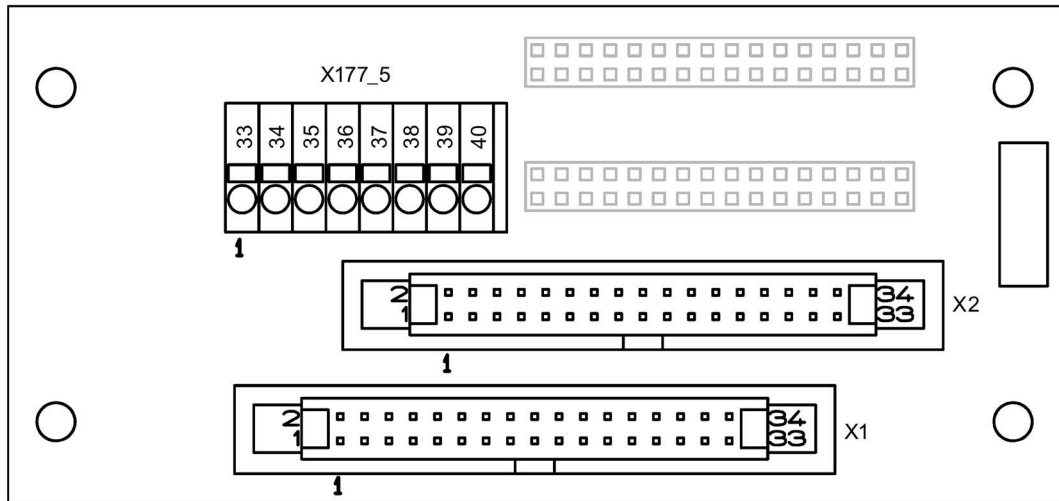


Figure 6-54 Terminal/connector arrangement on the "Cabinet Board"

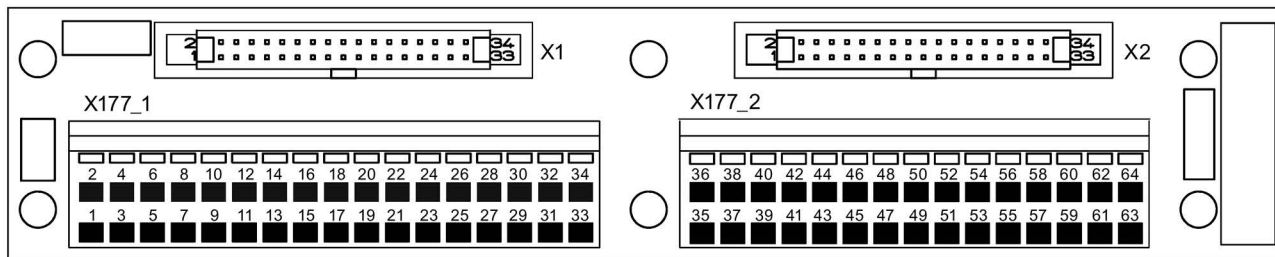


Figure 6-55 Terminal arrangement on the "Terminal Module Cabinet (TMC)"

Module – 10 to 30 A field module

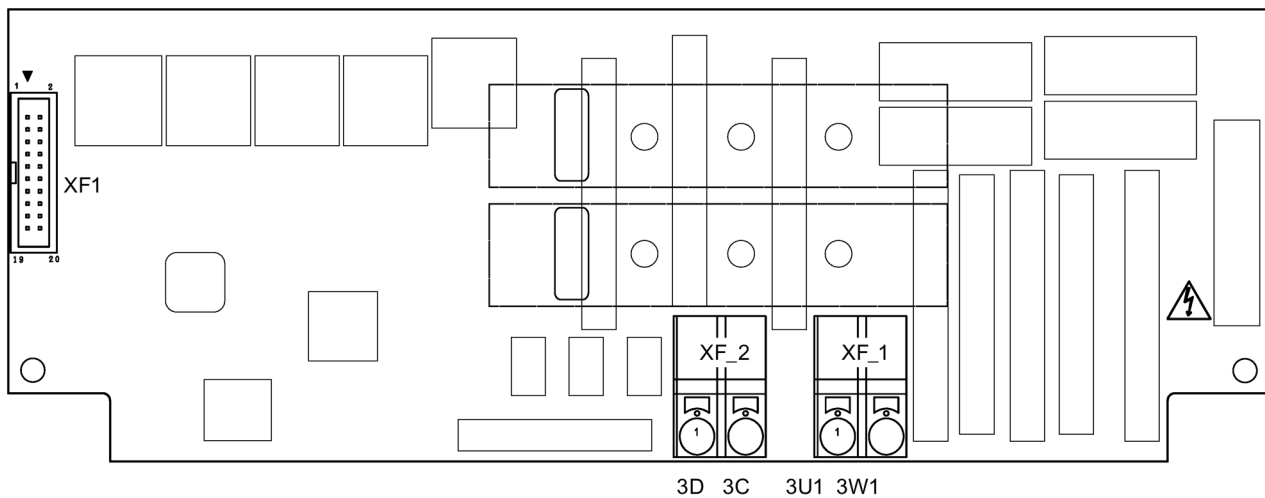


Figure 6-56 Terminal/connector arrangement on the "10 to 30 A field module"



Module – 40 A to 85 A field module

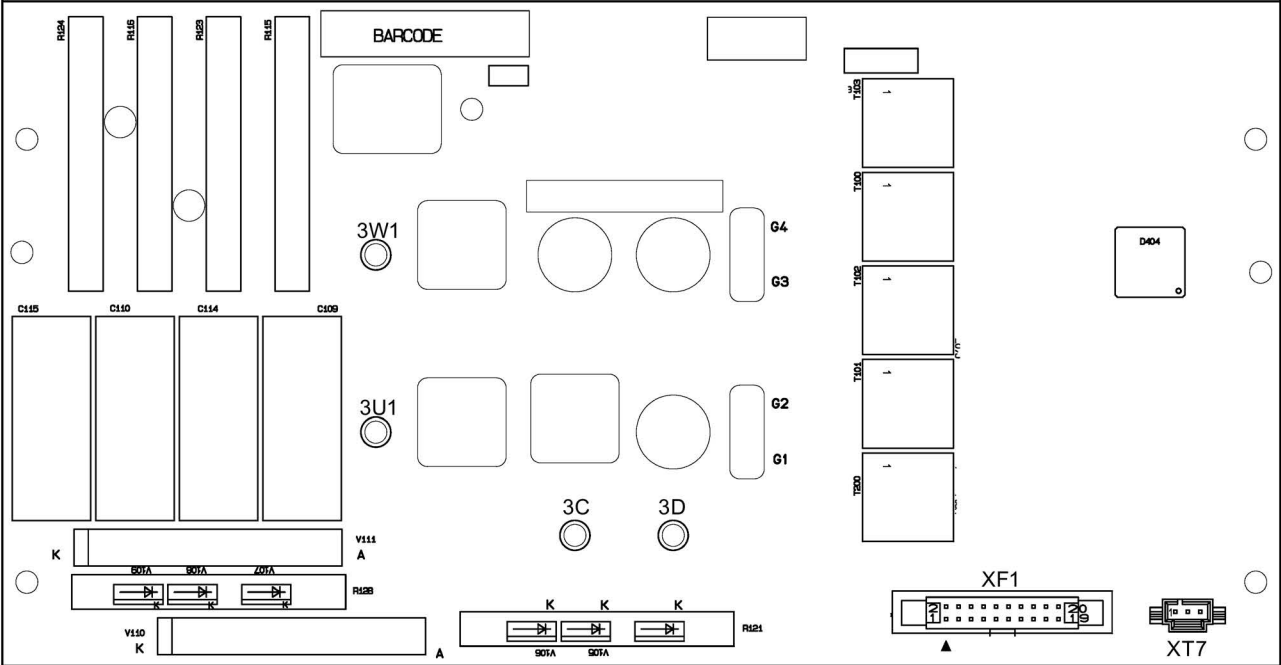


Figure 6-57 Terminal/connector arrangement on the "40 A to 85 A field module"

"Connector Board" module

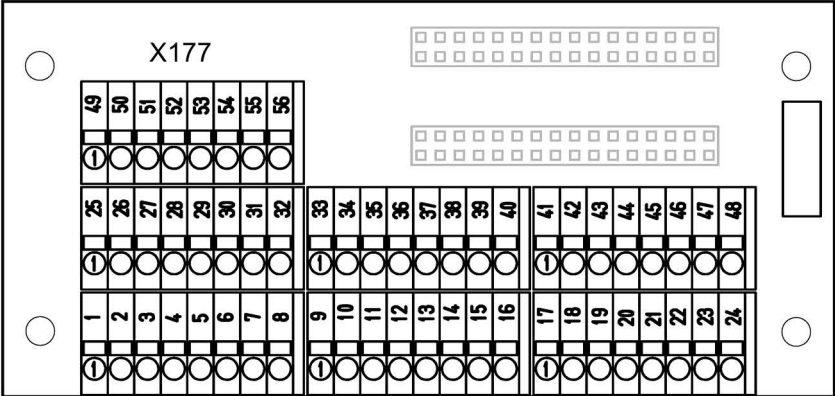


Figure 6-58 Terminal/connector arrangement on the "Connector Board"

## 6.9 Assignment of terminals and connectors

<b>NOTICE</b>
<b>Damage or destruction of the device as a result of incorrect connection</b>
Connecting the device incorrectly can lead to damage or destruction. Power cables and busbars must be mechanically fastened in place outside of the device.

<b>NOTICE</b>
<b>Dimensioning the connection cables</b>
The information regarding the connection capability of the terminals in the tables below is based on values from the terminal data sheets. The connecting cables must be dimensioned for the currents that will flow.

### Overview

Table 6- 21 Terminals and connectors overview

1U1, 1V1, 1W1, 1C1, 1D1	Armature circuit
3U1, 3W1, 3C, 3D	Field circuit
4U1, 4V1, 4W1, 4N1	Fan
5U1, 5W1, 5N1	Devices with "Power interface with AC electronic power supply"
XP24V	Devices with "Power interface with DC electronic power supply"
X100, X101	DRIVE-CLiQ
X126	PROFIBUS
X165, X166	Parallel interface
X177 for option G63: X177_1, X177_2, X177_5	Analog inputs, digital inputs, digital outputs, setpoints, reference voltage (P10/N10), serial interface (peer-to-peer), incremental encoder, analog outputs, temperature sensor
X178, X179	Interface to AOP30, USS interface
XR1	Relay output for line contactor (up to 240 V)
XS1	Safety shutdown E-STOP
XT1	Analog tachometer
X200, X201	Functional safety

## 6.9.1 Power unit

Table 6- 22 Connection system for the power connections 1U1, 1V1, 1W1, 1C1, 1D1

Devices	Permissible connection type	
	Connections 1U1, 1V1, 1W1	Connections 1C1, 1D1
15 A - 30 A	Cable	Cable
60 A - 850 A	Cable, busbars	Cable, busbars
900 A - 1200 A	Cable, busbars	Busbars
1500 A - 3000 A	Cable, busbars	Cable, busbars
<p>Handling the contact surfaces of busbar connections: All contact surfaces must be clean and may not be damaged.</p> <ul style="list-style-type: none"> <li>Busbars manufactured out of Cu, Al, Al-Mg-Si: The contact surfaces should be bare metal (e.g. use a file brush, abrasive stone). Use separate brushes for Cu and Al, mark appropriately. Immediately apply acid-free Vaseline (for example, Shell 8422) to aluminum busbars. Apply the appropriate grease to the contact points of the Al busbars approx. 10 mm beyond the contact surface. Do not apply grease to copper busbars.</li> <li>Nickel-plated copper busbars: Wipe the contact surfaces with a clean, dry cloth. If the nickel-plated surfaces are slightly oxidized, then remove these oxide layers before bolting. It is not permissible to use a steel brush or similar.</li> </ul>		
<p>Note: The clearances required between the power connections (12.7 mm / 1/2 ") must not be fallen below. Otherwise, insulating elements must be inserted.</p>		

Table 6- 23 Terminal type, power connections for 15 A and 30 A devices

Type	KDS 10 PC board terminal
Connection capacity	Rigid/flexible/conductor sizes (mm <sup>2</sup> /mm <sup>2</sup> /AWG): 0.5 - 16 / 0.5 - 10 / 20 - 6 flexible with ferrule with/without plastic sleeve: 0.5 - 10 / 0.5 - 10 mm <sup>2</sup>
Stripped length	12 mm
Tightening torque	1.2 - 1.5 Nm

6.9 Assignment of terminals and connectors

Table 6- 24 Terminal type, power connections for devices of 60 A and above


Devices	Data
60 A - 210 A	1U1, 1V1, 1W1: 3 x 20 mm aluminum busbar, through hole for M8 1C1, 1D1: 5 x 20 mm aluminum busbar, through hole for M8
	Max. conductor cross-section for cables with cable lug according to DIN 46234: 1U1, 1V1, 1W1, 1C1, 1D1: 2 × 95 mm <sup>2</sup>
	Tightening torque for 1U1, 1V1, 1W1, 1C1, 1D1: 13 Nm Tightening torque for protective conductor: 25 Nm
280 A	1U1, 1V1, 1W1: 3 x 20 mm copper busbar, through hole for M8 1C1, 1D1: 5 x 20 mm copper busbar, through hole for M8
	Max. conductor cross-section for cables with cable lug according to DIN 46234: 1U1, 1V1, 1W1, 1C1, 1D1: 2 × 95 mm <sup>2</sup>
	Tightening torque for 1U1, 1V1, 1W1, 1C1, 1D1: 13 Nm Tightening torque for protective conductor: 25 Nm
400 A - 450 A	1U1, 1V1, 1W1: 5 x 30 mm aluminum busbar, through hole for M10 1C1, 1D1: 5 x 35 mm aluminum busbar, through hole for M10
	Max. conductor cross-section for cables with cable lug according to DIN 46234: 1U1, 1V1, 1W1: 2 × 150 mm <sup>2</sup> 1C1, 1D1: 2 × 185 mm <sup>2</sup>
	Tightening torque for 1U1, 1V1, 1W1, 1C1, 1D1: 25 Nm Tightening torque for protective conductor: 50 Nm
600 A	1U1, 1V1, 1W1: 5 x 30 mm copper busbar, through hole for M10 1C1, 1D1: 5 x 35 mm copper busbar, through hole for M10
	Max. conductor cross-section for cables with cable lug according to DIN 46234: 1U1, 1V1, 1W1: 2 × 150 mm <sup>2</sup> 1C1, 1D1: 2 × 185 mm <sup>2</sup>
	Tightening torque for 1U1, 1V1, 1W1, 1C1, 1D1: 25 Nm Tightening torque for protective conductor: 50 Nm
720 A - 850 A	1U1, 1V1, 1W1, 1C1, 1D1: 5 x 60 mm copper busbar, through hole for M12
	Max. conductor cross-section for cables with cable lug according to DIN 46234: 1U1, 1V1, 1W1, 1C1, 1D1: 4 × 150 mm <sup>2</sup>
	Tightening torque for 1U1, 1V1, 1W1, 1C1, 1D1: 44 Nm Tightening torque for protective conductor: 50 Nm
900 A - 1200 A	1U1, 1V1, 1W1, 1C1, 1D1: 6 x 80 mm copper busbar, M12 insert nut
	Max. conductor cross-section for cables with cable lug according to DIN 46234: 1U1, 1V1, 1W1: 4 × 150 mm <sup>2</sup>
	Tightening torque for 1U1, 1V1, 1W1, 1C1, 1D1: 44 Nm Tightening torque for protective conductor: 60 Nm
1500 A - 2000 A	1U1, 1V1, 1W1: 10 x 120 mm aluminum busbar, through hole for M12 1C1, 1D1: Aluminum busbar, cross-section 60 x 10 mm / 323 mm wide, insert nut M12
	Max. conductor cross-section for cables with cable lug according to DIN 46234: 1U1, 1V1, 1W1: 6 × 240 mm <sup>2</sup> 1C1, 1D1: 8 × 240 mm <sup>2</sup>
	Tightening torque for 1U1, 1V1, 1W1, 1C1, 1D1: 44 Nm Tightening torque for protective conductor: 60 Nm

Devices	Data
2200 A - 3000 A	1U1, 1V1, 1W1: 10 x 120 mm copper busbar, through hole for M12 1C1, 1D1: Copper busbar, cross-section 60 x 10 mm / 323 mm wide, insert nut M12
	Max. conductor cross-section for cables with cable lug according to DIN 46234: 1U1, 1V1, 1W1: 6×240 mm <sup>2</sup> 1C1, 1D1: 8×240 mm <sup>2</sup>
	Tightening torque for 1U1, 1V1, 1W1, 1C1, 1D1: 44 Nm Tightening torque for protective conductor: 60 Nm
See Chapter "Dimension drawings (Page 80)" for how the protective conductor can be connected.	
Note: If the device is stored for a longer period of time, a layer of corrosion can form on the bare metal surfaces of the housing. Before connecting the protective conductor, this must be removed from the connection points.	

The devices are designed for a permanent line supply connection in accordance with EN 61800-5-1.

The conductor cross-sections (also for the protective conductor) must be determined in accordance with the applicable regulations that apply in each case – e.g. EN 60204-1.

Table 6- 25 Assignment of power connections

Terminal	Function	Technical specifications
1U1 1V1 1W1	Power unit line connection, armature circuit	See Chapter "Technical data (Page 39)"
	Protective conductor PE	
1C1 (1D1) 1D1 (1C1)	Motor connection, armature circuit	

### 6.9.2 Field circuit

Table 6- 26 Terminal type, field circuit connections

<b>Devices with "15/30 A power unit" and devices with "10 to 30 A field module" (the terminals are located on the module):</b>	
Type	ZFKDS 4-10 PC board terminal
Connection capacity	Rigid/flexible/conductor sizes (mm <sup>2</sup> /mm <sup>2</sup> /AWG): 0.2 - 6 / 0.2 - 4 / 24 - 10 flexible with ferrule with/without plastic sleeve: 0.25 - 4 / 0.25 - 4 mm <sup>2</sup>
Stripped length	10 mm
<b>Devices with "field supply power unit" with rated armature DC current = 900 - 1,200 A:</b>	
Type	20E/4DS terminal strip
Connection capacity	Rigid/flexible (mm <sup>2</sup> /mm <sup>2</sup> ): 6 - 16 / 6 - 10
Stripped length	8 mm
Tightening torque	1.5 Nm
<b>Devices with "field supply power unit" with rated armature DC current = 1,500 - 3,000 A:</b>	
Type	UK16N terminal block
Connection capacity	Rigid/conductor sizes (mm <sup>2</sup> /AWG): 2.5 - 25 / 14 - 4 Flexible/conductor sizes (mm <sup>2</sup> /AWG): 4 - 16 / 12 - 6
Stripped length	11 mm
Tightening torque	1.5 - 1.8 Nm
<b>Devices with option L85 (with rated field DC current = 85 A):</b>	
Type	UK35 terminal block
Connection capacity	Rigid/flexible/conductor sizes (mm <sup>2</sup> /mm <sup>2</sup> /AWG): 0.75 - 50 / 0.75 - 35 / 18 - 0/1 Flexible with ferrule with/without plastic sleeve: 0.75 - 35 / 0.75 - 35 mm <sup>2</sup>
Stripped length	16 mm
Tightening torque	3.2 - 3.7 Nm

Table 6- 27 Assignment of the connections for the field circuit



Terminal	Function	Technical specifications
XF_1-1: 3U1 XF_1-2: 3W1	Line connection	2 AC 400 V (-20%), 2 AC 480 V (+10%)
XF_2-1: 3D XF_2-2: 3C	Field winding connection	325/373 rated V DC voltage with 2-ph. 400/480 V AC line connection

### 6.9.3 Electronics power supply

Table 6- 28 Terminal type, electronic power supply

Type	MSTB 2.5/CIF plug-in terminal
Connection capacity	Rigid/flexible/conductor sizes (mm <sup>2</sup> /mm <sup>2</sup> /AWG): 0.2 - 2.5 / 0.2 - 2.5 / 24 - 12 Flexible with ferrule with/without plastic sleeve: 0.25 - 2.5 / 0.25 - 2.5 mm <sup>2</sup>
	Multi-conductor connection (two conductors of the same type and with same cross-section): Rigid/flexible: 0.2 - 1 / 0.2 - 1.5 mm <sup>2</sup> Flexible with ferrule with/without plastic sleeve: 0.25 - 1 / 0.5 - 1.5 mm <sup>2</sup>
Stripped length	7 mm
Tightening torque	0.5 - 0.6 Nm

  Table 6- 29 Assignment of terminals for the electronic power supply

Terminal XP1	Connection	Function	Technical specifications
5U1 5W1 5N1	 NC	400 V infeed	2 AC 380 V (-25%) to 480 V (+10%); I <sub>n</sub> = 1 A (-35% for 1 min) Internal protection with F200, F201 on the "Power interface with AC electronic power supply" module External protection max. 6 A, characteristic C recommended
or			
5U1 5W1 5N1		230 V infeed	1 AC 190 V (-25%) to 240 V (+10%); I <sub>n</sub> = 2 A (-35% for 1 min) Internal protection with F200, F201 on the "Power interface with AC electronic power supply" module External protection max. 6 A, characteristic C recommended
"Power interface with AC electronic power supply" module			

#### Note

In the case of line supply voltages that fall outside the tolerance range (see Chapter "Technical data (Page 39)"), the electronics supply voltage, field circuit line supply connection, and the unit fan connection must be adapted to the permissible value using transformers. It is absolutely essential that you use an isolation transformer for rated line voltages above 480 V for safe electrical isolation.

The rated value of the supply voltage for the armature circuit (index 0) and for the field circuit (index 1) must be set at p50078.

**With option L05**

Table 6- 30 Terminal type, electronic power supply

<b>Type</b>	<b>MSTB 2.5/CIF plug-in terminal</b>
Connection capacity	Rigid/flexible/conductor sizes (mm <sup>2</sup> /mm <sup>2</sup> /AWG): 0.2 - 2.5 / 0.2 - 2.5 / 24 - 12 Flexible with end sleeve with/without plastic sleeve: 0.25 - 2.5 / 0.25 - 2.5 mm <sup>2</sup>
Stripped length	7 mm
Tightening torque	0.5 - 0.6 Nm

Table 6- 31 Assignment of terminals for the electronic power supply

Terminal	Function	Technical specifications
XP24V		
+ -	24 V infeed	18 V to 30 V DC; current consumption 1 A ... 5 A Recommended conductor cross-section 1.5 mm <sup>2</sup> Internal protection with F200 fuses (6.3 A, time-lag), External protection 6 A ... 16 A, B or C characteristic
"Power interface with DC electronic power supply" module		



**6.9.4 Fan**

Table 6- 32 Terminal type, fan connections for devices ≥ 400 A with forced ventilation

<b>Type</b>	<b>DFK-PC4 plug-in terminal</b>
Connection capacity	Rigid/flexible/conductor sizes (mm <sup>2</sup> /mm <sup>2</sup> /AWG): 0.2 - 4 / 0.2 - 4 / 24 - 10

The connecting leads must be insulated up to the point where they meet the terminal enclosure.

Table 6- 33 Terminal assignment for fan connection

Terminal	Function	Technical specifications
4U1 4V1 4W1	400 to 460 V infeed	3-ph. 400 to 460 V AC with phase sequence L1; L2; L3 (clockwise phase sequence) For additional data, refer to the "Technical data" Chapter
	Protective conductor PE	
or		
4U1 4N1	230 V infeed	230 V 1 AC for additional data, refer to the "Technical data" Chapter
	Protective conductor PE	



<b>NOTICE</b>
<b>Damage caused by incorrect direction of rotation of the fan</b>
An incorrectly connected fan power supply can lead to damage to the power unit due to insufficient cooling.
<ul style="list-style-type: none"> <li>• Connect a clockwise phase sequence to the fan power supply.</li> <li>• Check the direction of rotation of the fan. The fan must rotate counterclockwise when viewed from above.</li> </ul>

## 6.9.5 Open-loop and closed-loop control section

Table 6- 34 Terminal type, open-loop and closed-loop control section

<b>X177, X177_5 (for option G63):</b>	
Type	SPT 1.5 spring-loaded terminal
Connection capacity	Rigid/flexible/conductor sizes (mm <sup>2</sup> /mm <sup>2</sup> /AWG): 0.2 - 1.5 / 0.2 - 1.5 / 24 - 16 Flexible with ferrule with/without plastic sleeve: 0.25 - 1.5 / 0.25 - 0.75 mm <sup>2</sup> (stripped length 8 mm)
Stripped length	10 mm
<b>X177_1, X177_2 (for option G63):</b>	
Type	Two-tier terminal with spring-loaded terminal PK 68
Connection capacity	Rigid / flexible 0.5 - 2.5 mm <sup>2</sup>
<b>X178, X179:</b>	
Type	FMC 1.5 plug-in terminal
Connection capacity	Rigid/flexible/conductor sizes (mm <sup>2</sup> /mm <sup>2</sup> /AWG): 0.2 - 1.5 / 0.2 - 1.5 / 24 - 16 Flexible with ferrule with/without plastic sleeve: 0.25 - 1.5 / 0.25 - 0.75 mm <sup>2</sup>
Stripped length	10 mm
<b>XR1, XS1, XT1:</b>	
Type	MSTB 2.5/CIF plug-in terminal
Connection capacity	Rigid/flexible/conductor sizes (mm <sup>2</sup> /mm <sup>2</sup> /AWG): 0.2 - 2.5 / 0.2 - 2.5 / 24 - 12 Flexible with ferrule with/without plastic sleeve: 0.25 - 2.5 / 0.25 - 2.5 mm <sup>2</sup>
Stripped length	7 mm
Tightening torque	0.5 - 0.6 Nm
<b>X126:</b>	
Type	Submin D, 9-pin
<b>X100, X101:</b>	
Type	Modular jack 8/4 (RJ45)

**Terminals at the Power Interface (analog tachometer, E-STOP, relay for line contactor)**

Table 6- 35 Terminals XR1, XS1, XT1

Terminal	Function	Technical specifications
<b>Analog tachometer</b>		
XT1-103	Tachometer connection 8 to 270 V	±270 V Input resistance 159 kΩ
XT1-104	Ground, analog M	Resolution ±14 bits
<b>Safety shutdown E-STOP</b>		
XS1-105	Input (switch)	I <sub>e</sub> = 20 mA
XS1-106	Supply (output)	24 V DC, max. load 50 mA, short-circuit proof
<b>Potential-free relay output</b>		
XR1-109 XR1-110	Relay for line contactor	Current carrying capacity: ≤ AC 250 V, 4 A; cosφ = 1 ≤ AC 250 V, 2 A; cosφ = 0.4 ≤ DC 30 V, 2 A  External fuse: max. 4 A / characteristic C recommended  Devices that have option L05 (with "Power interface with DC electronic power supply") require external protection with max. 6.3 A.
"Power Interface 400 - 600 V" or "Power Interface 690 - 950 V" module		

## Terminals on the Connector Board

Also refer to "Inputs/Outputs" in the section titled "Descriptions of functions".

Table 6- 36 Assignment, terminal X177

Terminal X177	Function		Technical specifications	
<b>Analog inputs (assignable inputs)</b>				
1 2	AI 3 + AI 3 -	Analog input 3	Input type (signal type): Differential input $\pm 10$ V; 150 k $\Omega$ Resolution approx. 5.4 mV ( $\pm 11$ bits) Common-mode controllability: $\pm 15$ V	
3 4	AI 4 + AI 4 -	Analog input 4		
5 6	AI 5 + AI 5 -	Analog input 5		
7 8	AI 6 + AI 6 -	Analog input 6		
<b>Digital inputs (assignable inputs)</b>				
9 10	24 V DC	24 V supply (output)		24 V DC, short-circuit proof Max. load 200 mA (terminals 9 and 10 together), internal supply referred to internal ground
11	DI 0	Digital input 0	H signal: +15 V to +30 V L signal: -30 V to +5 V or terminal open 8.5 mA at 24 V	
12	DI 1	Digital input 1		
13	DI 2	Digital input 2		
14	DI 3	Digital input 3		
<b>Digital inputs/outputs (assignable inputs/outputs)</b>				
15	DI/ DO 4	Digital input /output 4	Type, input/output can be parameterized Features, inputs: H signal: +15 V to +30 V L signal: 0 V to +5 V or terminal open 8.5 mA at 24 V Features, outputs: H signal: +20 V to +26 V L signal: 0 to +2 V Short-circuit proof; max. current carrying capacity: 100 mA per DO; max. total load of all DO (CUD left X177:15-22 + CUD right X177:15-22): 800 mA Internal protection circuit (freewheeling diode) If overload occurs: alarm A60018	
16	DI/ DO 5	Digital input /output 5		
17	DI/ DO 6	Digital input /output 6		
18	DI/ DO 7	Digital input /output 7		
19	DO 0	Digital output 0	H signal: +20 V to +26 V L signal: 0 to +2 V Short-circuit proof; max. current carrying capacity: 100 mA per DO; max. total load of all DO (CUD left X177:15-22 + CUD right X177:15-22): 800 mA Internal protection circuit (freewheeling diode) If overload occurs: alarm A60018	
20	DO 1	Digital output 1		
21	DO 2	Digital output 2		
22	DO 3	Digital output 3		
23, 24	M	Ground, digital		

Terminal X177	Function		Technical specifications
<b>Analog inputs, setpoint inputs (assignable inputs)</b>			
25 26	AI 0 + AI 0 -	Analog input 0 Main setpoint	Input type (signal type), parameterizable: - Differential input $\pm 10$ V; 150 k $\Omega$ - Current input 0 - 20 mA; 300 $\Omega$ or 4 - 20 mA; 300 $\Omega$ Resolution approx. 0.66 mV ( $\pm 14$ bits) Common-mode controllability: $\pm 15$ V
27 28	AI 1 + AI 1 -	Analog input 1	
29 30	AI 2 + AI 2 -	Analog input 2	
Input type (signal type): Differential input $\pm 10$ V; 150 k $\Omega$ Resolution approx. 0.66 mV ( $\pm 14$ bits) Common-mode controllability: $\pm 15$ V Note: An external armature voltage actual value can also be connected at this input. See function diagram 6902 in the SINAMICS DCM List Manual.			
<b>Reference voltage</b>			
31 32	P10 N10	Reference voltage $\pm 10$ V (output)	Tolerance $\pm 1\%$ at 25 °C Stability 0.1% per 10 °K 10 mA short-circuit proof
33, 34	M	Ground, analog	
<b>Serial interface, peer-to-peer RS485</b>			
35, 36	M	Ground, digital	
37	TX+	Send cable +	4-wire send cable, positive differential output
38	TX-	Send cable -	4-wire send cable, negative differential output
39	RX+	Receive cable +	4-wire receive cable, positive differential output
40	RX-	Receive cable -	4-wire receive cable, negative differential output
<b>Incremental encoder input</b>			
41	Incremental encoder supply		+13.7 to +15.2 V, 300 mA short-circuit proof (electronically protected) If overload occurs: alarm A60018
42	Ground, incremental encoder		
43	Track 1 positive connection		Load: $\leq 5.25$ mA at 15 V (without switching losses) Pulse duty factor: 1:1 See below for data relating to cables, cable length, shield support, input pulse levels, hysteresis, track displacement, and pulse frequency.
44	Track 1 negative connection		
45	Track 2 positive connection		
46	Track 2 negative connection		
47	Zero mark positive connection		
48	Zero mark negative connection		
<b>Analog outputs (assignable outputs)</b>			
49	AO 0	Analog output 0	$\pm 10$ V, max. 2 mA short-circuit proof, resolution $\pm 15$ bits
50	M	Ground, analog	
51	AO 1	Analog output 1	
52	M	Ground, analog	

Terminal X177	Function	Technical specifications
<b>Connections for temperature sensor (motor interface 1)</b>		
53	Temp 1	Sensor acc. to p50490 (refer to SINAMICS DCM List Manual) The cable to the temperature sensor on the motor must be shielded. The shield is to be connected to ground at both ends. The cables for the Temp 1 and Temp 3 connections to the temperature sensor must be approximately the same length. The sense cable (Temp 2) is used for compensating the cable resistances. If you are not using a sense cable, terminals 54 and 55 must be connected. Connection with/without sense cable:
54	Temp 2 (sense cable)	
55	Temp 3	
56	M	Ground, analog
Connector board module		

### Characteristic values for the incremental encoder evaluation electronics

For supported encoder types, refer to the description of parameter p0400 and Appendix A.2 in the SINAMICS DCM List Manual.

#### Note

Incremental encoder evaluation via terminals X177.41 to 48 does not support any SSI encoders.

A Sensor Module Cabinet-Mounted SMC30 is required for evaluating SSI encoders, see Chapter "Additional system components (Page 191)".

#### NOTICE

**Selecting the encoder type with p0400 does not result in any changes to the supply voltage for the incremental encoder (terminals X177.41 and 42).**

Terminal X177.41 always supplies +15 V. An external power supply is required for incremental encoders with other supply voltages (e.g. +5 V).

**Input pulse levels:**

Encoder signals (symmetrical/asymmetrical) up to a maximum of 27 V differential voltage can be processed by the evaluation electronics.

The encoder type is selected using p0400. The evaluation electronics are adjusted electronically to the encoder signal voltage:

<b>Rated input voltage</b>	5 V	15 V
Encoder	TTL	HTL
Low signal level (differential voltage)	< 0.8 V	< 5.0 V
High signal level (differential voltage)	> 2.0 V	> 8.0 V
Hysteresis	> 0.2 V	> 1.0 V
Common-mode controllability	±10 V	±10 V

If the incremental encoder does not supply any symmetrical encoder signals, it must be grounded with each signal cable twisted in pairs and connected to the negative connections of track 1, track 2, and zero mark.

**Switching frequency:**

The maximum frequency of the encoder pulses is 300 kHz. To ensure the encoder pulses are evaluated correctly, the minimum distance (Tmin) between two encoder signal edges (track 1, track 2), as listed in the table, must be adhered to.

<b>Rated input voltage</b>	5 V		15 V		
Differential voltage <sup>1)</sup>	2 V	> 2.5 V	8 V	10 V	> 14 V
Tmin <sup>2)</sup>	630 ns	380 ns	630 ns	430 ns	380 ns

- 1) Differential voltage at the terminals of the evaluation electronics
- 2) The phase error LG (deviation from 90°) that may occur as a result of the encoder and cable can be calculated on the basis of Tmin:  
 $LG = \pm (90^\circ - fp \times Tmin \times 360^\circ)$   
 LG = phase fault  
 fp = pulse frequency  
 Tmin = minimum edge clearance  
 This formula only applies if the pulse duty factor of the encoder signals is 1:1.

If the incremental encoder is incorrectly matched to the encoder cable, disturbing cable reflections will occur at the receiving end. To ensure that encoder pulses of this type can be evaluated without errors, these reflections need to be damped. The limit values listed in the table below must be adhered to in order to prevent the resulting power losses in the evaluation electronics adaptor from being exceeded.

fmax	50 kHz	100 kHz	150 kHz	200 kHz	300 kHz
Differential voltage <sup>3)</sup>	≤ 27 V	≤ 22 V	≤ 18 V	≤ 16 V	≤ 14 V

- 3) Differential voltage of encoder pulses without load (= approximately the supply voltage of the incremental encoder)

**Cable, cable length, shield support:**

The encoder cable capacitance must be recharged at each encoder edge change. The rms value of this current is proportional to the cable length and pulse frequency, and must not exceed the current permitted by the encoder manufacturer. A suitable cable that meets the recommendations of the encoder manufacturer must be used, and the maximum cable length must not be exceeded. Generally speaking, a twisted cable pair with a single pair shield is sufficient for each track. This reduces crosstalk between the cables. Shielding all the pairs provides protection against interference pulses. The shield should be connected to the SINAMICS DC MASTER shield support over a large area.

**Note**

For connecting an incremental encoder see also Chapter "Applications (Page 705)".

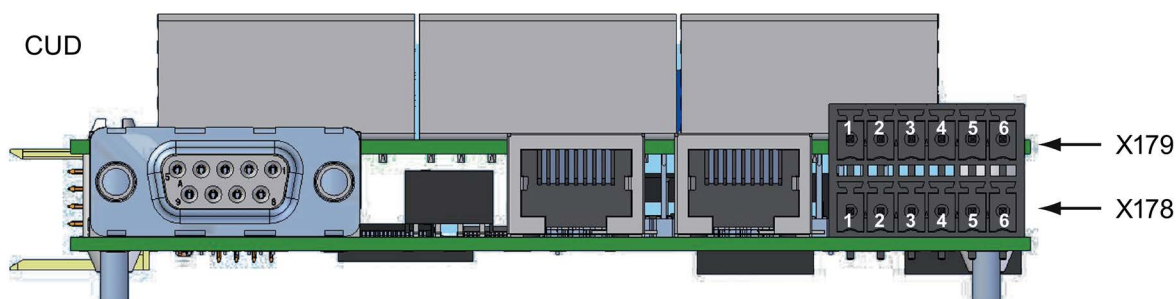


Figure 6-59 Arrangement X178 and X179

**Serial interface to AOP30/USS interface**

Table 6- 37 Terminal X178

Terminal X178	Function	Technical specifications
1	Supply (output)	24 V DC short-circuit proof, maximum load 200 mA Internal supply related to internal ground terminal
2	Ground, AOP M	
3	RX+/TX+	Send and receive cable, RS485, two-wire Positive differential input/output
4	RX-/TX-	Send and receive cable, RS485, two-wire Negative differential input/output
5	Ground, digital M	
6	Ground, digital M	
"Control Unit (CUD)" module		

6.9 Assignment of terminals and connectors

Table 6- 38 Terminal X179


Terminal X179	Function	Technical specifications
1	Supply (output)	4.4 to 5.4 V DC short-circuit proof, maximum load 300 mA Internal supply related to internal ground terminal
2	Ground, digital M	
3	TXD1	Send cable, RS232 standard (V.24)
4	RXD1	Receive cable, RS232 standard (V.24)
5	TXD2	Send cable, RS232 standard (V.24)
6	RXD2	Receive cable, RS232 standard (V.24)
"Control Unit (CUD)" module		

**Note**

Only one of the two interfaces – RS485 (X178-3, 4) or RS232 (X179-3, 4) – may be used.

**PROFIBUS connection**


Table 6- 39 PROFIBUS connector assignment

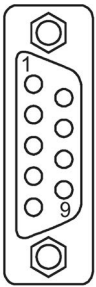Connector X126	Pin	Signal name	Technical specifications
	1	-	Not assigned
	2	-	Not assigned
	3	RxD/TxD-P	RS485 receive/transmit data P (B)
	4	CNTR-P	Control signal (TTL)
	5	DGND	PROFIBUS data ground
	6	VP	Positive supply voltage (5 V +/-10%)
	7	-	Not assigned
	8	RxD/TxD-N	RS485 receive/transmit data N (A)
	9	-	Not assigned
"Control Unit (CUD)" module			




## DRIVE-CLiQ

Table 6- 40 DRIVE-CLiQ connector assignment

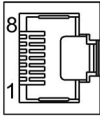Connector X100, X101	Pin	Signal name	Technical specifications
	1	TXP	Transmit data +
	2	TXN	Transmit data -
	3	RXP	Receive data +
	4	-	Reserved, do not use
	5	-	Reserved, do not use
	6	RXN	Receive data -
	7	-	Reserved, do not use
	8	-	Reserved, do not use
	-	Shield	Permanently connected to ground
"Advanced CUD" module			

## Parallel interface

Table 6- 41 Connector assignment, parallel interface

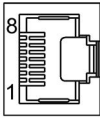Connector X165, X166	Pin	Signal name	Technical specifications
	1	SYNC_P	Synchronization +
	2	SYNC_N	Synchronization -
	3	CANH	CAN +
	4	-	Reserved, do not use
	5	-	Reserved, do not use
	6	CANL	CAN -
	7	-	Reserved, do not use
	8	-	Reserved, do not use
	-	Shield	Permanently connected to ground
Standard CUD, Advanced CUD module			

**Terminal assignment for option G63**

The technical data for terminals X177\_1, X177\_2 and X177\_5 corresponds to the specifications for terminal X177 on the Connector Board in the version without option G63, see Table 6-36 Assignment, terminal X177 (Page 177).

Table 6- 42 Assignment of the terminals on the Terminal Module Cabinet (TMC) (overview)

Terminal	Function		Description
<b>X177_1, X177_2</b>			
<b>1st terminal block (X177_1)</b>			
1, 2	AI 3 +, AI 3 -	Analog input 3	See X177.1 and 2
3, 4	AI 4 +, AI 4 -	Analog input 4	See X177.3 and 4
5, 6	AI 5 +, AI 5 -	Analog input 5	See X177.5 and 6
7, 8	AI 6 +, AI 6 -	Analog input 6	See X177.7 and 8
9, 10	24 V DC	24 V supply (output)	24 V DC, short-circuit proof Max. load 200 mA (terminals 9, 10, 57, 58, 59 and 60 combined) Internal supply to digital ground and analog ground
11, 12, 13, 14	DI 0, 1, 2, 3	Digital input 0, 1, 2, 3	See X177.11, 12, 13, 14
15, 16, 17, 18	DI/DO 4, 5, 6, 7	Digital input/output 4, 5, 6, 7	See X177.15, 16, 17, 18
19, 20, 21, 22	DO 0, 1, 2, 3	Digital output 0, 1, 2, 3	See X177.19, 20, 21, 22, 23, 24
23, 24	M	Ground, digital	
25, 26	AI 0 +, AI 0 -	Analog input 0, main setpoint	See X177.25 and 26
27, 28	AI 1 +, AI 1 -	Analog input 1	See X177.27 and 28
29, 30	AI 2 +, AI 2 -	Analog input 2	See X177.29 and 30
31, 32	P10, N10	Reference voltage ±10 V (output)	See X177.31, 32, 33, 34
33, 34	M	Ground, analog	
<b>2nd terminal block (X177_2)</b>			
35, 36	M	Ground, digital	See X177.35 and 36
37, 38	RS485: TX+, TX-	Send cable +, -	See X177.37 and 38
39, 40	RS485: RX+, RX-	Receive cable +, -	See X177.39 and 40
41, 42	Incremental encoder supply		See X177.41 and 42
43, 44	Incremental encoder track 1 +/-		See X177.43 and 44
45, 46	Incremental encoder track 2 +/-		See X177.45 and 46
47, 48	Incremental encoder zero mark +/-		See X177.47 and 48
49, 50	AO 0, M	Analog output 0, analog ground	See X177.49 and 50
51, 52	AO 1, M	Analog output 1, analog ground	See X177.51 and 52
53, 54, 55	Temp 1, 2, 3	Temperature sensor, motor interface 1	See X177.53, 54, 55
56	M	Ground, analog	See X177.56

Terminal X177_1, X177_2	Function		Description
57, 58, 59, 60	24 V DC	24 V supply (output)	24 V DC, short-circuit proof Max. load 200 mA (terminals 9, 10, 57, 58, 59 and 60 combined) Internal supply to digital ground and analog ground
61, 62, 63, 64	M	Ground, digital	-
"Terminal Module Cabinet (TMC)" module			

Table 6- 43 Assignment of the terminals on the Cabinet Board (overview)

Terminal X177_5	Function		Description
33, 34	M	Ground, analog	-
35, 36	M	Ground, digital	See X177.35 and 36
37, 38	RS485: TX+, TX-	Send cable +, -	See X177.37 and 38
39, 40	RS485: RX+, RX-	Receive cable +, -	See X177.39 and 40
"Cabinet Board" module			

**Note:**

The terminals on X177\_5 are connected in parallel to the terminals with the same name on the Terminal Module Cabinet (TMC).

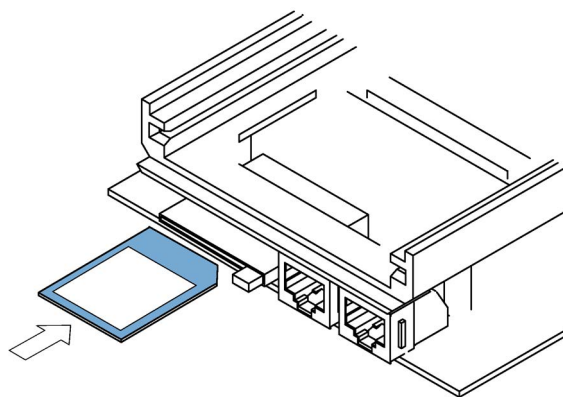
**Memory card slot**

Figure 6-60 "Control Unit (CUD)" module, memory card slot

**NOTICE**

**Using the memory card**

- The memory card may only be inserted as shown in the previous figure.
- The memory card must not be removed or inserted while data is being saved. Procedure to safely remove the memory card, see Chapter "Operation", Section "Memory card functions".
- If you are returning a defective "Control Unit (CUD)" module, do not return the memory card along with it – instead, keep it so that you can use it in the replacement module.

A memory card is not required for the standard drive operation.


The memory card is needed in the following applications:

- Saving parameters  
Parameters are saved on the memory card and can simply be copied onto a new CUD if it needs to be replaced.
- Firmware update  
It is easy to perform a firmware update using a memory card.
- Loading additional languages onto the Advanced Operator Panel AOP30.
- Performing an offline long-time trace. See also Chapter "Diagnostic memory (Page 632)"
- Loading the DCC block library into the drive
- SINAMICS Link function: The SINAMICS Link function requires that the memory card is always inserted.
- Modbus TCP function: The Modbus TCP function requires that the memory card is always inserted.
- Saving the Diagstor.spd diagnostics file to the \USER\SINAMICS\DATA\LOG directory. See also Chapter "Trend recorder function (Page 633)"

## 6.9.6 Assignment of the RS485 cable to the AOP30

**Note**

A 24 V power supply is required to operate the AOP30. For a maximum cable length of 50 m, this can be taken from the CUD of the SINAMICS DCM. An external power supply must be used for cable lengths > 50 m.

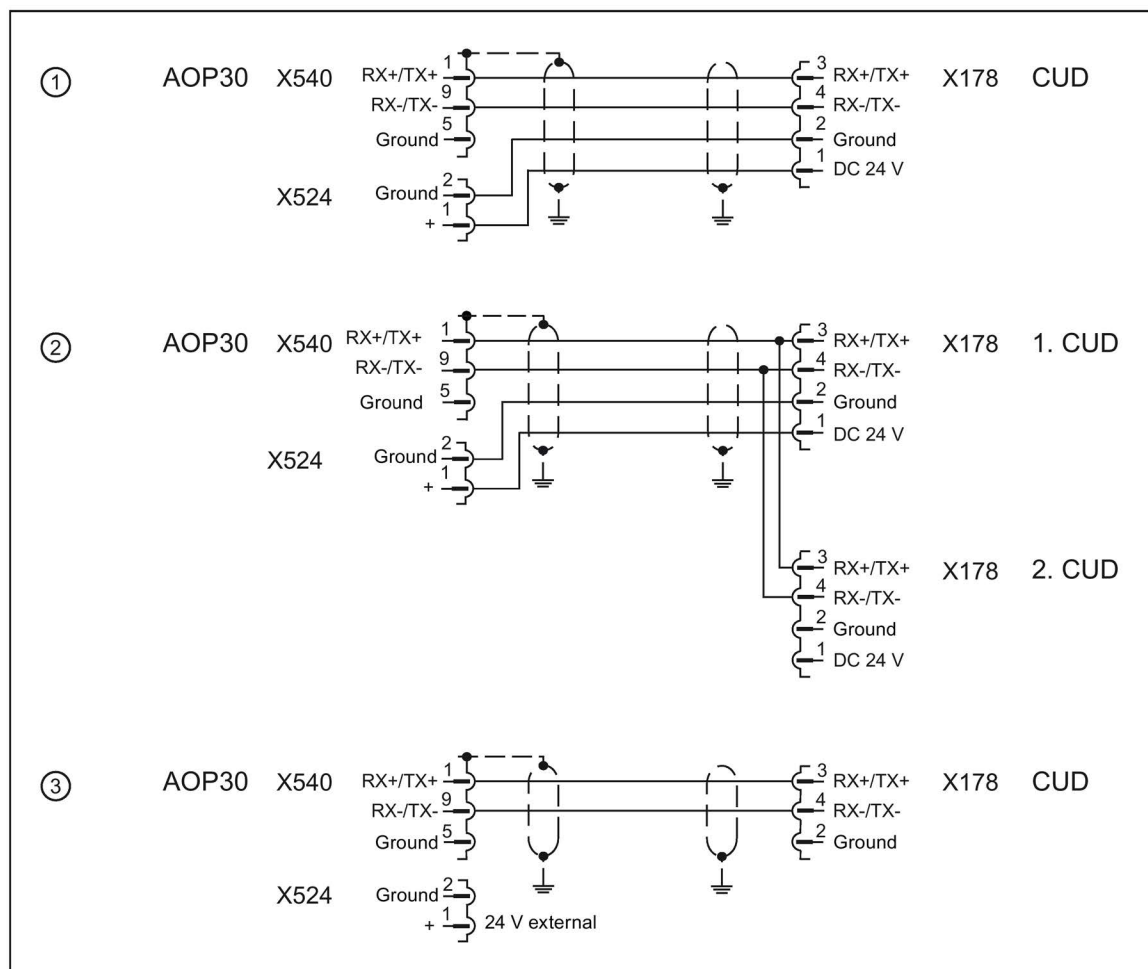

- ① RS485 cable with 24 V DC power supply from the CUD - max. 50 m
- ② RS485 cable when operating with 2 CUDs, 24 V DC power supply from one CUD – max. 50 m
- ③ RS485 cable when supplying the AOP30 from an external 24 V DC source – max. 200 m

X524 Plug terminals

X178 Plug terminals

X540 9-pin Sub-D socket

Figure 6-61 Assignment, RS485 cable

### 6.9.7 Terminal assignment functional safety

Table 6- 44 Terminal type functional safety

<b>X200, X201:</b>	
Type	PUSH IN connecting terminal LMF 5.08
Clamping range	Min. 0.12 - 2.5 mm <sup>2</sup> / AWG 26 - AWG 12
Connection capacity	Rigid/flexible/conductor sizes (mm <sup>2</sup> /AWG): 0.2 - 2.5 / 26 - 12, with ferrule: 0.25 ... 2.5 mm <sup>2</sup>
Stripped length	10 mm
Connection system	PUSH IN screwdriver blade 0.6 x 3.5 mm according to DIN 5264 standard

Table 6- 45 Assignment of customer terminals on Allocation Board (overview)

Terminal	Function / Labeling	Technical specifications
X200-1	P24	Output 20 to 26 V, short-circuit proof Can be continuously loaded up to 30 mA Used for supplying X200-2, if STO is not used.
X200-2	STO	Input (both terminals are connected) H signal (no STO): +15 V to +30 V, input current 2 mA (typical) L signal (STO): -30 V to +5 V or terminal open Leakage current maximum 0.5 mA Maximum cable length: 30 m The input must be supplied from a PELV power supply. Test pulses are not permitted.
X200-3	STO	
X201-1	RM2	Feedback contact for safety relay
X201-2	RM1	The contact is closed if the STO is selected. Rated voltage 24 V, maximum current load 200 mA, leakage current maximum 0.5 mA Connection to diagnostic circuit of the safety relay (PELV circuit)
"Allocation Board" module		

**Note**

The maximum cable length that can be connected is 30 m.

## 6.10 Installation notes for installation according to UL 508C

### Note

The following text has been taken from excerpts from the UL file E203250 and is therefore provided in English.

- "Solid state motor overload protection at 110% of full-load current is provided in each model", or equivalent.
- "Integral solid state short circuit protection does not provide branch circuit protection. Branch circuit protection must be provided in accordance with the National Electrical Code and any additional local codes", or the equivalent.
- Blower motor protection type 3RV1011-0EA1 trimmed to 0.33 A manufactured by Siemens is to be provided for blower motor type R2D225-RA26-11 in drive model sizes C and D.
- Blower motor protection type 3RV1011-0GA1 trimmed to 0.50 A manufactured by Siemens is to be provided for blower motor Type R2D250-RA28-17 in drive model size E.
- Blower motor protection type 3FV1011-0KA1 trimmed to 1.25 A manufactured by Siemens is to be provided for blower motor Type RH28M-2DK.3F.1R in Drive model size F.

Table 6- 46 Overview of Frame Sizes (in mm)

Size	Width	Height	Depth	Line voltage (V)	Output current (A)
A	385	268	210	400, 480	15 - 30
B	385	268	250	400, 480, 575	60 - 280
C	625	268	275	400, 480, 575	400 - 600
D	700	268	310	400, 480, 575	760 - 850
E	780	268	435	400, 480, 575	1000 - 1200
F	880	448	505	400, 480, 575	1600 - 3000





## Additional system components

---

### Note

The components described here are used in several units in the SINAMICS family. The next chapter may, therefore, contain references to manuals for these units.

---

The SINAMICS DC MASTER supports the following components from the SINAMICS drive system:

CBE20	Communication Board Ethernet
SMC10, SMC30	Sensor Module Cabinet-Mounted
TM15	Terminal Module
TM31	Terminal Module
TM150	Terminal Module

In order to operate the SINAMICS DC MASTER with these components, it must be equipped with (an) Advanced CUD(s); (see the list of options in Chapter "Ordering information for options and accessories (Page 30)").

The Communication Board CBE20 can be ordered as an option for the SINAMICS DC MASTER and is installed directly in the unit (in the OMI (Option Module Interface) slot of the CUD).

The SMC10, SMC30, TM15, TM31 and TM150 modules are installed separately and connected to the SINAMICS DC MASTER via the DRIVE-CLiQ interface.

---

### Note

The modules SMC10, SMC30, TM15, TM31 and TM150 must not be connected with the DRIVE-CLiQ hubs DME20 and DMC20 during operation with SINAMICS DCM.

---

### DRIVE-CLiQ interface

On the SINAMICS DC MASTER, up to three terminal modules TM15/TM31/TM150 can be connected to the DRIVE-CLiQ in any desired combination and in addition one Sensor Module Cabinet-Mounted SMC10 or SMC30 can be connected.

The CUD features two DRIVE-CLiQ ports (X100, X101). Any combination of the modules can be connected in series or in parallel. The Sensor Modules SMC10 or SMC30 only have one DRIVE-CLiQ interface and are therefore always the last module on the bus.

## 7.1 Option Board: Communication Board Ethernet CBE20

### 7.1.1 Description

The SINAMICS DC MASTER can be connected to PROFINET using the Communication Board Ethernet CBE20 interface module. The module supports PROFINET IO with Isochronous Realtime Ethernet (IRT) and PROFINET IO with RT. Mixed operation is not permissible. PROFINET CBA is not supported.

The option board has an X1400 interface with 4 ports for communication.

The CBE20 Communication Board Ethernet also allows SINAMICS link connections to be established, connection to EtherNet/IP and to Modbus TCP.

SINAMICS Link allows data to be directly exchanged between up to 64 CU320-2 PN or CU320-2 DP Control Units or CUD, see Chapter "Communication via SINAMICS Link (Page 512)".

For further information on EtherNet/IP, see Chapter "EtherNet/IP (Page 525)".

For further information on Modbus TCP, see Chapter "Communication via Modbus TCP (Page 538)".

### 7.1.2 Safety instructions

<b>NOTICE</b>
<b>Damage or malfunctions of the Option Board by inserting and withdrawing during operation</b>
Withdrawing and inserting the Option Board during operation can damage it or cause it to malfunction.
<ul style="list-style-type: none"><li>• Only withdraw or insert the Option Board when the Control Unit is de-energized.</li></ul>



<b>NOTICE</b>
<b>Qualified personnel</b>
The CBE20 must only be operated by qualified personnel. The ESD information must be observed.

### 7.1.3 Interface description

#### 7.1.3.1 Overview

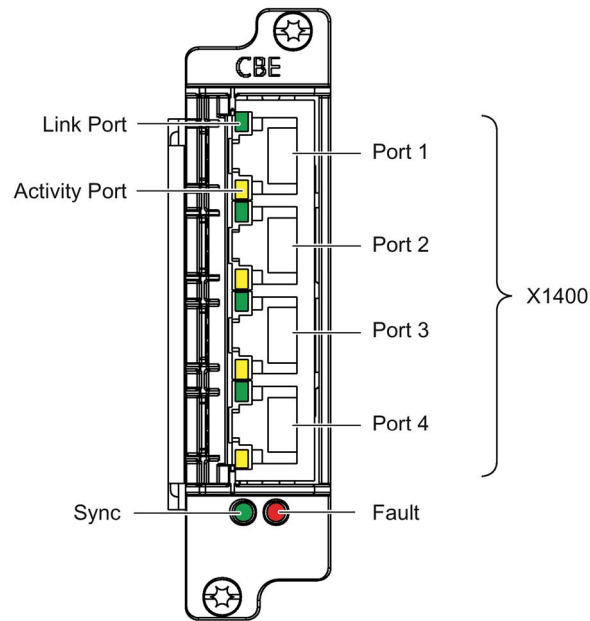



Figure 7-1 Interface description CBE20

#### MAC address

The MAC address of the Ethernet interface is located on the upper side of the board.

### 7.1.3.2 X1400 Ethernet interface

Table 7- 1 X1400 Ethernet, ports 1-4

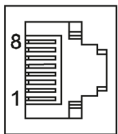	Pin	Signal name	Technical specifications
	1	RXP	Receive data +
	2	RXN	Receive data -
	3	TXP	Transmit data +
	4	Reserved, do not use	
	5	Reserved, do not use	
	6	TXN	Transmit data -
	7	Reserved, do not use	
	8	Reserved, do not use	
	Screened backshell	M_EXT	Screen, permanently connected
Connector type: RJ45 socket			

For diagnostic purposes, the ports have one green and one yellow LED.

#### Cable and connector types

Information on PROFINET cables and connectors can be found in the following catalog:

Industrial Communication  
 Catalog IK PI, 2009 Edition,

## 7.1.4 Meaning of the LEDs

Table 7- 2 Meaning of the LEDs at ports 1 to 4 of the X1400 interface

LED	Color	Status	Description
Link port	-	Off	Electronics power supply is missing or outside permissible tolerance range (link missing or defective).
	Green	Continuous light	A different device is connected to port x and a physical connection exists.
Activity port	-	Off	Electronics power supply is missing or outside permissible tolerance range (no activity).
	Yellow	Flashing light	Data is being received or sent at port x.


Table 7- 3 Meaning of the Sync and Fault LEDs on the CBE20

LED	Color	Status	Description
Fault	-	Off	If the link port LED is green: The CBE20 is operating normally, data is being exchanged with the configured IO Controller.
	Red	Flashing light	<ul style="list-style-type: none"> <li>The response monitoring interval has elapsed.</li> <li>Communications is interrupted.</li> <li>The IP address is incorrect.</li> <li>Incorrect or no configuration.</li> <li>Incorrect parameter settings.</li> <li>Incorrect or missing device name.</li> <li>IO Controller not connected/switched off, although an Ethernet connection has been established.</li> <li>Other CBE20 errors</li> </ul>
		Continuous light	CBE20 bus error <ul style="list-style-type: none"> <li>No physical connection to a subnet/switch.</li> <li>Incorrect transmission rate</li> <li>Full duplex transmission is not activated.</li> </ul>
Sync	-	Off	If the link port LED is green: Control Unit task system is not synchronized with the IRT clock. An internal substitute clock is generated.
	Green	Flashing light	Control Unit task system has synchronized with the IRT clock and data is being exchanged.
		Continuous light	Task system and MC-PLL have synchronized with the IRT clock.

Table 7- 4 Meaning of the OPT LED on the Control Unit

LED	Color	Status	Description, cause	Remedy
OPT	–	OFF	Electronics power supply is missing or outside permissible tolerance range. CBE20 is either defective or not inserted.	–
	Green	Continuous light	CBE20 is ready and cyclic communication is taking place.	–
		Flashing light 0.5 Hz	CBE20 is ready but cyclic communication is not running. Possible causes: <ul style="list-style-type: none"> <li>• Communication is being established.</li> <li>• At least one fault is present.</li> </ul>	–
	Red	Continuous light	Cyclic communication via PROFINET has not yet been established. However, non-cyclic communication is possible. SINAMICS is waiting for a parameterization/configuration telegram.	–
		Flashing light 0.5 Hz	The firmware update into the CBE20 has been completed with an error. Possible causes: <ul style="list-style-type: none"> <li>• The memory card for the control unit is defective.</li> <li>• The CBE20 is defective.</li> </ul> In this state CBE20 cannot be used.	–
		Flashing light 2 Hz	There is a communications error between the Control Unit and the CBE20. Possible causes: <ul style="list-style-type: none"> <li>• The CBE20 was withdrawn after booting.</li> <li>• The CBE20 is defective.</li> </ul>	Correctly insert the board, if required, replace.
	Orange	Flashing light 0.5 Hz	Firmware of the CBE20 currently being updated.	–

### 7.1.5 Installation

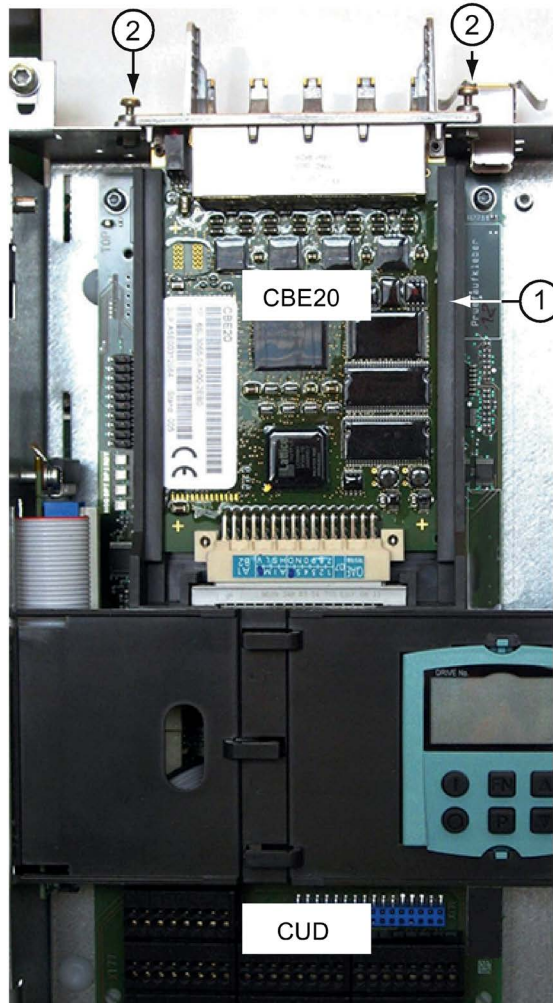

Push the CBE20 into the option module interface ① on the CUD from above, and tighten the screws ②.

Tool: Torx T10 screwdriver

Tightening torque: 1 Nm

Installing the CBE20

### 7.1.6 Technical data

Table 7- 5 Technical data

Communication Board CBE20 6SL3055-0AA00-2EBx	Unit	Value
Max. current requirements (at 24 V DC)	A <sub>DC</sub>	0.1
Power loss	W	2.4
Weight	kg	< 0.1

## 7.2 SMC10 Sensor Module Cabinet-Mounted

### 7.2.1 Description

The Sensor Module Cabinet-Mounted SMC10 is an expansion module for snapping on to a standard mounting rail acc. to EN 60715. It evaluates encoder signals and transmits the speed, actual position value and the rotor position via DRIVE-CLiQ to the Control Unit.

The SMC10 is used to evaluate sensor signals from resolvers.

### 7.2.2 Interface description

#### 7.2.2.1 Overview


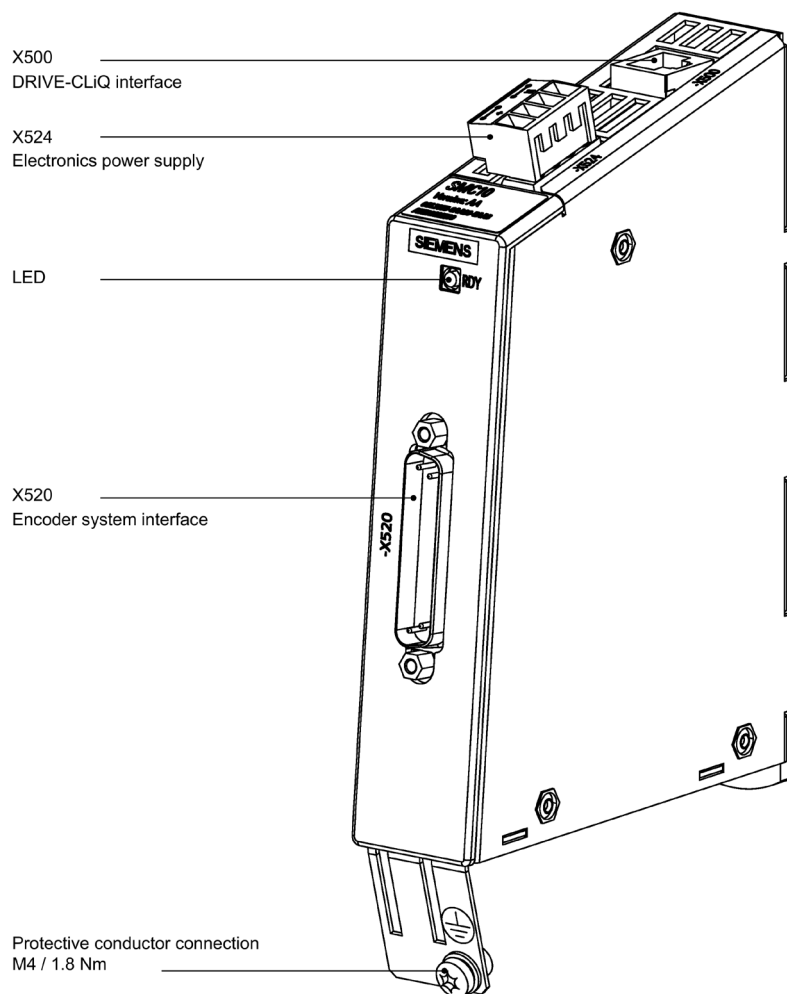


Figure 7-2 Interface overview for the SMC10

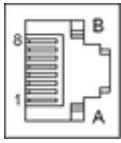

### 7.2.2.2 X500 DRIVE-CLiQ interface

Table 7- 6 X500: DRIVE-CLiQ interface

Connector	Pin	Signal name	Technical data
	1	TXP	Transmit data +
	2	TXN	Transmit data -
	3	RXP	Receive data +
	4	Reserved, do not use	
	5	Reserved, do not use	
	6	RXN	Receive data -
	7	Reserved, do not use	
	8	Reserved, do not use	
	A	Reserved, do not use	
	B	M (0 V)	Electronics ground


Connector type: DRIVE-CLiQ socket

The blanking cover for the DRIVE-CLiQ port is included in the scope of delivery.

Blanking covers (50 x) Article No: 6SL3066-4CA00-0AA0

### 7.2.2.3 X524 Electronics power supply

Table 7- 7 X524: Electronics power supply

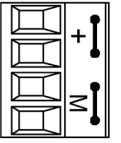Connector	Terminal	Function	Technical data
	+	Electronics power supply	Voltage: 24 V (20.4 ... 28.8 V) Current consumption: max. 0.35 A
	+	Electronics power supply	
	M	Electronics ground	Max. current via jumper in connector: 20 A (15 A according to UL/CSA)
	M	Electronics ground	

Type: Screw terminal  
Conductor cross sections that can be connected: Flexible, 0.08 mm<sup>2</sup> to 2.5 mm<sup>2</sup>  
Stripped length: 8 to 9 mm  
Tool: 0.4 × 2.0 mm screwdriver


The maximum cable length that can be connected is 30 m.

#### Note

The two "+" or "M" terminals are jumpered in the connector. This ensures that the supply voltage is looped through.

7.2.2.4 X520 encoder system interface

Table 7- 8 X520: Encoder system interface

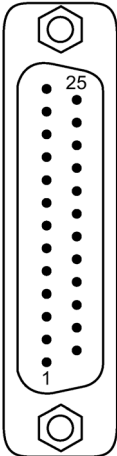Connector	Pin	Signal name	Technical data
	1	Reserved, do not use	
	2	Reserved, do not use	
	3	S2	Resolver signal A (sin+)
	4	S4	Inverted resolver signal A (sin-)
	5	Ground	Ground (for internal shield)
	6	S1	Resolver signal B (cos+)
	7	S3	Inverted resolver signal B (cos-)
	8	Ground	Ground (for internal shield)
	9	R1	Resolver excitation positive
	10	Reserved, do not use	
	11	R2	Resolver excitation negative
	12	Reserved, do not use	
	13	-	
	14	Reserved, do not use	
	15	Reserved, do not use	
	16	Reserved, do not use	
	17	Reserved, do not use	
	18	Reserved, do not use	
	19	Reserved, do not use	
	20	Reserved, do not use	
	21	Reserved, do not use	
	22	Reserved, do not use	
	23	Reserved, do not use	
	24	Ground	Ground (for internal shield)
	25	-	
Connector type: 25-pin SUB D connector			
Measuring current via temperature sensor connection: 2 mA			

### 7.2.3 Connection example

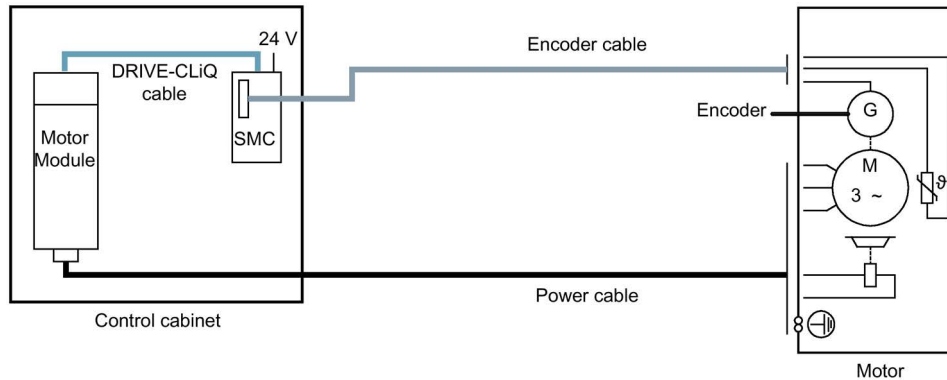


Figure 7-3 Connecting the encoder via a Sensor Module Cabinet-Mounted (SMC)

### 7.2.4 Meaning of the LED

#### 7.2.4.1 Meaning of the LED on the Sensor Module Cabinet-Mounted SMC10

Table 7-9 Meaning of the LEDs on the Sensor Module Cabinet-Mounted SMC10

LED	Color	Status	Description, cause	Remedy
RDY READY	-	Off	The electronics power supply is missing or outside the permissible tolerance range.	-
	Green	Continuous light	The component is ready for operation. Cyclic DRIVE-CLiQ communication is taking place.	-
	Orange	Continuous light	DRIVE-CLiQ communication is being established.	-
	Red	Continuous light	This component has at least one fault. <b>Note:</b> The LED is activated irrespective of whether the corresponding messages have been reconfigured.	Remove and acknowledge the fault.
	Green/ red	Flashing light 0.5 Hz	Firmware is being downloaded.	-
		Flashing light 2 Hz	Firmware download is complete. The system waits for POWER ON.	Carry out a POWER ON.
Green/ orange or Red/ orange	Flashing light	Component recognition via LED is activated <sup>1)</sup> . <b>Note:</b> Both options depend on the LED status when component recognition is activated.	-	

<sup>1)</sup> Parameters for activating the identification of components via LED are 1.p9210 and 1.p9211 (see DCM List Manual)

### 7.2.4.2 Cause and rectification of faults

#### Cause and rectification of faults

Additional information about the cause and how to resolve faults can be found here:

- SINAMICS DCM List Manual
- Chapter "Commissioning with the Starter commissioning tool (Page 287)"

### 7.2.5 Dimension drawing

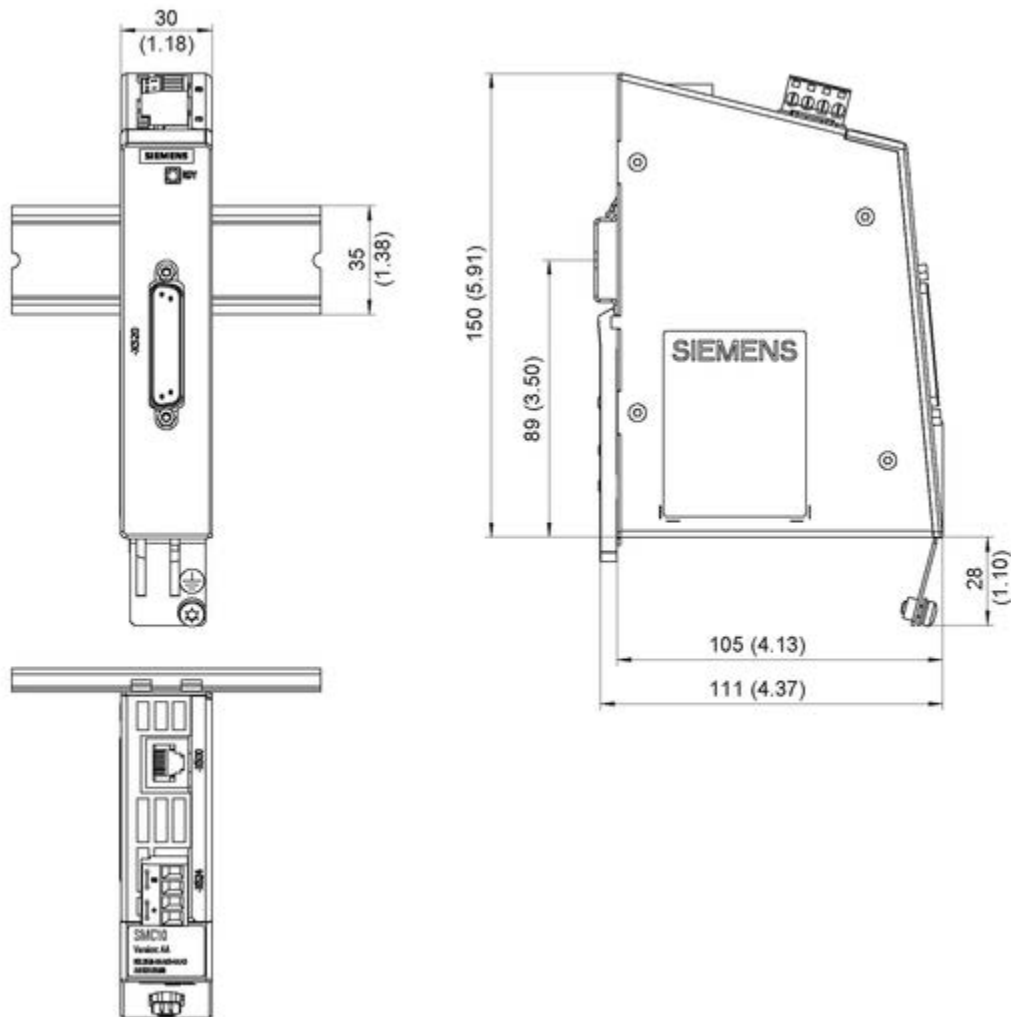


Figure 7-4 Dimension drawing of the Sensor Module Cabinet SMC10, all dimensions in mm and (inches)

## 7.2.6 Mounting

### Installation

1. Tilt the component backwards slightly and attach it to the DIN rail using the hooks.
2. Swivel the component onto the DIN rail until you hear the mounting slide at the rear latch into position.
3. Slide the components along the mounting rail to either the left or right up to their final position.

### Removal

1. First shift the mounting slide downwards at the lug to release the interlocking with the mounting rail.
2. Swivel the component to the front and withdraw it upwards from the DIN rail.

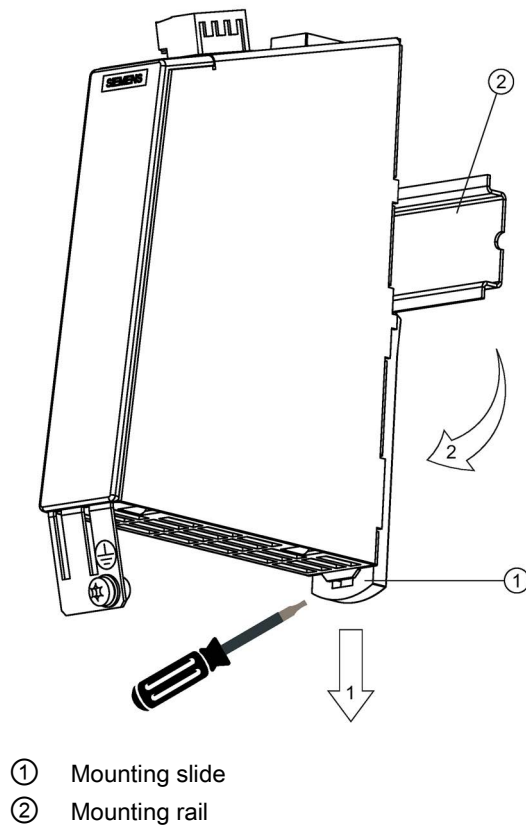


Figure 7-5 Removing from a DIN mounting rail

## 7.2.7 Technical data

Table 7- 10 Technical data

6SL3055-0AA00-5AAx	Unit	Value
<b>Electronics power supply</b>		
Voltage	$V_{DC}$	24 (20.4 ... 28.8)
Current (without encoder system)	$A_{DC}$	$\leq 0.20$
Current (with encoder system)	$A_{DC}$	$\leq 0.35$
Power loss	W	$\leq 10$
Max. cable length	m	30
<b>Specification</b>		
Transformation ratio of the resolver ( $\ddot{u}$ )		0.5
Excitation voltage on the SMC10 when $\ddot{u}=0.5$	$V_{rms}$	4.1
Amplitude monitoring threshold (secondary tracks) of the SMC10	$V_{rms}$	1
Excitation voltage (cannot be parameterized)	$V_{rms}$	4.1
Excitation frequency (synchronized to the current controller clock cycle)	kHz	5 to 16
PE/ground connection	At the housing with M4 screw	
Max. encoder cable length	m	130
Ventilation clearances, above/below	mm	50
Weight	kg	0.45

Table 7- 11 Max. frequency that can be evaluated (speed)

Resolver		Max. speed resolver / motor		
Number of poles	Number of pole pairs	8 kHz / 125 $\mu$ s	4 kHz / 250 $\mu$ s	2 kHz / 500 $\mu$ s
2-pole	1	120000 rpm	60000 rpm	30000 rpm
4-pole	2	60000 rpm	30000 rpm	15000 rpm
6-pole	3	40000 rpm	20000 rpm	10000 rpm
8-pole	4	30000 rpm	15000 rpm	7500 rpm

The ratio between the ohmic resistance R and the inductance L (the primary winding of the resolver) determines whether the resolver can be evaluated with the SMC10. See the figure below:

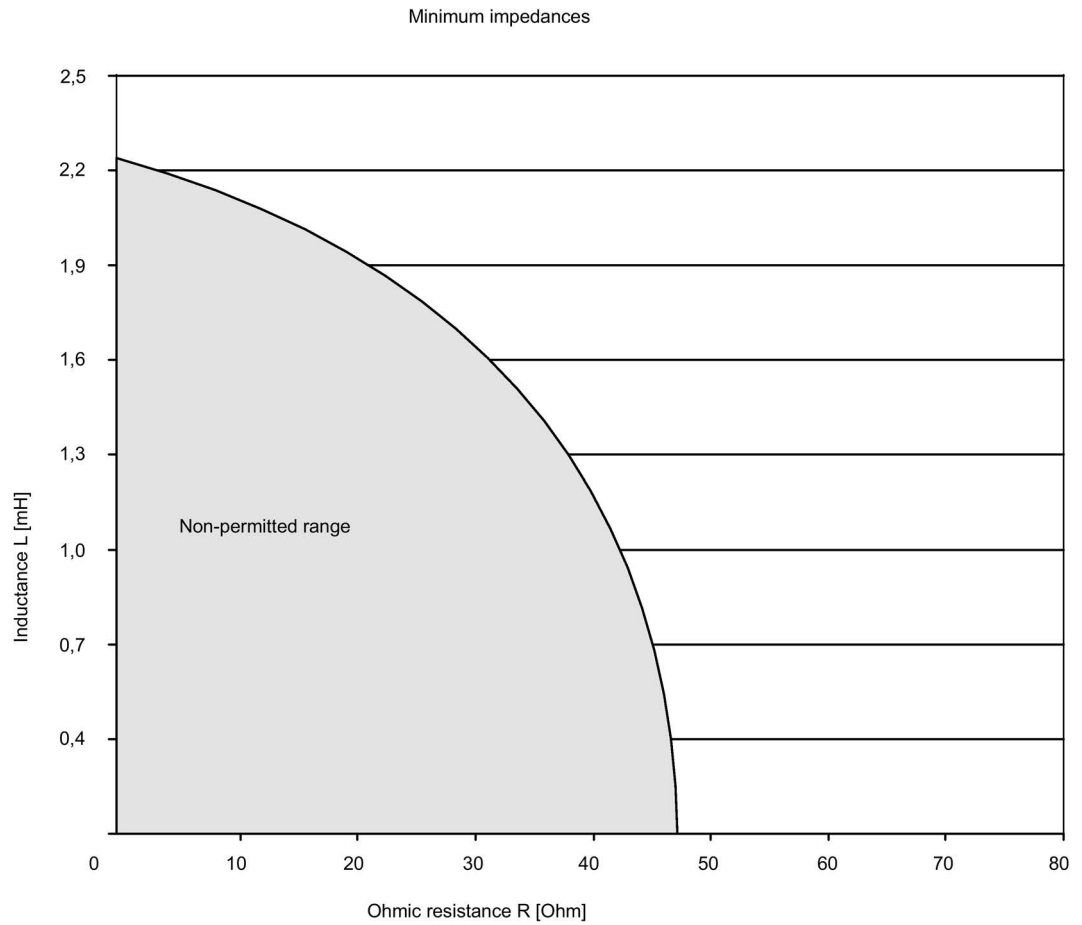


Figure 7-6 Rotor impedances that can be connected with excitation frequency  $f = 5000$  Hz

To check as shown in the previous figure, the impedances  $Z_{rs}$  or  $Z_{ro}$  (impedance between R1 and R2 with short-circuited or open outputs) from the encoder manufacturer's data sheet must be used.

## 7.3 Sensor Module Cabinet-Mounted SMC30

### Supported types

The SINAMICS DC MASTER only supports the Sensor Module Cabinet-Mounted SMC30 with article number 6SL3055-0AA00-5CA2. Other types may not be used. You can easily identify whether the version is supported by the width of the module:

Table 7- 12 SMC30 types

SMC30 article number	Width	Use with SINAMICS DC MASTER
6SL3055-0AA00-5CA2	30 mm	Possible
6SL3055-0AA00-5CA0	50 mm	Not possible
6SL3055-0AA00-5CA1	50 mm	Not possible

### Number of SMC30s connected

The SINAMICS DC MASTER supports the connection of **one** Sensor Module Cabinet-Mounted SMC30.

### 7.3.1 Description

The Sensor Module Cabinet-Mounted SMC30 evaluates encoder signals and transmits the speed, actual position value, and, if necessary, the motor temperature and reference point via DRIVE-CLiQ to the Control Unit.

The SMC30 is used to evaluate encoder signals from encoders with TTL, HTL, or SSI interfaces.

A combination of a TTL/HTL signal and SSI absolute signal is possible at terminals X521/X531 if both signals are derived from the same measured variable.



## 7.3.2 Safety instructions

### WARNING

#### Non-observance of the safety instructions

If the safety instructions in Chapter 1 are not observed, accidents can occur involving severe injuries or death.

- Make sure that the safety instructions are observed.

### WARNING

#### Fire through overheating due to insufficient ventilation clearances

Inadequate ventilation clearances cause overheating with a risk for personnel due to smoke and fire. This can also result in increased failures and reduced service life of the Sensor Module Cabinet-Mounted.

- For this reason, it is imperative that you maintain the 50 mm clearances above and below the Sensor Module Cabinet-Mounted.

### NOTICE

#### Shield support

When the encoder system is connected via terminals, make sure that the cable shield is connected to the component.

### Note

#### Encoder failures due to encoder signal disturbances

Unfavorable material combinations generate static electricity between the belt pulley and the belt. This electrostatic charge (several kV) can discharge via the motor shaft and the encoder which leads to disturbance of the encoder signals (encoder error).

- Use an antistatic version of the belt (special conductive polyurethane mixture).



### WARNING

#### Electric shock when disconnecting and connecting encoder cables during operation

When disconnecting plug-in connections during operation, arcs can result in severe injury or death.

- Only disconnect or connect the encoder cables to Siemens motors in a voltage-free state if hot-plugging has not been specifically released. When using direct measuring systems (third-party encoders), ask the manufacturer whether hot-plugging is permitted.

**NOTICE**

**Damage when connecting an impermissible number of encoder systems**

Damage results when more than the maximum permissible number of encoder systems are connected to a Sensor Module.

- Only connect one encoder system to a Sensor Module.

---

**Note**

**Reduced interference immunity through equalization currents via the electronic ground**

Make sure there is no electrical connection between the encoder system housing and the signal lines and the sensor system electronics.

If this is not carefully observed, under certain circumstances the system will not be able to reach the required interference immunity level (there is then a danger of equalization currents flowing through the electronics ground).

---

**NOTICE**

**Damage through the use of incorrect DRIVE-CLiQ cables**

Damage or malfunctions can occur on the devices or system when incorrect or unreleased DRIVE-CLiQ cables are used.

- Only use suitable DRIVE-CLiQ cables that have been released by Siemens for the respective application.

---

**Note**

**Malfunctions due to polluted DRIVE-CLiQ interfaces**

Malfunctions can occur in the system through the use of polluted DRIVE-CLiQ interfaces.

- Cover unused DRIVE-CLiQ interfaces with the supplied blanking covers.
- 

**Note**

The safety instructions on the Sensor Module must be observed.

After the product has reached the end of its service life, the individual parts should be disposed of in compliance with local regulations.

---

### 7.3.3 Interface description

#### 7.3.3.1 Overview

X500  
DRIVE-CLiQ interface

X524  
Electronics  
power supply  
0.25 Nm

LEDs

X520  
Encoder system interface  
HTL, TTL with  
track monitoring,  
SSI

Alternative encoder  
system  
interface  
HTL, TTL with  
track monitoring,  
SSI

Protective conductor  
connection  
M4/1.8 Nm

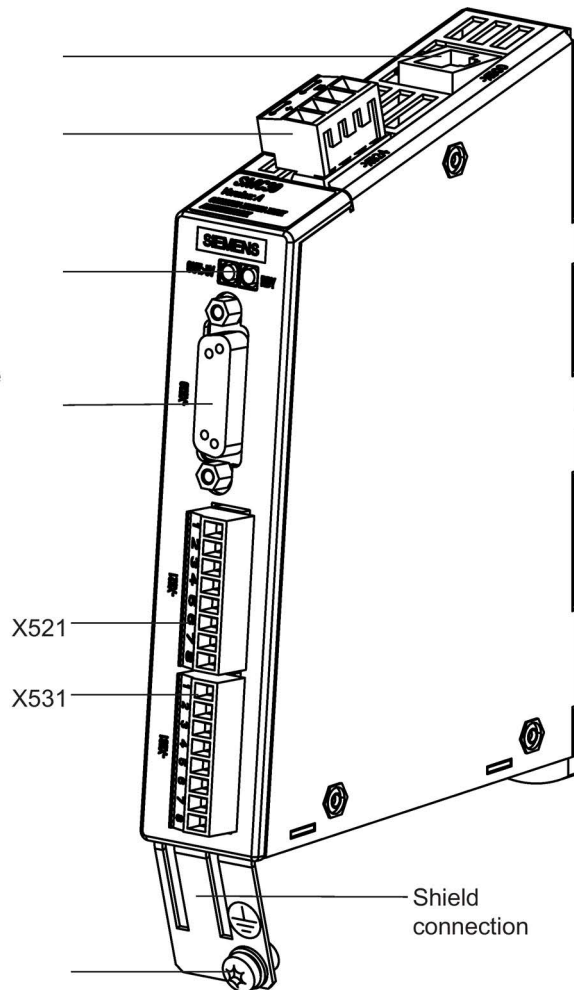
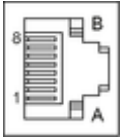


Figure 7-7 SMC30 interface description

### 7.3.3.2 X500 DRIVE-CLiQ interface

Table 7- 13 DRIVE-CLiQ interface X500

Connector	Pin	Signal name	Technical specifications
	1	TXP	Transmit data +
	2	TXN	Transmit data -
	3	RXP	Receive data +
	4	Reserved, do not use	
	5	Reserved, do not use	
	6	RXN	Receive data -
	7	Reserved, do not use	
	8	Reserved, do not use	
	A	Reserved, do not use	
	B	M (0 V)	Electronics ground


Connector type: DRIVE-CLiQ socket

The blanking cover for the DRIVE-CLiQ port is included in the scope of supply.

Blanking covers (50 x) Article No.: 6SL3066-4CA00-0AA0

### 7.3.3.3 X524 electronic power supply

Table 7- 14 X524 terminal strip

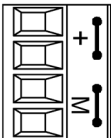Connector	Terminal	Function	Technical specifications
	+	Electronic power supply	Voltage: 24 V (20.4 – 28.8 V) Power consumption: Max. 0.55 A Max. current via the jumper in the connector: 20 A (15 A according to UL/CSA)
	+	Electronic power supply	
	M	Electronics ground	
	M	Electronics ground	

Type: Screw terminal  
 Conductor cross sections that can be connected: Flexible, 0.08 mm<sup>2</sup> to 2.5 mm<sup>2</sup>  
 Stripped length: 8 to 9 mm  
 Tool: 0.4 × 2.0 mm screwdriver


The maximum cable length that can be connected is 30 m.

**Note**

The two "+" or "M" terminals are jumpered in the connector. This ensures that the supply voltage is looped through.

## 7.3.3.4 X520 encoder system interface

Table 7- 15 X520 encoder system interface

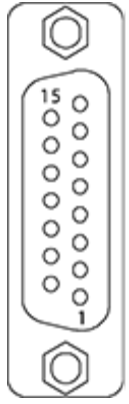Connector	Pin	Signal name	Technical specifications
	1	Reserved	Do not use
	2	Clock	SSI clock
	3	Clock*	Inverse SSI clock
	4	P encoder 5 V/24 V	Encoder supply
	5	P encoder 5 V/24 V	
	6	P sense	Sense input, encoder supply
	7	M encoder (M)	Ground, encoder supply
	8	Reserved	Do not use
	9	M sense	Ground for sense input
	10	R	Reference signal R
	11	R*	Inverse reference signal R
	12	B*	Inverse incremental signal B
	13	B	Incremental signal B
	14	A*/data*	Inverted incremental signal A/inverted SSI data
	15	A/data	Incremental signal A/SSI data

Connector type: SUB-D female, 15-pin



**NOTICE****Destruction of the encoder due to an incorrect supply voltage**

The encoder supply voltage can be assigned as 5 V or 24 V. The encoder may be destroyed if you enter the wrong parameters.

- Select the appropriate motor supply voltage.

7.3.3.5 X521/X531 alternative encoder system interface

Table 7- 16 X521/X531 alternative encoder system interface

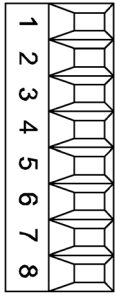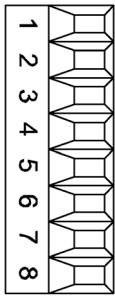Connector	Terminal	Designation	Technical specifications
	1	A	Incremental signal A
	2	A*	Inverse incremental signal A
	3	B	Incremental signal B
	4	B*	Inverse incremental signal B
	5	R	Reference signal R
	6	R*	Inverse reference signal R
	7	CTRL	Control signal
	8	M	Ground
	1	P_encoder 5 V/24 V	Encoder supply
	2	M_Encoder	Ground, encoder supply
	3	- Temp	Temperature sensor KTY84-1C130
	4	+ Temp	Temperature sensor KTY84-1C130
	5	Clock	SSI clock
	6	Clock*	Inverse SSI clock
	7	Data	SSI data
	8	Data*	Inverse SSI data
Max. connectable cross-section: 1.5 mm <sup>2</sup> Measuring current via the temperature sensor connection: 2 mA When unipolar HTL encoders are used, A*, B*, and R* on the terminal block must be jumpered with M_Encoder (X531) <sup>1)</sup> .			

1) Because the physical transmission properties are more robust, the bipolar connection should always be used. The unipolar connection should only be used if the encoder type does not output push-pull signals.



**⚠ WARNING**

**Electric shock due to unconnected cable shields**

Hazardous touch voltages can occur through capacitive cross-coupling due to unconnected cable shields.

- Attach the cable shield to the component via terminals for the encoder system connection.

### Temperature sensor connection

For the evaluation of the temperature sensor, see function diagram 8030 in the SINAMICS DCM List Manual.

#### NOTICE

##### Motor damage due to incorrectly connected KTY temperature sensor

A KTY temperature sensor connected with incorrect polarity cannot detect if the motor overheats. Overheating may result in damage to the motor.

- Connect a KTY temperature sensor with the correct polarity.

#### WARNING

##### Electric shock in the event of voltage flashovers on the temperature sensor cable

Flashover to the signal electronics can occur on motors without safe electrical separation of the temperature sensors.

- Only use temperature sensors that satisfy the specifications for electrical separation according to IEC 61800-5-1.

#### Note

The maximum length of the temperature sensor cable is 100 m. The cables must be shielded.

### 7.3.4 Connection examples

#### Connection example 1: HTL encoder, bipolar, with reference signal

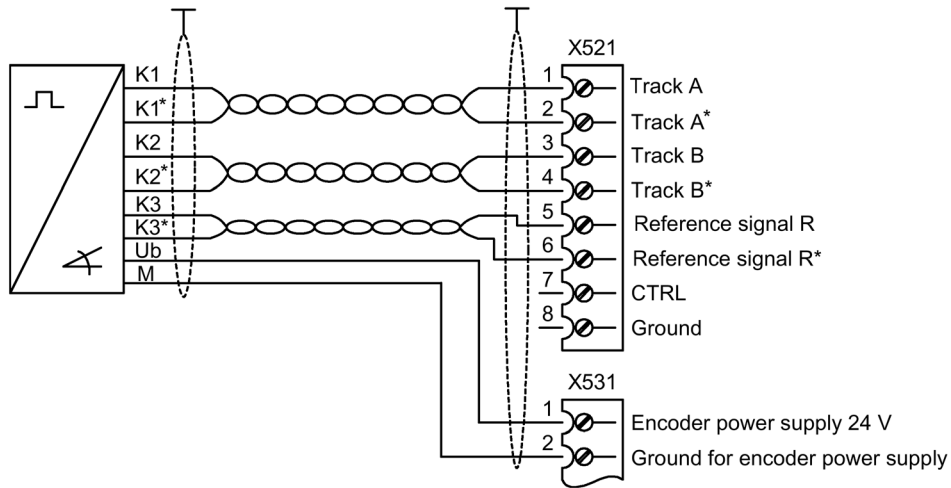


Figure 7-8 Connection example 1: HTL encoder, bipolar, with reference signal

Signal cables must be twisted in pairs in order to improve resistance to induced interference.

#### Connection example 2: HTL encoder, unipolar, with reference signal

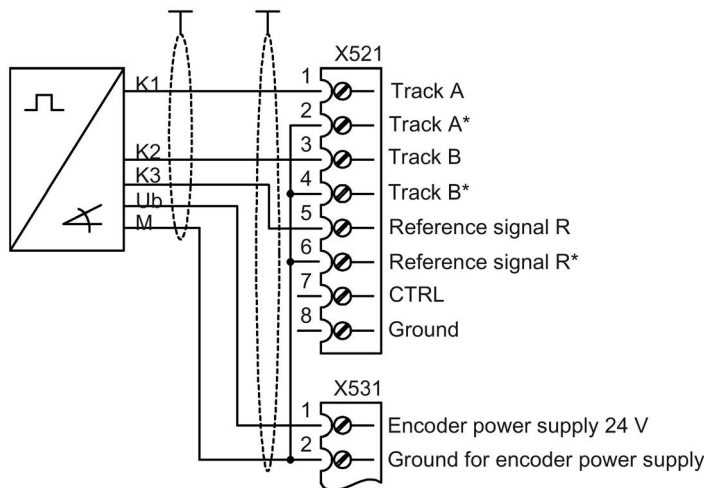


Figure 7-9 Connection example 2: HTL encoder, unipolar, with reference signal <sup>1)</sup>

<sup>1)</sup> Because the physical transmission properties are more robust, the bipolar connection should always be used. The unipolar connection should only be used if the encoder type does not output push-pull signals.





Figure 7-10 Connection example 2

---

**Note**

Diagram of the wire jumpers for connecting unipolar HTL encoders with reference signal.

---

### 7.3.5 Meaning of the LEDs

Table 7- 17 Meaning of LEDs on the Sensor Module Cabinet SMC30

LED	Color	Status	Description, cause	Remedy
RDY READY	-	Off	Electronics power supply is missing or outside permissible tolerance range.	-
	Green	Continuous light	The component is ready for operation and cyclic DRIVE-CLiQ communication is taking place.	-
	Orange	Continuous light	DRIVE-CLiQ communication is being established.	-
	Red	Continuous light	At least one fault is present in this component. <b>Note:</b> The LED is activated irrespective of whether the corresponding messages have been reconfigured.	Remedy and acknowledge fault
	Green/ red	Flashing light 0.5 Hz	Firmware is being downloaded.	-
	Green/ red	Flashing light 2 Hz	Firmware download is complete. Wait for POWER ON.	Carry out a POWER ON
	Green/ orange or Red/ orange	Flashing light	Component recognition via LED is activated (p0144). <b>Note:</b> Both options depend on the LED status when module recognition is activated via p0144 = 1.	-
OUT > 5 V	-	Off	Electronics power supply is missing or outside permissible tolerance range. Power supply $\leq$ 5 V.	-
	Orange	Continuous light	Electronics power supply for encoder system available. Power supply > 5 V. <b>Important:</b> Make sure that the connected encoder can be operated with a 24 V power supply. If an encoder that is designed for a 5 V supply is operated with a 24 V supply, this can destroy the encoder electronics.	-

### 7.3.6 Dimension drawing

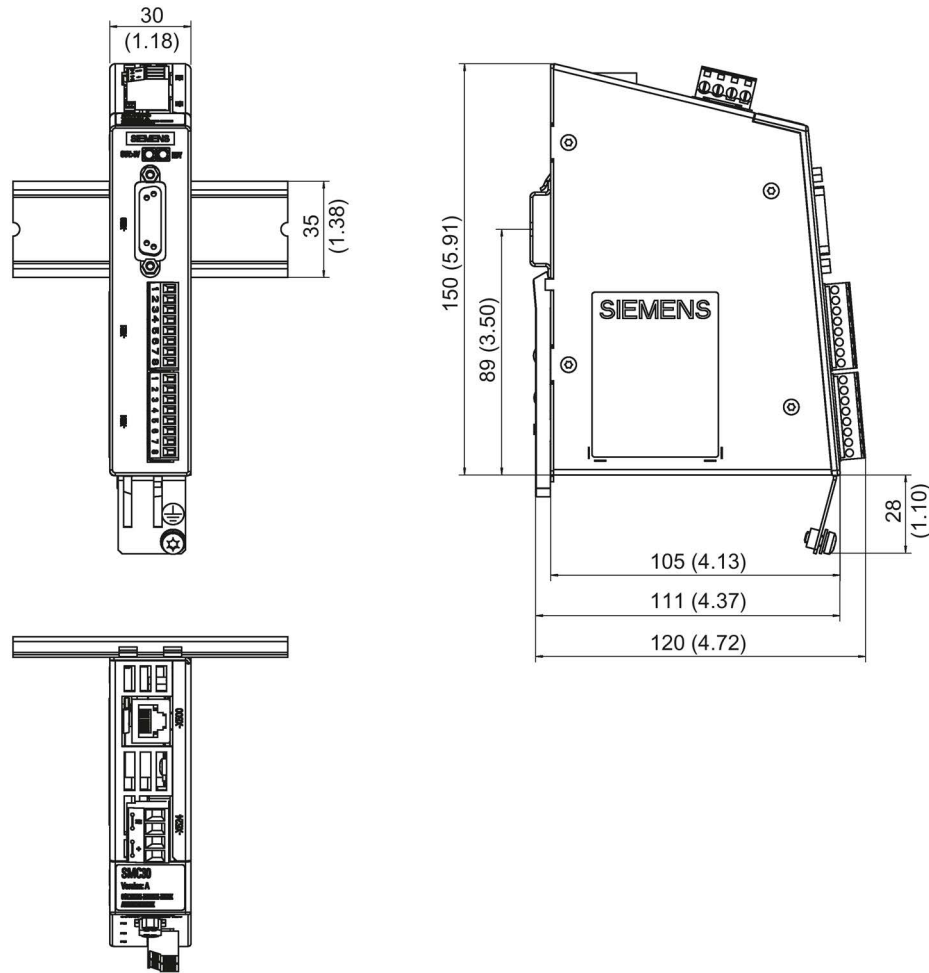


Figure 7-11 Dimension drawing of the Sensor Module Cabinet SMC30, all data in mm and (inches)


### 7.3.7 Mounting

#### Installation

1. Tilt the component backwards slightly and attach it to the DIN rail using the hooks.
2. Swivel the component onto the DIN rail until you hear the mounting slide at the rear latch into position.
3. Slide the components along the mounting rail to either the left or right up to their final position.

## Removal

1. First shift the mounting slide downwards at the lug to release the interlocking with the mounting rail.
2. Swivel the component to the front and withdraw it upwards from the DIN rail.

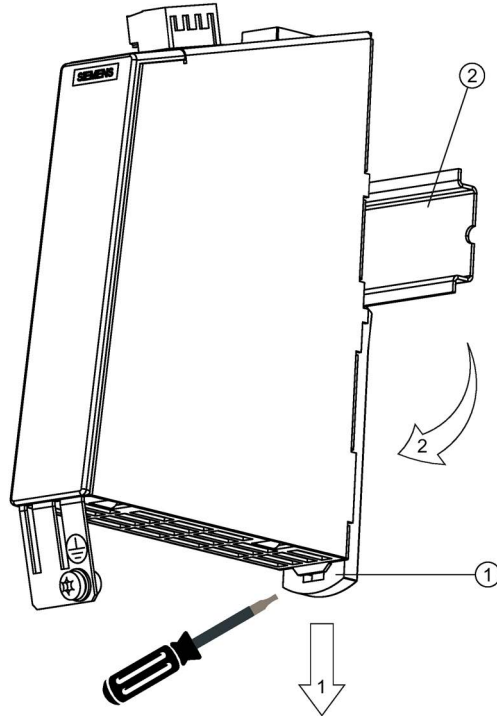


- ① Mounting slide
- ② Mounting rail

Figure 7-12 Removing from a DIN mounting rail

### 7.3.8 Protective conductor connection and shield support

Shield supports are only required if the system is connected to X521/X531.

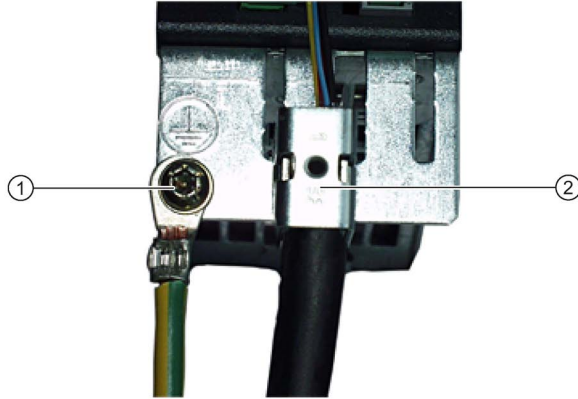

- ① Protective conductor connection with M4 screw / 1.8 Nm
- ② Shield connection terminal, Weidmüller company, type: KLBUE CO1, Article number: 1753311001

Figure 7-13 Shield support and PE conductor connection

The bending radii of the cables must be observed (see MOTION-CONNECT description).

#### Note

Only use screws with a permissible mounting depth of 4 - 6 mm.

#### NOTICE

##### Damage or faulty operation due to incorrect shielding and impermissible cable lengths

If the correct shielding procedures and the permissible cable lengths are not observed, the machine can be damaged or may malfunction.

- Only use shielded cables.
- Do not exceed the cable lengths stated in the technical data.

### 7.3.9 Technical data

Table 7- 18 Technical data

6SL3055-0AA00-5CA2	Unit	Value
<b>Electronic power supply</b>		
Voltage	$V_{DC}$	24 DC (20.4 – 28.8)
Current (without encoder system)	$A_{DC}$	$\leq 0.20$
Current (with encoder system)	$A_{DC}$	$\leq 0.55$
Power loss	W	$\leq 10$
<b>Encoder system power supply</b>		
Voltage	$V_{encoder}$	5 V DC (with or without Remote Sense) <sup>1)</sup> or $V_{DC} - 1 V$
Current	$A_{encoder}$	0.35
Encoder frequency that can be evaluated ( $f_{encoder}$ )	kHz	$\leq 300$
SSI baud rate	kHz	100 - 1000 <sup>2)</sup>
PE/ground connection		On enclosure with M4/1.8 Nm screw
Ventilation clearances, above/below	mm	50
Weight		0.45

1) A controller compares the encoder system supply voltage – sensed via the Remote Sense cables – with the reference supply voltage of the encoder system, and adjusts the supply voltage for the encoder system at the output of the drive module until the required supply voltage is obtained directly at the encoder system (only for 5 V encoder system power supply). Remote Sense only to X520.

2) See the diagram "Maximum cable lengths depending on the SSI baud rate for SSI encoders"

### Connectable encoder systems

Table 7- 19 Specification of encoder systems that can be connected

Parameter	Designation	Threshold	Min.	Max.	Unit
High signal level (TTL bipolar at X520 or X521/X531) <sup>1)</sup>	$U_{Hdiff}$		2	5	V
Low signal level (TTL bipolar at X520 or X521/X531) <sup>1)</sup>	$U_{Ldiff}$		-5	-2	V
High signal level (HTL unipolar)	$U_H$	High	17	$V_{CC}$	V
		Low	10	$V_{CC}$	V
Low signal level (HTL unipolar)	$U_L$	High	0	7	V
		Low	0	2	V
High signal level (HTL bipolar) <sup>2)</sup>	$U_{Hdiff}$		3	$V_{CC}$	V
Low signal level (HTL bipolar) <sup>2)</sup>	$U_{Ldiff}$		$-V_{CC}$	-3	V
High signal level (SSI bipolar at X520 or X521/X531) <sup>1)</sup>	$U_{Hdiff}$		2	5	V
Low signal level (SSI bipolar at X520 or X521/X531) <sup>1)</sup>	$U_{Ldiff}$		-5	-2	V
Signal frequency	$f_s$		-	300	kHz
Edge clearance	$t_{min}$		100	-	ns

Parameter	Designation	Threshold	Min.	Max.	Unit
"Zero pulse inactive time" (before and after A=B=high)	t <sub>Lo</sub>		640	(t <sub>ALo-BHi</sub> - t <sub>Hi</sub> )/2 <sup>3)</sup>	ns
"Zero pulse active time" (while A=B=high and beyond) <sup>4)</sup>	t <sub>Hi</sub>		640	t <sub>ALo-BHi</sub> - 2*t <sub>Lo</sub> <sup>3)</sup>	ns

- 1) Other signal levels according to the RS422 standard
- 2) The absolute level of the individual signals varies between 0 V and V<sub>CC</sub> of the encoder system.
- 3) t<sub>ALo-BHi</sub> is not a specified value, but is the time between the falling edge of track A and the next but one rising edge of track B.
- 4) Additional information on setting the "Zero pulse active time" can be found in the Function Manual: /FH1/ SINAMICS S120, tolerant encoder monitoring for SMC30.

Table 7- 20 Connectable encoders

	X520 (SUB-D)	X521 (terminal)	X531 (terminal)	Track monitoring	Remote Sense <sup>2)</sup>
HTL bipolar 24 V	No/yes	Yes		No/yes	No
HTL unipolar 24 V <sup>1)</sup>	No/yes	Yes (however, a bipolar connection is recommended) <sup>1)</sup>		No	No
TTL bipolar 24 V	Yes	Yes		Yes	No
TTL bipolar 5 V	Yes	Yes		Yes	To X520
SSI 24 V/5 V	Yes	Yes		No	No
TTL unipolar	No				

- 1) Because the physical transmission properties are more robust, the bipolar connection should always be used. The unipolar connection should only be used if the encoder type does not output push-pull signals.
- 2) A controller compares the encoder system supply voltage - sensed via the Remote Sense cables - with the reference supply voltage of the encoder system, and adjusts the supply voltage for the encoder system at the output of the drive module until the required supply voltage is obtained directly at the encoder system (only for 5 V encoder system power supply).

## Maximum encoder cable length

Table 7- 21 Maximum encoder cable length

Encoder type	Maximum encoder cable length in m
TTL <sup>1)</sup>	100
HTL unipolar <sup>2)</sup>	100
HTL bipolar	300
SSI	100

- 1) For TTL encoders at X520 → Remote Sense → 100 m
- 2) Because the physical transmission properties are more robust, the bipolar connection should always be used. The unipolar connection should only be used if the encoder type does not output push-pull signals.

**SSI encoders**

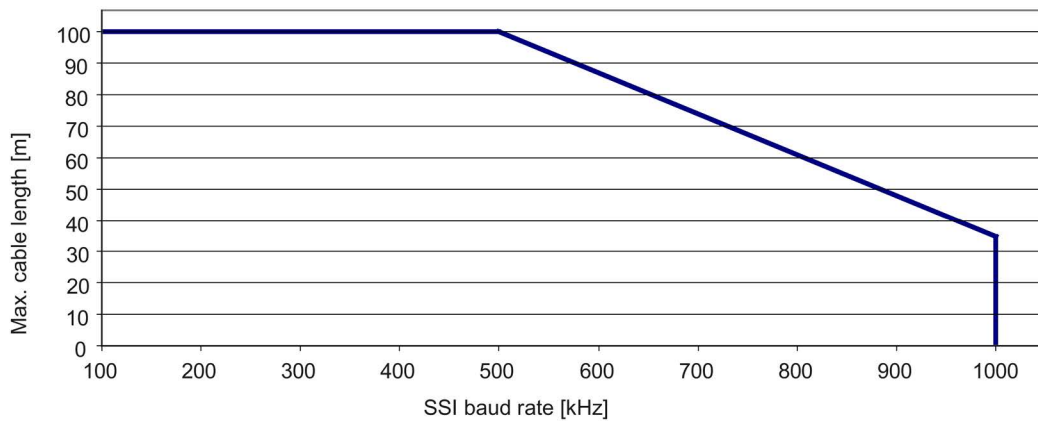


Figure 7-14 Maximum cable lengths depending on the SSI baud rate for SSI encoders

**Encoders with 5 V supply connected to X521/X531**

For encoders with a 5 V supply at X521/X531, the cable length depends on the encoder current (for 0.5 mm<sup>2</sup> cable cross-sections):

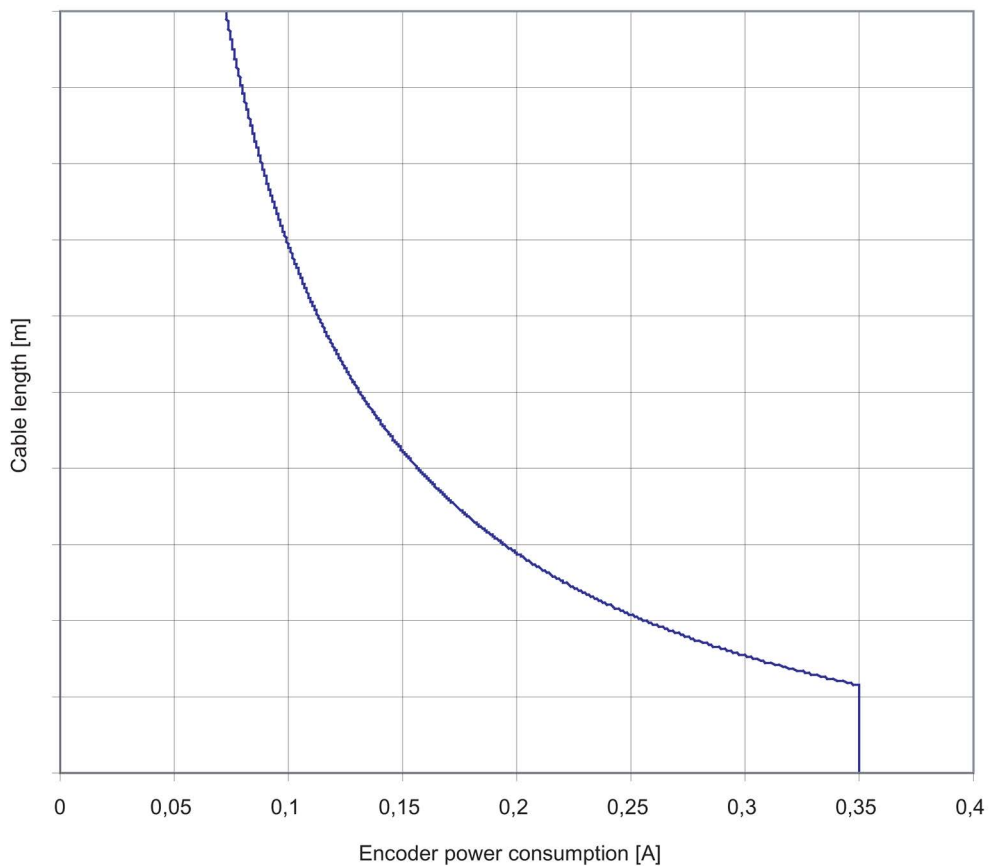


Figure 7-15 Max. cable length as a function of the encoder current drawn



For encoders without Remote Sense the permissible cable length is restricted to 100 m (reason: The voltage drop depends on the cable length and the encoder current).

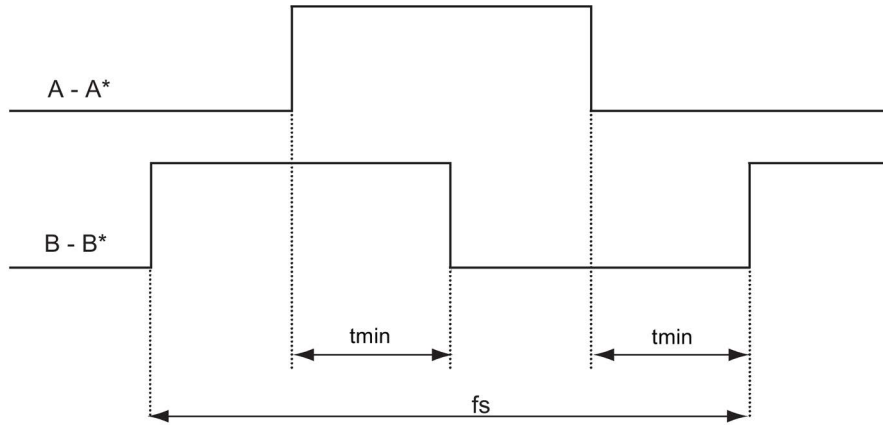


Figure 7-16 Signal characteristic of track A and track B between two edges: Time between two edges with incremental encoders

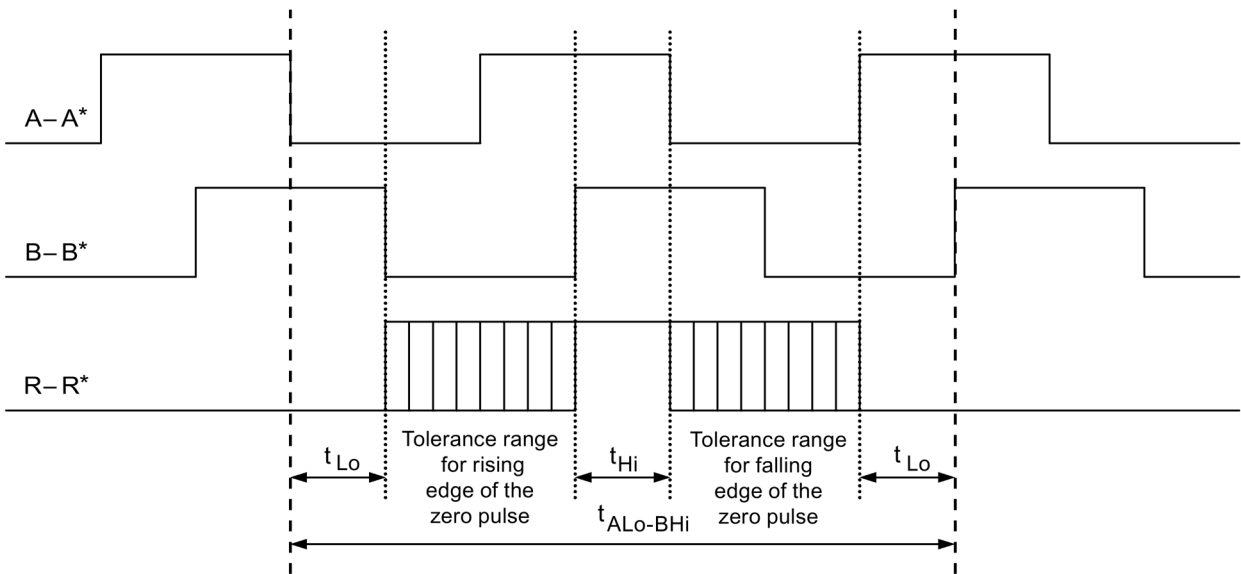


Figure 7-17 Position of the zero pulse to the track signals

## 7.4 Terminal Module TM15

### 7.4.1 Description

The TM15 is a terminal expansion module for snapping onto a mounting rail according to EN 60715. The number of available digital inputs and outputs within a drive system can be expanded with the TM15.

Table 7- 22 Interface overview of the TM15

Type	Number
DRIVE-CLiQ interfaces	2
Bidirectional digital inputs/outputs	24 (electrical isolation in three groups each with eight DI/DO)

### 7.4.2 Safety instructions

#### WARNING

##### Non-observance of the safety instructions

If the safety instructions in Chapter 1 are not observed, accidents can occur involving severe injuries or death.

- Make sure that the safety instructions are observed.

#### WARNING

##### Fire through overheating due to insufficient ventilation clearances

Inadequate ventilation clearances cause overheating with a risk for personnel due to smoke and fire. This can also result in more downtimes and reduced service lives of the Terminal Module.

- For this reason, it is imperative that you maintain the 50 mm clearances above and below the Terminal Module.

#### NOTICE

##### Damage through the use of incorrect DRIVE-CLiQ cables

Damage or malfunctions can occur on the devices or system when incorrect or unreleased DRIVE-CLiQ cables are used.

- Only use suitable DRIVE-CLiQ cables that have been released by Siemens for the respective application.

**Note**

**Malfunctions due to polluted DRIVE-CLiQ interfaces**

Malfunctions can occur in the system through the use of polluted DRIVE-CLiQ interfaces.

- Cover unused DRIVE-CLiQ interfaces with the supplied blanking covers.

**7.4.3 Interface description**

**7.4.3.1 Overview**

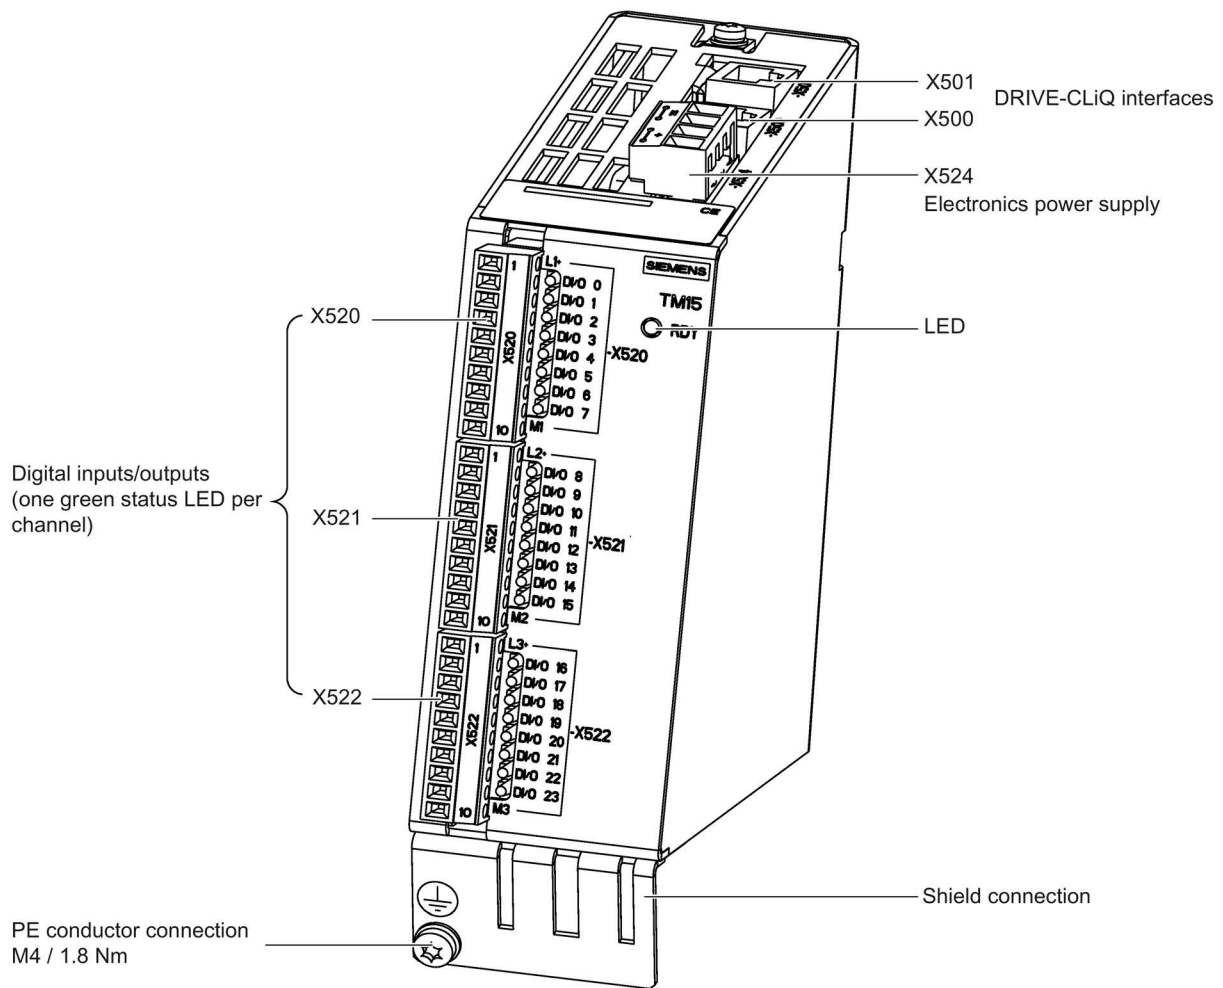



Figure 7-18 TM15 interface overview

### Terminal type

<b>X520, X521, X522</b>		
Terminal type	Screw terminal	
Connectable conductor cross-section	Rigid, flexible With end sleeve, without plastic sleeve With end sleeve, with plastic sleeve	0.08 mm <sup>2</sup> ... 1.5 mm <sup>2</sup> 0.25 mm <sup>2</sup> ... 1.5 mm <sup>2</sup> 0.25 mm <sup>2</sup> ... 0.5 mm <sup>2</sup>
Stripped length	7 mm	
Tool	0.4 × 2.0 mm screwdriver	
Tightening torque	0.22 ... 0.25 Nm	
<b>X524</b>		
Terminal type	Screw terminal	
Connectable conductor cross-section	Rigid, flexible With end sleeve, without plastic sleeve With end sleeve, with plastic sleeve AWG / kcmil	0.2 mm <sup>2</sup> ... 2.5 mm <sup>2</sup> 0.2 mm <sup>2</sup> ... 2.5 mm <sup>2</sup> 0.2 mm <sup>2</sup> ... 1.5 mm <sup>2</sup> 22 ... 12
Stripped length	6 ... 7 mm	
Tool	0.5 × 3.0 mm screwdriver	
Tightening torque	0.4 ... 0.5 Nm	


### 7.4.3.2 X500 and X501 DRIVE-CLiQ interface

Table 7- 23 DRIVE-CLiQ interfaces X500 and X501

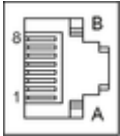Connector	Pin	Signal name	Technical specifications
	1	TXP	Transmit data +
	2	TXN	Transmit data -
	3	RXP	Receive data +
	4	Reserved, do not use	
	5	Reserved, do not use	
	6	RXN	Receive data -
	7	Reserved, do not use	
	8	Reserved, do not use	
	A	+ (24 V)	Power supply
	B	M (0 V)	Electronics ground
Blanking plate for DRIVE-CLiQ interfaces included in the scope of delivery; blinking plate (50 pieces) Article number: 6SL3066-4CA00-0AA0			

### 7.4.3.3 X524 electronic power supply

Table 7- 24 Terminals for the X524 electronic power supply

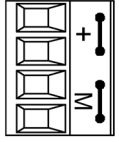Connector	Terminal	Designation	Technical specifications
	+	Electronic power supply	Voltage: 24 V DC (20.4 – 28.8 V) Power consumption: max. 0.6 A <sup>1)</sup> Max. current via jumper in connector: 20 A (15 A according to UL/CSA)
	+	Electronic power supply	
	M	Electronics ground	
	M	Electronics ground	

<sup>1)</sup> Including the current consumption for the digital outputs

The maximum cable length that can be connected is 30 m.


#### Note

The two "+" or "M" terminals are jumpered in the connector. This ensures that the supply voltage is looped through.

The current consumption increases by the value for the DRIVE-CLiQ node. The digital outputs are supplied via terminals X520, X521, and X522.

### 7.4.3.4 X520 bidirectional digital inputs/outputs

Table 7- 25 Screw terminal X520

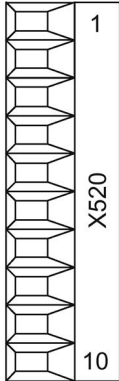Connector	Terminal	Designation <sup>1</sup>	Technical specifications
	1	L1+	See Section "Technical specifications"
	2	DI/DO 0	
	3	DI/DO 1	
	4	DI/DO 2	
	5	DI/DO 3	
	6	DI/DO 4	
	7	DI/DO 5	
	8	DI/DO 6	
	9	DI/DO 7	
	10	M1 (GND)	


<sup>1</sup> L1+: A 24 V DC power supply for DI/DO 0 to 7 (first potential group) must always be connected if at least one DI/DO of the potential group is used as an output.

M1: A ground reference for DI/DO 0 to 7 (first potential group) must always be connected if at least one DI/DO of the potential group is used as either an input or output.

DI/DO: Bidirectional digital input/output

### 7.4.3.5 X521 bidirectional digital inputs/outputs


Table 7- 26 Screw terminal X521

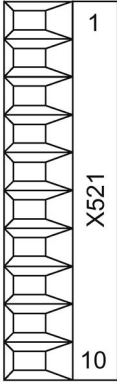Connector	Terminal	Designation <sup>1</sup>	Technical specifications
	1	L2+	See Section "Technical specifications"
	2	DI/DO 8	
	3	DI/DO 9	
	4	DI/DO 10	
	5	DI/DO 11	
	6	DI/DO 12	
	7	DI/DO 13	
	8	DI/DO 14	
	9	DI/DO 15	
	10	M2 (GND)	

- <sup>1</sup> L2+: A 24 V DC power supply for DI/DO 8 to 15 (second potential group) must always be connected if at least one DI/DO of the potential group is used as output.  
M2: A ground reference for DI/DO 8 to 15 (second potential group) must always be connected if at least one DI/DO of the potential group is used as either input or output.  
DI/DO: Bidirectional digital input/output

### 7.4.3.6 X522 bidirectional digital inputs/outputs

Table 7- 27 Screw terminal X522

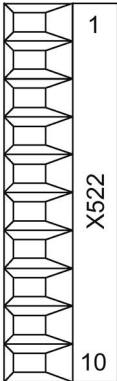Connector	Terminal	Designation <sup>1</sup>	Technical specifications
	1	L3+	See Section "Technical specifications"
	2	DI/DO 16	
	3	DI/DO 17	
	4	DI/DO 18	
	5	DI/DO 19	
	6	DI/DO 20	
	7	DI/DO 21	
	8	DI/DO 22	
	9	DI/DO 23	
	10	M3 (GND)	

- <sup>1</sup> L3+: A 24 V DC power supply for DI/DO 16 to 23 (third potential group) must always be connected if at least one DI/DO of the potential group is used as output.  
M3: A ground reference for DI/DO 16 to 23 (third potential group) must always be connected if at least one DI/DO of the potential group is used as either input or output.  
DI/DO: Bidirectional digital input/output

### 7.4.4 Connection example

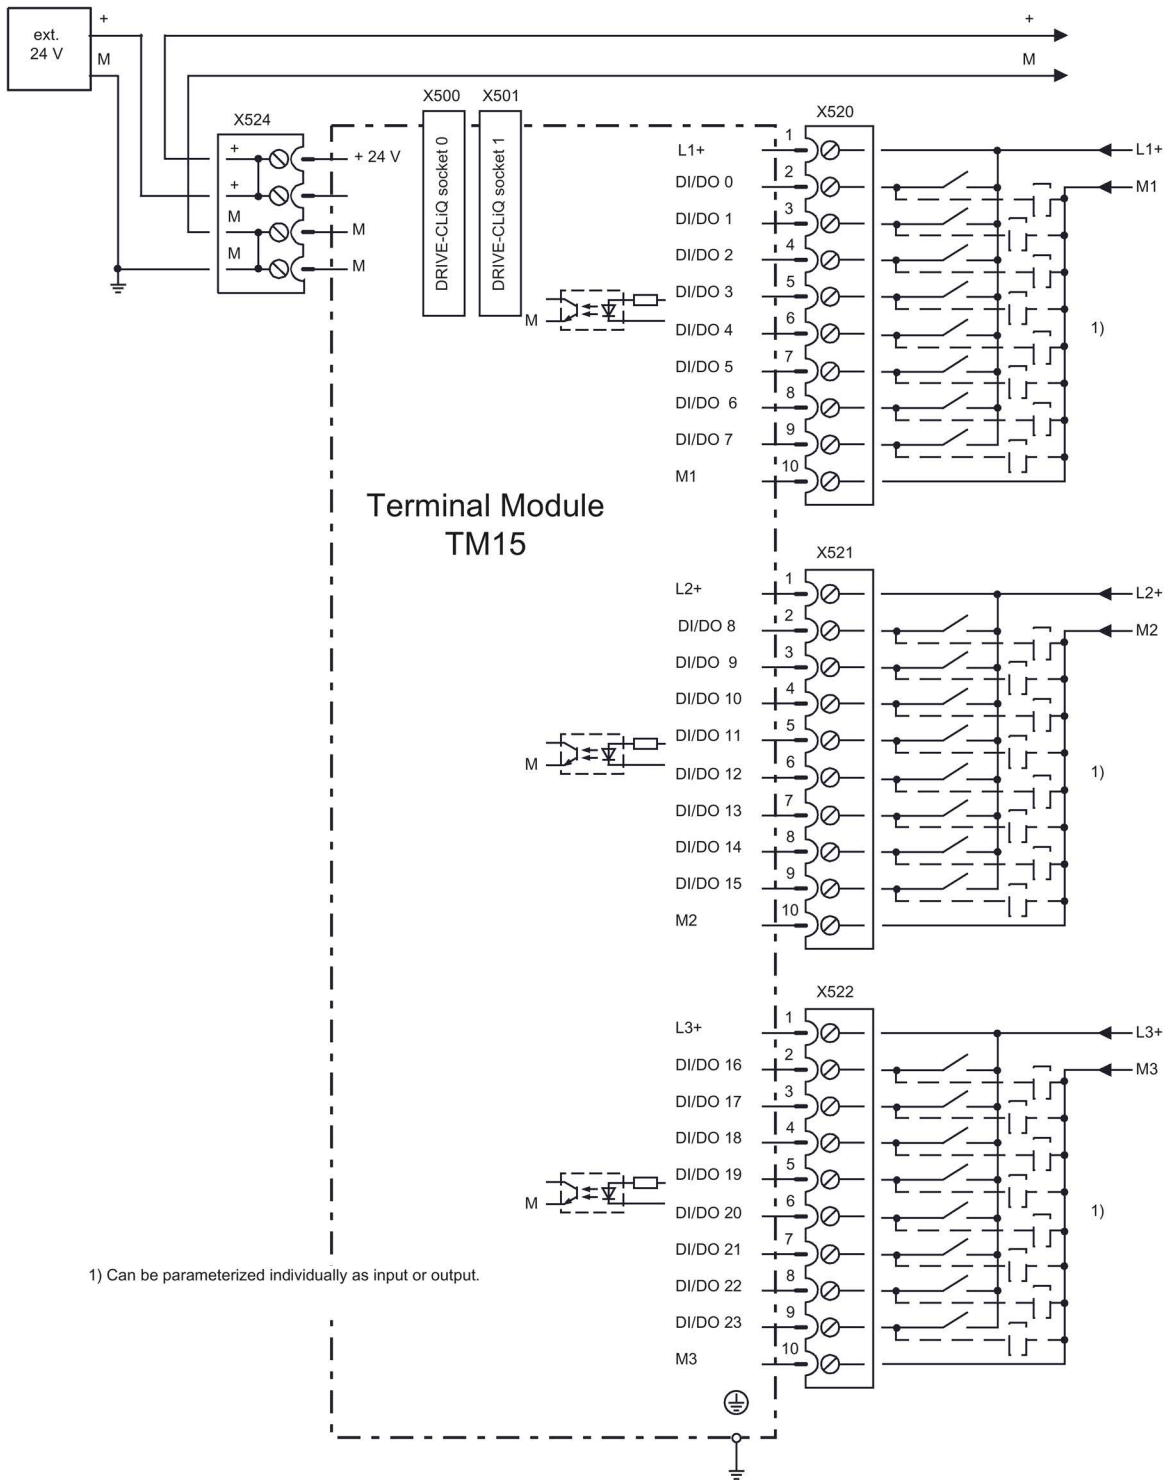


Figure 7-19 Example connection of TM15

## 7.4.5 Meaning of the LEDs on the Terminal Module TM15

Table 7- 28 Meanings of the LEDs on the Terminal Module TM15

LED	Color	Status	Description, cause	Remedy
READY	-	Off	The electronics power supply is missing or outside the permissible tolerance range.	-
	Green	Continuous light	The component is ready for operation. Cyclic DRIVE-CLiQ communication is taking place.	-
	Orange	Continuous light	DRIVE-CLiQ communication is being established.	-
	Red	Continuous light	This component has at least one fault. <b>Note:</b> The LED is activated irrespective of whether the corresponding messages have been reconfigured.	Remove and acknowledge the fault.
	Green/ red	Flashing light 0.5 Hz	Firmware is being downloaded.	-
		Flashing light 2 Hz	Firmware download has been completed. The system waits for POWER ON.	Carry out a POWER ON.
	Green/ orange or Red/ orange	Flashing light	Component recognition via LED is activated <sup>1)</sup> . <b>Note:</b> Both options depend on the LED status when component recognition is activated.	-

<sup>1)</sup> See SINAMICS DCM Parameter Manual for the parameters to activate the recognition of components via LED

### Cause and rectification of faults

The following documents contain information about the cause of faults and how they can be rectified:

SINAMICS DCM List Manual



## 7.4.6 Dimension drawing

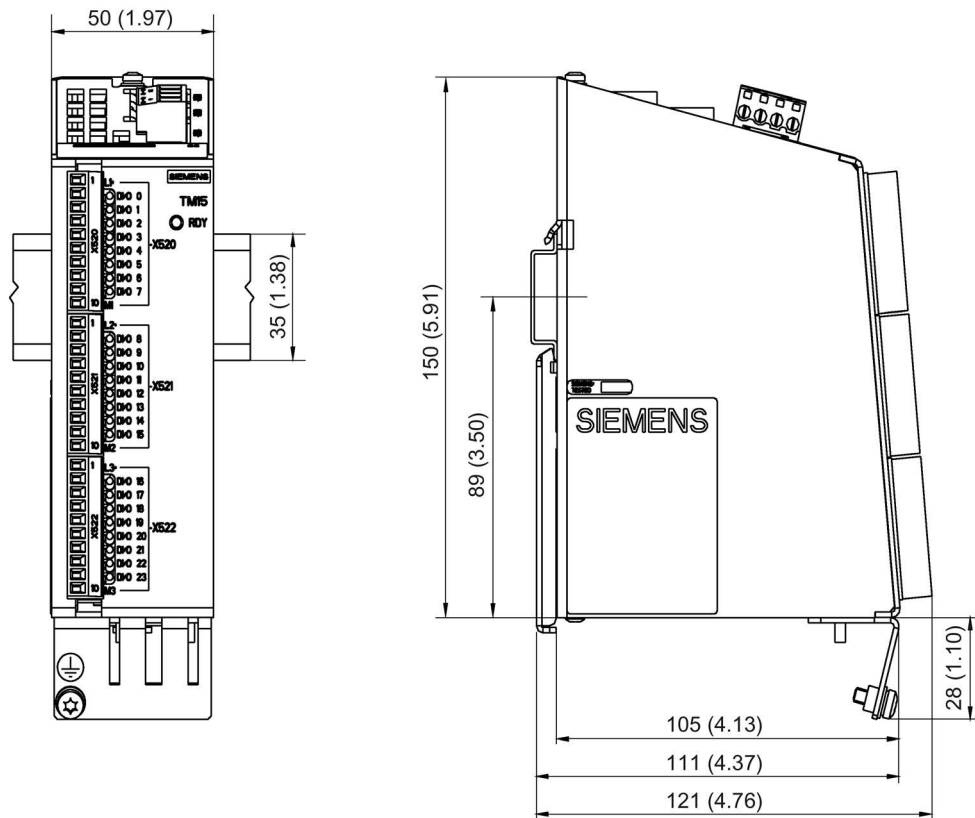


Figure 7-20 Dimension drawing of Terminal Module TM15, all data in mm and (inches)


## 7.4.7 Installation

### Installation

1. Tilt the component backwards slightly and attach it to the DIN rail using the hooks.
2. Swivel the component onto the DIN rail until you hear the mounting slide at the rear latch into position.
3. Slide the components along the mounting rail to either the left or right up to their final position.

## Disassembly

1. First shift the mounting slide downwards at the lug to release the interlocking with the mounting rail.
2. Swivel the component to the front and withdraw it upwards from the DIN rail.

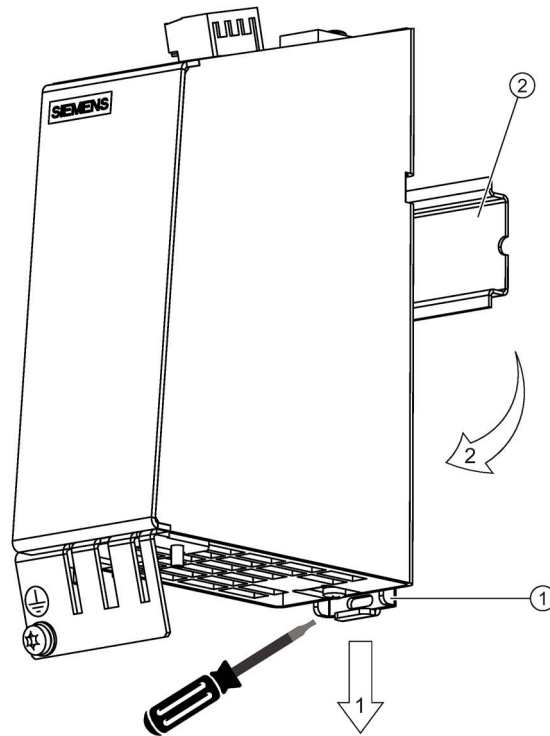


- ① Mounting slide
- ② Standard mounting rail

Figure 7-21 Removing from a mounting rail

### 7.4.8 Protective conductor connection and shield support

It is always advisable to shield the digital I/O wiring.

The following diagrams show typical Weidmüller shield connection terminals for the shield supports.

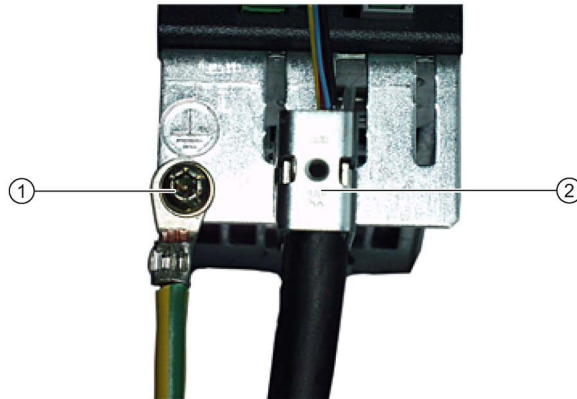

- ① Protective conductor connection with M4 screw / 1.8 Nm
- ② Shield connection terminal, Weidmüller company, type: KLBUE CO1, Article number: 1753311001

Figure 7-22 Shield supports and protective conductor connection

#### NOTICE

##### Damage or faulty operation due to incorrect shielding and impermissible cable lengths

If the correct shielding procedures and the permissible cable lengths are not observed, the machine can be damaged or may malfunction.

- Only use shielded cables.
- Do not exceed the cable lengths stated in the technical data.

#### Note

Only use screws with a permissible mounting depth of 4 - 6 mm.


The TM15 enclosure is connected to the ground terminal of the module supply (terminal X524). If the ground terminal is actually grounded, then the enclosure is also grounded. An additional ground connection using the M4 screw is especially necessary if high potential bonding currents can flow (e.g. through the cable shield).

## 7.4.9 Connector coding

A series of coding elements ("coding sliders") are supplied with each Terminal Module TM15.

### Connector coding

1. Insert at least one coding slider at the required position.
2. Remove the associated coding lug at the connector.

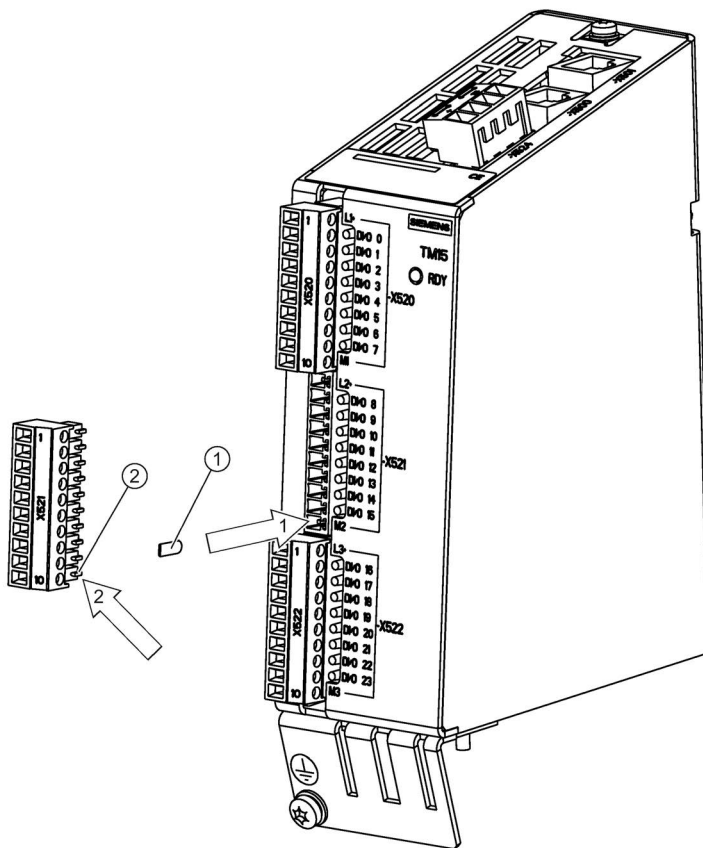

- ① Insert a coding slider.
- ② Cut off the coding lug on the connector.

Figure 7-23 Procedure for encoding a connector

To avoid wiring errors, unique coding patterns must be defined for the connectors X520, X521 and X522.

Possible patterns:

- 3 connectors on one component are encoded differently (i.e. X520, X521 and X522).
- Different component types are encoded differently.
- Otherwise identical components are encoded differently on the same machine, (e.g. several TM15-type components).

## 7.4.10 Technical data

Table 7- 29 Technical data

6SL3055-0AA00-3FAx	Unit	Value
<b>Electronic power supply</b>		
Voltage	V <sub>DC</sub>	24 (20.4 – 28.8)
Current (without DRIVE-CLiQ or digital outputs)	A <sub>DC</sub>	0.15
Power loss	W	< 3
Max. cable length	m	30
<b>Peripherals</b>		
Digital inputs/outputs	Can be parameterized as either DI or DO	
Number of digital inputs/outputs	24	
Electrical isolation	Yes, in groups of 8	
<b>Digital inputs</b>		
Voltage	V <sub>DC</sub>	-30 to +30
Low level (an open digital input is interpreted as "low")	V <sub>DC</sub>	-30 to +5
High level	V <sub>DC</sub>	15 to 30
Input impedance	kΩ	2.8
Input current, typical (at 24 V DC)	mA	9
Max. voltage in OFF state	V <sub>DC</sub>	5
Current in OFF state	mA	0.0 to 1.0 (per channel)
Typical input delay of the digital inputs	μs	"0" → "1": 50 "1" → "0": 100
<b>Digital outputs (continuously short-circuit proof)</b>		
Voltage	V <sub>DC</sub>	24
Max. load current per digital output	A <sub>DC</sub>	0.5
Output delay (resistive load)		
Typical	μs	"0" → "1": 50 "1" → "0": 150
Maximum	μs	"0" → "1": 100 "1" → "0": 225
Min. output pulse (100% amplitude, 0.5 A with resistive load)	μs	125 (typ.) 350 (max.)
Switching frequency		
For resistive load	Hz	max. 100
For inductive load	Hz	max. 0.5
For lamp load	Hz	max. 10
Max. lamp load	W	5
Max. switching frequency (100% amplitude, 50%/50% duty cycle; with 0.5 A and a resistive load)	kHz	1 (typ.)
Voltage drop in ON state	V <sub>DC</sub>	0.75 (max.) for maximum load in all circuits
Leakage current in OFF state	μA	Max. 10 per channel

6SL3055-0AA00-3FAx	Unit	Value
Voltage drop, output (I/O power supply to the output)	V <sub>DC</sub>	0.5
Max. total current of outputs (per group) up to 60 °C up to 50 °C up to 40 °C	A <sub>DC</sub> A <sub>DC</sub> A <sub>DC</sub>	2 3 4
Response time	<p>The response time for the digital inputs/outputs (TM15 DI/DO) consists of the following elements:</p> <ul style="list-style-type: none"> <li>• Response time on the component itself (approx. 1/2 DRIVE-CLiQ clock cycle).</li> <li>• Transmission time via the DRIVE-CLiQ connection (approx. 1 DRIVE-CLiQ clock cycle).</li> <li>• Evaluation on the Control Unit (see function diagram)</li> </ul> <p>For additional information: SINAMICS DCM List Manual, Chapter "Function block diagrams"</p>	
Weight	kg	1.0
Protective conductor connection	On enclosure with M4/1.8 Nm screw	
Approvals	UL and cULus, <a href="http://www.ul.com">http://www.ul.com</a> ( <a href="http://www.ul.com">www.ul.com</a> ) File: E164110, Vol. 2, Sec. 9	

## 7.5 Terminal Module TM31

### 7.5.1 Description

The TM31 is a terminal expansion module for snapping onto a mounting rail according to EN 60715. The TM31 Terminal Module can be used to increase the number of available digital and analog inputs and outputs within a drive system.

The TM31 contains the following interfaces:

Table 7- 30 Interface overview of the TM31

Type	Quantity
DRIVE-CLiQ interfaces	2
Digital inputs	8
Bidirectional digital inputs/outputs	4
Analog inputs	2
Analog outputs	2
Relay outputs	2
Temperature sensor input	1

### Supported types

The SINAMICS DC MASTER only supports one version of the Terminal Module TM31:

Table 7- 31 TM31 types

TM31 article number	Use with SINAMICS DC MASTER
6SL3055-0AA00-3AA0	Not possible
6SL3055-0AA00-3AA1	Possible

## 7.5.2 Safety instructions

 **WARNING**

**Non-observance of the safety instructions**

If the safety instructions in Chapter 1 are not observed, accidents can occur involving severe injuries or death.

- Make sure that the safety instructions are observed.

 **WARNING**

**Fire through overheating due to insufficient ventilation clearances**

Inadequate ventilation clearances cause overheating with a risk for personnel due to smoke and fire. This can also result in more downtimes and reduced service lives of the Terminal Module.

- For this reason, it is imperative that you maintain the 50 mm clearances above and below the Terminal Module.

**NOTICE**

**Device failure as a result of unshielded or incorrectly routed cables to temperature sensors**

Unshielded or incorrectly routed cables to temperature sensors can result in interference being coupled into the signal processing electronics from the power side. This can result in significant disturbance of all signals (fault messages) up to failure of individual components (destruction of the devices).

- Only use shielded cables as temperature sensor cables.
- If temperature sensor cables are routed together with the motor cable, use separately shielded cables twisted in pairs.
- Connect the cable shield at both ends to ground potential over a large surface area.

**NOTICE**

**Damage through the use of incorrect DRIVE-CLiQ cables**

Damage or malfunctions can occur on the devices or system when incorrect or unreleased DRIVE-CLiQ cables are used.

- Only use suitable DRIVE-CLiQ cables that have been released by Siemens for the respective application.

---

**Note**

**Malfunctions due to polluted DRIVE-CLiQ interfaces**

Malfunctions can occur in the system through the use of polluted DRIVE-CLiQ interfaces.

- Cover unused DRIVE-CLiQ interfaces with the supplied blanking covers.
-



### 7.5.3 Interface description

#### 7.5.3.1 Overview

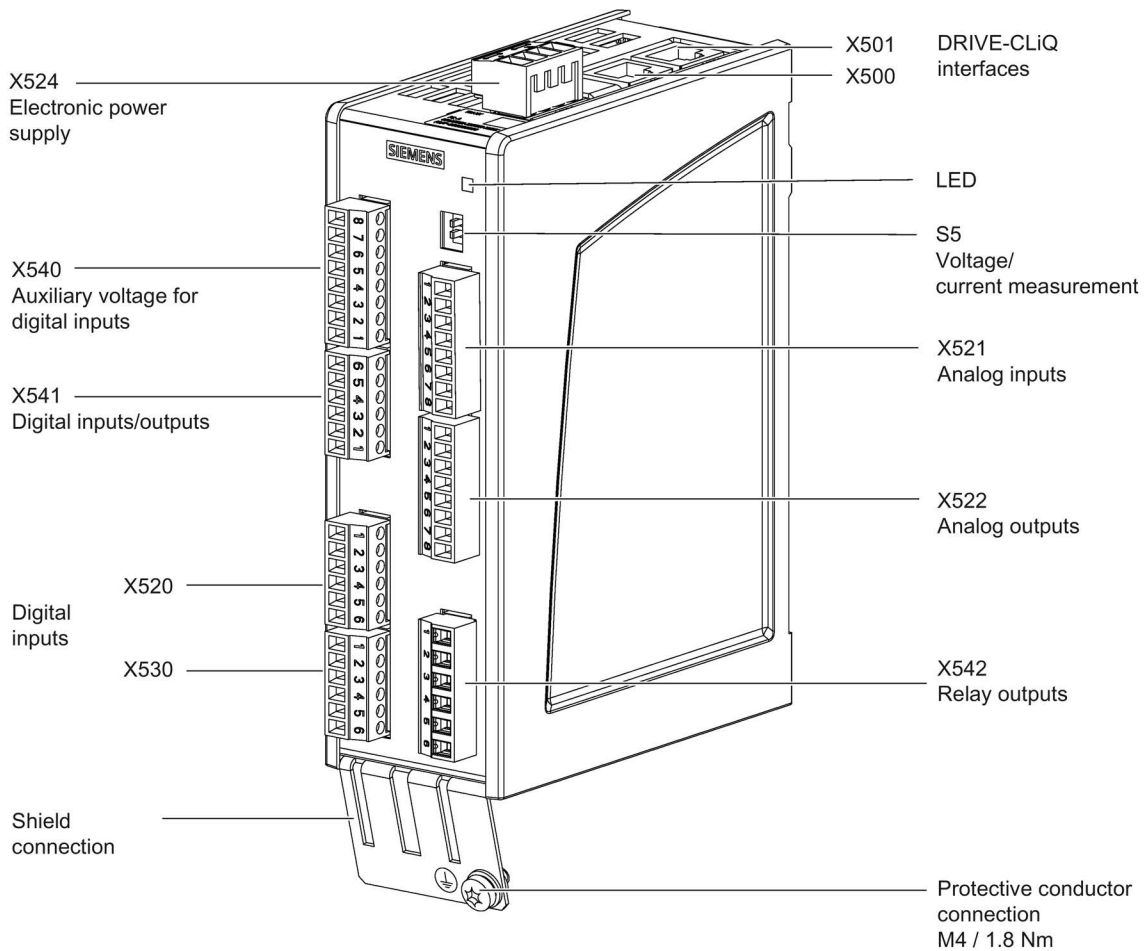



Figure 7-24 Interface description TM31

### Terminal type

<b>X520, X521, X522, X530, X540, X541</b>		
Terminal type	Screw terminal	
Connectable conductor cross-section	Rigid, flexible With end sleeve, without plastic sleeve With end sleeve, with plastic sleeve	0.08 mm <sup>2</sup> ... 1.5 mm <sup>2</sup> 0.25 mm <sup>2</sup> ... 1.5 mm <sup>2</sup> 0.25 mm <sup>2</sup> ... 0.5 mm <sup>2</sup>
Stripped length	7 mm	
Tool	0.4 × 2.0 mm screwdriver	
<b>X524</b>		
Terminal type	Screw terminal	
Connectable conductor cross-section	Rigid, flexible With end sleeve, without plastic sleeve With end sleeve, with plastic sleeve AWG / kcmil	0.2 mm <sup>2</sup> ... 2.5 mm <sup>2</sup> 0.2 mm <sup>2</sup> ... 2.5 mm <sup>2</sup> 0.2 mm <sup>2</sup> ... 1.5 mm <sup>2</sup> 22 ... 12
Stripped length	6 ... 7 mm	
Tool	0.5 × 3.0 mm screwdriver	
Tightening torque	0.4 ... 0.5 Nm	
<b>X542</b>		
Terminal type	Screw terminal	
Connectable conductor cross-section	Rigid, flexible With end sleeve, without plastic sleeve With end sleeve, with plastic sleeve	0.2 mm <sup>2</sup> ... 2.5 mm <sup>2</sup> 0.25 mm <sup>2</sup> ... 1 mm <sup>2</sup> 0.25 mm <sup>2</sup> ... 1 mm <sup>2</sup>
Stripped length	9 mm	
Tightening torque	0.5 ... 0.6 Nm	

### 7.5.3.2 X500/X501 DRIVE-CLiQ interfaces

Table 7- 32 X500/X501: DRIVE-CLiQ interfaces

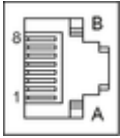Connector	Pin	Signal name	Technical specifications
	1	TXP	Transmit data +
	2	TXN	Transmit data -
	3	RXP	Receive data +
	4	Reserved, do not use	
	5	Reserved, do not use	
	6	RXN	Receive data -
	7	Reserved, do not use	
	8	Reserved, do not use	
	A	+ (24 V)	Power supply
	B	M (0 V)	Electronics ground

The blanking covers for the DRIVE-CLiQ interfaces are included in the scope of delivery.


Blanking covers (50 x) Article number: 6SL3066-4CA00-0AA0

**Note**

The maximum DRIVE-CLiQ cable length is 100 m.

**7.5.3.3 X524 electronic power supply**

Table 7- 33 Terminals for the X524 electronic power supply

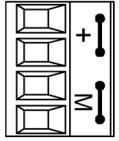Connector	Terminal	Designation	Technical specifications
	+	Electronic power supply	Voltage: 24 V DC (20.4 - 28.8 V) Power consumption: max. 1.7 A <sup>1)</sup>
	+	Electronic power supply	
	M	Electronics ground	Max. current via jumper in connector: 20 A (15 A according to UL/CSA)
	M	Electronics ground	

<sup>1)</sup> Including the current consumption for the digital outputs and for supplying the sensor

The maximum cable length that can be connected is 30 m.

**Note**

The two "+" or "M" terminals are jumpered in the connector. This ensures that the supply voltage is looped through.

The current consumption increases by the value for the DRIVE-CLiQ node and digital outputs.

7.5.3.4 X520, X530 digital inputs

Table 7- 34 Screw terminal X520

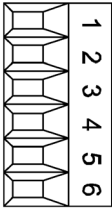
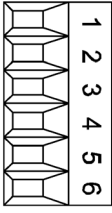
Connector	Terminal	Designation <sup>1)</sup>	Technical specifications
	1	DI 0	Voltage: -3 V to +30 V Electrical isolation: Yes Reference potential: M1 Input characteristic acc. to IEC 61131-2, type 1 Input voltage (including ripple) "1" signal: 15 V to 30 V "0" signal: -3 to +5 V Input current At 24 V DC: typ. 9 mA For "1" signal: > 0.5 mA Input delay: For "0" → "1": typ. 50 µs/max. 100 µs For "1" → "0": typ. 130 µs, max. 150 µs
	2	DI 1	
	3	DI 2	
	4	DI 3	
	5	M1	
	6	M	

Table 7- 35 Screw terminal X530

Connector	Terminal	Designation <sup>1)</sup>	Technical specifications
	1	DI 4	Voltage: -3 V to +30 V Electrical isolation: Yes Reference potential: M2 Input characteristic acc. to IEC 61131-2, type 1 Input voltage (including ripple) "1" signal: 15 V to 30 V "0" signal: -3 to +5 V Input current At 24 V DC: typ. 9 mA For "1" signal: > 0.5 mA Input delay: For "0" → "1": typ. 50 µs/max. 100 µs For "1" → "0": typ. 130 µs, max. 150 µs
	2	DI 5	
	3	DI 6	
	4	DI 7	
	5	M2	
	6	M	

<sup>1)</sup> DI: Digital input; M: Electronics ground; M1, M2: Ground reference

**Note**

**Ensuring the function of digital inputs**

An open input is interpreted as "low".

Terminal M1 or M2 must be connected in order that digital inputs (DI) can function.


This is achieved through one of the following measures:

1. Provide the ground reference of the digital inputs
2. A jumper to terminal M

**Note:** This removes isolation for these digital inputs.

## 7.5.3.5 X521 analog inputs

Table 7- 36 X521 terminal strip

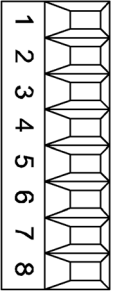Connector	Terminal	Designation <sup>1)</sup>	Technical specifications
	1	AI 0+	The analog inputs can be toggled between current and voltage input using switches S5.0 and S5.1  <b>As voltage input:</b> -10 V to +10 V; $R_i = 100 \text{ k}\Omega$ Resolution: 11 bits + sign  <b>As current input:</b> $R_i = 250 \Omega$ Resolution: 10 bits + sign
	2	AI 0-	
	3	AI 1+	
	4	AI 1-	
	5	P10	<b>Auxiliary voltage:</b> P10 = 10 V N10 = -10 V Current-carrying capacity: max. 3 mA Sustained short-circuit-proof
	6	M	
	7	N10	
	8	M	

<sup>1)</sup> AI: Analog inputs; P10/N10: Auxiliary voltage; M: Ground reference

**NOTICE****Damage or malfunctions through impermissible voltage values**

If a current exceeding  $\pm 35 \text{ mA}$  flows through the analog current input, then the component could be destroyed.

The common mode range must not be violated in order to avoid incorrect analog-digital conversion results.



- The input voltage may only be in the range between -30 V and +30 V (destruction limit).
- The common mode voltage may only be in the range between -10 V and +10 V (error limit).
- The back EMF at the auxiliary voltage connections may only be in the range between -15 V and +15 V.

**Note**

The power supply for the analog inputs can be taken internally or from an external power supply unit

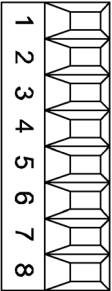
### 7.5.3.6 Analog inputs current/voltage switch

Table 7- 37 Current/voltage selector switch S5

	Switch	Function
V  I S5.0	S5.0	Switchover of voltage (V)/current (I) AI0
V  I S5.1	S5.1	Switchover of voltage (V)/current (I) AI1

### 7.5.3.7 X522 analog outputs/temperature sensor

Table 7- 38 X522 terminal strip

Connector	Terminal	Designation <sup>1)</sup>	Technical specifications
	1	AO 0V+	You can set the following output signals using parameters: <b>Voltage:</b> -10 V to 10 V (max. 3 mA) <b>Current 1:</b> 4 to 20 mA (max. load resistance ≤ 500 Ω) <b>Current 2:</b> -20 mA to 20 mA (max. load resistance ≤ 500 Ω) <b>Current 3:</b> 0 to 20 mA (max. load resistance ≤ 500 Ω)
	2	AO 0-	
	3	AO 0C+	
	4	AO 1V+	
	5	AO 1-	
	6	AO 1C+	
	7	+ Temp <sup>2)</sup>	Temperature sensor KTY84-1C130 / PT1000 / PTC
	8	- Temp <sup>2)</sup>	Measuring current via temperature sensor connection: 2 mA

<sup>1)</sup> AO xV: Analog output voltage; AO xC: Analog output current

<sup>2)</sup> Accuracy of the temperature measurement:

- KTY: ±7 °C (including evaluation)
- PT1000: ±5 °C (PT1000 tolerance class B according to EN 60751 including evaluation)
- PTC: ±5 °C (including evaluation)

**NOTICE**

**Damage or malfunctions through impermissible voltage values**

If the back EMF is impermissible then damage and malfunctions may occur on the components.


- The back EMF at the outputs may only be in the range between -15 V and +15 V.

**NOTICE**

**Damage to motor in the event of incorrectly connected KTY temperature sensor**


If a KTY temperature sensor is connected with incorrect polarity, it is not possible to detect when the motor overheats. Overheating can cause damage to the motor.

- Connect a KTY temperature sensor with the correct polarity.

 <b>WARNING</b>
<p><b>Electric shock in the event of voltage flashovers at the temperature sensor</b></p> <p>Voltage flashovers in the signal electronics can occur in motors without safe electrical separation of the temperature sensors.</p> <ul style="list-style-type: none"> <li>• Use temperature sensors that comply with the specifications relating to protective separation.</li> </ul>

### 7.5.3.8 X540 auxiliary voltage for the digital inputs

Table 7- 39 Screw terminal X540

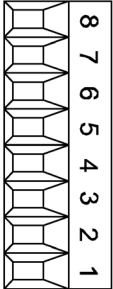Connector	Terminal	Designation	Technical specifications
	8	+24 V	Voltage: +24 V DC Max. total load current of +24 V auxiliary voltage for terminals X540 and X541 combined: 150 mA
	7	+24 V	
	6	+24 V	
	5	+24 V	
	4	+24 V	
	3	+24 V	
	2	+24 V	
	1	+24 V	

#### Note


This power supply is only used for powering the digital inputs.

#### Note

If the 24 V supply is briefly interrupted, the auxiliary voltage for the digital inputs is deactivated for this time.

7.5.3.9 X541 bidirectional digital inputs/outputs

Table 7- 40 Terminals for bidirectional digital inputs/outputs

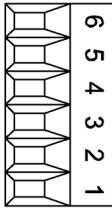Connector	Terminal	Designation <sup>1)</sup>	Technical specifications
	6	M	<p><b>As input:</b>                      Voltage: -3 V to 30 V                      Potential distribution: no                      Reference potential: M                      Input characteristic acc. to IEC 61131-2, type 1</p> <p>Input voltage (including ripple)                      "1" signal: 15 ... 30 V                      "0" signal: -3 ... +5 V</p> <p>Input current                      At 24 V DC: typ. 9 mA                      For "1" signal: &gt; 0.5 mA</p> <p>Input delay:                      For "0" → "1": typ. 50 µs                      For "1" → "0" typ. 100 µs</p> <p><b>As output:</b>                      Voltage: 24 V DC                      Electrical isolation: no                      Reference potential: M</p> <p>Output voltage                      "1" signal, with load: &gt; X524.+ -2 V</p> <p><b>Output current</b>                      For each output: ≤ 0.5 A                      Sum of all 4 outputs: ≤ 2 A                      Residual current for "0" signal: &lt; 0.5 mA                      Short-circuit protection, automatic restart after a short-circuit</p> <p>Load types: ohmic, capacitive, inductive</p> <p><b>Output delay</b>                      For "0" → "1": typ. 150 µs / max. 500 µs (ohmic load)                      For "1" → "0": typ. 50 µs (ohmic load)</p> <p><b>Switching frequency</b>                      For ohmic load: Max. 100 Hz                      For inductive load: Max. 0.5 Hz                      For lamp load: max. 10 Hz                      Lamp load: max. 5 W</p>
	5	DI/DO 11	
	4	DI/DO 10	
	3	DI/DO 9	
	2	DI/DO 8	
	1	+24 V	Auxiliary voltage: Voltage: +24 V DC Max. total load current of +24 V auxiliary voltage for terminals X540 and X541 combined: 150 mA

<sup>1)</sup> DI/DO: Bidirectional digital input/output; M: Electronics ground

**Note**

An open input is interpreted as "low".




**Note**

If a the 24 V supply is briefly interrupted, the digital outputs are deactivated during this time.

**7.5.3.10 X542 relay outputs**

Table 7- 41 X542 terminal strip

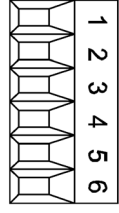Connector	Terminal	Designation <sup>1)</sup>	Technical specifications
	1	DO 0.NC	Contact type: Two-way contact max. load current: 8 A Max. switching voltage: 250 V <sub>AC</sub> , 30 V <sub>DC</sub> Max. switching capacity at 250 V <sub>AC</sub> : 2000 VA (cosφ = 1) Max. switching capacity at 250 V <sub>AC</sub> : 750 VA (cosφ = 0.4) Max. Switching capacity at 30 V <sub>DC</sub> : 240 W (resistive load) Required minimum current: 100 mA Output delay: ≤ 20 ms <sup>2)</sup> Overvoltage category: Class II acc. to EN 61800-5-1
	2	DO 0.COM	
	3	DO 0.NO	
	4	DO 1.NC	
	5	DO 1.COM	
	6	DO 1.NO	

<sup>1)</sup> DO: Digital output; NO: Normally open contact; NC: Normally closed contact; COM: Mid-position contact

<sup>2)</sup> Depending on the parameterization and the supply voltage (P24) of the TM31

### 7.5.4 Connection example

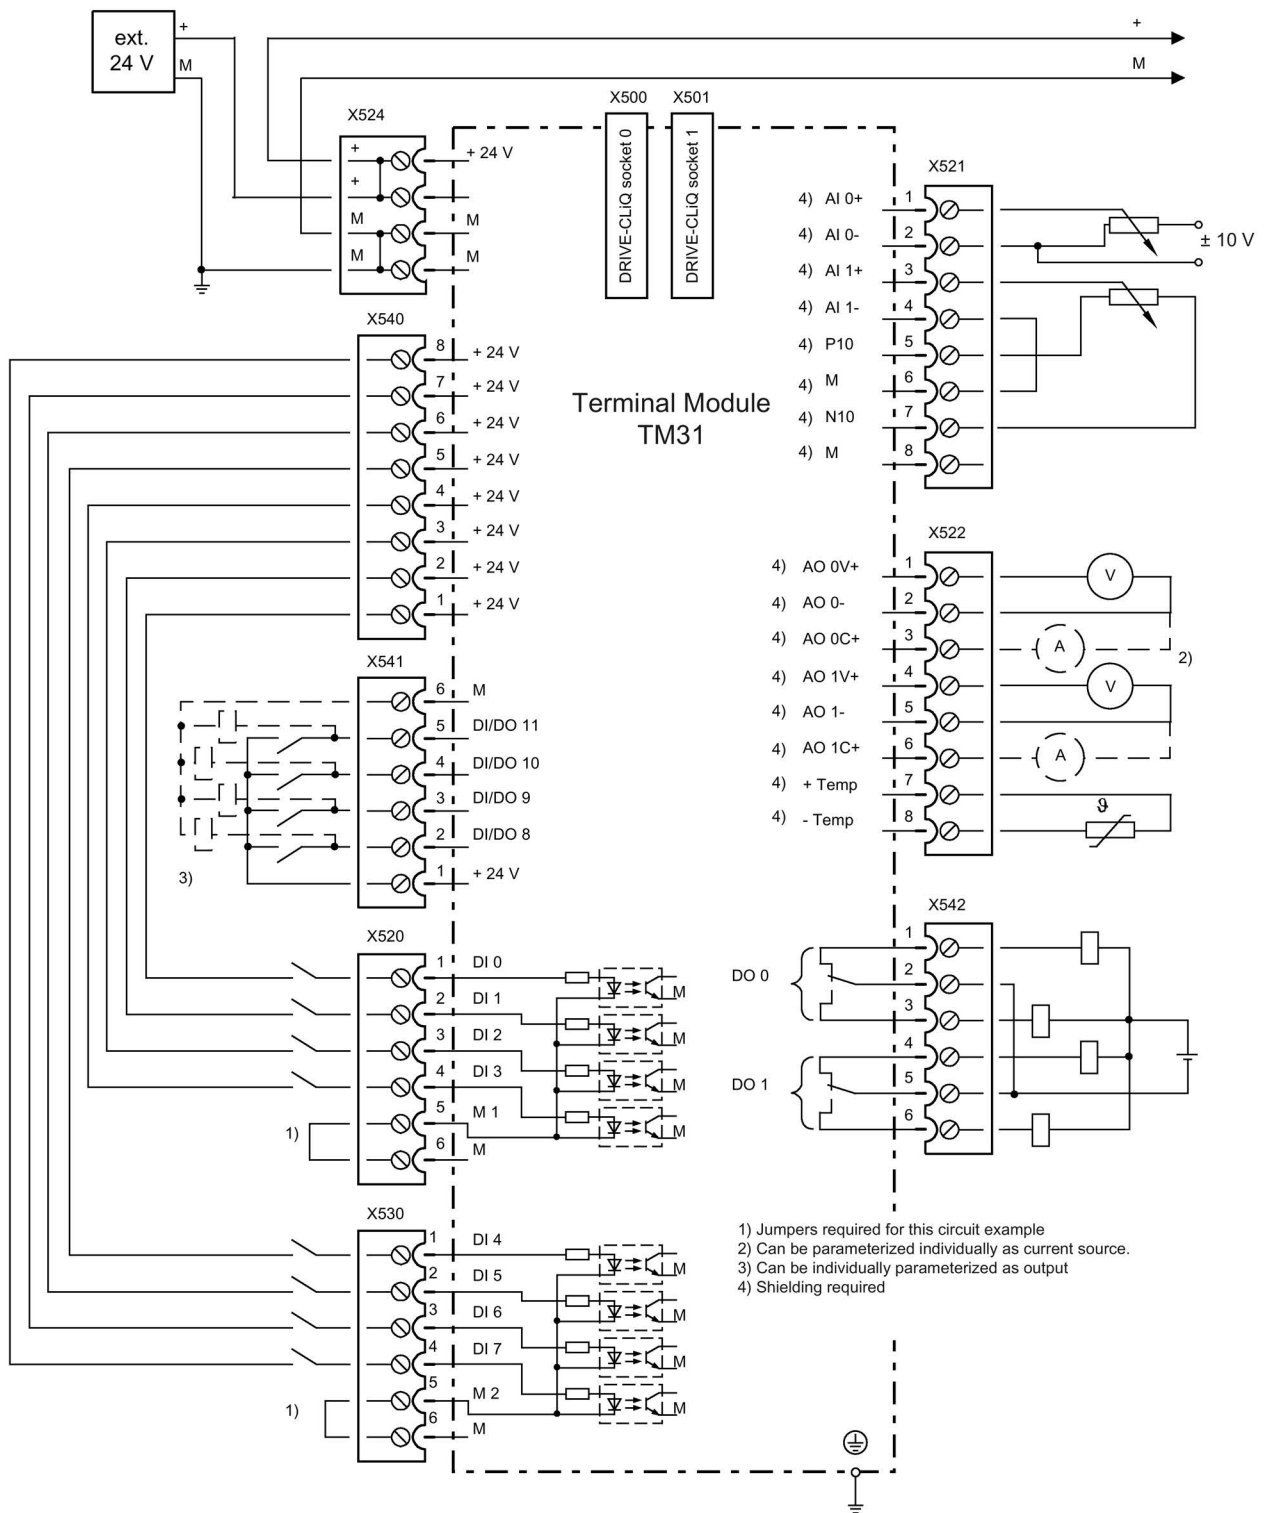


Figure 7-25 TM31 connection example

## 7.5.5 Meanings of the LEDs on the Terminal Module TM31

Table 7- 42 Meanings of the LEDs on the Terminal Module TM31

LED	Color	Status	Description, cause	Remedy
READY	-	Off	The electronic power supply is missing or outside the permissible tolerance range.	–
	Green	Continuous light	The component is ready for operation. Cyclic DRIVE-CLiQ communication is taking place.	–
	Orange	Continuous light	DRIVE-CLiQ communication is being established.	–
	Red	Continuous light	This component has at least one fault. <b>Note:</b> The LED is activated irrespective of whether the corresponding messages have been reconfigured.	Remove and acknowledge the fault.
	Green/ red	Flashing light 0.5 Hz	Firmware is being downloaded.	–
		Flashing light 2 Hz	Firmware download has been completed. The system waits for POWER ON.	Carry out a POWER ON.
	Green/ orange or Red/ orange	Flashing light	Component recognition via LED is activated <sup>1)</sup> . <b>Note:</b> Both options depend on the LED status when component recognition is activated.	–

<sup>1)</sup> See SINAMICS DCM Parameter Manual for the parameters to activate the recognition of components via LED

### Cause and rectification of faults

The following documents contain information about the cause of faults and how they can be rectified:

SINAMICS DCM List Manual

7.5.6 Dimension drawing

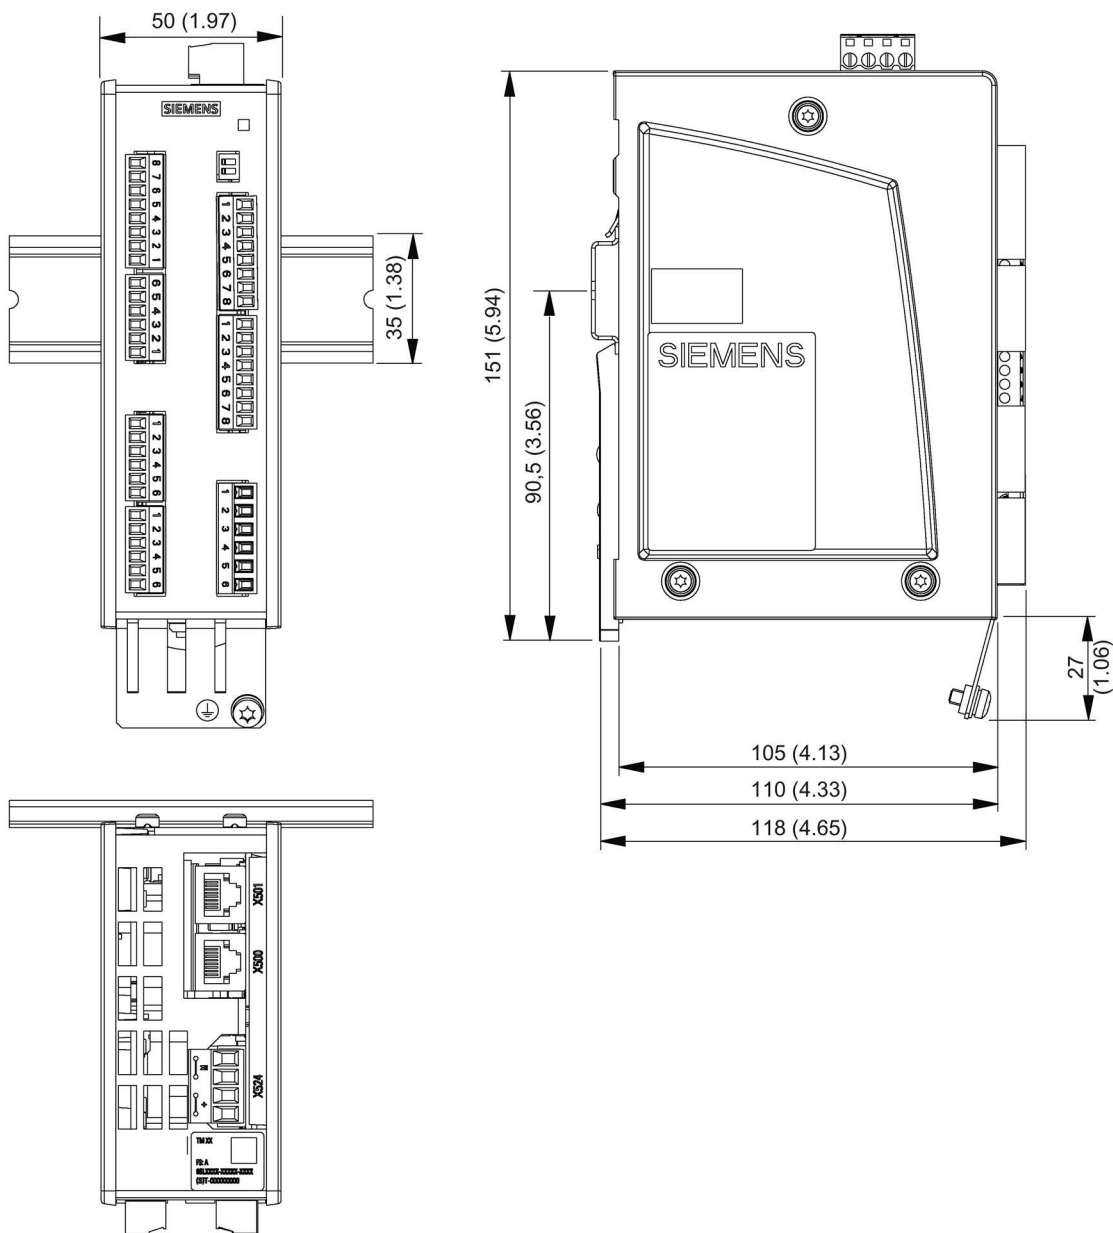


Figure 7-26 Dimension drawing of Terminal Module TM31, all data in mm and (inches)


## 7.5.7 Installation

### Installation

1. Tilt the component backwards slightly and attach it to the DIN rail using the hooks.
2. Swivel the component onto the DIN rail until you hear the mounting slide at the rear latch into position.
3. Slide the components along the mounting rail to either the left or right up to their final position.

### Disassembly

1. First shift the mounting slide downwards at the lug to release the interlocking with the mounting rail.
2. Swivel the component to the front and withdraw it upwards from the DIN rail.

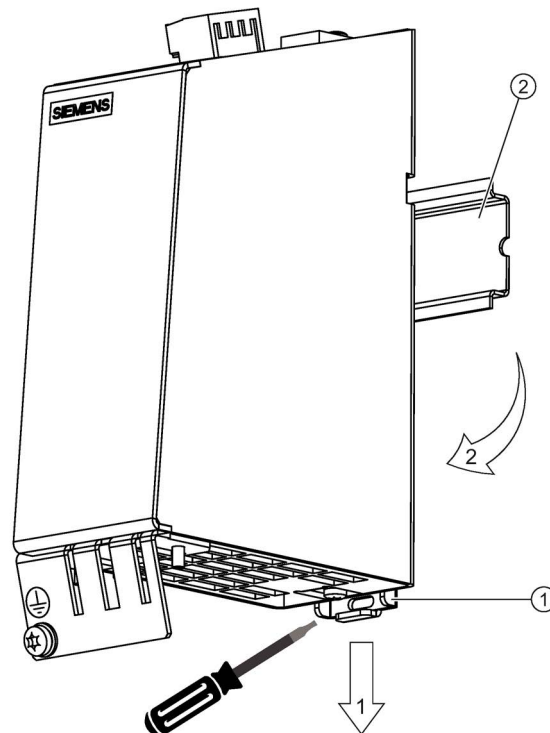


- ① Mounting slide  
② Standard mounting rail

Figure 7-27 Removing from a mounting rail

### 7.5.8 Protective conductor connection and shield support

It is always advisable to shield the digital input/output wiring.

The following diagrams show typical Weidmüller shield connection terminals for the shield supports.

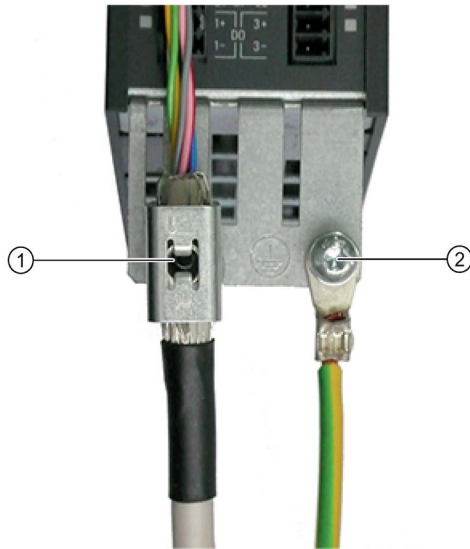

- ① Shield connection terminal, Weidmüller company, type: KLBUE CO1, Article number: 1753311001
- ② Protective conductor connection M4 / 1.8 Nm

Figure 7-28 Shield supports

#### NOTICE

##### Damage or faulty operation due to incorrect shielding or inadmissible cable lengths

If the correct shielding procedures and the permissible cable lengths are not observed, the machine can be damaged or may malfunction.

- Only use shielded cables.
- Do not exceed the cable lengths stated in the technical data.

## 7.5.9 Connector coding

To ensure that identical connectors are assigned correctly on the TM31, the connectors are coded as shown in the diagram below.

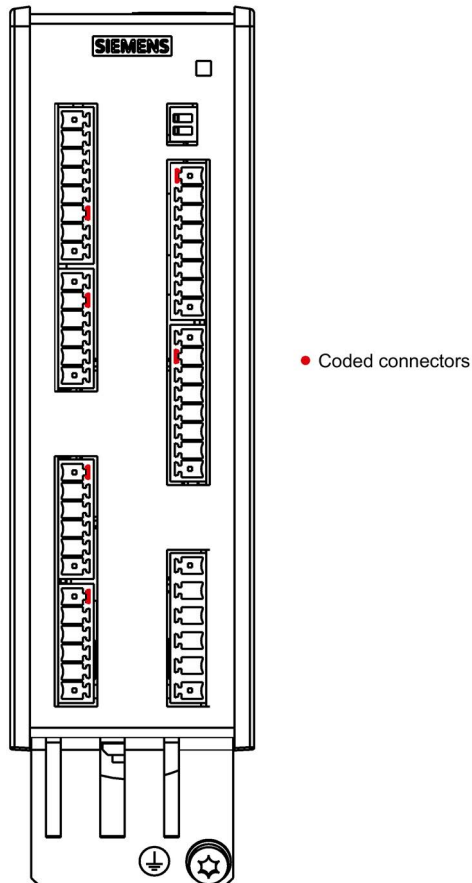


Figure 7-29 Example of connector coding at the TM31

The bending radii of the cables must be observed (see MOTION-CONNECT description).

### 7.5.10 Technical data

Table 7- 43 Technical data

6SL3055-0AA00-3AA1	Unit	Value
Electronic power supply		
Voltage	V <sub>DC</sub>	24 DC (20.4 – 28.8)
Current (without DRIVE-CLiQ or digital outputs)	A <sub>DC</sub>	0.5
Power loss	W	<10
PE/ground connection	On enclosure with M4/1.8 Nm screw	
Response time	<p>The response time for the digital inputs/outputs and the analog inputs/outputs consists of the following elements:</p> <ul style="list-style-type: none"> <li>• Response time on the component itself (approx. 1/2 DRIVE-CLiQ clock cycle).</li> <li>• Transmission time via the DRIVE-CLiQ connection (approx. 1 DRIVE-CLiQ clock cycle)</li> <li>• Evaluation on the Control Unit (see function diagram)</li> </ul> <p>Further information: SINAMICS DCM List Manual, Chapter "Function diagrams"</p>	
PE/ground connection	At the housing with M4 screw	
Maximum cable lengths:		
Electronics power supply	m	30
DRIVE-CLiQ cables	m	100
Inputs/outputs	m	30
Ventilation clearances, above/below	mm	50
Weight	kg	0.49



## 7.6 Terminal Module TM150

### 7.6.1 Description

The terminal module TM150 is a DRIVE-CLiQ component for temperature evaluation. The temperature is measured in a temperature range from -99 °C to +250 °C for the following temperature sensors:

- PT100 (with monitoring for wire breakage and short-circuit)
- PT1000 (with monitoring for wire breakage and short-circuit)
- KTY84 (with monitoring for wire breakage and short-circuit)
- PTC (with short-circuit monitoring)
- Bimetallic NC contact (without monitoring)

For the temperature sensor inputs, for each terminal block the evaluation can be parameterized for 1x2-wire, 2x2-wire, 3-wire or 4-wire conductors. There is no galvanic isolation in the TM150.

The TM150 is mounted in the control cabinet and can be snapped on to a standard mounting rail (EN 60715).

The TM150 contains the following interfaces:

Table 7- 44 Overview of the TM150 interfaces

Type	Quantity
DRIVE-CLiQ interfaces	2
Temperature sensor inputs	12
Electronics power supply	1

## 7.6.2 Safety instructions

 **WARNING**

**Non-observance of the safety instructions**

If the safety instructions in Chapter 1 are not observed, accidents can occur involving severe injuries or death.

- Make sure that the safety instructions are observed.

 **WARNING**

**Fire through overheating due to insufficient ventilation clearances**

Inadequate ventilation clearances cause overheating with a risk for personnel due to smoke and fire. This can also result in more downtimes and reduced service lives of the Terminal Module.

- For this reason, it is imperative that you maintain the 50 mm clearances above and below the Terminal Module.

**NOTICE**

**Device failure as a result of unshielded or incorrectly routed cables to temperature sensors**

Unshielded or incorrectly routed cables to temperature sensors can result in interference being coupled into the signal processing electronics from the power side. This can result in significant disturbance of all signals (fault messages) up to failure of individual components (destruction of the devices).

- Only use shielded cables as temperature sensor cables.
- If temperature sensor cables are routed together with the motor cable, use separately shielded cables twisted in pairs.
- Connect the cable shield at both ends to ground potential over a large surface area.

**NOTICE**

**Damage through the use of incorrect DRIVE-CLiQ cables**

Damage or malfunctions can occur on the devices or system when incorrect or unreleased DRIVE-CLiQ cables are used.

- Only use suitable DRIVE-CLiQ cables that have been released by Siemens for the respective application.

---

**Note**

**Malfunctions due to polluted DRIVE-CLiQ interfaces**

Malfunctions can occur in the system through the use of polluted DRIVE-CLiQ interfaces.

- Cover unused DRIVE-CLiQ interfaces with the supplied blanking covers.
-

### 7.6.3 Interface description

#### 7.6.3.1 Overview

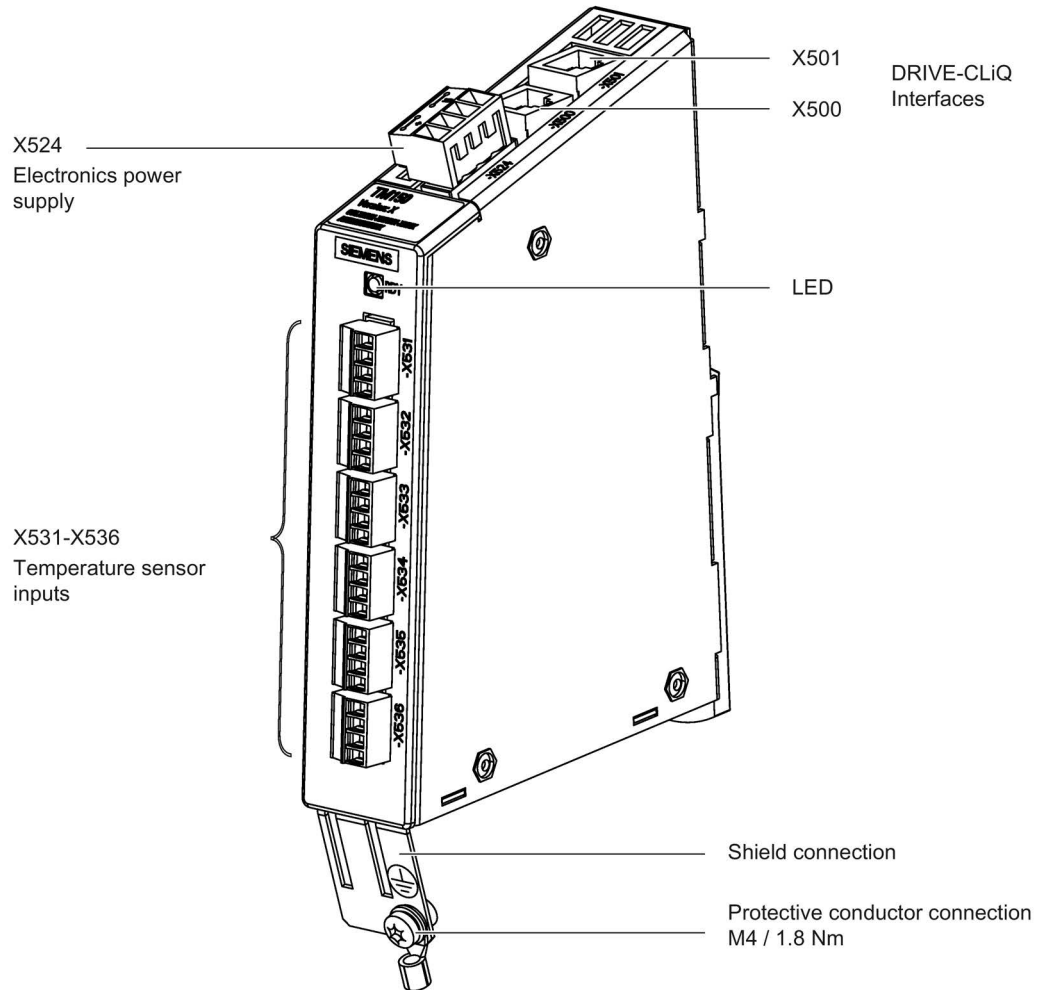



Figure 7-30 Interface overview of Terminal Module TM150

### Terminal type

<b>X524</b>		
Terminal type	Screw terminal	
Connectable conductor cross-section	Rigid, flexible	0.2 ... 2.5 mm <sup>2</sup>
	With wire-end ferrule without plastic sleeve	0.2 ... 2.5 mm <sup>2</sup>
	With wire-end ferrule with plastic sleeve	0.5 ... 1.5 mm <sup>2</sup>
	AWG / kcmil	22 ... 12
Stripped length	6 ... 7 mm	
Tool	0.5 × 3 mm screwdriver	
Tightening torque	0.4 to 0.5 Nm	
<b>X531 - X536</b>		
Terminal type	Spring-loaded terminal	
Connectable conductor cross-section	Rigid	0.2 ... 1.5 mm <sup>2</sup>
	Flexible	0.2 ... 1.5 mm <sup>2</sup>
	Flexible with wire-end sleeve without plastic sleeve	0.25 ... 1.5 mm <sup>2</sup>
	Flexible with wire-end ferrule with plastic sleeve	0.25 ... 0.75 mm <sup>2</sup>
	AWG / kcmil	24 ... 16
Stripped length	10 mm	

### 7.6.3.2 X500 and X501 DRIVE-CLiQ interfaces

Table 7- 45 X500/X501: DRIVE-CLiQ interfaces

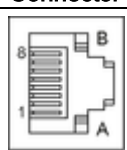Connector	Pin	Signal name	Technical specifications
	1	TXP	Transmit data +
	2	TXN	Transmit data -
	3	RXP	Receive data +
	4	Reserved, do not use	
	5	Reserved, do not use	
	6	RXN	Receive data -
	7	Reserved, do not use	
	8	Reserved, do not use	
	A	+ (24 V)	Power supply, max. 450 mA
	B	M (0 V)	Electronics ground
Connector type	DRIVE-CLiQ socket		


The blanking covers for the DRIVE-CLiQ interfaces are included in the scope of delivery.  
Blanking covers (50 pcs), Article number: 6SL3066-4CA00-0AA0

#### Note

The maximum DRIVE-CLiQ cable length is 100 m.

### 7.6.3.3 X524 Electronics power supply

Table 7- 46 X524: Electronic power supply

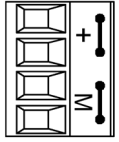Connector	Terminal	Designation	Technical specifications
	+	Electronic power supply	Voltage: 24 V DC (20.4 V – 28.8 V) Current consumption (max./typ.): 0.5 A / 0.1 A Max. current via jumper in connector: 20 A (15 A according to UL/CSA)
	+	Electronic power supply	
	M	Electronics ground	
	M	Electronics ground	

The maximum cable length that can be connected is 30 m.


#### Note

The two "+" or "M" terminals are jumpered in the connector. This ensures that the supply voltage is looped through.

The current consumption increases by the value for the DRIVE-CLiQ node.

### 7.6.3.4 X531-X536 temperature sensor inputs

Table 7- 47 X531-X536: Temperature sensor inputs

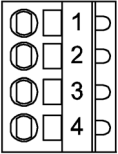Connector	Terminal	Function 1x2 / 2x2-wire	Function 3 and 4-wire	Technical specifications
	1	+ Temp (channel x)	+ (channel x)	Temperature sensor connection for sensors with 1x2-wires Connection of the 2nd measurement cable for sensors with 4-wires
	2	- Temp (channel x)	- (channel x)	
	3	+ Temp (channel y)	+ I <sub>c</sub> (constant current, positive channel x)	Temperature sensor connection for sensors with 2x2, 3 and 4-wires
	4	- Temp (channel y)	- I <sub>c</sub> (constant current, negative channel x)	
Measuring current via temperature sensor connection: approx. 0.83 mA				

When connecting temperature sensors with three wires, a jumper must be inserted between X53x.2 and X53x.4.

Table 7- 48 Channel assignment

Terminal	Channel number [x] for 1x2, 3 and 4-wires	Channel number [y] for 2x2-wires
X531	0	6
X532	1	7
X533	2	8
X534	3	9
X535	4	10
X536	5	11

**NOTICE****Motor damage due to incorrectly connected KTY temperature sensor**

A KTY temperature sensor connected with incorrect polarity cannot detect if the motor overheats. Overheating may result in damage to the motor.

- Connect a KTY temperature sensor with the correct polarity.

**NOTICE****Overheating of the motor through jumpering the temperature sensor connections**

Jumpering of the temperature sensor connections "+ Temp" and "- Temp" results in incorrect measurement results. Damage to the motor can result if the overheating is not detected.

- When using several temperature sensors, separately connect the individual sensors to "+ Temp" and "- Temp".

**NOTICE****Device failure as a result of unshielded or incorrectly routed cables to temperature sensors**

Unshielded or incorrectly routed cables to temperature sensors can result in interference being coupled into the signal processing electronics from the power side. This can result in significant disturbance of all signals (fault messages) up to failure of individual components (destruction of the devices).

- Only use shielded cables as temperature sensor cables.
- If temperature sensor cables are routed together with the motor cable, use separately shielded cables twisted in pairs.
- Connect the cable shield at both ends to ground potential over a large surface area.

**Note****Incorrect temperature measured values as a result of cables with an excessively high resistance**

An excessively long cable length or an excessively small cable cross-section can falsify the temperature measurement (for a PT100, 10  $\Omega$  cable resistance can falsify the measurement result by 10%). As a consequence, excessively high measured values are output, which could lead to the motor being unnecessarily tripped prematurely.

- Use only cable lengths  $\leq 300$  m.
- For cable lengths  $>100$  m, use cables with a cross-section of  $\geq 1$  mm<sup>2</sup>.


**7.6.4 Connection examples**

Figure 7-31 Connecting a PT100/PT1000 with 2x2, 3 and 4-wires to the temperature sensor inputs X53x of Terminal Module TM150

7.6 Terminal Module TM150




Figure 7-32 Connection example for a Terminal Module TM150

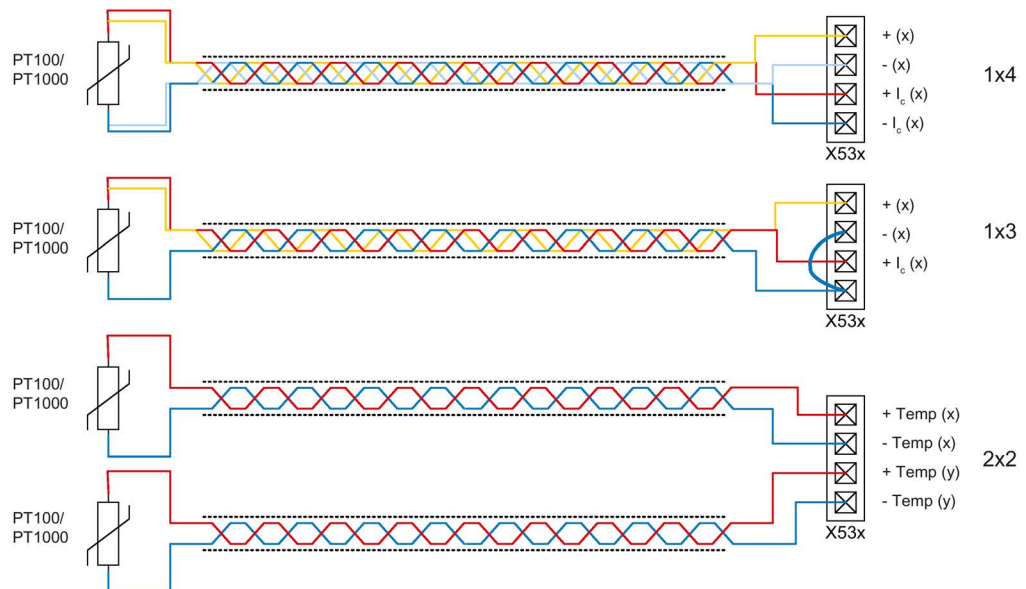

## 7.6.5 Meaning of the LEDs on the Terminal Module TM150

Table 7- 49 Meaning of the LEDs at the Terminal Module TM150

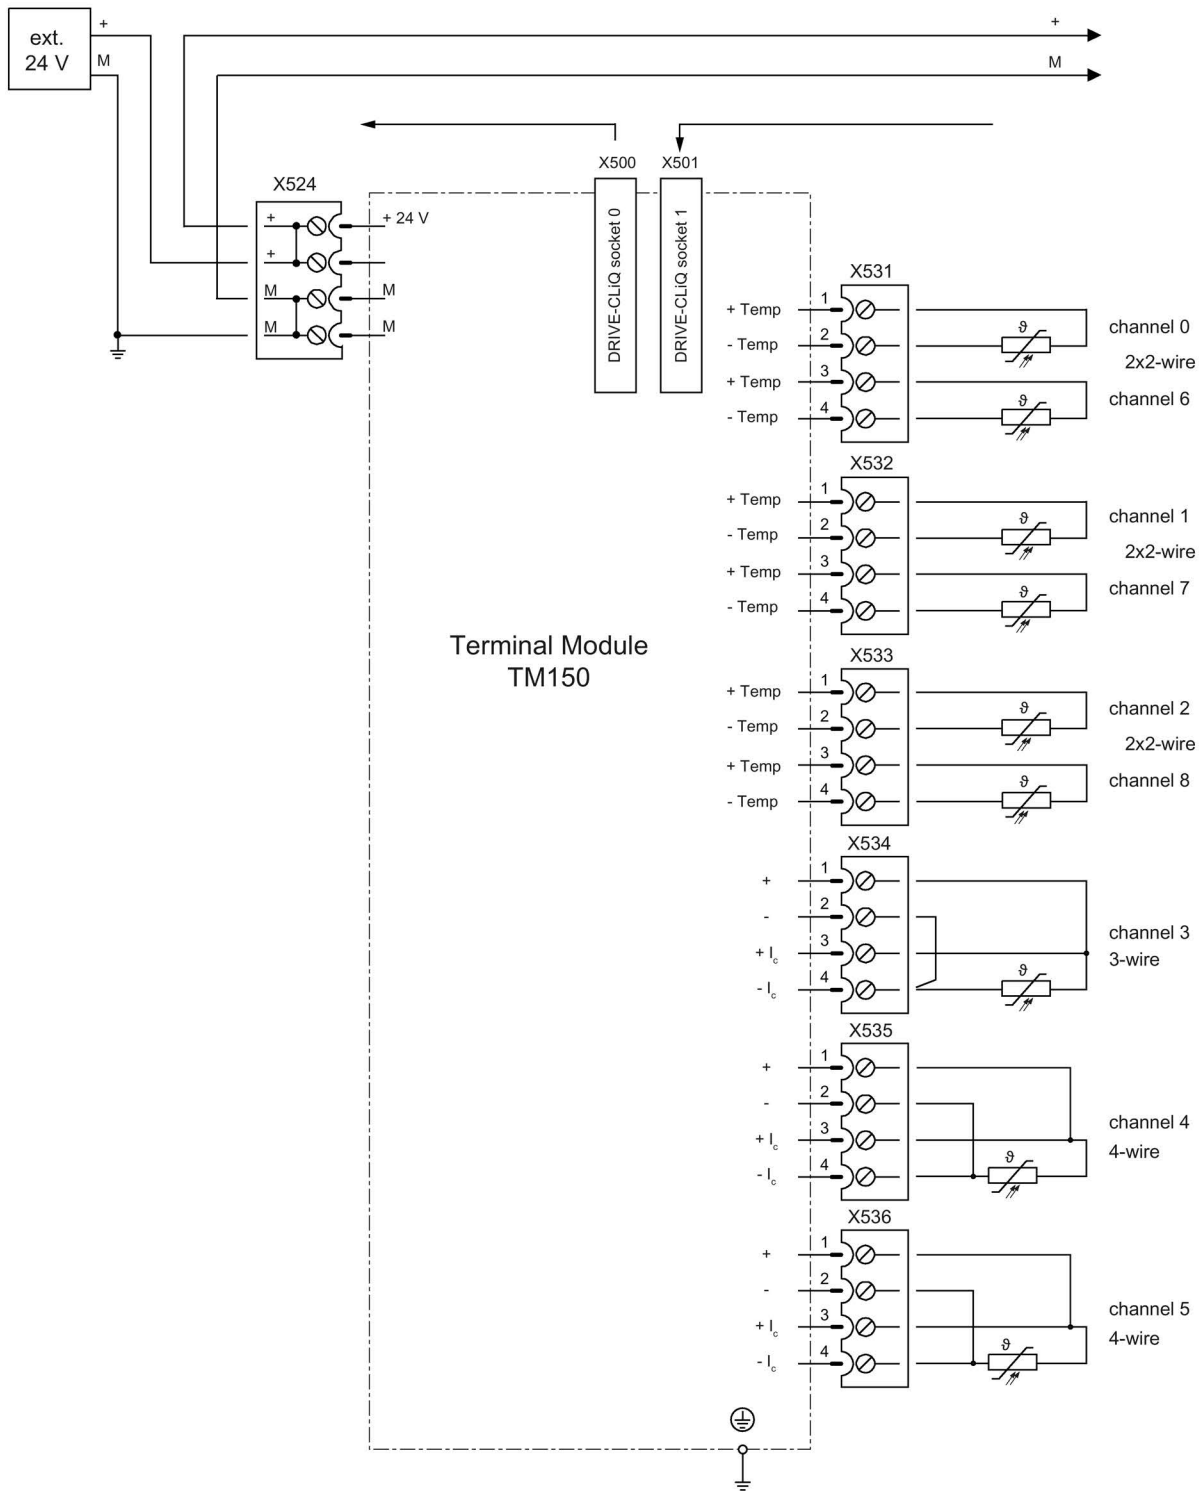LED	Color	State	Description, cause	Remedy
READY	–	Off	Electronic power supply is missing or outside permissible tolerance range.	Check power supply
	Green	Continuous light	The component is ready for operation and cyclic DRIVE-CLiQ communication is taking place.	–
	Orange	Continuous light	DRIVE-CLiQ communication is being established.	–
	Red	Continuous light	At least one fault is present in this component. <b>Remark:</b> LED is controlled irrespective of the corresponding messages being reconfigured.	Remedy and acknowledge fault
	Green/ Red	Flashing light 0.5 Hz	Firmware is being downloaded.	–
		Flashing light 2 Hz	Firmware has been downloaded. Wait for POWER ON.	Carry out a POWER ON
	Green/ orange or red/ orange	Flashing light 2 Hz	Component recognition via LED is activated (p0154). <b>Remark:</b> Both options depend on the LED status when module recognition is activated via p0154 = 1.	–

### Cause and rectification of faults

The following documents contain information about the cause of faults and how they can be rectified:

SINAMICS S120 Commissioning Manual with STARTER

SINAMICS DCM List Manual

### 7.6.6 Dimension drawing

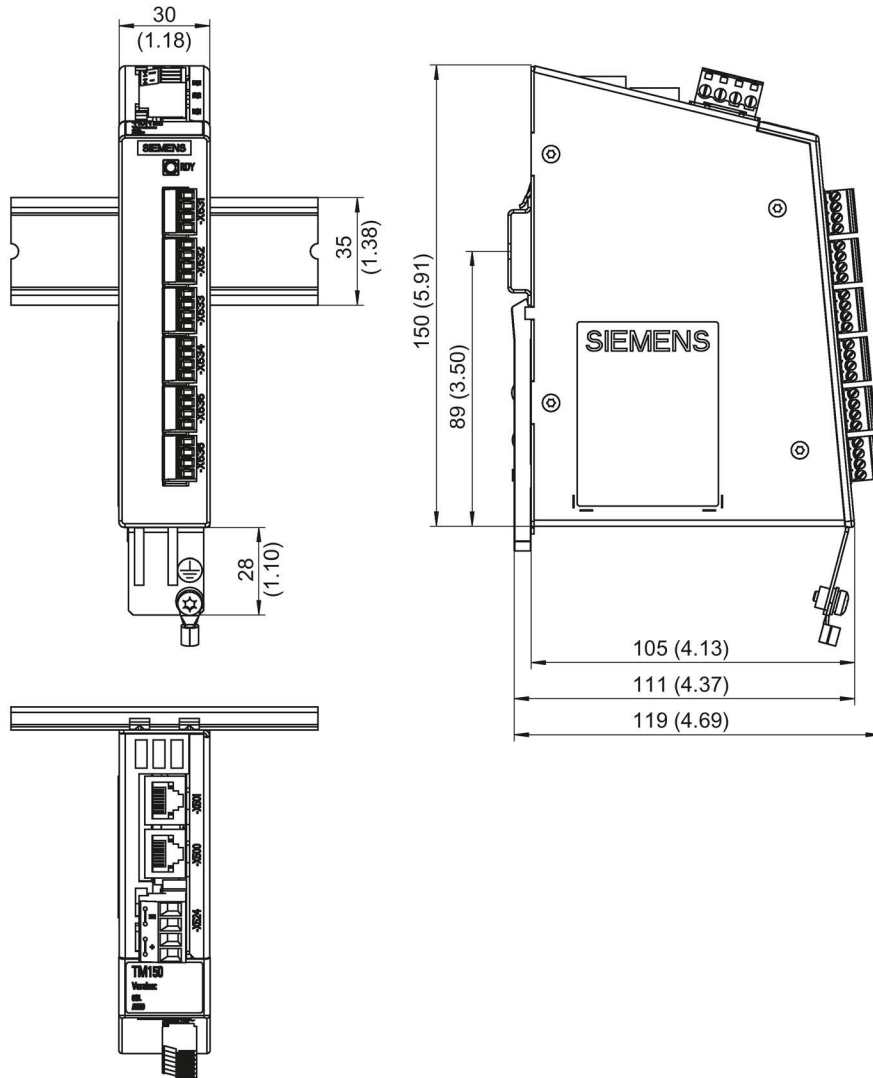


Figure 7-33 Dimension drawing of Terminal Module TM150, all data in mm and (inches)


## 7.6.7 Installation

### Installation

1. Tilt the component backwards slightly and attach it to the DIN rail using the hooks.
2. Swivel the component onto the DIN rail until you hear the mounting slide at the rear latch into position.
3. Slide the components along the mounting rail to either the left or right up to their final position.

### Disassembly

1. First shift the mounting slide downwards at the lug to release the interlocking with the mounting rail.
2. Swivel the component to the front and withdraw it upwards from the DIN rail.

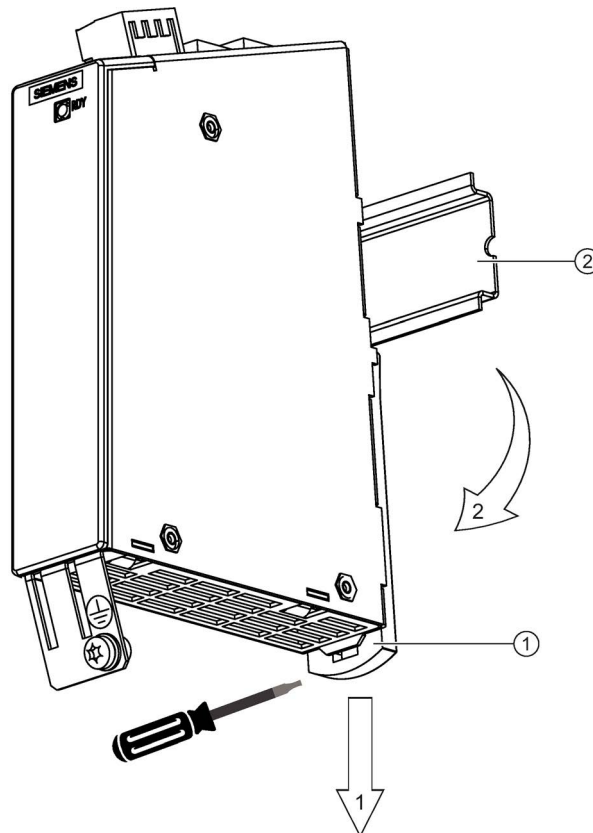


- ① Mounting slide  
② Standard mounting rail

Figure 7-34 Removing a TM150 from a mounting rail

### 7.6.8 Protective conductor connection and shield support

The following diagram shows a typical Weidmüller shield connection clamp for the shield supports.

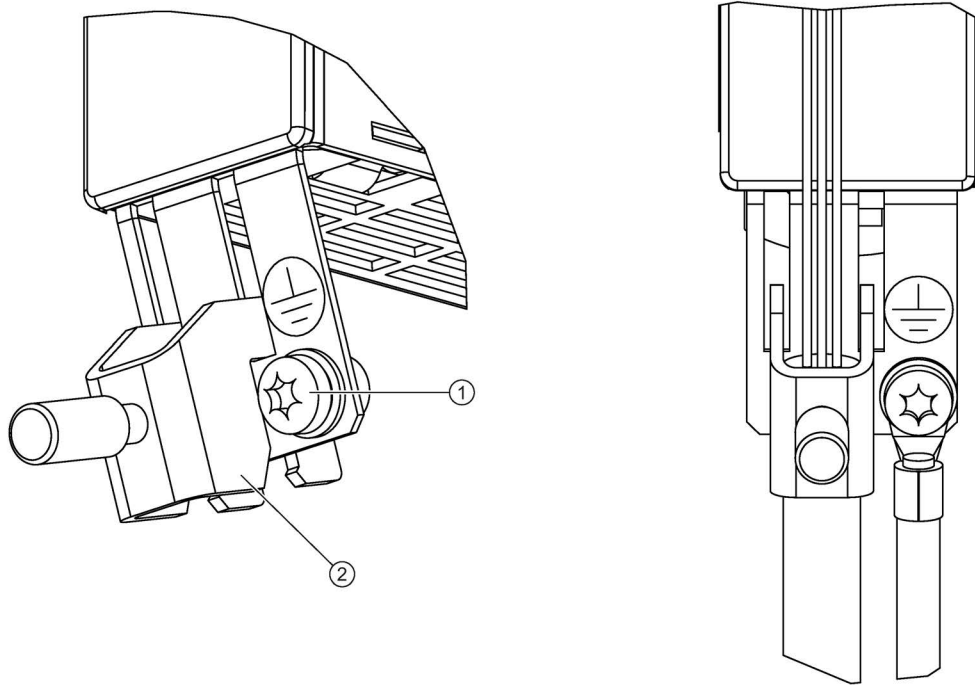

- ① Protective conductor connection M4 / 1.8 Nm
- ② Shield connection terminal, Weidmüller company, type: KLBÜ CO1, order number: 1753311001

Figure 7-35 Shield support and protective conductor connection of the TM150

#### NOTICE

##### Damage or faulty operation due to incorrect shielding and impermissible cable lengths

If the correct shielding procedures and the permissible cable lengths are not observed, the machine can be damaged or may malfunction.

- Only use shielded cables.
- Do not exceed the cable lengths stated in the technical data.

## 7.6.9 Technical data

Table 7- 50 Technical data

<b>6SL3055-0AA00-3LA0</b>	<b>Unit</b>	<b>Value</b>
Voltage	V <sub>DC</sub>	24 V DC (20.4 - 28.8)
Current (without DRIVE-CLiQ)	A <sub>DC</sub>	0.07
Power loss	W	1.6
PE/ground connection	On enclosure with M4/1.8 Nm screw	
Maximum cable length	m	50
Ventilation clearances, above/below	mm	50
Weight	kg	

### Note

In order to guarantee the degree of protection, all of the connectors must be correctly screwed into place and appropriately locked.



 **WARNING**

**Not observing fundamental safety instructions and residual risks**

The non-observance of the fundamental safety instructions and residual risks stated in Chapter 1 can result in accidents with severe injuries or death.

- Adhere to the fundamental safety instructions.
- When assessing the risk, take into account remaining risks.

---

**Note**

During a data save operation initiated by the user, the electronics power supply for the SINAMICS DC MASTER must not be interrupted.

An active saving process is indicated by the following actions:

- The RDY-LED flashes (see Chapter "Description of the LEDs on the CUD (Page 635)")
- The BOP20 flashes

Interrupting the power supply while saving can lead to the loss of the current device parameter assignments. See also Chapter "Memory card functions (Page 359)".

---

## 8.1 Commissioning checklist

### 8.1.1 Commissioning checklist

#### Preparation

- Read the safety instructions in Chapter "Safety instructions (Page 17)".
- Read Chapter "Transportation, unpacking, installation (Page 77)".
- Work through the entire checklist together with another person before starting work on the device.
- Before commissioning the converter, as a minimum, check the following points:

#### Mechanical installation

Use the following checklist to guide you through the mechanical installation procedure for the device.

---

#### Note

##### Checking the checklist

Check the boxes accordingly in the right-hand column if the activity applies to the cabinet unit in your scope of supply. In the same way, check the boxes once you have finished the installation procedure to confirm that the activities are complete.

---

Item	Activity	Available	Completed
1	The device is properly mounted on a vertical wall made of non-flammable material.	<input type="checkbox"/>	<input type="checkbox"/>
2	All shield connections are tight (see Chapter "Connecting (Page 91)").	<input type="checkbox"/>	<input type="checkbox"/>
3	All cable connections are tight (see Chapter "Connecting (Page 91)").	<input type="checkbox"/>	<input type="checkbox"/>
4	The ambient conditions are complied with (see Chapter "Environmental requirements (Page 44)").	<input type="checkbox"/>	<input type="checkbox"/>
5	The cooling air can flow unobstructed (see fan, airflow rate in Chapter "Unit data (Page 45)").	<input type="checkbox"/>	<input type="checkbox"/>
6	The motor and driven machine are ready to start.	<input type="checkbox"/>	<input type="checkbox"/>



## Electrical installation

Use the following checklist to guide you through the electrical installation procedure for the device.

### Note

#### Checking the checklist

Check the boxes accordingly in the right-hand column if the activity applies to the cabinet unit in your scope of supply. In the same way, check the boxes once you have finished the installation procedure to confirm that the activities are complete.

Item	Activity	Available	Completed
1	The converter devices have been correctly grounded.	<input type="checkbox"/>	<input type="checkbox"/>
2	The line connections (1U1, 1V1, 1W1), motor connections (1C1, 1D1) and the field connections (3C, 3D) have been correctly routed.	<input type="checkbox"/>	<input type="checkbox"/>
3	All control cables have been correctly connected (see Chapter "Connecting (Page 91)").	<input type="checkbox"/>	<input type="checkbox"/>
4	The correct commutating reactors have been installed and connected (see Chapter "Line reactors (Page 146)").	<input type="checkbox"/>	<input type="checkbox"/>
5	The correct semiconductor protection fuses and cable protection fuses have been installed (see Chapter "Fuses (Page 149)").	<input type="checkbox"/>	<input type="checkbox"/>
6	There are no tools, foreign bodies or metal chips (e.g. from drilling) in the converter.	<input type="checkbox"/>	<input type="checkbox"/>
7	The required covers are in place and correctly mounted.	<input type="checkbox"/>	<input type="checkbox"/>
8	In all applications, a higher-level Emergency Stop device to avoid dangerous situations is absolutely mandatory. This is available, functioning and operational.	<input type="checkbox"/>	<input type="checkbox"/>
9	The line supply voltage is the same as the rated input voltage of the converter (see Chapter "Technical data (Page 39)").	<input type="checkbox"/>	<input type="checkbox"/>
10	A clockwise phase sequence is connected to the fan power supply (4U1, 4V1, 4W1). (connection is only available only for devices with radial fan (3~AC 400 V)). The fan rotates counterclockwise when viewed from above (see Chapter "Fan (Page 174)").	<input type="checkbox"/>	<input type="checkbox"/>
11	If the digital inputs for ON/OFF1 OR operating enable (X177 terminal 12 or 13) are not used on the hardware side, they must be permanently supplied with +24 V.	<input type="checkbox"/>	<input type="checkbox"/>

## Restoring the factory settings

The commissioning steps listed in "Commissioning using the BOP20 operator panel (Page 273)", "Commissioning using the AOP30 operator panel (Page 281)" and "Commissioning with the STARTER commissioning tool (Page 287)" assume that all parameters are set to the factory settings. This is the case when the device is originally shipped. If the parameters have already been changed, or if you are not certain that all of the parameters are at their factory settings, then run the "Restore factory setting" function!

With the basic operator panel BOP20:

(1)p0009 = 30

(1)p0976 = 1

SINAMICS DCM resets all of the parameters to the factory setting, and executes a power on. The parameters must then be permanently saved by pressing the P button for a longer period of time (at least 3 seconds, however until the display starts to flash).

## 8.2 Switching on

After the device is turned on (POWER ON), the drive powers up. Power-up up to operating state 7.0 in the SINAMICS DCM with the parameters saved (RAM to ROM was carried out) takes approx. 45 s. Power-up without the saved parameters (first commissioning) takes approx. 60 s.

Table 8- 1 SINAMICS DCM ramp-up times

BOP20 display	CUD LED status	Ramp-up time <sup>1)</sup>
Light on the BOP20	RDY: Red DP1: Red	POWER ON
-	RDY: orange DP1: -	15 s
Display "run up"	RDY: orange DP1: -	35 s
Operating state 12.4	RDY: Green DP1: -	40 s
Operating state 7.0	RDY: Green DP1: -	45 s
<sup>1)</sup> Power-up with saved parameters (RAM to ROM was carried out)		

The status of the LEDs on the CUD (see also Chapter "Description of the LEDs on the CUD (Page 635)") can only be seen when the device cover is open.

**Note**

If options are being used (DCC, CBE20, SMC10, SMC30, TM15, TM31, TM150 etc.) and in the case of certain device configurations, the duration of the power-up increases.

**Note**

If an external memory card with previously saved data is plugged into the drive during power-up, the drive powers up based on the parameter assignments saved on the card (see also Chapter "Memory card functions (Page 359)").

## 8.3 Commissioning using the BOP20 operator panel

### 8.3.1 Preconditions

#### Fundamentals of SINAMICS

If you are not yet familiar with SINAMICS basics (parameters, drive objects, BICO technology, etc.), please read Chapter "Basic information (Page 349)" before starting commissioning.

#### BOP20 operator panel

If you are not yet familiar with the BOP20 operator panel, please read Chapter "Parameterizing using the BOP20 (Basic Operator Panel 20) (Page 368)" before starting commissioning.

#### Parameter notation

Expressed in full, a parameter consists of the drive object + parameter number + index, with the following notation

(oo)pxxxxx[ii] for indexed parameters

(oo)pxxxxx for non-indexed parameters

To make these easier to read, in this chapter the drive object specification has been omitted from all parameters belonging to the "Drive control" drive object (= drive object 2).

For example, the specification p50076[1] refers to parameter (2)p50076[1] (= drive object 2, parameter 50076, index 1).

### 8.3.2 Commissioning steps

Note:

Parameters with [D] are data-set dependent. Commissioning must be carried out for each data set.

#### <1> Access authorization

In order to be able to set the access authorization, drive object 1 (DO1) must be activated at the BOP20, see Chapter "Displays and using the BOP20 (Page 373)".

Access level

(1)p0003 = 1 Standard

(1)p0003 = 2 Advanced

(1)p0003 = 3 Expert

#### <2> Adjust the rated device currents

---

##### Note

The US rating must be set at p50067 for Base Drives (type 6RA80xx-2xxxx) manufactured in North America.

---

The **rated armature DC current for the device** must be adjusted by setting p50076[0] (in %) or p50067 if:

Maximum armature current  $< 0.5 \times$  rated armature DC current for the device

The **rated field DC current for the device** must be adapted by setting p50076[1] (in %) if:

Maximum field current  $< 0.5 \times$  rated field DC current for the device

#### <3> Adjust to the actual device supply voltage

p50078[0] Rated input voltage for converter armature (in volts)

p50078[1] Rated input voltage for converter field (in volts)

#### 〈4〉 Enter the motor data

The motor data must be entered into the following parameters as specified on the motor rating plate (see also the Chapter "Thermal overload protection for the DC motor (I<sup>2</sup>t monitoring of the motor) (Page 582)" and "Speed-dependent current limitation (Page 588)").

SIEMENS				CE
DC - MOTOR		1GG6286-0NG40-1VV1-Z		
No. N-		VO1215813010001 / 2007		EN 60034-1
Wärmekl./TH.CL.		180 (H)	IP23	IM B3 Gew./WT. 1,56 t
V	A	1/min	kW	
20 ... 420	985	10 ... 1410	2,76 ... 390	
420	990	1410 ... 1620	390	
p50101	p50100			
Fremderr./SEPARATE EXCIT. 310 ... 210 V, 14,5 ... 11,5 A				p50102
Fremdkühlung/SEPAR.COOLING: 0,75 m <sup>3</sup> /s			Luftrichtung/ Dir. of Ventilation NDE-DE	
20 Bürsten/BRUSHES, ORDER CODE: NMA:2613209100				
B6C, 3~ 50 HZ, 400 V				
MADE IN GERMANY D-90441 NUERNBERG				

Figure 8-1 Example of a rating plate

p50100[D]	Rated armature current (in amperes)
p50101[D]	Rated armature voltage (in volts)
p50102[D]	Rated excitation current (in amperes)
p50104[D]	Speed n1 (in rpm)
p50105[D]	Armature current I1 (in amperes)
p50106[D]	Speed n2 (in rpm)
p50107[D]	Armature current I2 (in amperes)
p50108[D]	Maximum operating speed n3 (in rpm)
p50109[D]	1 = Speed-dependent current limitation active
p50114[D]	Motor thermal time constant (in seconds)
p2003	Enter the rated torque
	<ul style="list-style-type: none"> <li>• If specified: refer to the manufacturer's specifications of the motor</li> <li>• Or calculate from rating plate specifications for power and rated speed: p2003 = 9550 x rated power [in kW] / rated speed [in rpm]</li> </ul>

**Note**

For 2Q devices, the rated DC voltage of the SINAMICS DCM specified in the technical data, can only be achieved if the  $\alpha_G$  limit (p50150) is set to 5°. The factory setting is 30°. In order to reach the rated motor voltage (p50101[D]), the  $\alpha_G$  limit must also be changed to 5°.

---

**〈5〉 Data for actual speed value acquisition**

**〈5.1〉 Operation with analog tachometer**

- p50083[D] = 1 The actual speed value comes from the "Main actual value" (r52013) channel (terminals XT1-103, XT1-104)
- p50741[D] Tachometer voltage at maximum speed (– 270.00 to +270.00 V)  
Remark:  
The value set here determines the 100% speed for the closed-loop speed control.
- p2000 Speed in rpm for tachometer voltage set on p50741[0]  
Comment 1:  
Parameter p2000 is used to convert from a "physical speed" (rpm) into a "relative speed" (%) and vice versa.  
This conversion is required for:
- Speed setpoint input via the control panel in STARTER
  - Speed setpoint input via the operating screen form at the AOP30
  - Calculation of display values r0020, r0021, r0060 and r0063
- Remark 2:  
Parameter p2000 and parameters r0020, r0021, r0060 and r0063 are not data-set dependent. This is the reason why the physical speed can only be displayed correctly for one data set (DDS).

**〈5.2〉 Operation with incremental encoder**

- p50083[D] = 2 The actual speed value comes from an incremental encoder (r0061) connected to terminal block X177.
- p0400[0] Encoder type selection
- p2000 Speed in rpm at 100% speed  
Remark:  
The value set here determines the 100% speed for the closed-loop speed control.

**〈5.3〉 Operation without tachometer (closed-loop EMF control)**

- p50083[D] = 3 The actual speed value comes from the "Actual EMF value" channel (r52287), but is evaluated with p50115.
- p50115[D] EMF at 100% speed  
(1.00 to 140.00% of device rated supply voltage (p50078[0]))  
Remark:  
The value set here determines the 100% speed for the closed-loop speed control.
- p2000 Speed in rpm for EMF set on p50115[0]  
Comment 1:  
Parameter p2000 is used to convert from a "physical speed" (rpm) into a "relative speed" (%) and vice versa.  
This conversion is required for:
- Speed setpoint input via the control panel in STARTER
  - Speed setpoint input via the operating screen form at the AOP30
  - Calculation of display values r0020, r0021, r0060 and r0063
- Remark 2:  
Parameter p2000 and parameters r0020, r0021, r0060 and r0063 are not data-set dependent. This is the reason why the physical speed can only be displayed correctly for one data set (DDS).

**〈5.4〉 Freely-wired actual value**

- p50083[D] = 4 The actual-value input is defined with p50609[C]
- p50609[C] Number of the parameter that is switched to the actual speed controller value
- p2000 Speed in rpm at which the parameter selected on p50609[0] accepts the value 100%  
Comment 1:  
Parameter p2000 is used to convert from a "physical speed" (rpm) into a "relative speed" (%) and vice versa.  
This conversion is required for:
- Speed setpoint input via the control panel in STARTER
  - Speed setpoint input via the operating screen form at the AOP30
  - Calculation of display values r0020, r0021, r0060 and r0063
- Remark 2:  
Parameter p2000 and parameters r0020, r0021, r0060 and r0063 are not data-set dependent. For that reason, the physical speed can only be displayed correctly for one data set (CDS).

**〈5.5〉 Operation with incremental encoder and SMC30**

- p50083[D] = 5 The actual speed value comes from an incremental encoder connected to an SMC30 (r3770).
- p0400[1] Encoder type selection
- p2000 Speed in rpm at 100% speed  
Remark:  
The value set here determines the 100% speed for the closed-loop speed control.

**〈5.6〉 Operation with resolver and SMC10**

- p50083[D] = 5 A DRIVE-CLiQ encoder supplies the speed actual value
- p0400[1] Encoder type selection
- p2000 Speed in rpm at 100% speed  
Comment:  
The value set here defines the 100% speed for the closed-loop speed control.

**〈6〉 Data for field**

**〈6.1〉 Control of the field**

- p50082 = 0 Internal field is not used  
(e.g. in the case of permanent-magnet motors)
- p50082 = 1 The field is activated with the line contactor  
(field pulses are activated or deactivated at the same time as the line contactor)
- p50082 = 2 Automatic switching-in of the standstill field set using p50257 after a time that can be parameterized using p50258 has elapsed, once operating state o7 or higher has been reached
- p50082 = 3 Field current permanently switched on

**〈6.2〉 Field weakening**

- p50081 = 0 No speed-dependent or EMF-dependent field weakening
- p50081 = 1 Field-weakening operation by means of internal closed-loop EMF control, i.e. at speeds above the motor's rated speed (= "cut-in speed"), the motor EMF is constantly kept at setpoint EMFset (r52289) = p50101 – p50100 x p50110

**〈7〉 Set basic technological functions**

**〈7.1〉 Current limits**

- p50171[D] System current limit in torque direction I (as % of p50100)
- p50172[D] System current limit in torque direction II (as % of p50100)



**〈7.2〉 Torque limits**

p50180[D]	Torque limit 1 in torque direction I (as % of rated motor torque)
p50181[D]	Torque limit 1 in torque direction II (as % of rated motor torque)

**〈7.3〉 Ramp-function generator**

p50303[D]	Ramp-up time 1 (in seconds)
p50304[D]	Ramp-down time 1 (in seconds)
p50305[D]	Initial rounding 1 (in seconds)
p50306[D]	Final rounding 1 (in seconds)

**〈8〉 Complete quick commissioning**

Set p3900 = 3.

This triggers the calculation of the motor data (Ra, La, Lf) as well as the calculation of the controller parameters resulting from the data that was entered in the previous steps.

p3900 is then reset to 0 and quick commissioning is ended, i.e. p0010 is reset to 0.

**〈9〉 Execute optimization runs**

Perform the optimization runs one after the other:

p50051 = 23	Optimization of the armature current control for induction load
p50051 = 24	Optimization of the field current control
p50051 = 25	Optimization of the armature current control
p50051 = 26	Optimization of the speed control
p50051 = 27	Optimization of the EMF control (incl. field characteristic recording)
p50051 = 28	Recording of the friction characteristic
p50051 = 29	Optimization of the speed control for drives with a mechanical system capable of oscillation

For further details, see Chapter "Drive optimization (Page 336)".

If an optimization run is not carried out, the motor control uses the motor characteristic values calculated from the rating plate data rather than the measured values.

 **WARNING**

**Unexpected motor movement during optimization runs**

Optimization runs cause movement of the drive which can result in death, severe injury or material damage.

- Observe the general safety instructions.
- Ensure that the EMERGENCY STOP functions are fully functional when commissioning the drive.

**<10> Checking and potential fine adjustment of maximum speed**

Once the optimization runs have been executed, the maximum speed needs to be checked and, if necessary, the setting for it corrected.

If the maximum speed has now shifted by more than around 10%, the control response of the speed control loop will need to be checked; it may be necessary to repeat the optimization run for the speed controller or carry out re-optimization manually.

The optimization runs for field weakening and for friction and moment of inertia compensation must be repeated if there is any change to the maximum speed.

**<11> Checking the drive settings**

The optimization runs do not produce the best results for every application, so in all cases it is necessary to check the controller settings using the appropriate tools (oscilloscope, STARTER trace, and so on). Some cases may require manual re-optimization.

**<12> Manual (re-)optimization (where required)**

If the result of the optimization runs is not satisfactory, then manual post or new optimization can be performed.

The procedure is described in Chapter "Manual optimization (Page 344)".

**<13> Saving non-volatile set values**

Previously, all changes in the set values were made in the RAM (Random Access Memory). If the device is switched off in this state, all settings made previously are lost. To permanently store the settings in the ROM (non-volatile memory), a RAM to ROM must be triggered by setting p0977 to 1 (p0977 is allocated to the DO 1). The saving process is indicated by the flashing of BOP20 (and the RDY LED on the CUD) and takes approx. 45 s. After the saving process has been completed, the settings are backed up in the ROM.

The drive can now be switched off (POWER OFF) without losing the settings that have been made. See also Chapter "Memory card functions (Page 359)".

### 〈14〉 Documentation of set values

The following facilities are available to document the executed settings outside the device:

- External memory card was inserted during the RAM to ROM (p0977=1). The parameters were therefore also transferred to the external CompactFlash Card.
- Write the parameters to a CompactFlash Card (p0804).
- Document the parameters in a STARTER project (load to PG). See also Chapter "Memory card functions (Page 359)" and "Commissioning with the STARTER commissioning tool (Page 287)".

## 8.4 Commissioning using the AOP30 operator panel

### 8.4.1 First commissioning

---

#### Note

To operate the AOP30, p2030=3 must be set.

---

#### 8.4.1.1 First power-up

##### Start screen

When the system is switched on for the first time, the Control Unit (CUD) is initialized automatically. The following screen is displayed:

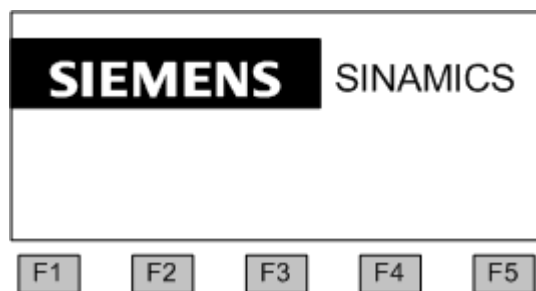


Figure 8-2 Splash screen

While the system is powering up, the parameter descriptions are loaded to the operator panel (remark: The memory card does not have to be inserted).


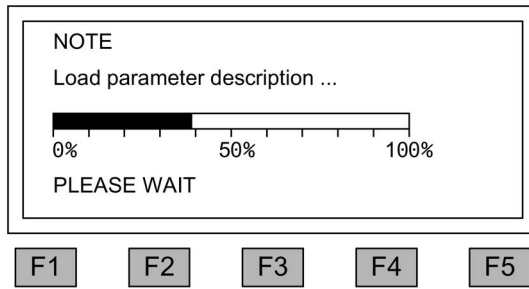


Figure 8-3 Loading of the parameter description during the system power-up

### Selecting the language

When the system is first powered up, a screen for selecting the language appears.

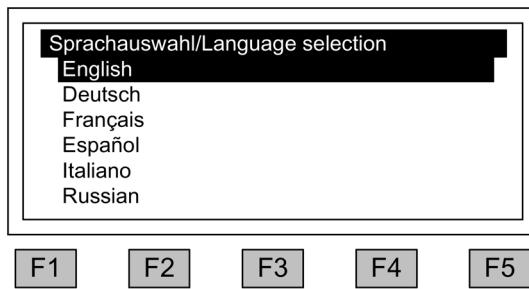

You can select the language in the dialog screen.

To change the language, use <F2> or <F3>. To select the language, use <F5>.

Once the language has been selected, the powering-up process continues.

Once the system has successfully powered up, the drive has to be commissioned when the system is switched on for the first time after it has been delivered. The converter can then be switched on.

When the system is then powered up again, it can be operated immediately.

### Navigation within the dialog screens

Within a dialog screen, the selection boxes can usually be selected using the <F2> and/or <F3> keys. Selection boxes are generally texts surrounded by a frame. When they are selected, they are highlighted by means of white text on a black background. The current value of a highlighted selection box can usually be changed by pressing <F5> "OK" and/or "Change". Another entry field then appears; the value you want can be entered directly in this using the numerical keypad or can be selected from a list.

In the wizard, you can change from a dialog screen to the next or previous screen by selecting the "Continue" or "Back" selection boxes and then confirming by pressing <F5> "OK".

If a screen contains particularly important parameters, the selection box "Continue" only appears at the bottom of the screen. This is because every single parameter in this dialog screen has to be checked thoroughly and/or corrected before the next screen can be accessed.

### 8.4.1.2 Full drive commissioning

#### Adjust the rated device currents

##### Note

The US rating must be set at p50067 for Base Drives (type 6RA80xx-2xxxx) manufactured in North America.

The **rated armature DC current for the device** must be adjusted by setting p50076[0] (in %) or p50067 if:

Maximum armature current  $< 0.5 \times$  rated armature DC current for the device

The **rated field DC current for the device** must be adapted by setting p50076[1] (in %) if:

Maximum field current  $< 0.5 \times$  rated field DC current for the device

#### Adapt to the actual device supply voltage

p50078[0] Rated input voltage for converter armature (in volts)

p50078[1] Rated input voltage for converter field (in volts)

#### Acquiring the motor data

The motor data can be taken from the motor rating plate.

SIEMENS		CE	
DC - MOTOR 1GG6286-0NG40-1VV1-Z			
No. N- VO1215813010001 / 2007		EN 60034-1	
Wärmekl./TH.CL. 180 (H)		IP23	IM B3 Gew./WT. 1,56 t
V	A	1/min	kW
20 ... 420	985	10 ... 1410	2,76 ... 390
420	990	1410 ... 1620	390
p50101	p50100		
Fremderr./SEPARATE EXCIT. 310 ... 210 V, 14,5 ... 11,5 A			p50102
Fremdkühlung/SEPAR.COOLING: 0,75 m <sup>3</sup> /s		Luftrichtung/ Dir. of Ventilation NDE-DE	
20 Bürsten/BRUSHES, ORDER CODE: NMA:2613209100			
B6C, 3~ 50 HZ, 400 V			
MADE IN GERMANY D-90441 NUERNBERG			

Figure 8-4 Example of a rating plate

p50100[D]	Rated armature current
p50101[D]	Rated armature voltage
p50102[D]	Rated excitation current
p50103[D]	Minimum excitation current (optional)
p50114[D]	Thermal time constant for motor See the section titled "Thermal overload protection for the DC motor (I <sup>2</sup> t monitoring of the motor)"
p2003	Enter the rated torque <ul style="list-style-type: none"><li>• If specified: refer to the manufacturer's specifications of the motor</li><li>• Or calculate from rating plate specifications for power and rated speed: p2003 = 9550 x rated power [in kW] / rated speed [in rpm]</li></ul>

---

**Note**

For 2Q devices, the rated DC voltage of the SINAMICS DCM specified in the technical data, can only be achieved if the  $\alpha_G$  limit (p50150[D]) is set to 5°. The factory setting is 30°. In order to reach the rated motor voltage (p50101[D]), the  $\alpha_G$  limit must also be changed to 5°.

---

When you have finished entering the motor data, choose "Continue" underneath the final parameter value and activate with <F5> (OK).

**Encoder selection**

p50083[D]	Actual speed controller value selection
-----------	---

**Analog tachometer screen**

p50741[D]	Tachometer voltage at maximum speed
p2000	Reference speed

**Pulse encoder screen**

p0400[E]	Encoder type selection
p0404[E]	Encoder configuration active
p0405[E]	Square-wave encoder A/B
p0408[E]	Rotary encoder pulse no.
p2000	Reference speed

**EMF controlled screen**

p50115[D]	EMF at maximum speed
p2000	Reference speed

**Freely wired screen**

p50609[C]	Actual speed controller value signal source
p2000	Reference speed

**DRIVE-CLiQ encoder screen**

p0400[e]	Encoder type selection
p0404[e]	Encoder configuration active
p0405[e]	Square-wave encoder A/B
p0408[e]	Rotary encoder pulse no.
p2000	Reference speed

**Data on field**

p50081	Field weakening
p50082	Field operating mode

**Basic commissioning**

p50171	Current limit, torque direction I
p50172	Current limit, torque direction II
p50180	Torque limit 1 positive
p50181	Torque limit 2 negative
p50303	Ramp-up time 1
p50304	Ramp-down time 1
p50305	Initial rounding 1
p50306	Final rounding 1

**Final confirmation**

Confirm the parameters you have entered to save them. Once you have selected "Continue" and activated your entries with <F5>, the parameters you entered will be permanently saved and the calculations required for closed-loop control carried out.

### Optimization runs

Perform the optimization runs one after the other:

To navigate through the selection fields, choose <F2> or <F3>.

To activate a selection, choose <F5>.

- p50051 = 23 Optimization of the armature current control for induction load
- p50051 = 24 Optimization of the field current control
- p50051 = 25 Optimization of the armature current control
- p50051 = 26 Optimization of the speed control
- p50051 = 27 Optimization of the EMF control (incl. field characteristic recording)
- p50051 = 28 Recording of the friction characteristic
- p50051 = 29 Optimization of the speed control for drives with a mechanical system capable of oscillation

For further details, see Chapter "Drive optimization (Page 336)".

If an optimization run is not carried out, the motor control uses the motor characteristic values calculated from the rating plate data rather than the measured values.

 **WARNING**

**Unexpected motor movement during optimization runs**

Optimization runs cause movement of the drive which can result in death, severe injury or material damage.

- Observe the general safety instructions.
- Ensure that the EMERGENCY STOP functions are fully functional when commissioning the drive.

### 8.4.2 Status after commissioning

**LOCAL mode (control via operator panel)**

- You switch to LOCAL mode by pressing the "LOCAL/REMOTE" key.
- Control (ON/OFF) is carried out via the "ON" and "OFF" keys.
- You can set the setpoint using the "Increase" and "Decrease" keys or by entering the appropriate numbers on the operation screen using the numeric keypad.



### 8.4.3 Resetting parameters to factory settings

The factory settings represent the defined original status of the device on delivery.

Resetting the parameters to the factory settings means that all the parameter settings made since the system was delivered are reset.

#### Setting the parameter filter to "Parameter reset"

<MENU> <Commissioning/Service> <OK> <Device commissioning> <OK> <30: Parameter Reset> <OK>

#### Restoring all parameters to their factory settings

All of the unit parameters are reset to their factory settings. The AOP30 is powered down and back up again during this process.

## 8.5 Commissioning with the STARTER commissioning tool

### 8.5.1 STARTER commissioning tool

#### Description

You can use the STARTER commissioning tool to configure and commission your SINAMICS drives or drive systems. The drive configuration can be performed with the aid of the STARTER wizard for drive configuration.

---

#### Note

This chapter described how to commission with STARTER. STARTER has a comprehensive online help that explains in detail all of the sequences and setting options in the system. This is the reason that this chapter is restricted to the individual commissioning steps.

---

#### Prerequisites for installing STARTER

STARTER is installed on a PG / PC. The hardware and software preconditions are described in the readme file for STARTER.

---

#### Note

The SIMOTION SCOUT engineering tool includes the STARTER functionality to commission drives.

From version V4.2, SCOUT has also been released for commissioning SINAMICS DCM.

---

**8.5.1.1 Installing the STARTER commissioning tool**

Download STARTER here: STARTER download (<https://support.industry.siemens.com/cs/de/en/ps/13437/dl>).

STARTER is installed using the "setup" file. When you double-click the "Setup" file, the installation wizard guides you through the process of installing STARTER.

**8.5.1.2 Layout of the STARTER user interface**

STARTER provides these 4 operating areas:

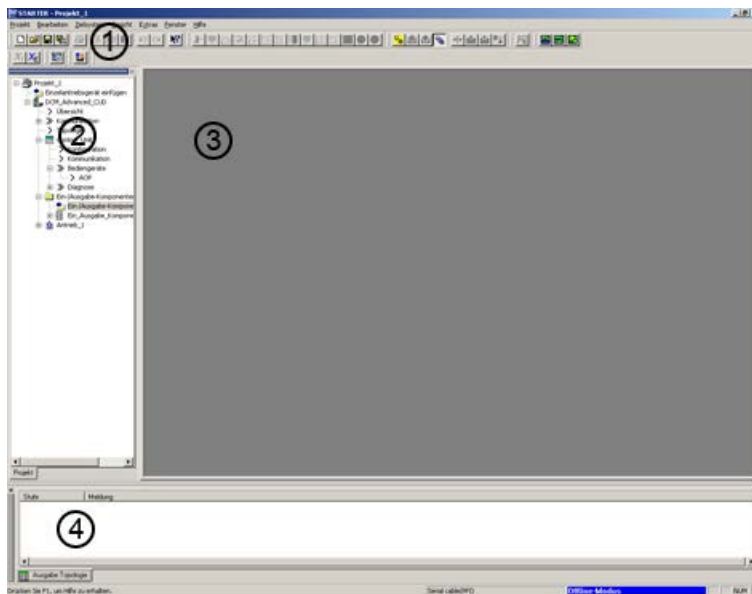


Figure 8-5 STARTER operating areas

Operating area	Explanation
① Toolbars	In this area, you can access frequently used functions by clicking icons.
② Project navigator	The elements and objects contained in the project are displayed in this area.
③ Working area	Changes to the drive units are made in this area.
④ Detail view	This area displays detailed information, for instance about faults and alarms.

## 8.5.2 Procedure for commissioning with STARTER

### Basic procedure when using STARTER

STARTER uses a series of interactive screens to enter the data required for the drive unit.

---

#### Note

The interactive screens are pre-assigned defaults that you need to adapt to your application and configuration under certain circumstances.

This is a deliberate procedure!

Target: By taking time to consider what configuration data you enter, you can prevent inconsistencies between the project data and drive unit data (identifiable in online mode).

---

### 8.5.2.1 Creating the project

Click the STARTER icon on the desktop or select the menu command Start > Simatic > STEP 7 > STARTER in the Windows start menu to start the STARTER commissioning tool.

The following main screen with the interactive dialogs appears after starting for the first time:

- STARTER Getting Started Drive Commissioning
- STARTER Project Wizard

The commissioning steps are listed below as numbered step sequences.

## Accessing the STARTER project wizard

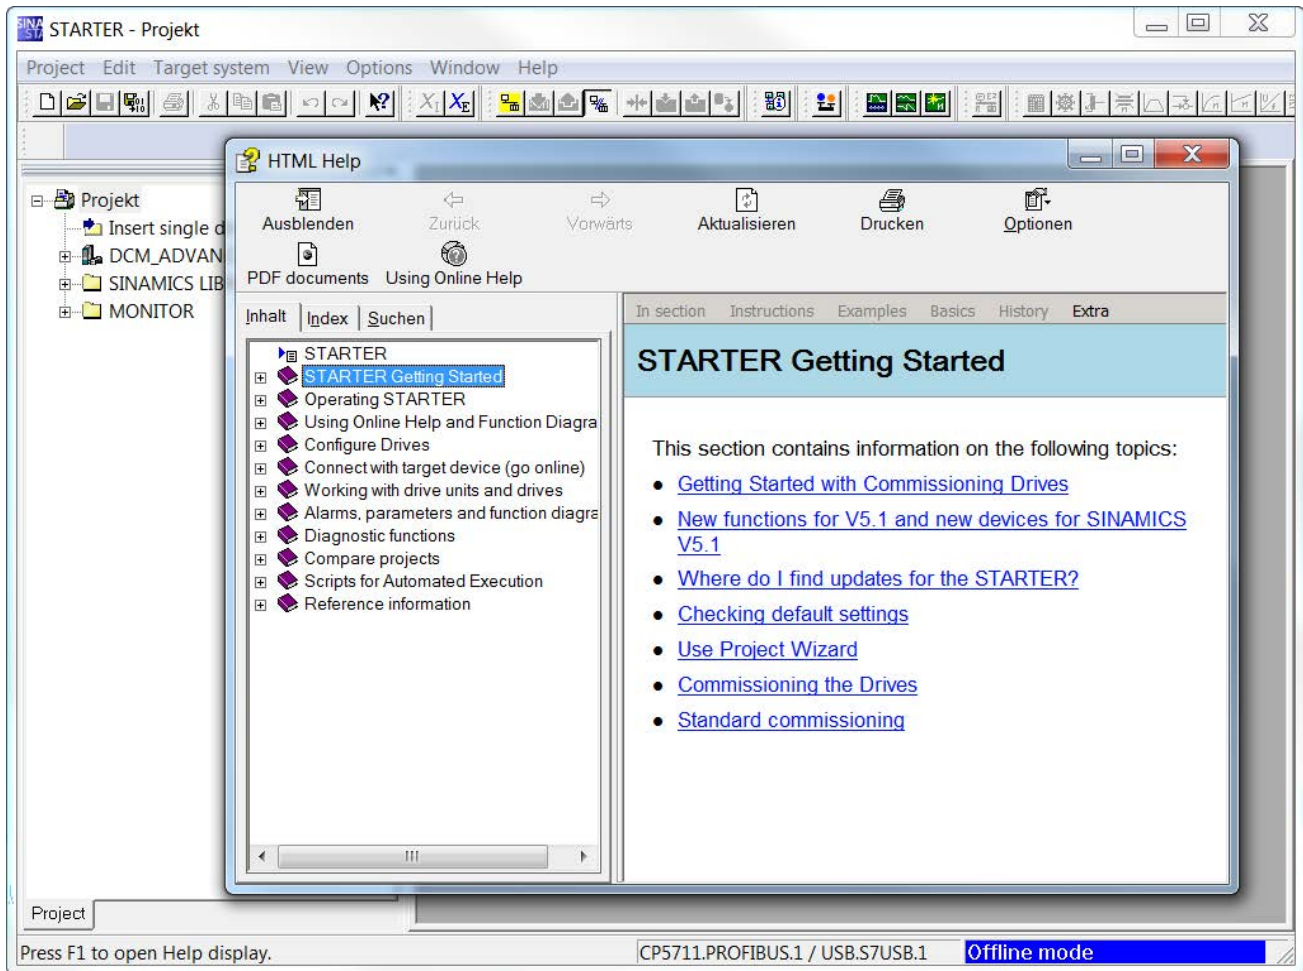


Figure 8-6 Main screen of the STARTER parameter assignment and commissioning tool

⇒ Hide "STARTER Getting Started Drive Commissioning" with **HTML Help > Close**

### Note

When you deactivate the **Display wizard during start** checkbox, the project wizard is no longer displayed the next time you start STARTER.

You can call up the project Wizard by choosing **Project > New with Wizard**.

To deactivate the **Getting Started** online help, follow the information provided in help.

Online help can be restarted at any time via **Help > Getting Started**.

STARTER features a detailed online help function.

## The STARTER project wizard



Figure 8-7 STARTER project wizard

⇒ Click **Arrange drive units offline...** in the STARTER project wizard

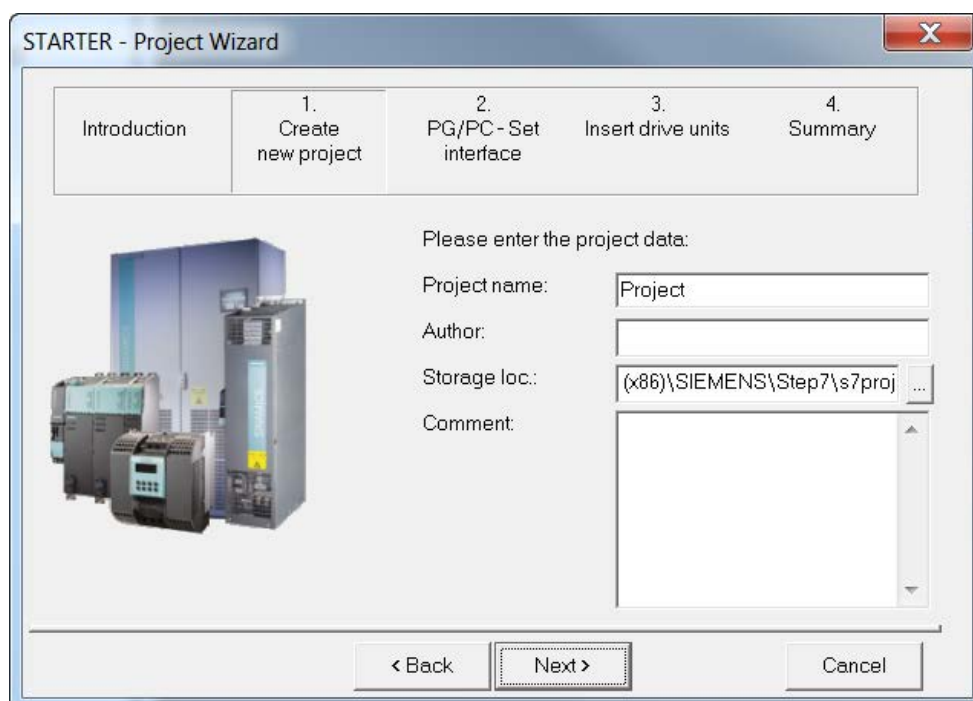


Figure 8-8 Creating a new project

⇒ Enter a **project name** and, if necessary, the **author**, **memory location** and a **comment**.

⇒ Click **Next >** to set up the PG/PC interface.

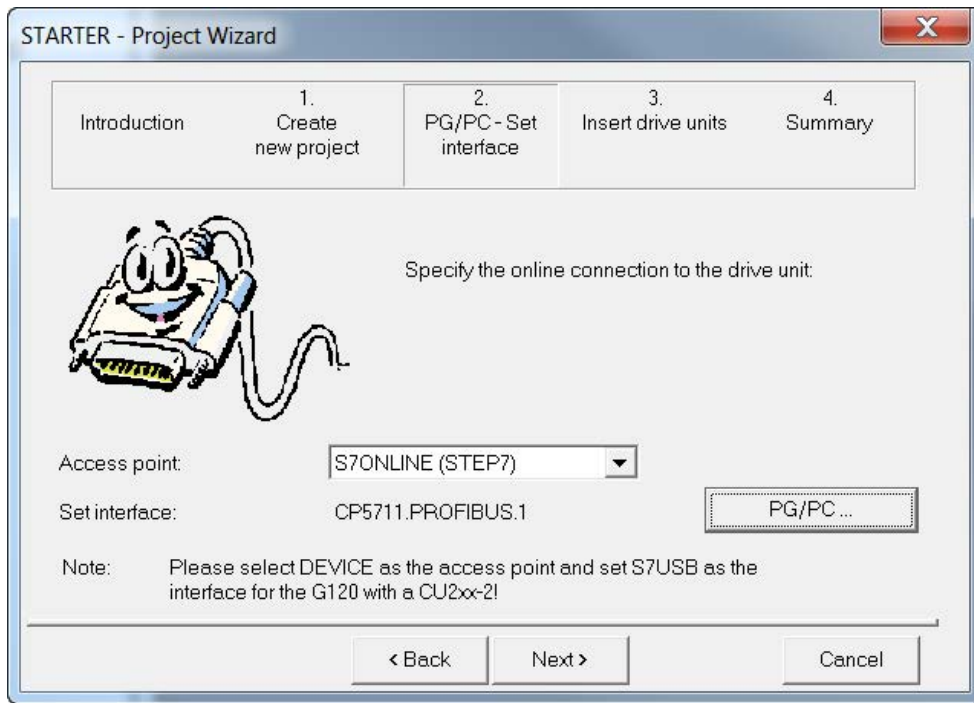


Figure 8-9 Setting up the interface

⇒ Click **PG/PC...** and set up the interface according to your device configuration.

Buttons **Properties...**, **Diagnostics...** and **Copy...** are now available.

Set S7ONLINE as access point.

---

**Note**

**Connection via PROFINET IO with CBE20**

To establish the connection via the additional module CBE20, see Chapter "Activating online mode: STARTER via PROFINET IO (Page 485)".

---

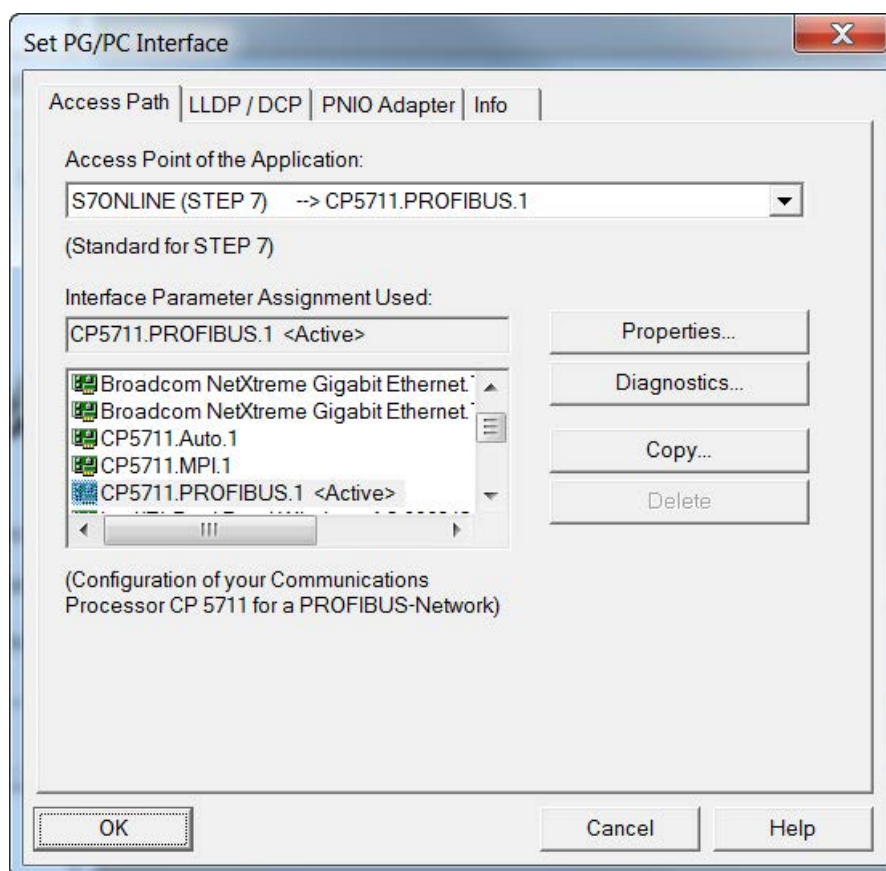


Figure 8-10 Setting the interface

**Note**

To parameterize the interface, you must install the appropriate interface card (e.g.: PC Adapter (PROFIBUS)).

We recommend that the Siemens USB PROFIBUS CP5711 adapter is used, Article number 6GK1571-1AA00.

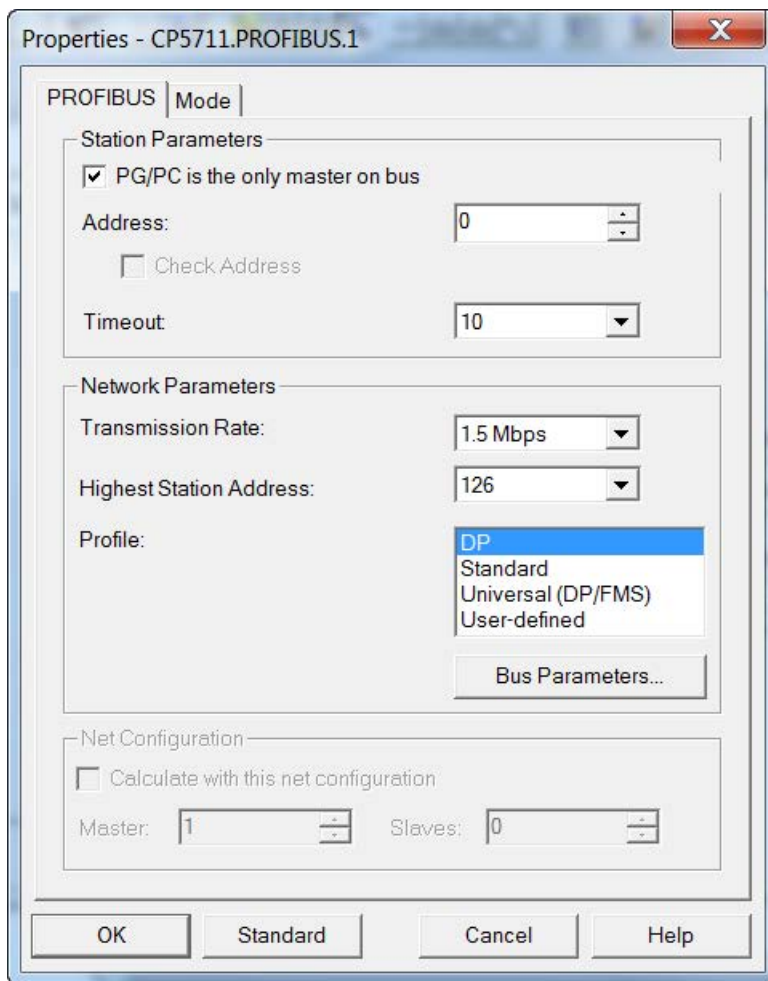


Figure 8-11 Setting the interface – Properties

**Note**

**PG/PC is the only master on bus** must be activated if no other masters (PC, S7, etc.) are available on the bus.

**Note**

Even if no PROFIBUS interface is installed in the PC, projects can be generated and PROFIBUS addresses for the drive objects can be assigned.

Only the bus addresses available in the project will be offered. That prevents double bus address assignments.

When required, a manual address entry can also be used to enter an already assigned address.

⇒ After completion, click **OK** to confirm the setup and to return to the project wizard.



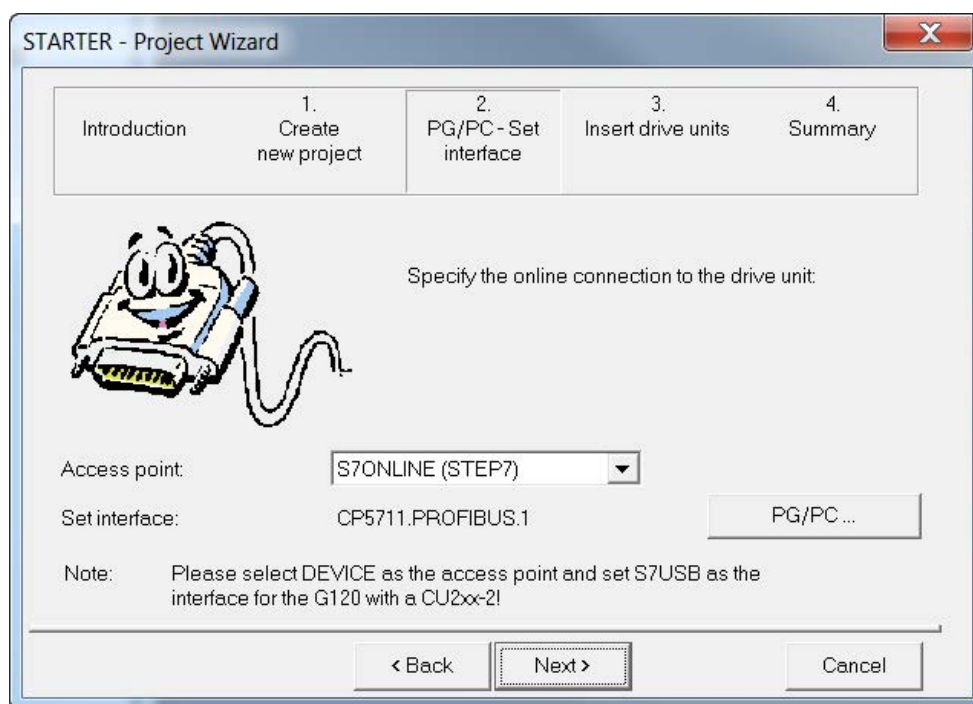


Figure 8-12 Complete setting the interface

⇒ Click **Next >** to set up a drive unit in the project wizard.

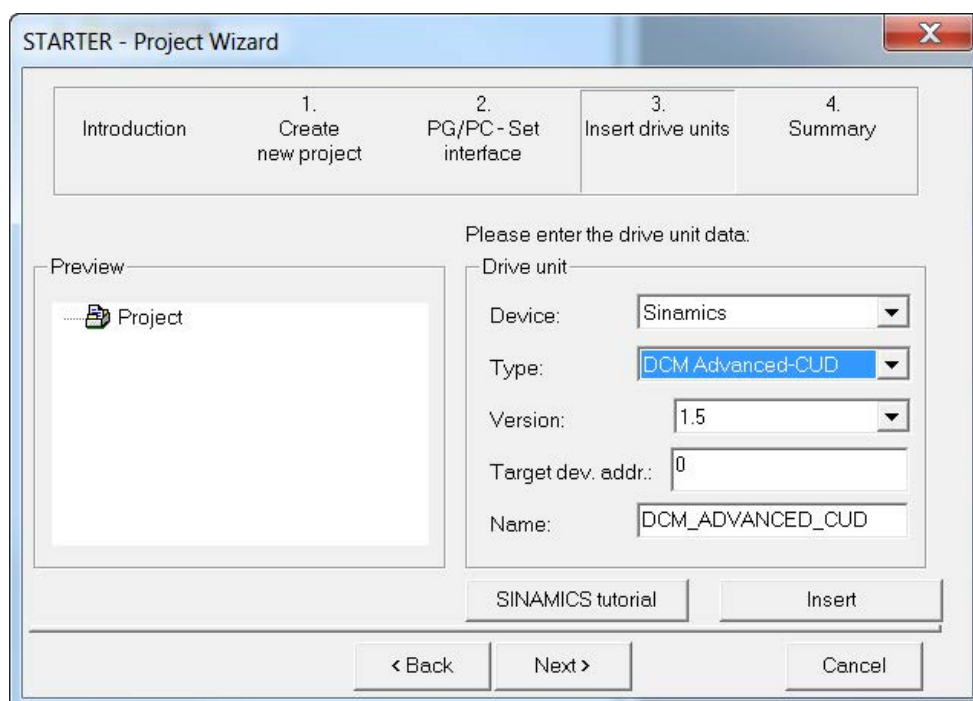


Figure 8-13 Inserting a drive unit

⇒ Select the following data from the list fields:

**Unit:** SINAMICS  
**Type:** DCM Standard CUD for one standard CUD in the left-hand slot  
DCM Advanced CUD for one Advanced CUD in the left-hand slot  
DCM Standard CUD [2] for a Standard CUD in the right-hand slot  
DCM Advanced CUD [2] for an Advanced CUD in the right-hand slot  
**Version:** Actual version  
**Target device address:** The corresponding bus address of the drive (126 is preset in the drive device)  
**Name:** Any desired name can be entered in the name box

---

**Note**

For a download, the bus address assigned here is transferred to the device, but is not transferred to parameter p0918.

To keep p0918 consistent with the project, after a "Load to target device" a "Load to PG" must still be performed – and must be repeated after every change to p0918 using BOP20 or AOP30.

---

**Note**

A second CUD for expanding the computing capacity is created in the STARTER as an independent device, type "DCM Standard (Advanced) CUD [2]".

Explanation: "[2]" is the SINAMICS nomenclature for indexed data. In this case, it is used as a name – independent of any language for a second CUD inserted in the right-hand slot.

---

⇒ Click **Insert**

The selected drive unit is displayed in the project wizard preview window.

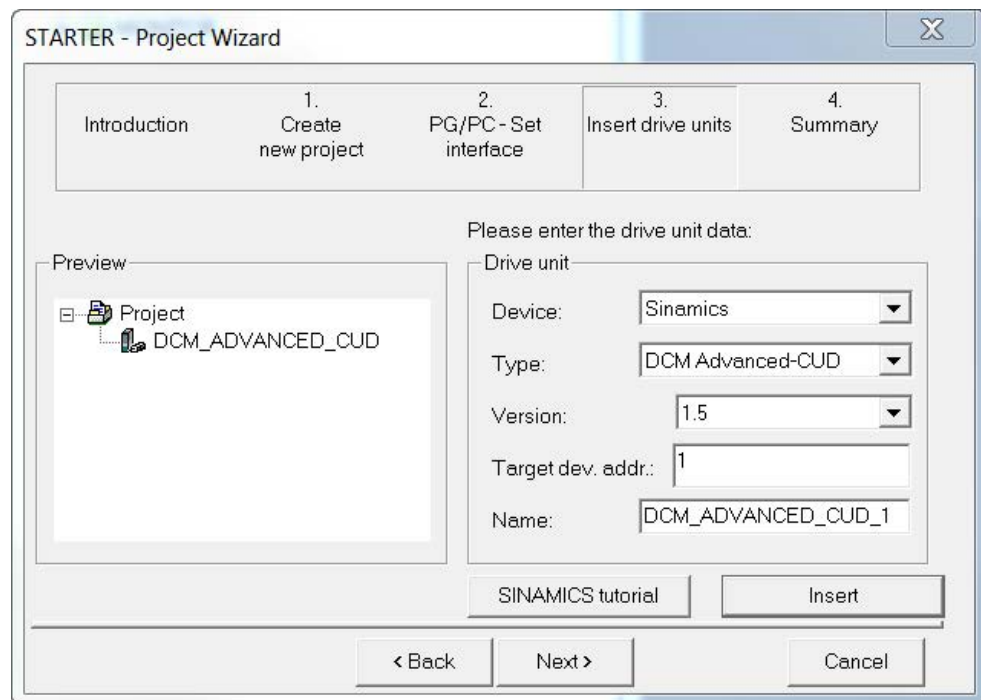


Figure 8-14 Drive unit inserted

⇒ Click **Next >**

A summary of the project is displayed.

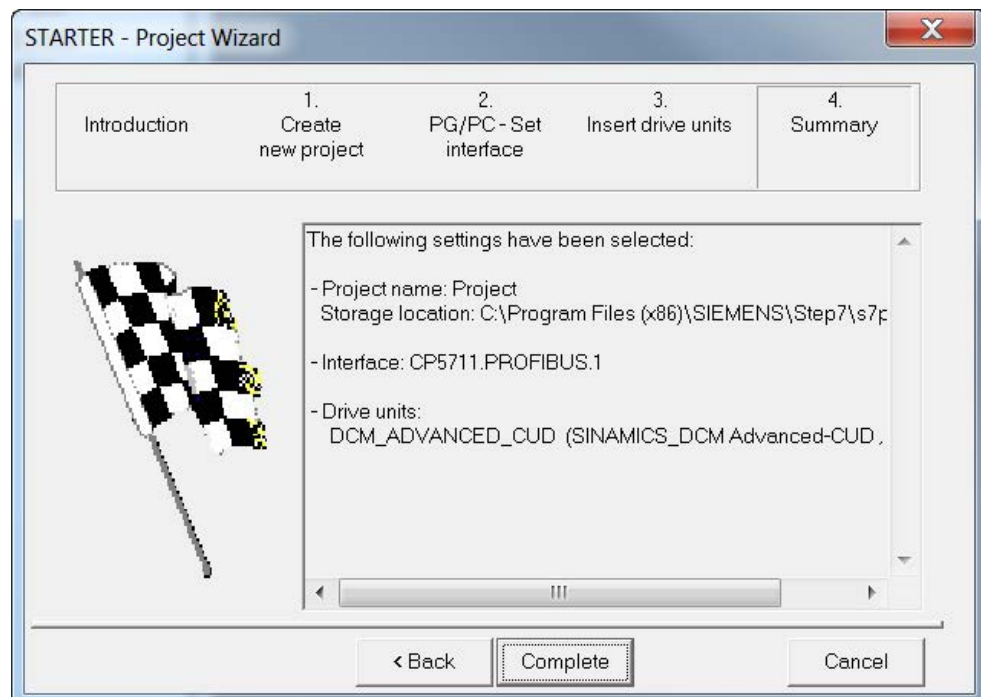


Figure 8-15 Summary

⇒ Click **Complete** to complete the creation of a new project for the drive unit.

### 8.5.2.2 Configuring a drive unit

---

**Note**

The STARTER must be offline for the sequence described below.

As a general rule, the drive unit can also be added to the project in online mode of the STARTER via "Browse accessible nodes".

---

In the project navigator, open the tree element that contains your drive unit.

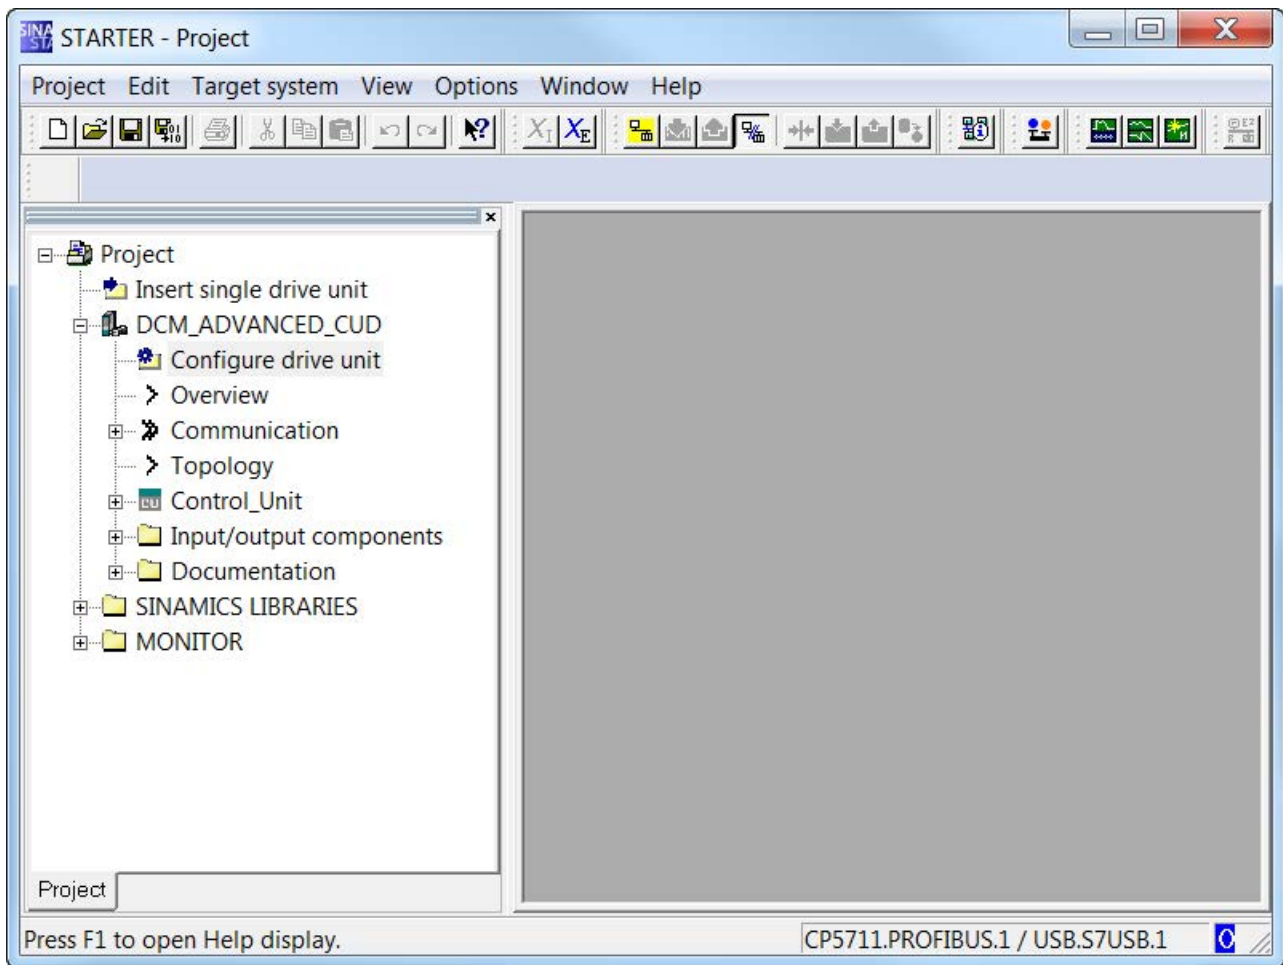


Figure 8-16 Configuring the project navigator drive unit

⇒ In the project navigator, click the plus sign next to the drive unit that you want to configure. The plus sign changes into a minus sign and the options for configuring the drive unit appear as a directory tree under the drive unit.

⇒ Double click **Configure drive unit**

## Activating the option module

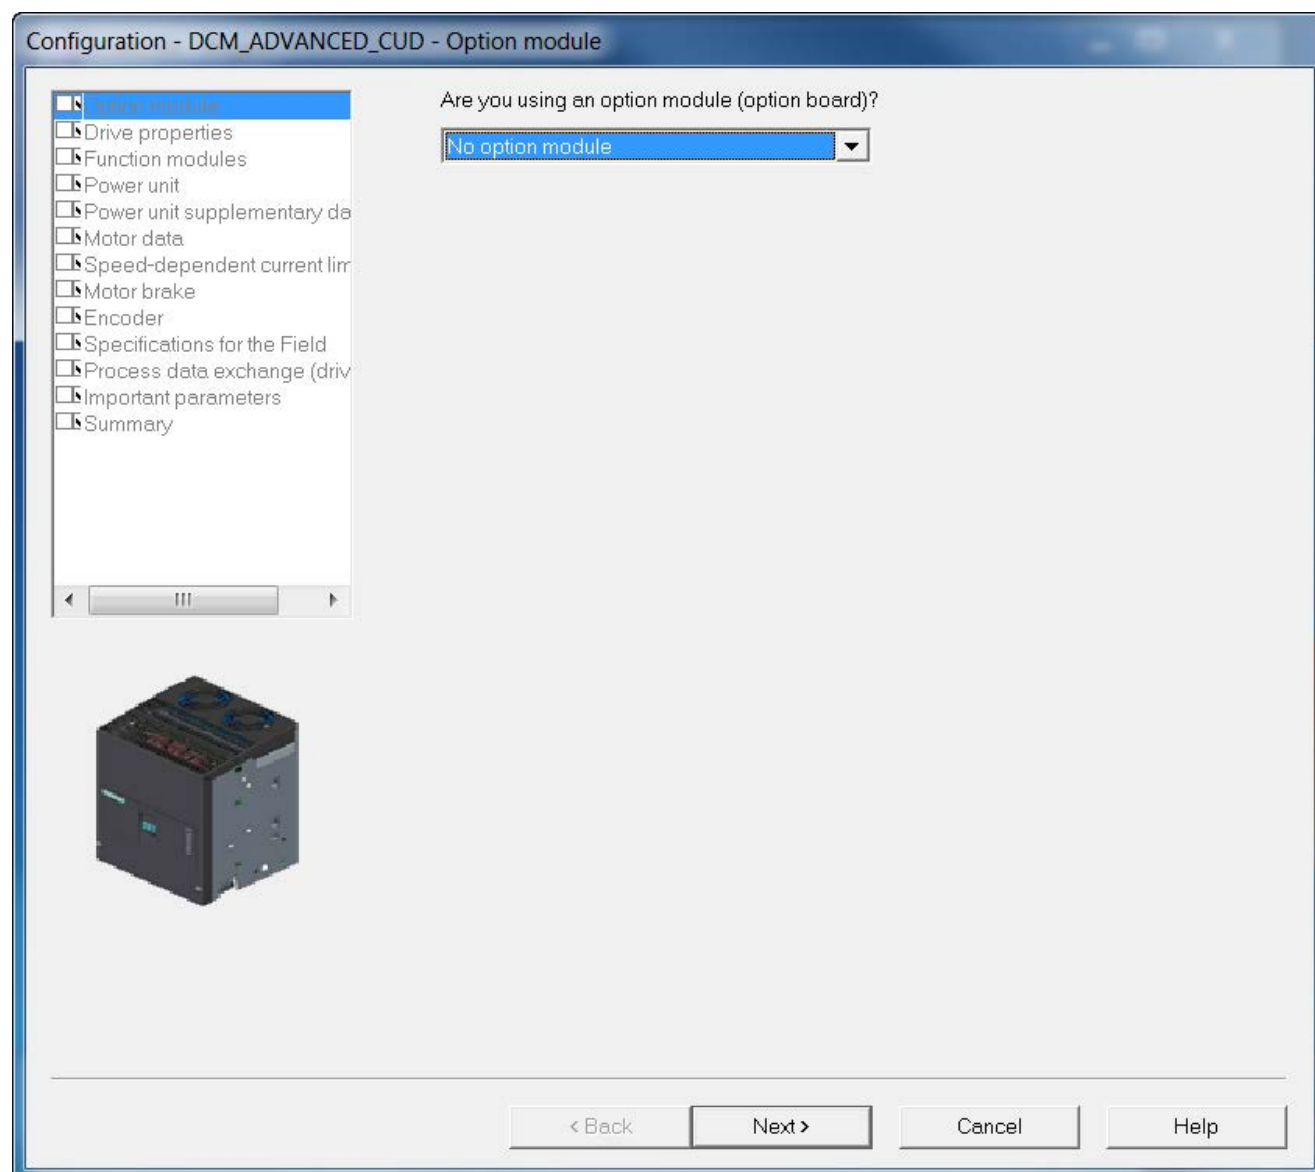


Figure 8-17 Activating the option modules

⇒ If you have inserted a PROFINET CBE20 module (option G20), then the module needs to be activated here (see Chapter "CBE20 Communication Board Ethernet (Page 333)").

⇒ Click **Next >**

### Configuring the drive unit properties

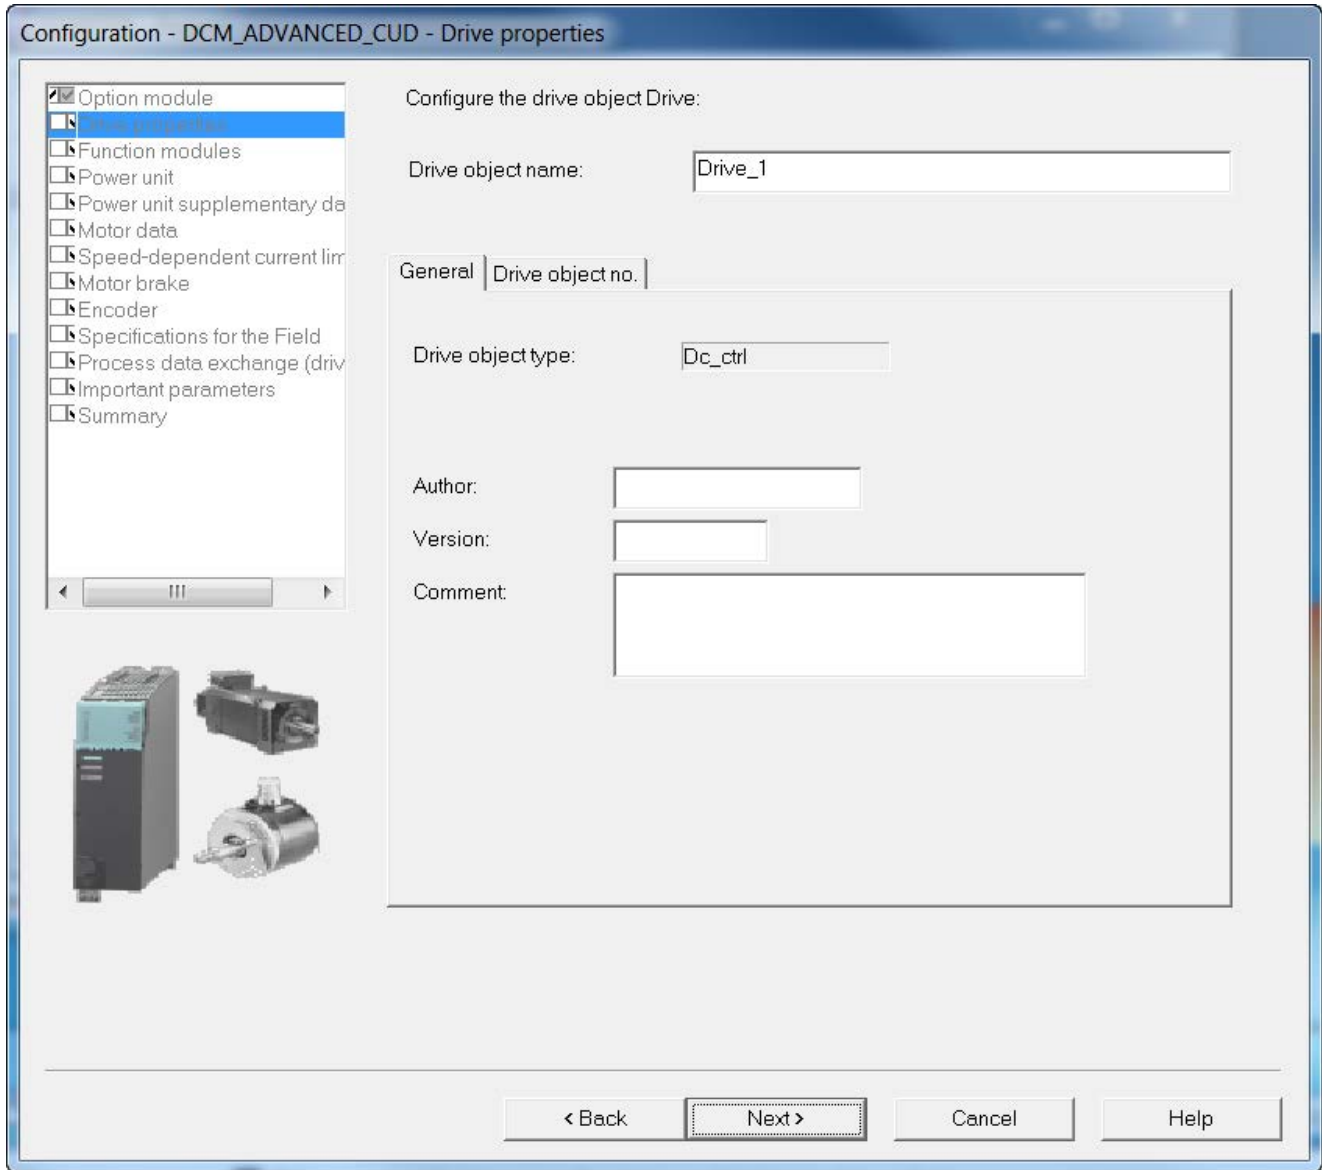


Figure 8-18 Configuring the drive unit properties

Under **Drive properties**, you can enter optional information about the drive/project.

⇒ Click **Next >**

## Selecting the function modules

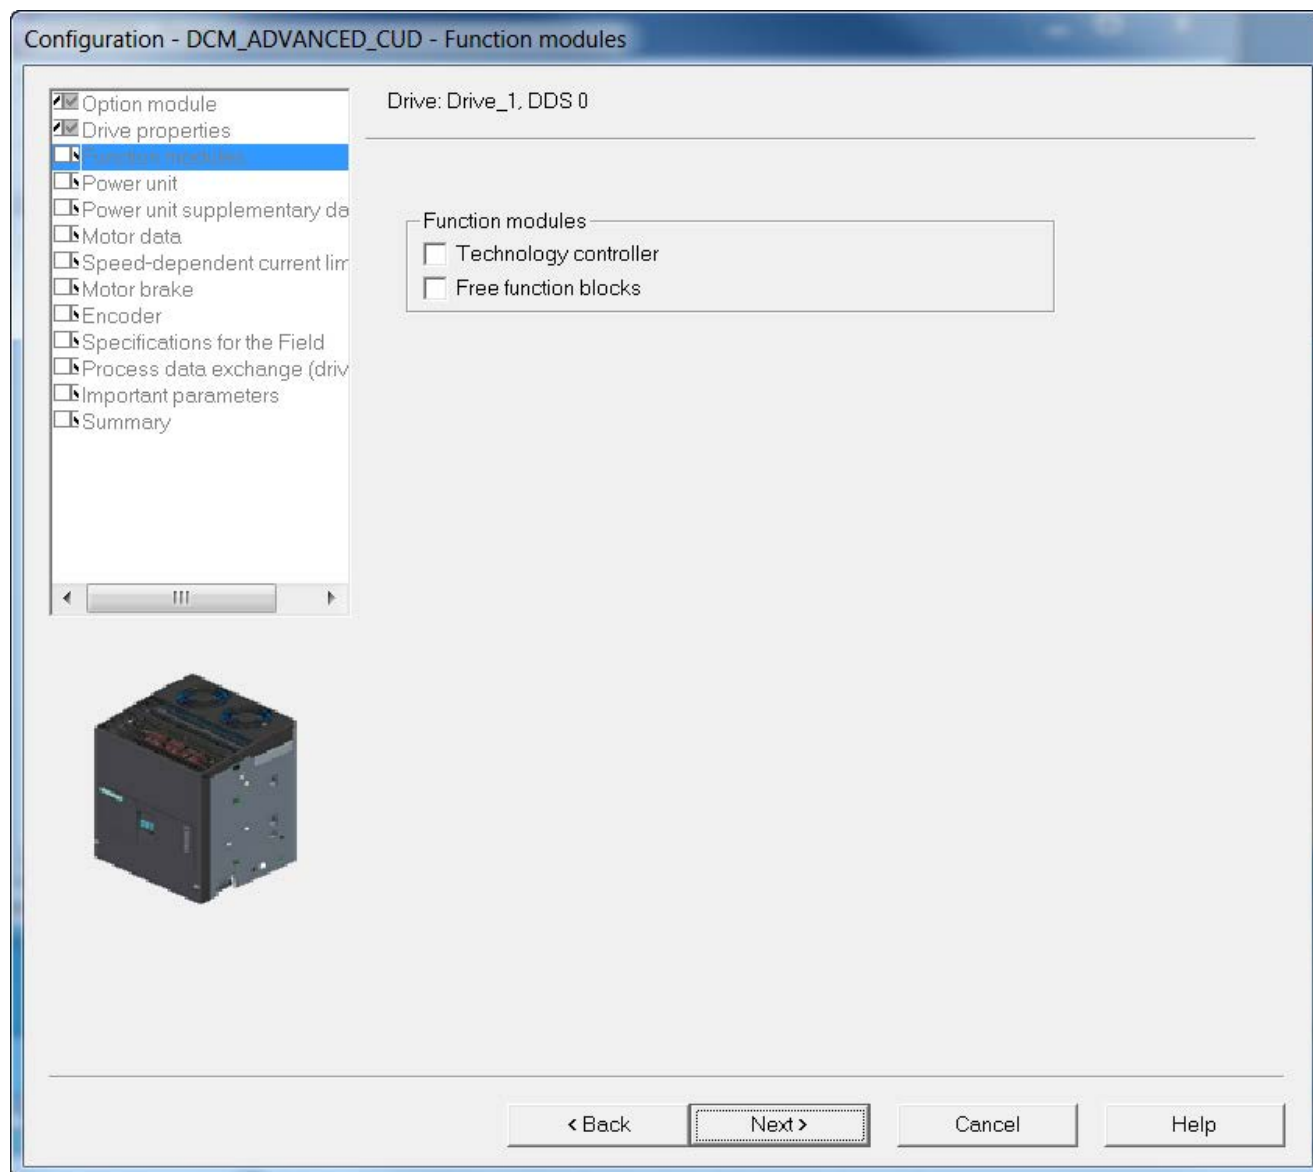


Figure 8-19 Selecting options

- ⇒ When required, select the function module that you wish to activate.
- ⇒ Click **Next >**

Selecting a power unit

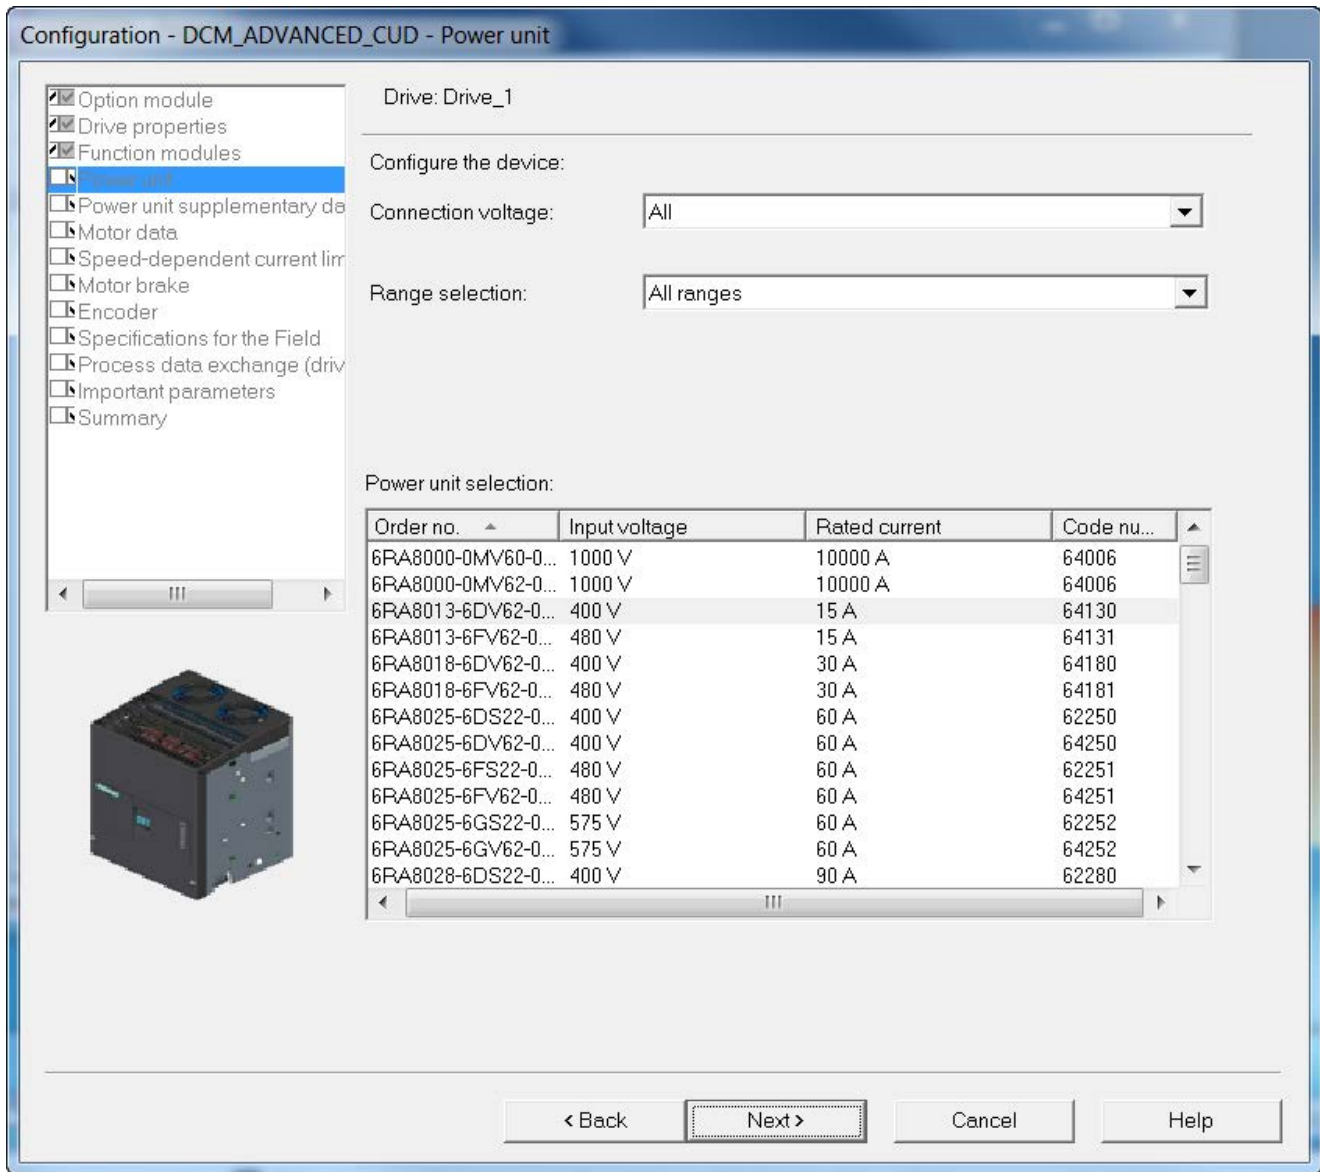


Figure 8-20 Selecting a power unit

With the fields **Supply voltage:** and **Range selection:** (2-quadrant operation/4-quadrant operation), you can filter the list under **Select power unit:**

⇒ Select the corresponding device according to the article number on the rating plate.

⇒ Click **Next >**



## Adapting unit data and entering motor data

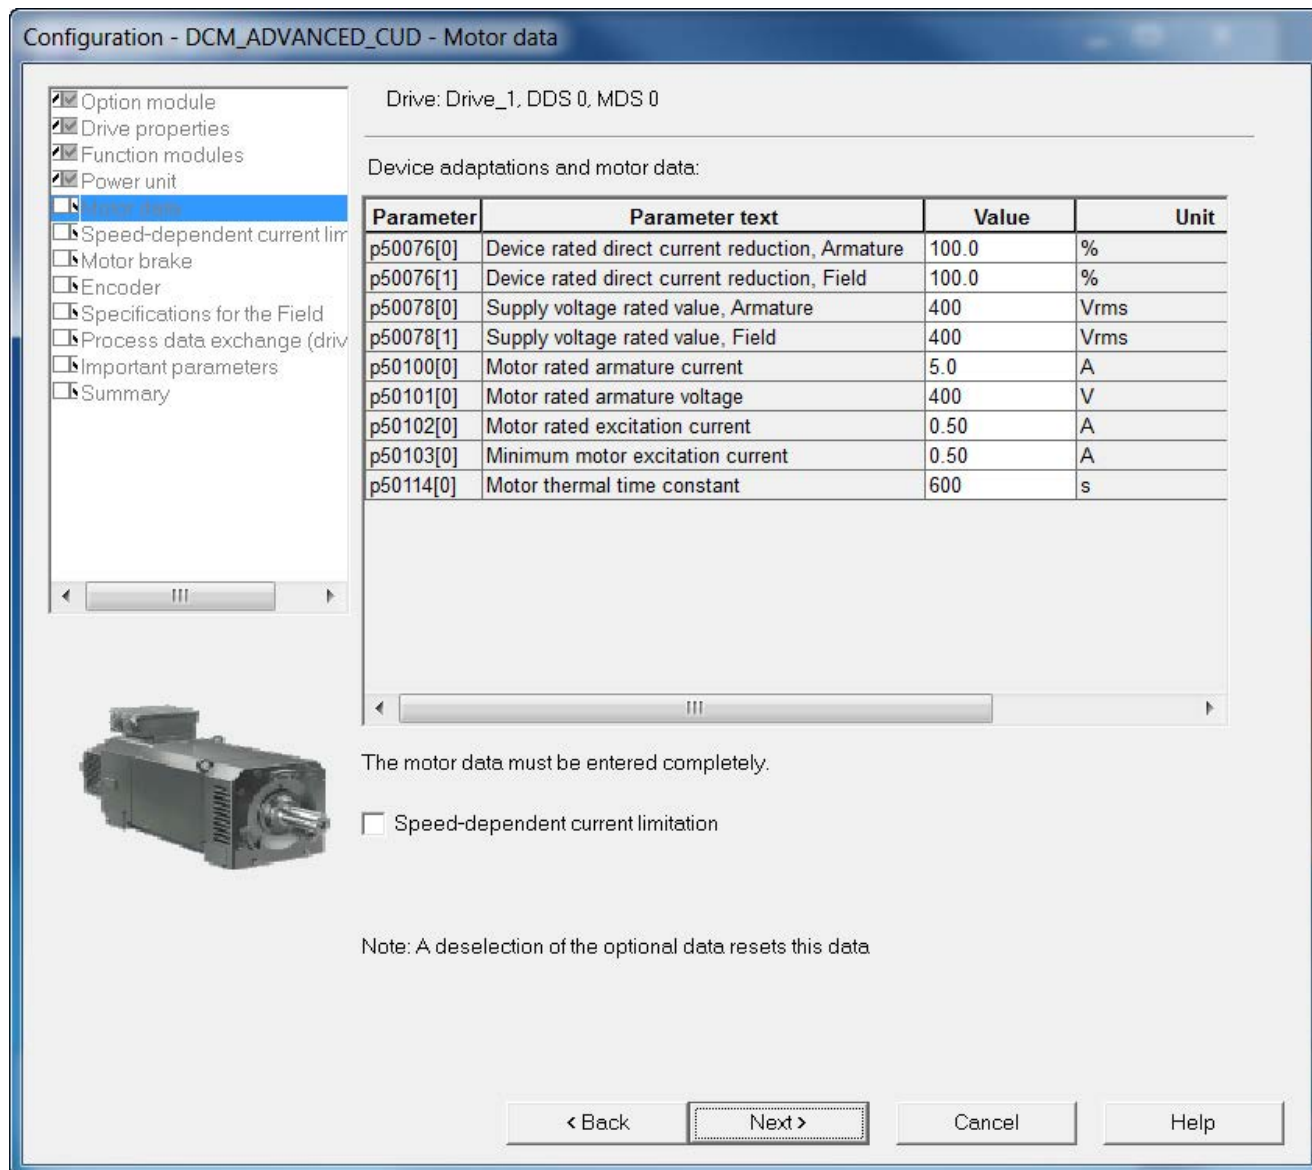


Figure 8-21 Motor data

⇒ Adapt the rated armature DC current for the unit by making a setting at p50076[0] (in %) or p50067 if:

Maximum armature current  $< 0.5 \times$  rated armature DC current for the unit

⇒ Adapt the rated armature DC current field for the unit by making a setting at p50076[1] (in %) if:

Maximum field current  $< 0.5 \times$  rated field DC current for the unit

⇒ Enter the actual supply voltage for the unit p50078.

⇒ Here, enter the **motor data** as a stamped on the motor rating plate.

**Note**

For 2Q devices, the rated DC voltage of the SINAMICS DCM specified in the technical data, can only be achieved if the  $\alpha_G$  limit (p50150) is set to 5°. The factory setting is 30°. In order to reach the rated motor voltage (p50101[D]), the  $\alpha_G$  limit must also be changed to 5°.

---

⇒ If you select **speed-dependent current limiting**, then in another setting form you can set the required values (parameters p50104 ... p50109).

⇒ Click **Next** >

<b>NOTICE</b>
<b>Ensure protection against overload</b>
The data are very important for protecting against overload and must be entered correctly.

## Brake control

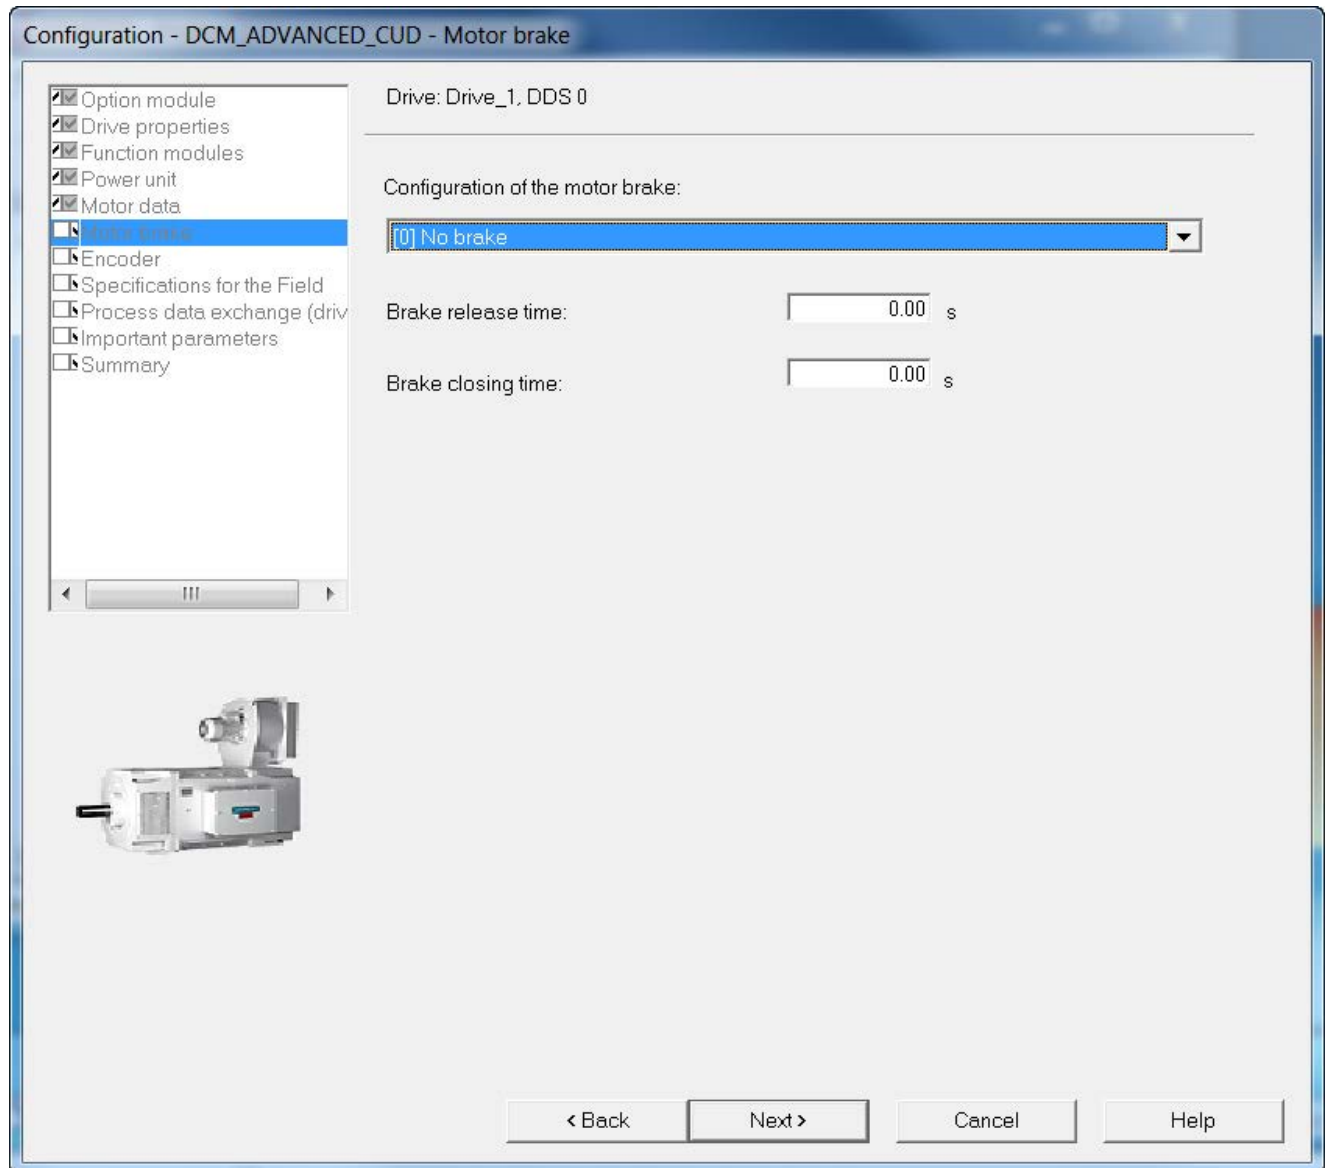


Figure 8-22 Configuring a motor brake

⇒ Under configuration of the motor brake, select the corresponding setting for your device configuration:

- [0] No brake
- [1] Holding brake
- [2] Operating brake

⇒ When selecting a motor brake, additionally set the **opening time** and the **closing time**.

⇒ Click **Next >**

### Defining the actual value source

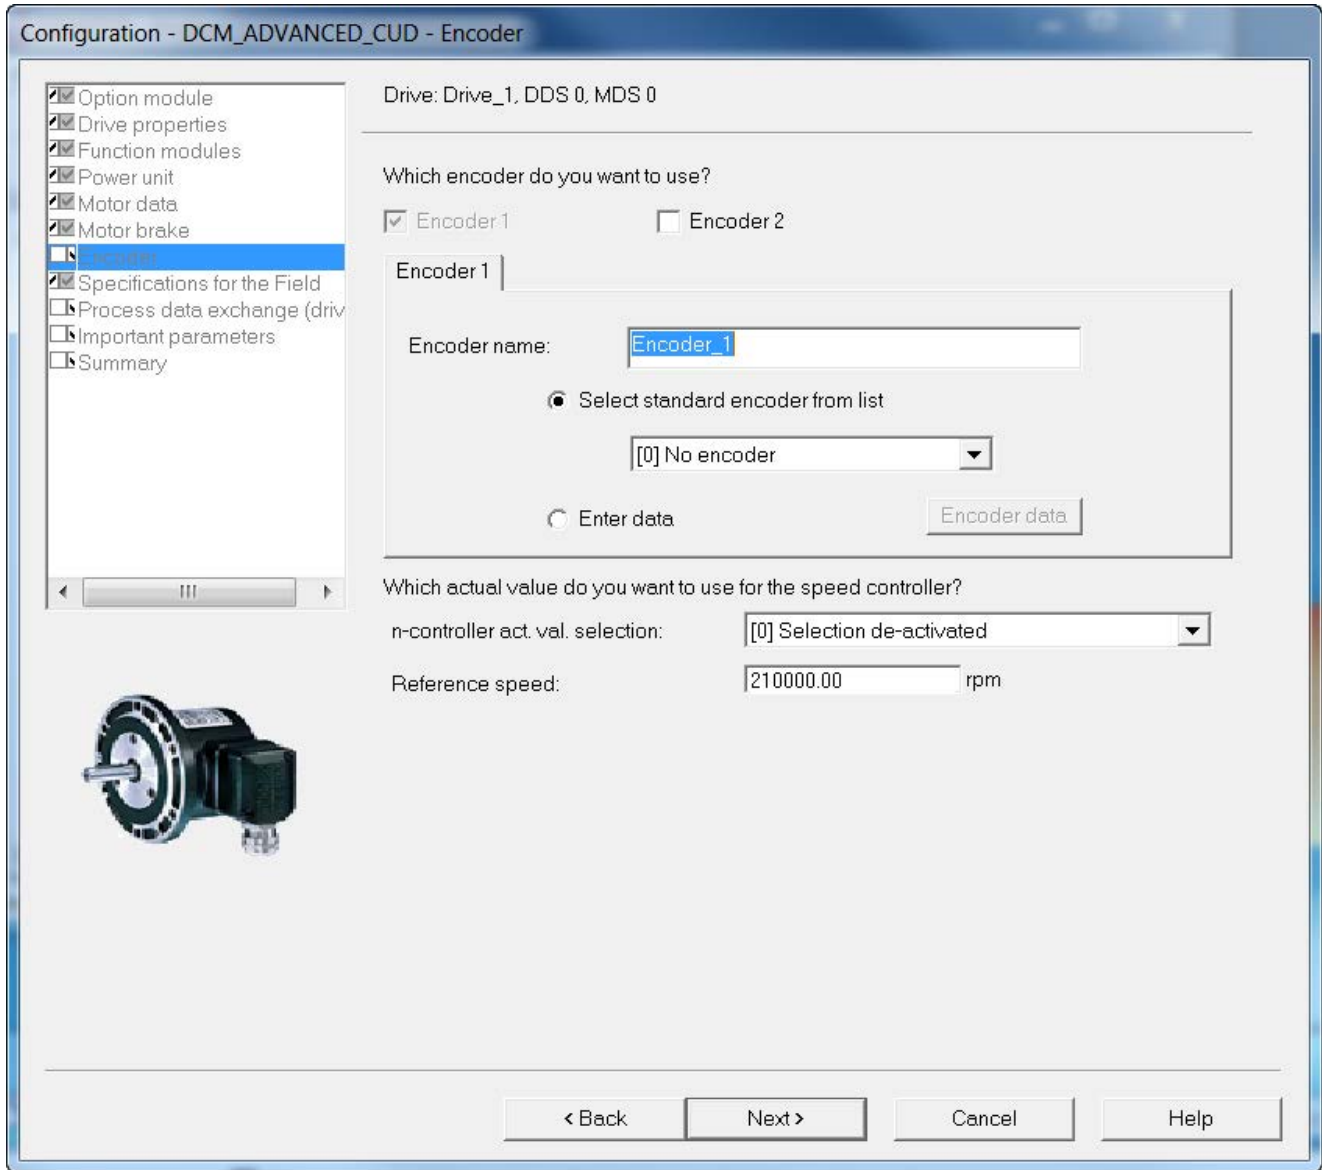


Figure 8-23 Defining the actual value source

"Encoder 1" is the encoder evaluation on the CUD.

"Encoder 2" is the evaluation of an optional encoder using SMC10 or SMC30.

⇒ Under **n-controller act. val. selection**, select the encoder type or the other actual value source:

- [0] Selection deactivated
- [1] Analog tachometer
- [2] Pulse encoder
- [3] EMF actual value internal
- [4] Free interconnection via p50609
- [5] DRIVE-CLiQ encoder

The drive cannot be operated if no selection is made.

⇒ Enter the **reference speed**. To display on the AOP30 or to transfer the speed factors via PROFIdrive, the physical speed at 100% is specified here.

The following settings are required, depending on the **n-controller act. val. selection**.

#### [1] Analog tachometer

The analog tachometer is connected to the CUD via terminals XT1-103, XT1-104.

⇒ Enter the **tachometer voltage at maximum speed**.

⇒ Click **Next >**

#### [2] Pulse encoder

The pulse encoder is connected to the CUD via terminals X177:41 ... 48.

⇒ To select a predefined encoder configuration click on the radio button **Select standard encoder from list**, and select one of the encoders that is listed.

The following encoder types can be evaluated via the CUD:

- [3001] 1024 HTL A/B R
- [3002] 1024 TTL A/B R
- [3003] 2048 HTL A/B R
- [3005] 1024 HTL A/B
- [3006] 1024 TTL A/B
- [3007] 2048 HTL A/B
- [3008] 2048 TTL A/B
- [3009] 1024 HTL A/B unipolar
- [3011] 2048 HTL A/B unipolar

⇒ To enter special encoder configurations, click the **Enter data** radio button and then the **Encoder data** button. The following input screen is displayed for you to enter the required data.

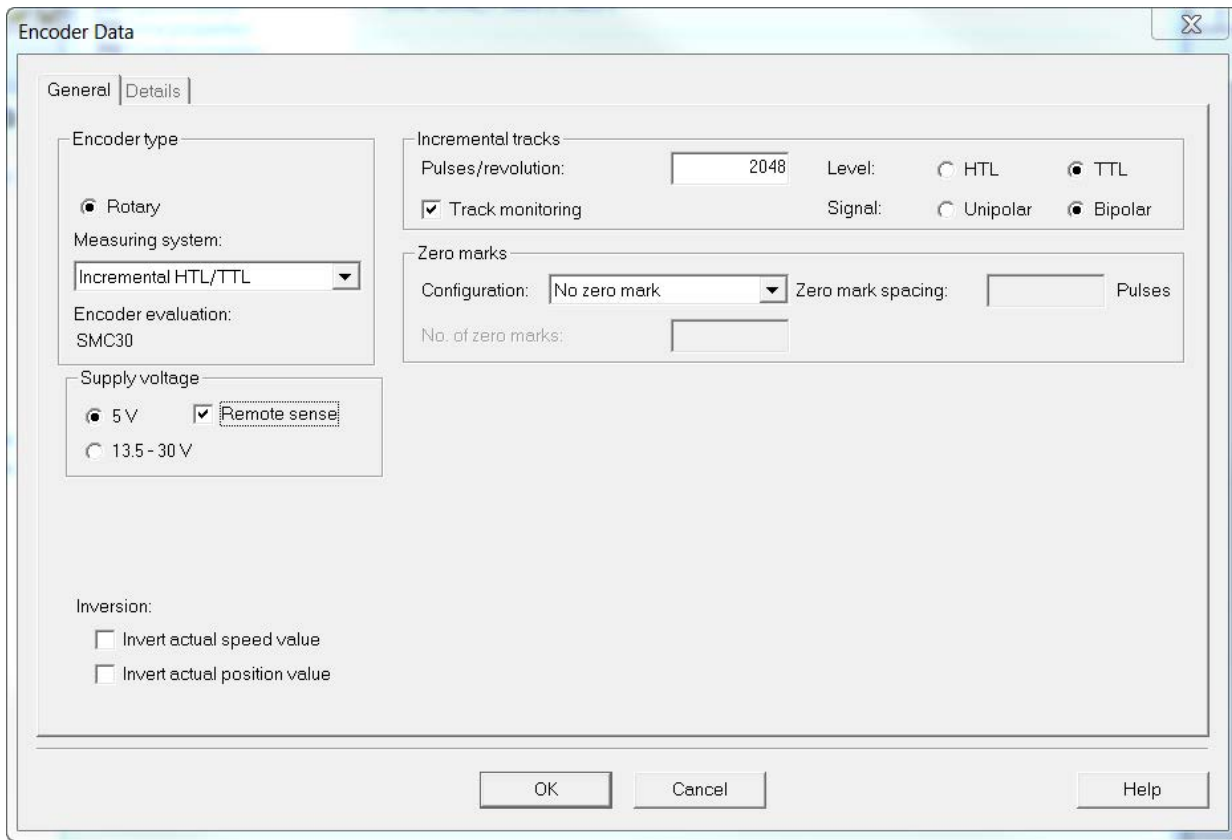


Figure 8-24 Entering encoder data – Pulse encoder via CUD

⇒ Appropriately set the **measuring system** (predominantly "incremental HTL/TTL"), the **incremental tracks**, the **level** and the **zero marks**.

**NOTICE**

**Pulse encoder power supply at terminal X177.41 of the CUD**

Terminal X177.41 always provides +15 V to supply the incremental encoder. This is independent of the setting selected under **voltage supply**.

⇒ Click on **OK**

⇒ Click on **Next >**

**[3] EMF actual value internal**

⇒ Enter the **EMF at maximum speed**.

(the EMF should be specified as the percentage of the voltage specified in the screen form).

⇒ Click on **Next >**

**[4] Free interconnection via p50609**

⇒ Enter the source with the actual value via the BICO interconnection.

⇒ Click on **Next >**

**[5] DRIVE-CLiQ encoder: Resolver via Sensor Module Cabinet SMC10**

The resolver is connected via the Sensor Module Cabinet SMC10.

⇒ Select **encoder 2** to activate the evaluation of the encoder via the Sensor Module Cabinet SMC10.

⇒ To select a predefined encoder configuration click on the radio button **Select standard encoder from list**, and select one of the encoders that is listed.

The following resolvers can be evaluated via the Sensor Module Cabinet SMC10:

- [1001] resolver 1-speed
- [1002] Resolver 2-speed
- [1003] Resolver 3-speed
- [1004] Resolver 4-speed

⇒ To enter special encoder configurations, click the **Enter data** radio button and then the **Encoder data** button. The following input screen is displayed for you to enter the required data.

The screenshot shows the 'Encoder Data' dialog box with the following configuration:

- Encoder type:  Rotary
- Measuring system: Resolver
- Encoder evaluation: SMC10
- Incremental tracks: No. pole pairs: 1
- Inversion:  Invert actual speed value,  Invert actual position value

Figure 8-25 Entering encoder data – Resolver via SMC10

⇒ Enter the pole pair number.

⇒ Click on **OK**

**Note**

**Encoder configuration using the expert list**

If the existing encoder type is not in the selection list, then the encoder must be manually configured using the Expert list:

p0400[1] = 9999 (user-defined)

p0404[1] = (bit field)

---

⇒ Click on **Continue** >

**[5] DRIVE-CLiQ encoder: Pulse encoder via Sensor Module Cabinet SMC30**

The pulse encoder is connected via the Sensor Module Cabinet SMC30.

⇒ Select **encoder 2** to activate the evaluation of the encoder via the Sensor Module Cabinet SMC30.

⇒ To select a predefined encoder configuration click on the radio button **Select standard encoder from list**, and select one of the encoders that is listed.

The following resolvers can be evaluated via the Sensor Module Cabinet SMC30:

- [3001] 1024 HTL A/B R
- [3002] 1024 TTL A/B R
- [3003] 2048 HTL A/B R
- [3005] 1024 HTL A/B
- [3006] 1024 TTL A/B
- [3007] 2048 HTL A/B
- [3008] 2048 TTL A/B
- [3009] 1024 HTL A/B unipolar
- [3011] 2048 HTL A/B unipolar
- [3020] 2048 TTL A/B R, with sense
- [3081] SSI, singleturn, 24 V
- [3082] SSI, multiturn 4096, 24 V
- [3088] 1024, HTL, A/B, SSI, singleturn
- [3090] 4096, HTL, A/B, SSI, singleturn

⇒ To enter special encoder configurations, click the **Enter data** radio button and then the **Encoder data** button. The following input screen is displayed for you to enter the required data.



Figure 8-26 Entering encoder data – Pulse encoder via SMC30

- ⇒ Select the **encoder connection** (SUB-D /terminal).
- ⇒ Enter the required encoder data.
- ⇒ Click on **OK**

**NOTICE****Material damage when selecting the incorrect encoder supply voltage**

Once the encoder has been commissioned, the supply voltage (5 V / 13.5 - 30 V) set for the encoder is activated on the SMC30 Module. If a 5 V encoder is connected and the supply voltage has not been set correctly, the encoder may be damaged.

- Set the correct supply voltage for the connected encoder.

- ⇒ Click on **Next >**

Data on field

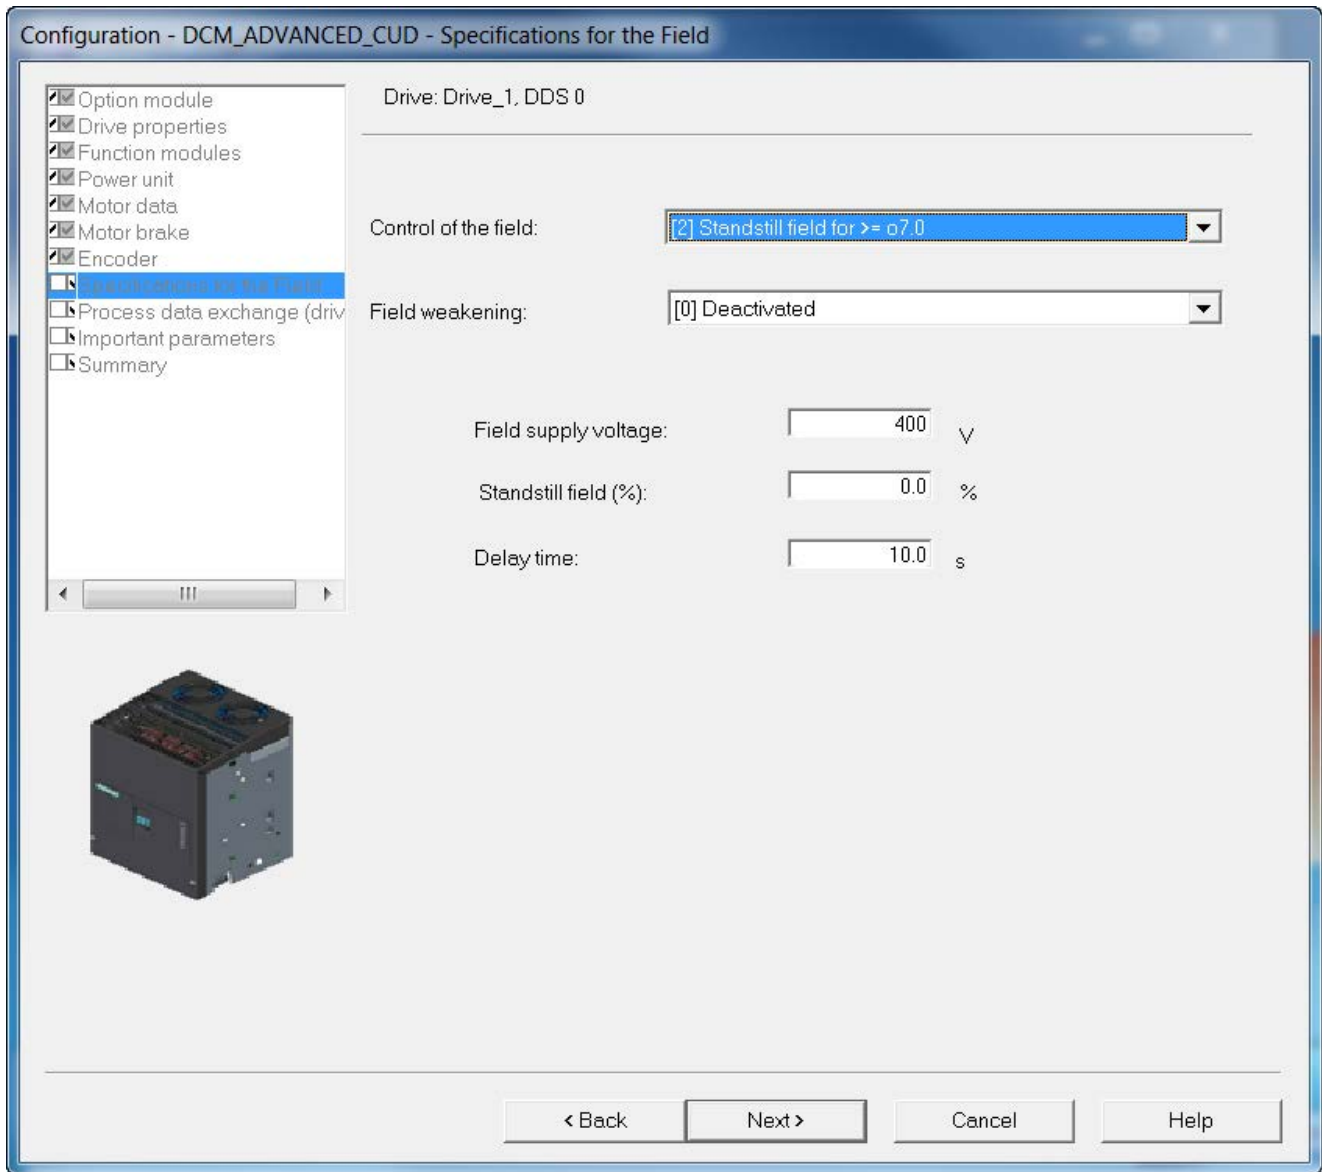


Figure 8-27 Data on field

⇒ Select the **field control**:

- [0] No field
- [1] Field also switched with the main contactor
- [2] Standstill field at  $\geq 0.7.0$  (factory setting)
- [3] Field is continuously switched on
- [4] Field also switched with signal auxiliaries ON
- [21] External field device, otherwise the same as position 1
- [22] External field device, otherwise the same as position 2
- [23] External field device, otherwise the same as position 3
- [24] External field device, otherwise the same as position 4

⇒ Select whether the EMF-dependent field weakening should be activated or deactivated.

---

#### Note

If **Field weakening** is activated, then a valid field characteristic must be available (p50117 = 1), otherwise, the optimization run for field weakening (p50051 = 27) must be carried out.

---

⇒ Depending on the selection under **Field control**, the values for **field supply voltage**, **standstill field (%)** and **delay time** can be set.

⇒ Click **Next >**

### Selecting process data exchange

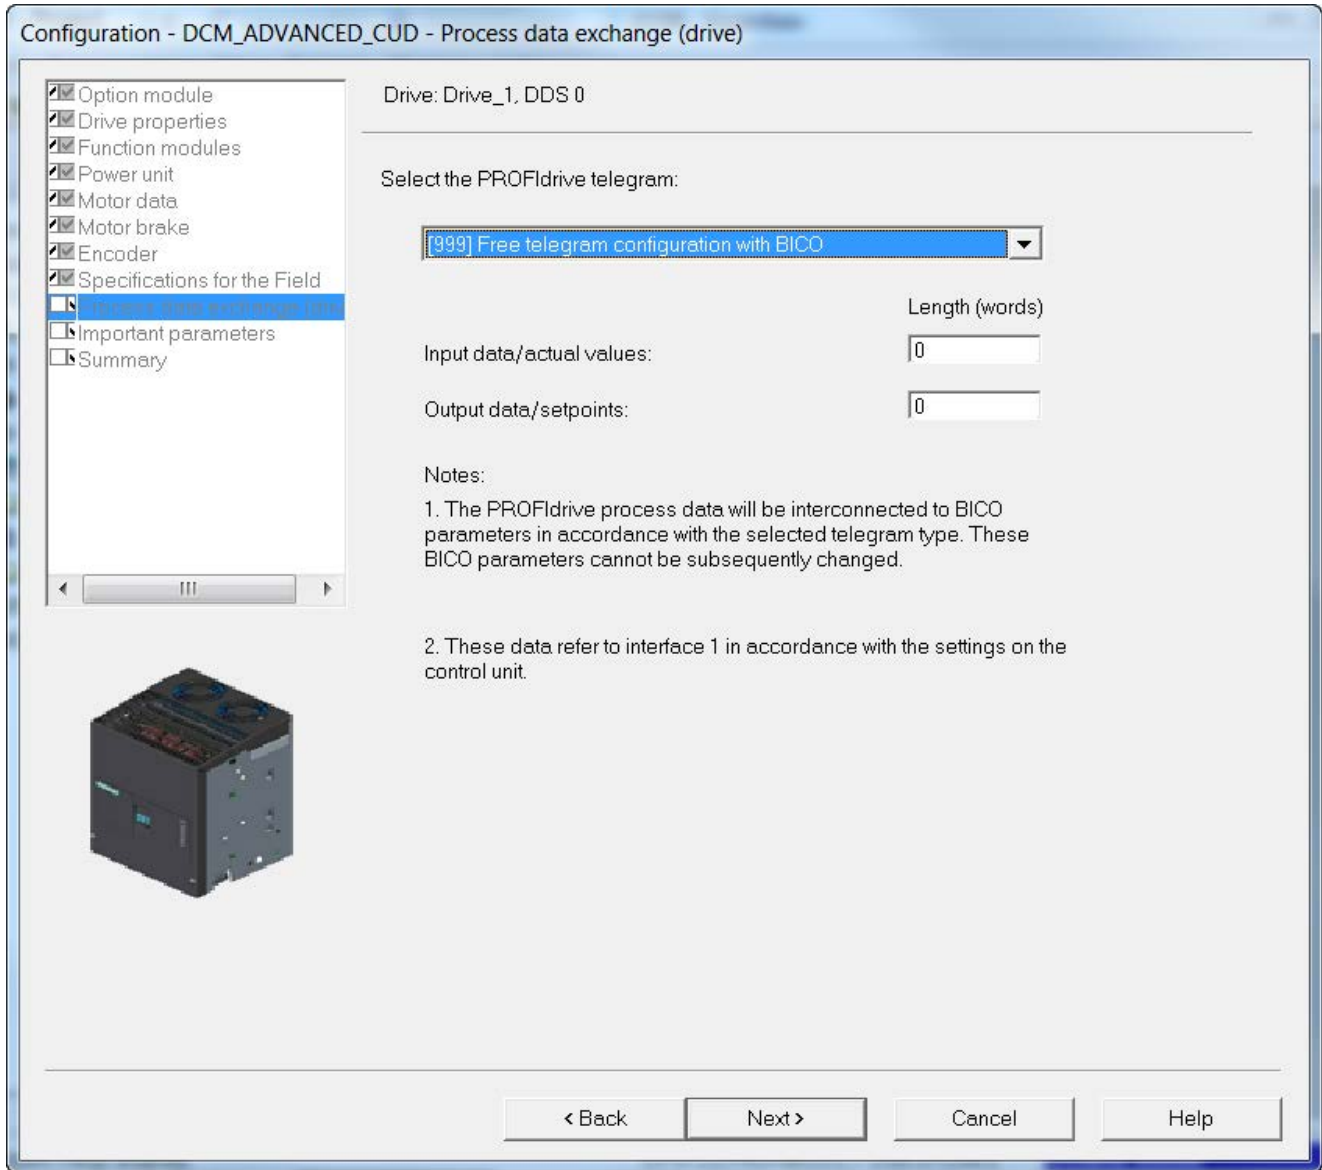


Figure 8-28 Selecting process data exchange

⇒ Select the PROFIdrive telegram type.

- 1: Standard telegram 1, PZD-2/2
- 3: Standard telegram 3, PZD-5/9
- 4: Standard telegram 4, PZD-6/14
- 20: SIEMENS telegram 20, PZD-2/6
- 220: SIEMENS telegram 220, PZD-10/10
- 352: SIEMENS telegram 352, PZD-6/6
- 999: Free telegram configuration with BICO (default setting)

---

**Note**

If a standard telegram is selected, BICO interconnections are triggered which cannot be re-parameterized. If, e.g. p0840 is to be changed again, a switchover to free telegram configuration has to be made first.

---

⇒ Click **Next** >

### Entering important parameters

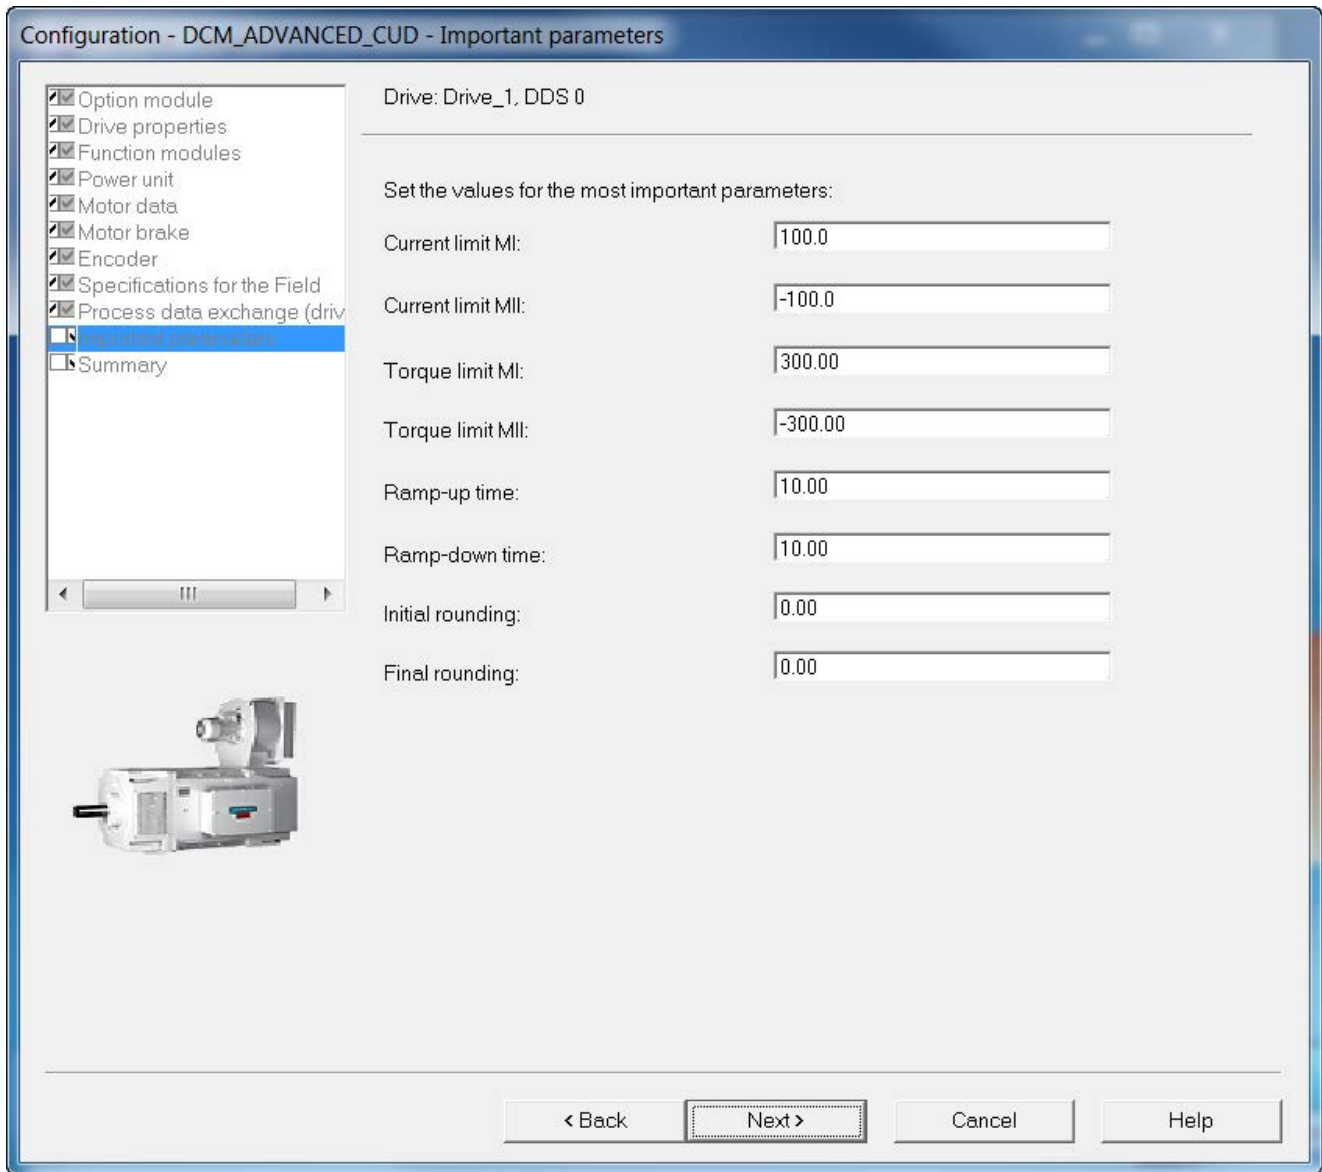


Figure 8-29 Entering important parameters

⇒ If necessary, enter important technological parameters.

---

**Note**

**Tooltips**

STARTER provides ToolTips if you position your cursor on the required field **without clicking in the field**.

---

⇒ Click on **Next >**

## Summary

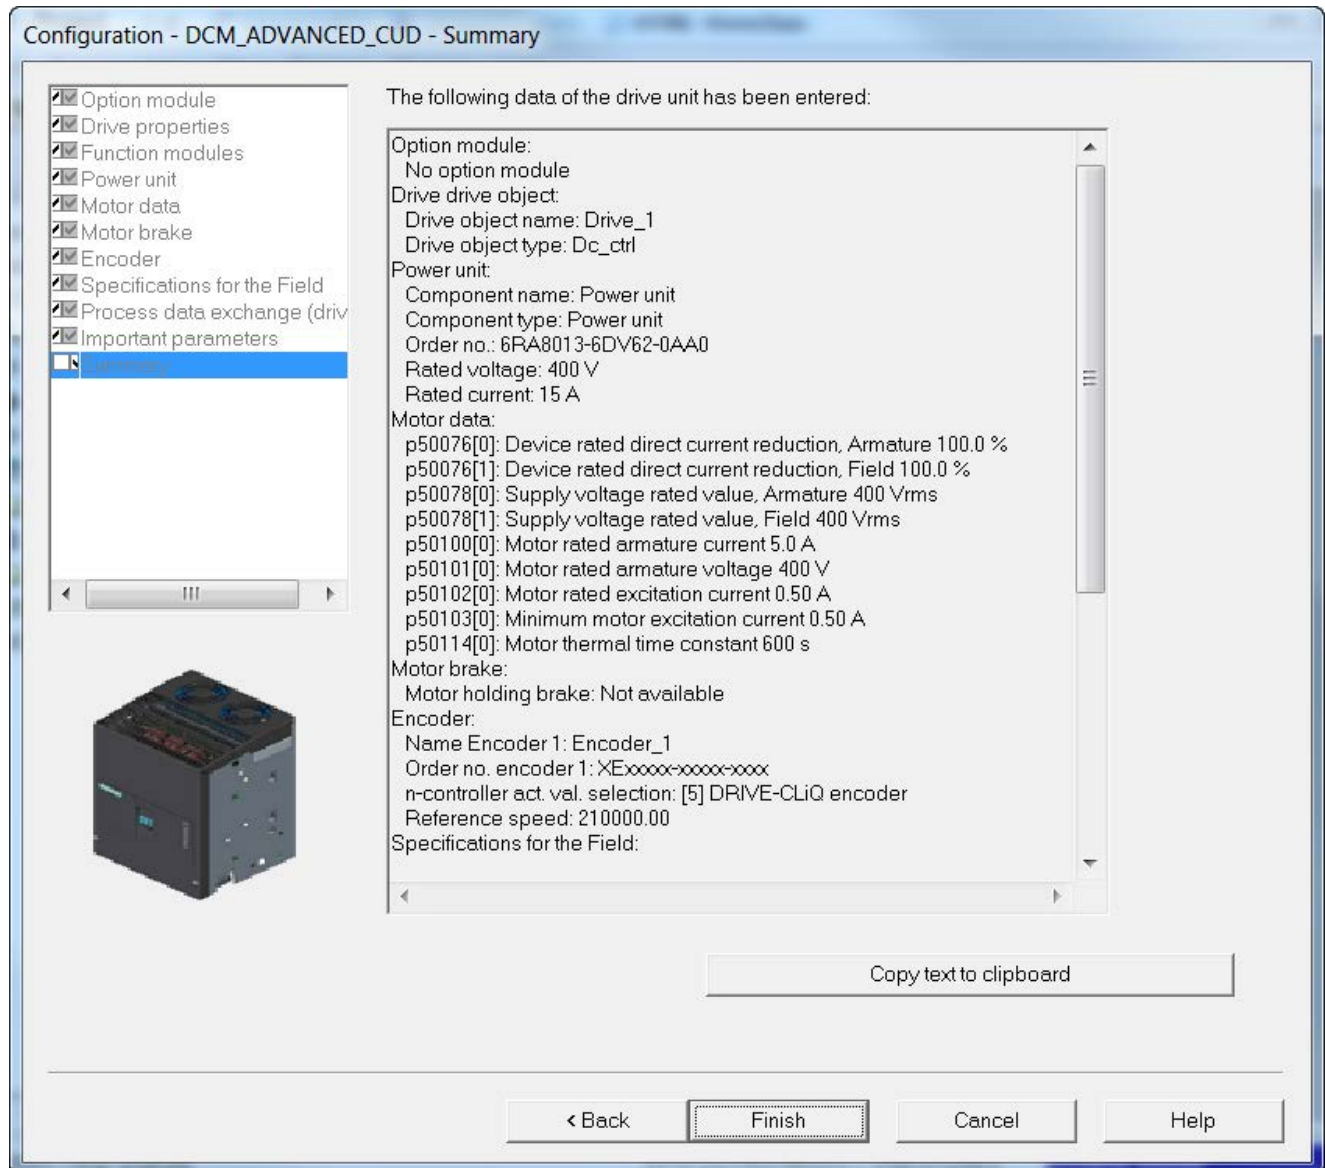


Figure 8-30 Summary

- ⇒ Use **Copy text to clipboard** to insert the summary of the data of your drive unit displayed in the window for later use in text processing.
- ⇒ Click **Finish**.
- ⇒ Save your project on the hard disk with **Project > Save**.

### 8.5.2.3 Starting the drive project

You have generated a project and saved it to your hard disk. The next step is to transfer your project configuration data to the drive unit.

### Transferring a STARTER project to the drive unit

The following steps are required to transfer the STARTER project created offline to the drive unit:

- **Step 1**

Select the menu command **Project > Connect to target system**

Selection in the toolbar:



- **Step 2**

Select DCM\_ADVANCED\_CUD as drive unit in the following screen and confirm with OK:

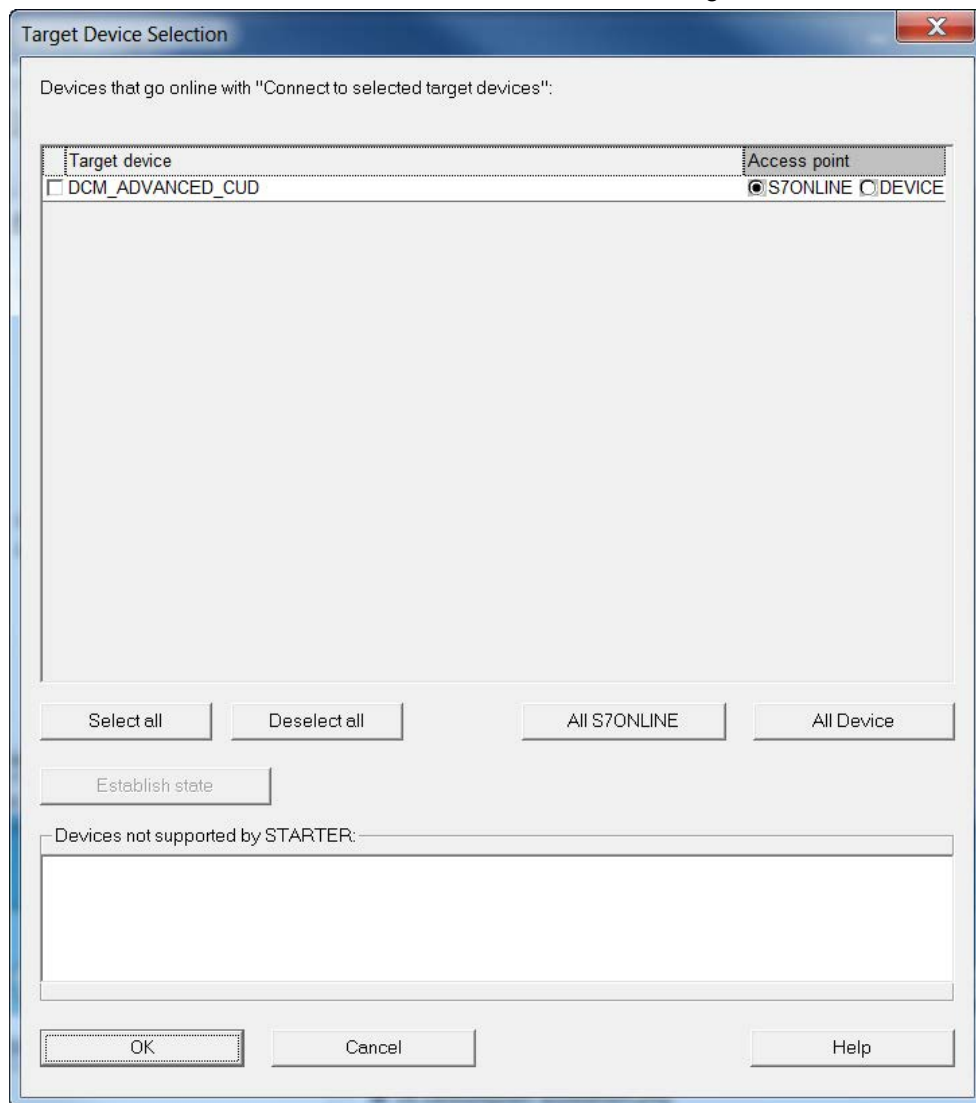


Figure 8-31 Target device selection



- **Step 3**

Select the menu command **Download**:

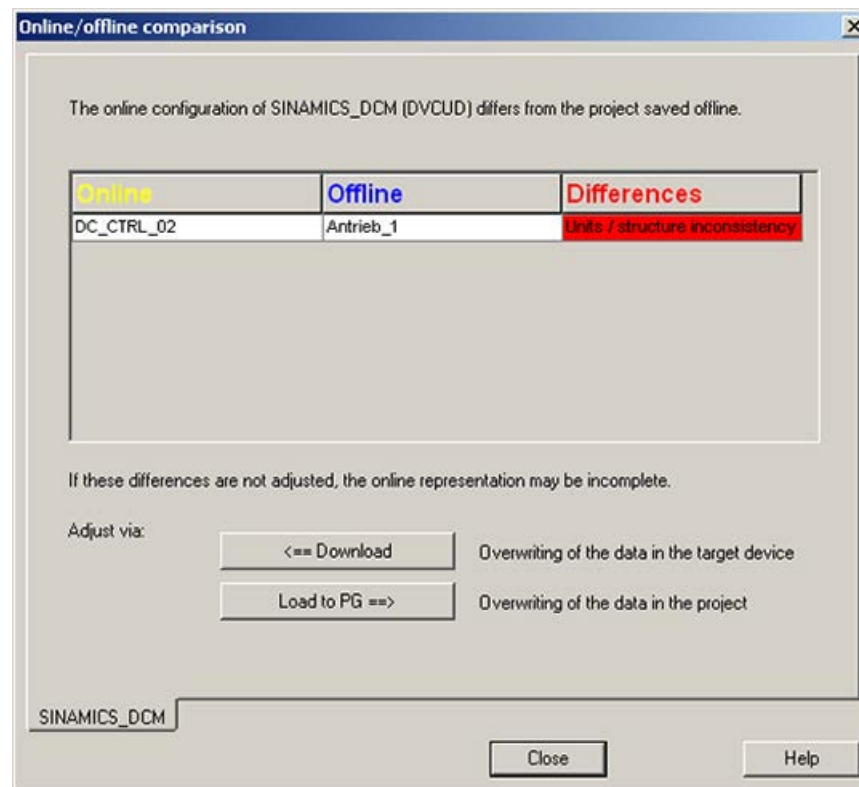


Figure 8-32 Online/offline comparison

- **Step 4**

Activate the checkboxes if the DCC charts are also to be stored in the device and Copy RAM to ROM is to be performed after the download.

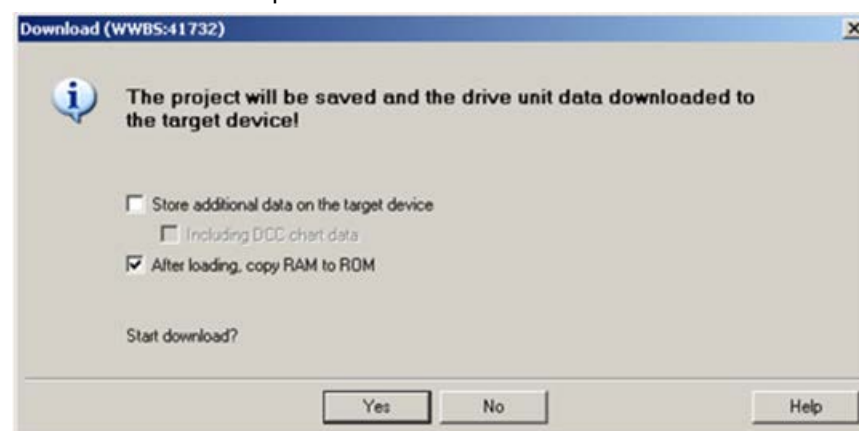


Figure 8-33 Downloading to the target device

Alternatively, the download to the target system can also be performed as follows:

- **Step 1**

Select the menu command **Target system > Download > Project to target system**

Selection in the toolbar



---

**Note**

Your project data has now been transferred to the drive unit. Presently, this data is only in the volatile memory (RAM) of the drive unit, however, neither saved in the non-volatile memory (ROM) nor on an optionally inserted memory card (see also Chapter "Memory card functions (Page 359)").

To save your project data in the ROM and on the optionally available memory card of your drive unit so that it is protected against power failure, carry out the following steps.

---

- **Step 2**

Select the menu command **Target system > Target system > Copy RAM to ROM**

Selection in the toolbar



---

**Note**

The button for copying **RAM to ROM** can only be activated if the drive unit has been marked in the project navigator.

---

### Results of the preceding steps

- You have generated a project for your drive unit using the STARTER offline
- You have saved your project data to your PC hard drive
- You have transferred your project data to the drive unit
- You have saved your project data in your drive unit's FLASH memory so that it is backed up in the event of a power failure

## 8.6 Activating function modules

Subfunctions can be activated in the SINAMICS family drives as function modules.

Through activation, the parameters of the corresponding functionalities are also displayed.

Function modules can be individually activated / deactivated on every drive object.

For SINAMICS DC MASTER, the following subfunctions are modeled as function module.

- Technology controller
- Free function blocks
- PROFINET interface

### 8.6.1 Activating offline with STARTER

Function modules can be set for all DOs by using the properties dialog (activate by right-clicking the DO in the project navigator). Example shown for the closed-loop control DO "Drive\_1":

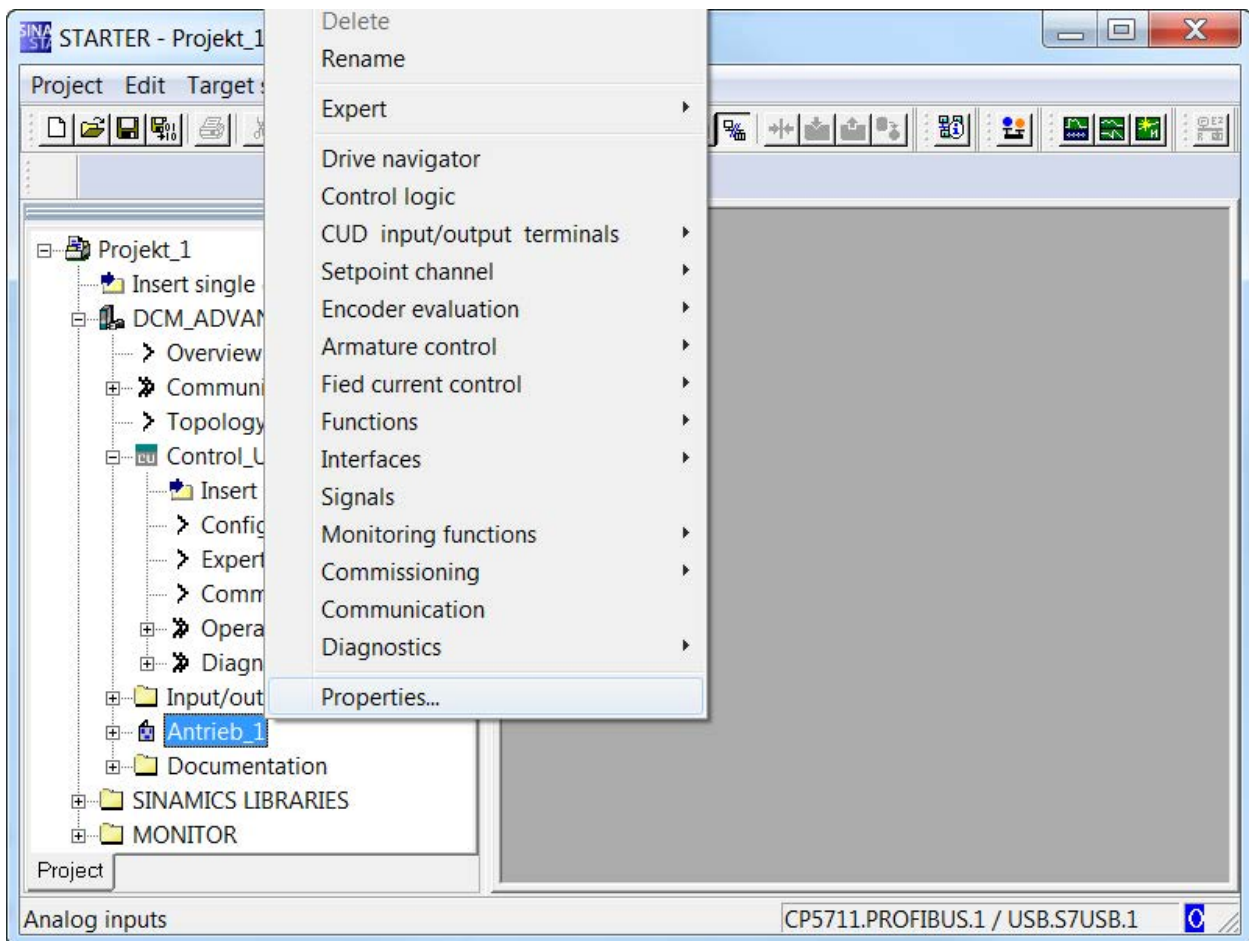


Figure 8-34 Properties

The function modules can be reached in the "Function modules" tab in the opening dialog.

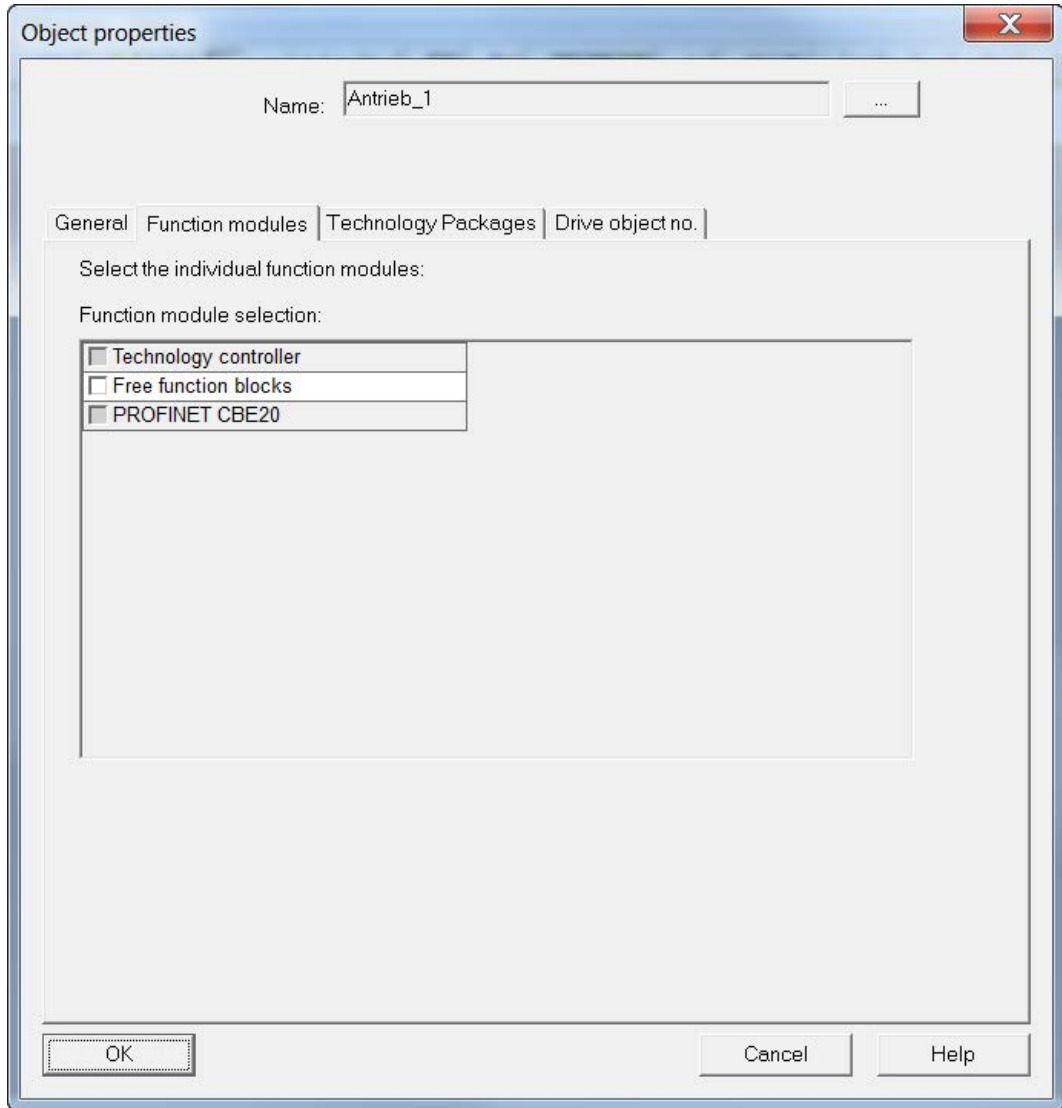


Figure 8-35 Selecting the function modules

Accept the settings by clicking **OK**.

The function modules are also correspondingly set in the drive by connecting online and downloading.

## 8.6.2 Activating online through parameters

---

### Note

This process is not supported by STARTER because it uses its own mechanisms.

---

Activation is through p0108. r0108 and is available at each DO as a display parameter for the activated function modules.

The setting is made on p0108[i] in the Control Unit. Here the index corresponds to the DO.

- Index 0 stands for the CU
- Index 1 stands for the first DO – in the default setting, for the closed-loop control DO DC\_CTRL
- Index 2 stands for the optional first TMxx, etc.

<b>Sub-function</b>	<b>p0108 bit</b>
Technology controller	16
Free function blocks	18
PROFINET interface	31

The function modules are activated/deactivated by setting the bits to "1" or "0".

On BOP20 or AOP30 parameter assignment is made at DO1 (CU\_DC)

- p0009 = 2
- p0108[i] Set bits corresponding to "1" or "0"
- p0009 = 0

This triggers the firmware to reboot, therefore activating the function modules that have been set - together with the associated parameters.

---

### Note

Changing the parameters – The quantity structure is copied to the optional AOP30 by "relearning" the existing parameters. This takes a few minutes.

---

## **8.7 Commissioning optional additional modules**

Additional modules can be integrated via DRIVE-CLiQ (TM15, TM31, TM150, SMC10, SMC30) – or via the option slot of the Control Unit CUD (CBE20).

The components must be logged in to the firmware during a first commissioning.

That can be done:

- Offline by inserting the components into the project in STARTER and loading the project into the drive
- By adding the components through the parameter assignments on BOP20 / AOP30

## 8.7.1 Terminal Modules (TM31, TM15, TM150)

### 8.7.1.1 Commissioning with STARTER

#### Requirement

The project must be consistent with the drive before adding the TMxx. Carry out "Load to the PG" and then go offline.

An input/output component can only be inserted in the offline state.

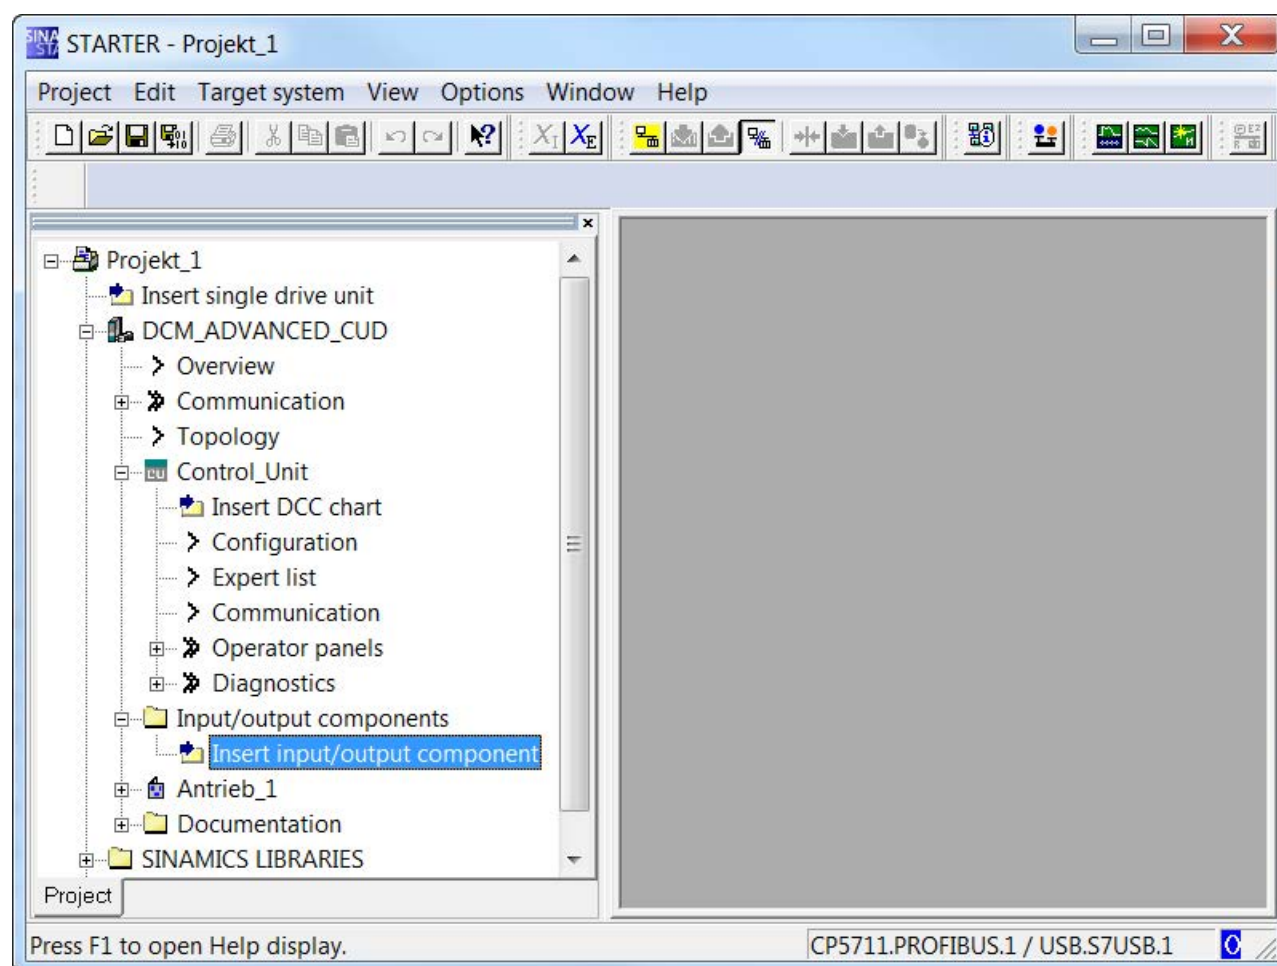


Figure 8-36 Inserting input/output components

- Double-click "Insert input/output component".

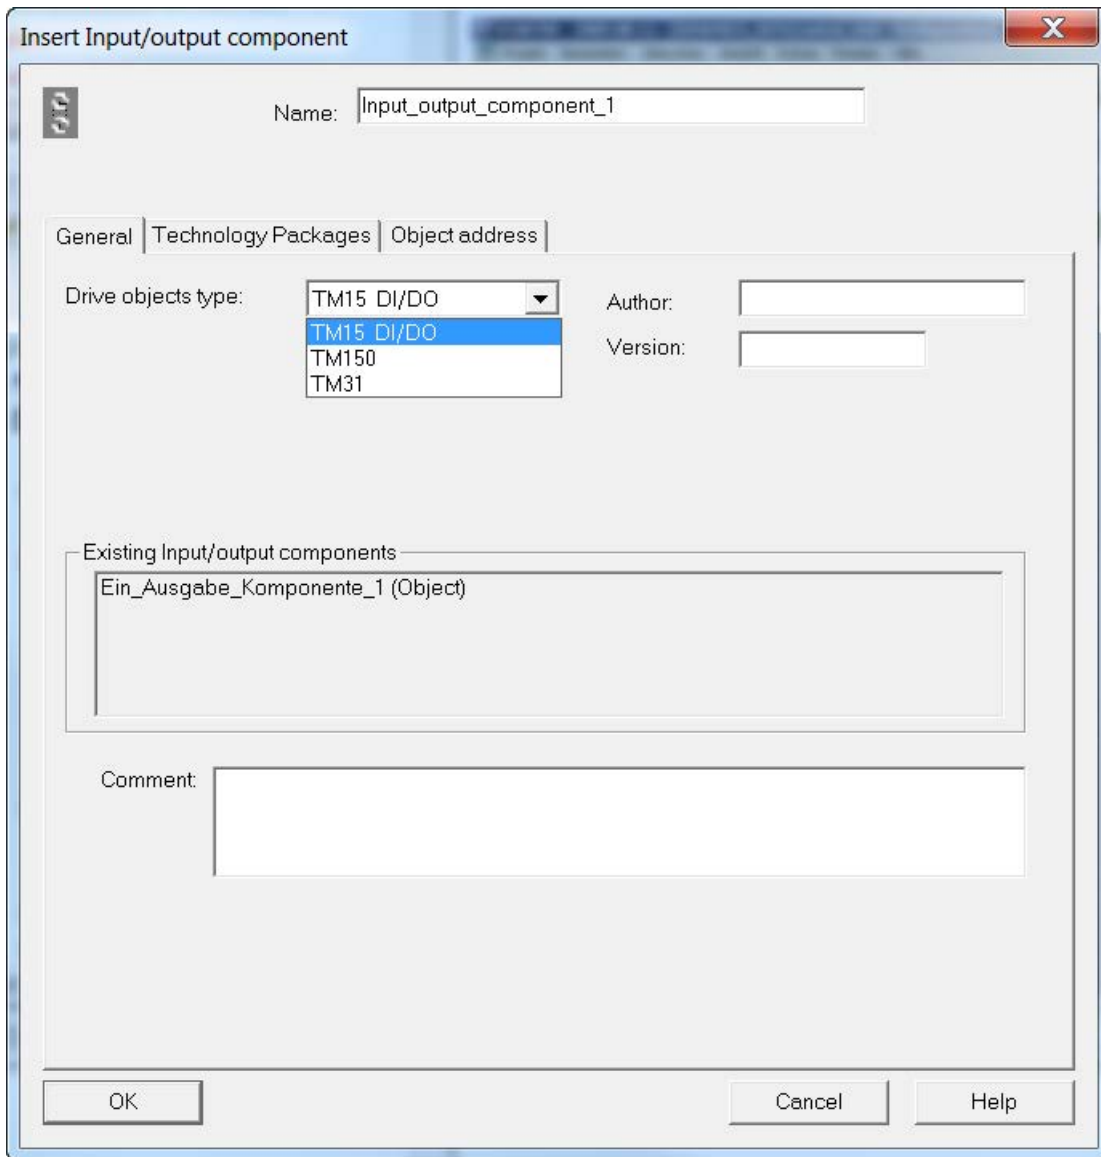


Figure 8-37 Selecting input/output components

- Select the desired type.
- Overwrite the text in the "Name:" field with the name selected for the I/O component (e.g. TM31\_1).



- In the topology view, check at which interface of the Control Unit input/output components should be connected, and connect them there.  
[0] = X100, [1] = X101.

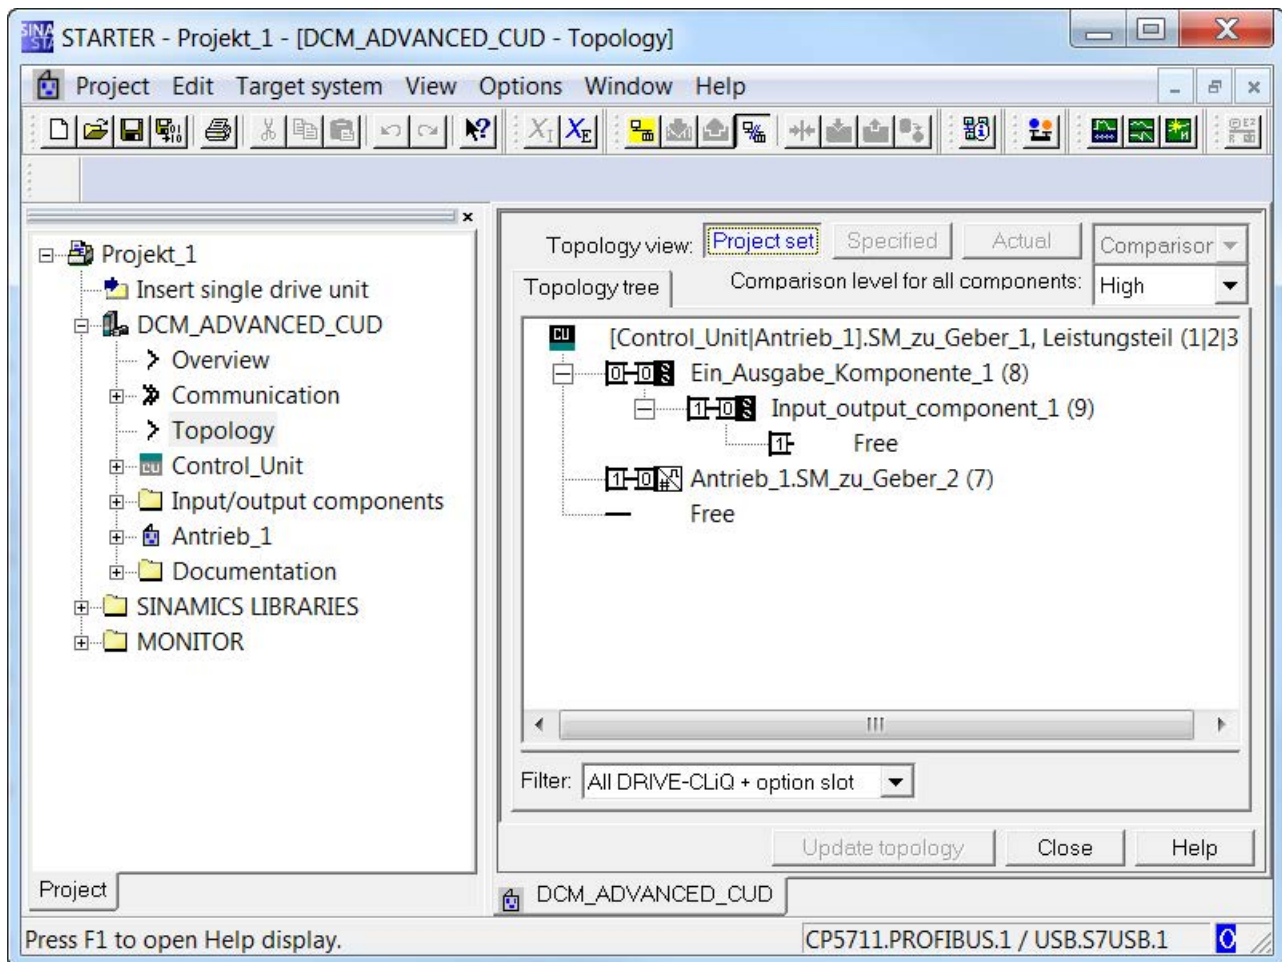


Figure 8-38 Topology

- Re-connect to the target device.
- Load the project into the drive with "Load to target device".
- Persistently save with RAM→ROM.
- The LED on the Terminal Module now lights up green and you can access the parameters of the additional DOs.

### 8.7.1.2 Commissioning via parameter assignment

With the electronics power supply switched-off, plug in the Terminal Module with DRIVE-CLiQ at X100 or X101.

Accept the additional components by writing the following parameter to the CU.

---

**Note**

When powering up on a drive for the first time, the firmware will, if required, be loaded into the Terminal Module. After successful loading, the LED on the TMxx flashes red/green and alarm A1007 is output. A power ON is required before the components can be used.

---

p0009 = 1  
p9910 = 1 (= accept component)  
p0009 = 0

This triggers the firmware to reboot, and the additional components are accepted.

If you then go online with an old STARTER project, the different topologies will be displayed offline and online. With "Load to PG" the changed topology can also be accepted by STARTER

### 8.7.2 Encoder evaluation (SMC10, SMC30)

When using the optional Sensor Module Cabinet SMC10, a resolver can be used as motor encoder or as second encoder.

When using the optional Sensor Module Cabinet SMC30, a pulse encoder can be used as motor encoder or as second encoder.

Subsequently adding or deleting an SMC10 or SMC30 to/from an existing project is only possible with the STARTER commissioning tool.

### 8.7.2.1 Add/commissioning (with STARTER)

An encoder evaluation can only be inserted in the offline state.

- Double-click on "Configuration".

The drive configuration is shown in the operating area of Starter.

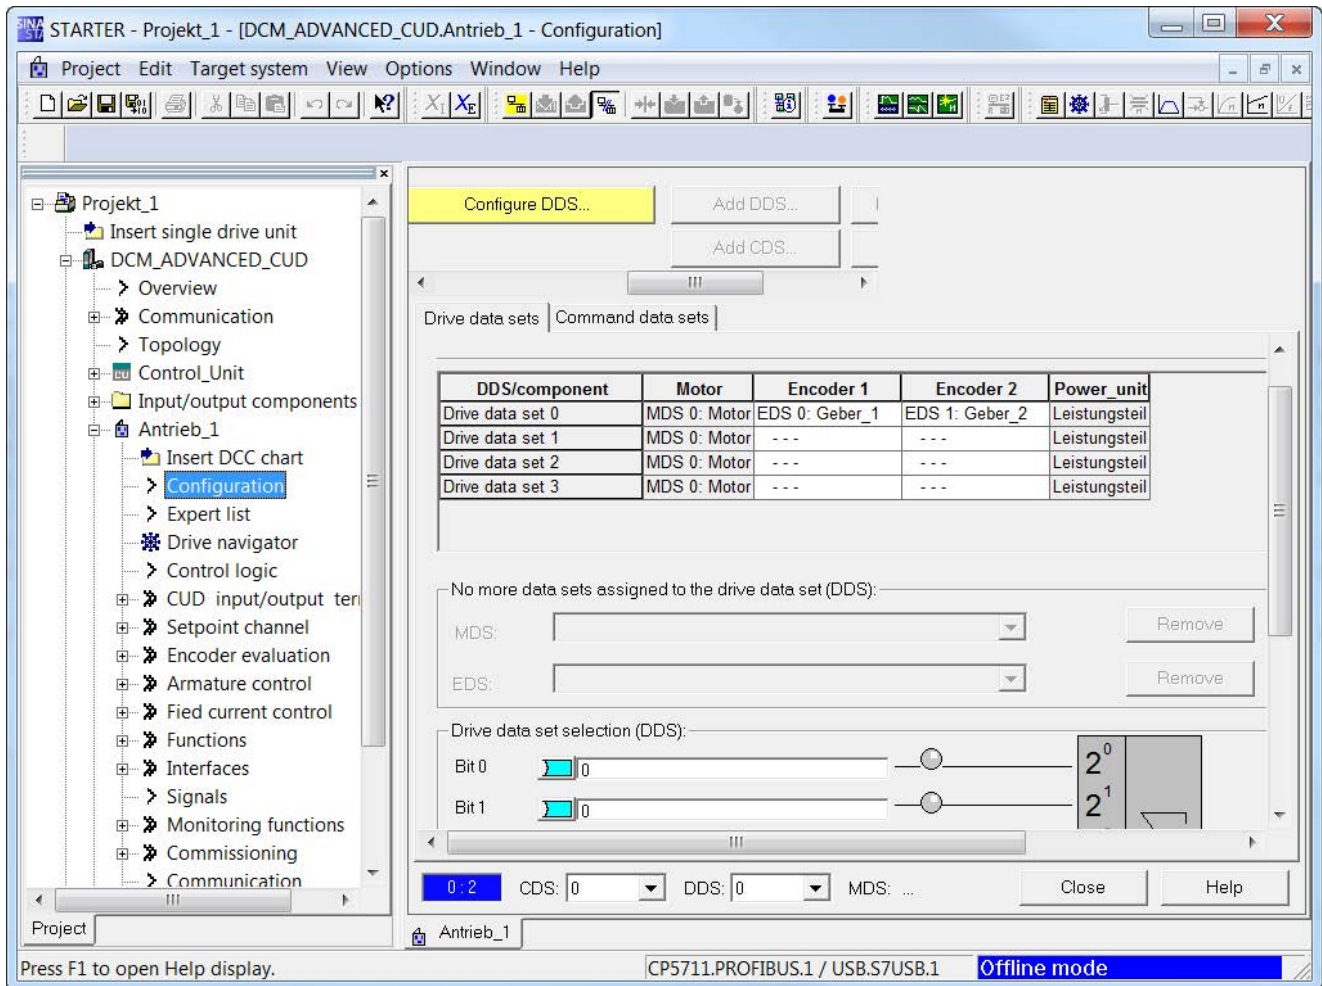


Figure 8-39 Configuration – Drive data sets

EDS and DDS can be set and DDS copied in the lower part of the **Drive data sets** tab.

- CDS can be selected and copied under the **Commander data sets** tab:

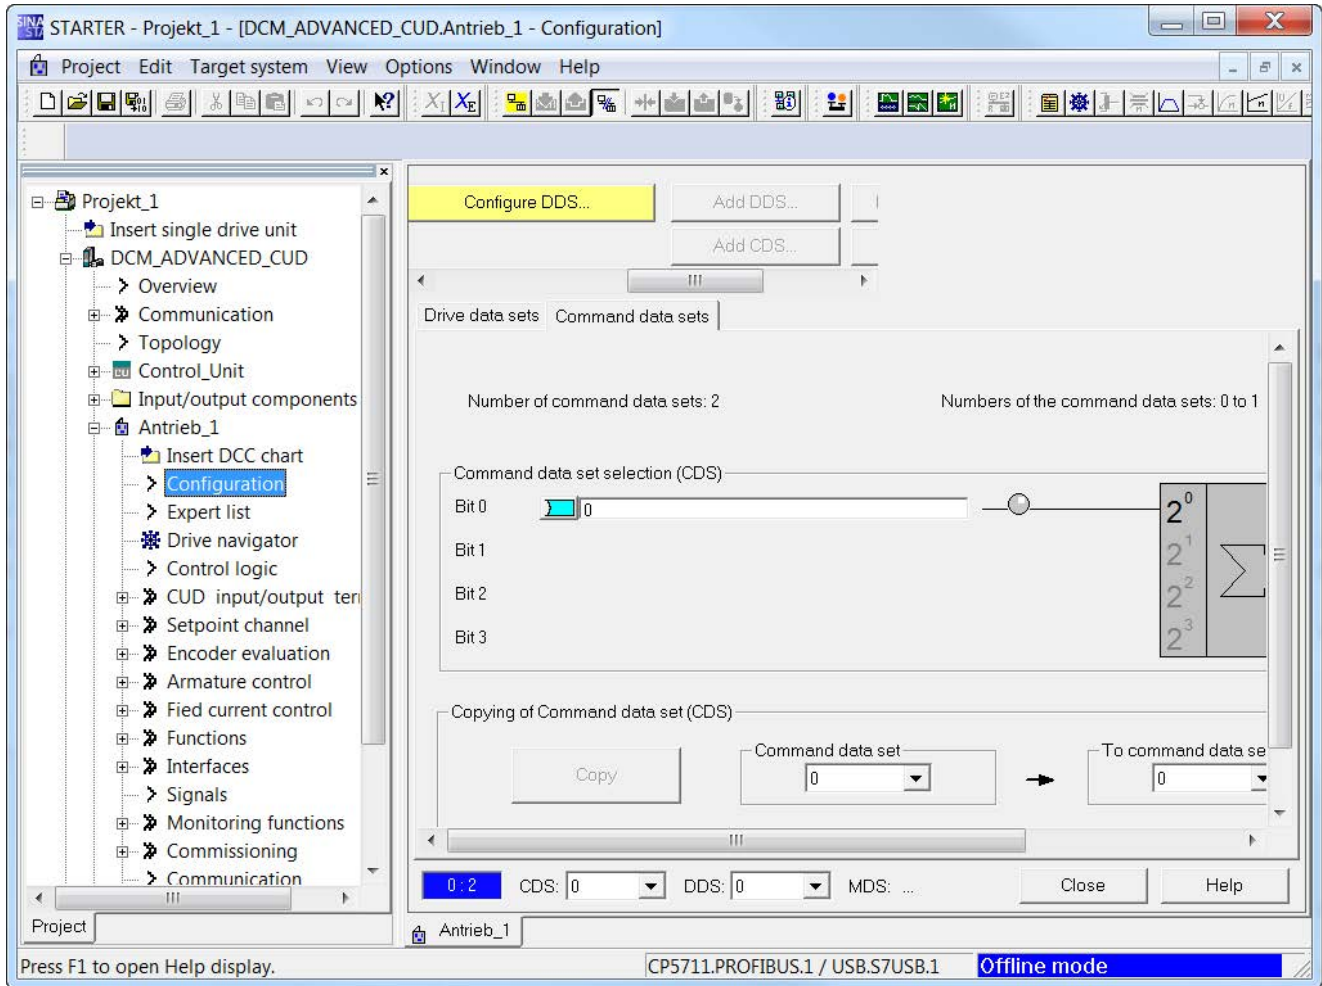


Figure 8-40 Configuration – Command data sets

- Click on button **Configure DDS**, the drive Wizard is displayed.  
Continue to the "Encoder" screen and there activate **encoder 2**.

### SMC10: Resolver

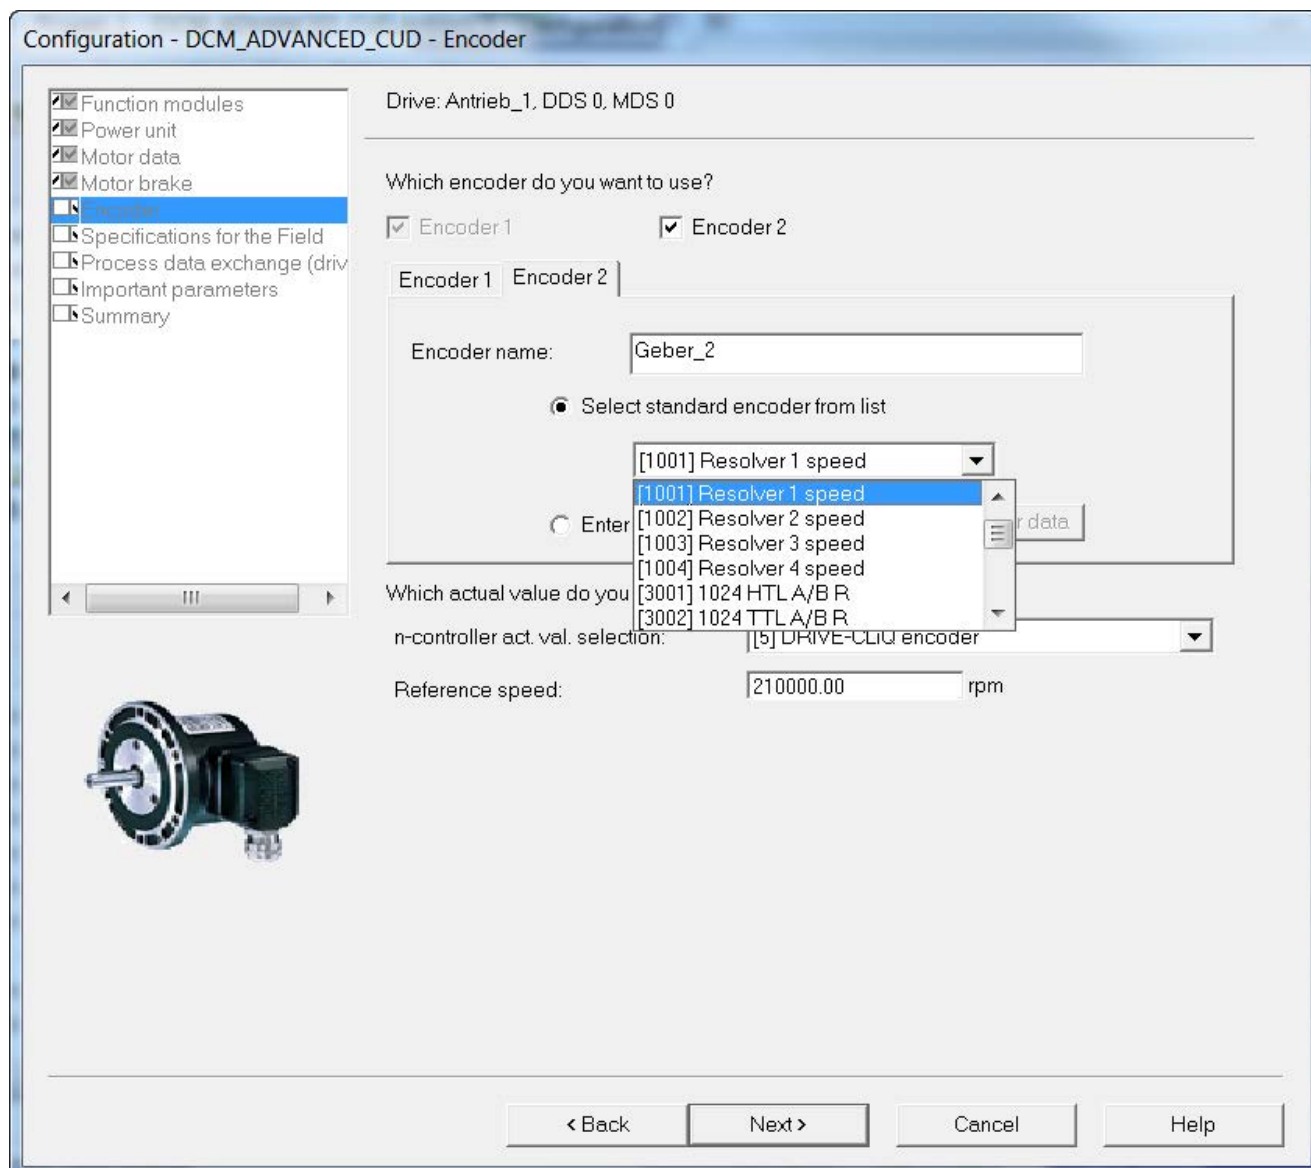


Figure 8-41 Selecting the resolver

SMC30: Pulse encoder

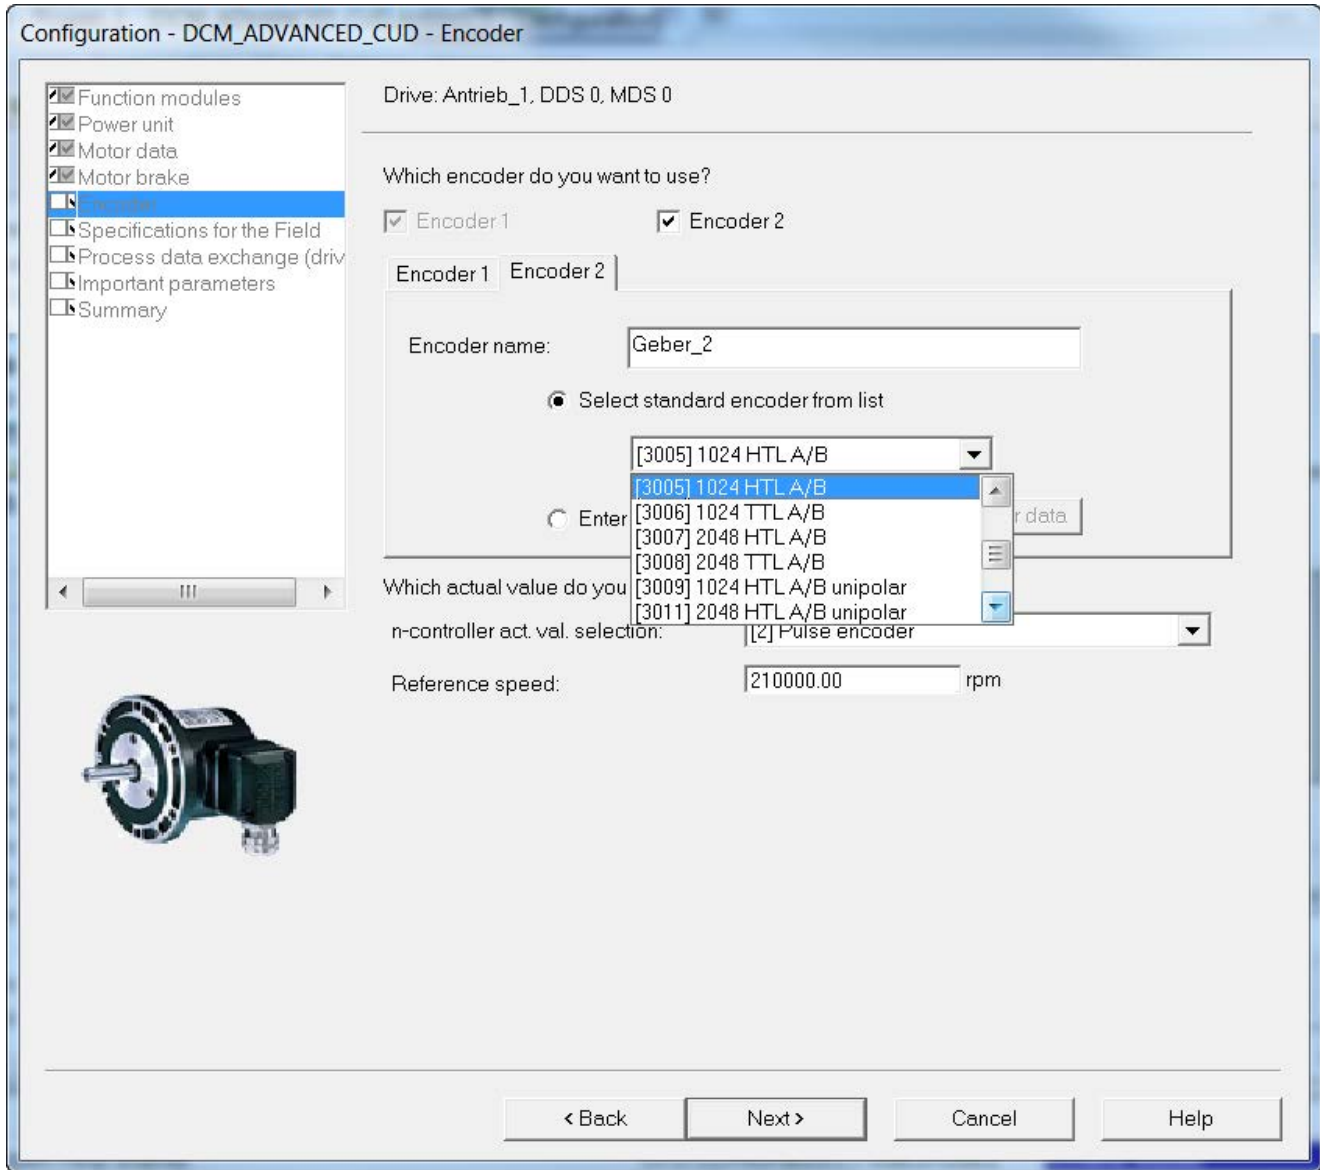


Figure 8-42 Selecting the pulse encoder

- To enter special encoder configurations, click the **Enter data** radio button followed by the **Encoder data** button - and then enter the encoder data.
- If the encoder connected at the SMC10 or SMC30 is also used as actual value for the closed-loop speed control, then under **n-controller act. val. selection**, select entry "[5] DRIVE-CLiQ encoder".
- Run through the wizard until the end and load the expanded project into the drive.

### 8.7.2.2 Removal (with STARTER)

An encoder evaluation can only be inserted in the offline state.

- Start the drive wizard via "Configuration" -> "Configure DDS..."
- Work through the wizard with Continue > to the "Encoder" screen form and there, select encoder 2
- Work through the remainder of the wizard up to the end
- Withdraw the encoder evaluation SMC10 or SMC30
- Go online
- Load the project to the drive

### 8.7.3 CBE20 Communication Board Ethernet

#### 8.7.3.1 Adding online into the drive

The CBE20 is automatically detected when plugged into the slot and is integrated into the system.

Before the module can also be addressed in the network, an IP address and device name must be assigned, see Chapter "Communication via PROFINET IO (Page 485)".

---

**Note**

If PROFINET is to be used only as a commissioning interface but process control is through PROFIBUS, after commissioning the CBE20, the process data interface needs to be set back to PROFIBUS (p8839 = 1).

---

### 8.7.3.2 Adding offline in STARTER

In Starter, CBE20 is added when working through the drive wizard.

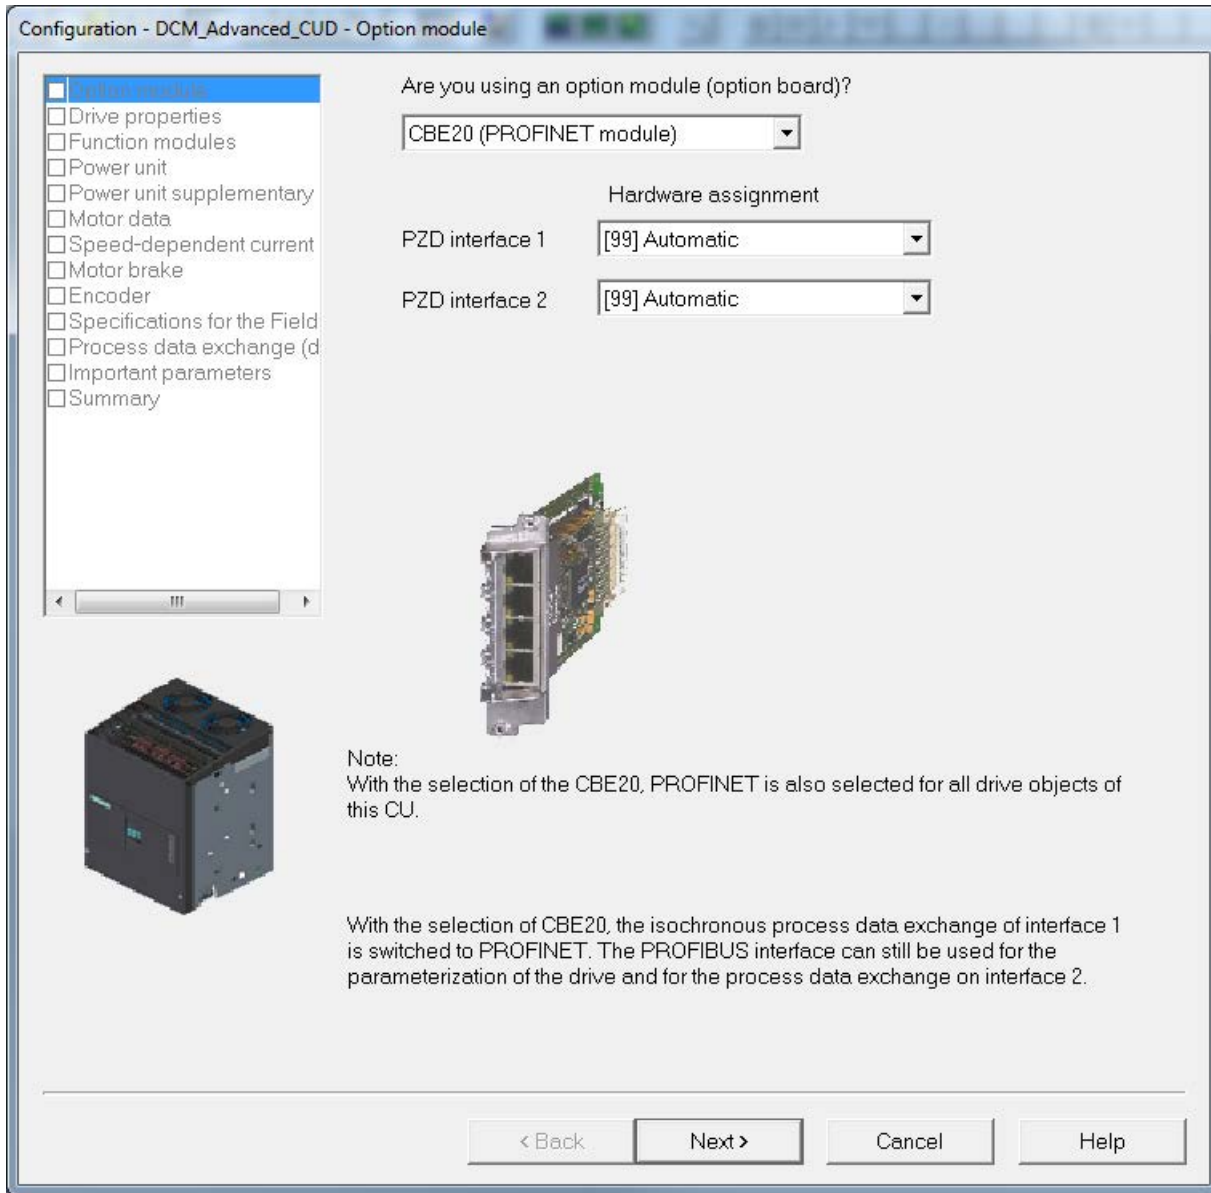


Figure 8-43 Activating the CBE20 option module

- Select the option module CBE20.
- Work through the wizard up to the end and load the expanded project into the drive.
- You can then access the parameters for the CBE20.



You can also subsequently activate option module CBE20.

- Start the configuration wizard via "Control Unit" -> "Configuration" -> "Wizard..."
- In the "Option module" screen form, select CBE20
- Work through the remainder of the wizard up to the end
- Go online
- Load the project to the drive

### 8.7.3.3 Deleting from the drive online

Removing a CBE20 without STARTER always leads to the loss of the parameter assignments which are replaced by the factory settings.

p0009 = 30

p0976 = 1

(recent commissioning)

### 8.7.3.4 Deleting offline with STARTER

CBE20 can only be removed in the offline state.

- Start the configuration wizard via "Control Unit" -> "Configuration" -> "Wizard..."
- In the "Option module" screen form, deselect CBE20
- Work through the remainder of the wizard up to the end
- Remove the CBE20 option board from the Control Unit
- Go online
- Load the project to the drive

## 8.8 Drive optimization

### Basic information

The individual control loops must be optimized when commissioning a drive.

4 control loops must be set or optimized:

- Field current closed-loop control
- Armature current closed-loop control
- Speed control
- EMF closed-loop control

SINAMICS DCM supports this task in 2 ways.

- Quick commissioning  
The controller parameters are calculated from the rated data of the motor and the power unit. No measurements are made. Only the parameters for the field current closed-loop control, the armature closed-loop control and the speed closed-loop control are determined. The parameters set during the quick commissioning allow reliable drive operation in the majority of cases.
- Optimization runs  
The controller parameters are determined from the rated data of the motor and the power unit and by evaluating measurement results. The parameters of all 4 control loops are determined. The parameters set using the optimization runs can be kept in the majority of cases. In exceptional cases, manual post-optimization is necessary (see the following Chapter "Manual optimization").

### Quick commissioning

#### NOTICE

**Both drive optimization types assume that all of the parameters are at their factory settings before the drive is optimized.**

This is the case when the device is originally shipped. If the parameters have already been changed, or if you are not certain that all of the parameters are at their factory settings, then run the "Restore factory setting" function!

With the basic operator panel BOP20:

(1)p0009 = 30

(1)p0976 = 1

SINAMICS DCM resets all of the parameters to the factory setting, and executes a power on. The parameters must then be permanently saved by pressing the P button for a longer period of time (at least 3 seconds, however until the display starts to flash).

### Procedure

- Start the quick commissioning with p0010 = 1 (= factory setting)
- Set all of the important parameters (see e.g. commissioning steps in Chapter "Commissioning using the BOP20" operator panel)
- Complete the quick commissioning with p3900 = 3 (calculations are performed, p0010 and p3900 are reset to 0)

#### Commissioning using the BOP20 operator panel:

This procedure is explicitly explained for the commissioning steps in Chapter "Commissioning using the BOP20 operator panel (Page 273)".

#### Commissioning using the AOP30 operator panel:

Quick commissioning is completed (p3900 = 3) as part of the final confirmation. (See Chapter "Full drive commissioning (Page 283)").

#### Commissioning using the STARTER commissioning tool:

The completion of quick commissioning (p3900 = 3) is selected as part of "Complete" of the Wizard "Configuring the drive unit". (See Chapter "Configuring a drive unit (Page 298)"). After successfully "Loading the project into the target system" (see Chapter "Starting the drive project (Page 317)"), quick commissioning is completed in the SINAMICS DCM.

## Optimization runs

### WARNING

#### Unexpected motor movement during optimization runs

Optimization runs cause movement of the drive which can result in death, severe injury or material damage.

- Observe the general safety instructions.
- Ensure that the EMERGENCY STOP functions are fully functional when commissioning the drive.

## Procedure

- <1> The drive must be in operating state o7.0 or o7.1 (enter SHUTDOWN!).
- <2> p50051 = 23 Optimization of the armature current control for induction load  
p50051 = 24 Optimization of the field current control  
p50051 = 25 Optimization of the armature current control  
p50051 = 26 Optimization of the speed control  
p50051 = 27 Optimization of the EMF control (incl. field characteristic recording)  
p50051 = 28 Recording of the friction characteristic  
p50051 = 29 Optimization of the speed control for drives with a mechanical system capable of oscillation
- <3> The SINAMICS DCM Control Module goes into operating state o7.4 for a few seconds, and then goes into o7.0 or o7.1 and waits for SWITCH ON and OPERATION ENABLE to be entered.  
Enter the commands SWITCH ON and OPERATION ENABLE!  
If the switch-on command is not entered within 30 s, this wait state is exited and fault message F60052 is output.
- <4> Execution of the optimization run starts once operating state <o1.0 (OPERATION) is reached.
- <5> When the optimization run has been completed, the drive goes into operating state o8.0

---

### Note

The optimization runs should be performed in the order specified previously.

---

### Details on the individual optimization runs

p50051 = 23 **Optimization of armature current control for inductive load**

This optimization run sets the same parameters as for p50051 = 25. The optimization run uses an algorithm that is more suitable when it comes to feeding large inductances than for the algorithm used with p50051 = 25. As a consequence, for applications where the SINAMICS DCM does not feed a motor – but instead a lifting solenoid or the field of the synchronous generator – it is recommended that instead of p50051 = 25 this optimization run is executed.

p50051 = 24 **Optimization of closed-loop field-current control**  
(duration of up to 1 min.)

This optimization run may also be executed without a mechanical load connected.

The following parameters are set automatically:

- p50112, field resistance (Rf)
- p50116, field inductance (Lf)
- p50255, P gain of field-current controller (Kp)
- p50256, integral time of field-current controller (Tn)
- p51597 field inductance reduction factor

- p50051 = 25 **Optimization of closed-loop armature current control**  
(takes about 1 min.)  
The current controller optimization run may also be executed without a mechanical load connected; if necessary, the drive should be locked.  
The following parameters are set automatically:
- p50110, armature resistance (Ra)
  - p50111, armature inductance (La)
  - p51591, non-linearity factor of armature inductance (La\_fak)
  - p51592, armature commutation inductance (Lk)
  - p51594, filter inductance for 12-pulse operation (Ls)
  - p51595, filter inductance reduction factor (Ls\_fak)
  - p51596, filter resistance in 12-pulse operation (Rs)
  - p50155, P gain of the armature current controller (Kp)
  - p50156, integral time of armature current controller (Tn)
  - p50191 filter time of the current setpoint



**! WARNING**

**Electric shock during optimization run**

The current limits set are not active during the current controller optimization run. 75% of the rated armature current for the motor flows for approximately 0.7 s.  
If live components are touched then this can result in severe injury or death.

- Observe the general safety instructions.

**NOTICE**

**Lock motors**

Motors with a permanent field, a very high level of retentiveness, or a series field must be locked during this optimization run.

**Note**

The parameters determined are dependent on the motor temperature. The values set with the motor in the cold state can serve as a good default setting. For drives with a high dynamic performance, the optimization run p50051=25 should be repeated after operating the drive with a load (e.g. with the motor at the operating temperature).

p50051 = 26

**Optimization of the speed control**

(takes at least 6 s)

The dynamic performance of the speed control loop can be selected using p50236, whereby lower values represent a softer closed-loop control.

Before carrying out the speed controller optimization run, p50236 must be set and influences the setting of p50225, p50226, p50228 and p50540.

Where possible, the final mechanical load should be connected to the motor for the purpose of optimizing the speed controller, as the parameters set depend on the measured moment of inertia.

The following parameters are automatically set:

p50225, P gain of speed controller (Kp)

p50226, integral time of speed controller (Tn)

p50228, speed setpoint smoothing time constant

p50540, speed controller acceleration time

Remark:

The speed controller optimization run only takes into account the filtering, set using p50200, of the actual speed controller value and – if p50083 = 1 – the filtering, set using p50745, of the main actual value.

p50225 (gain) is limited to a value of 30.00. The speed controller optimization run always sets p50228 (speed setpoint filtering) to 0. If a Kp of 30.0 was determined by the optimization run, manual re-optimization is recommended (see Chapter "Optimizing the speed controller (Page 347)").



**WARNING**

**Unexpected movement of the motor during optimization run**

During the speed controller optimization run, the motor is accelerated at a maximum of 45% of its rated armature current. The motor can reach speeds of up to approximately 20% of the maximum speed.

The movements of the drive can result in death, severe injury or material damage.

- Observe the general safety instructions.

p50051 = 27

**Optimization of the EMF control (incl. field characteristic recording)**

(duration, approx. 1 min)

This optimization run must be executed if field-weakening operation has been selected (p50081 = 1), if closed-loop torque control (p50170 = 1) or torque limiting (p50169 = 1) has been selected, or if a variable field current setpoint has been entered.

This optimization run may also be started without a mechanical load. The following parameters are set automatically:

p50120 to p50139      Field characteristic (magnetization characteristic) of motor

p50275              P gain of EMF controller (Kp)


p50276              Integral time of EMF controller (Tn)

Remark:

In order to determine the magnetization characteristic, during this optimization run the field-current setpoint is reduced to a minimum value of 8% (starting from 100% of the motor's rated excitation current as specified in p50102). Setting p50103 to values < 50% of p50102 for the duration of this optimization run limits the value entered for the field-current setpoint to the minimum value specified in p50103. This may be necessary for uncompensated motors with an extremely high armature response.

The magnetization characteristic approaches 0 along a linear path (starting from the measuring point), with the minimum field-current setpoint.

To execute this optimization run, the minimum excitation current for the motor (p50103) must be set to a lower value than 50% of the motor's rated excitation current (p50102).

 <b>WARNING</b>
<b>Unexpected movement of the motor during optimization run</b>
During this optimization run, the drive accelerates to approx. 80% of the rated motor speed. The maximum armature voltage is 80% of the rated armature voltage of the motor (p50101).
The movements of the drive can result in death, severe injury or material damage.
<ul style="list-style-type: none"><li>• Observe the general safety instructions.</li></ul>

p50051 = 28     **Recording of the friction characteristic**  
(duration, approx. 1 min)

The following parameters are set automatically:


p50520 to     Friction characteristic  
p50530

Remark 1:

The friction characteristic is only active in operation if it is manually activated with p50223 = 1!

Remark 2:

In order to execute this optimization run, the speed controller must not be parameterized as a pure P controller or as a controller with droop.

 <b>WARNING</b>
<b>Unexpected movement of the motor during optimization run</b>
During this optimization run, the drive accelerates up to its maximum speed.
The movements of the drive can result in death, severe injury or material damage.
<ul style="list-style-type: none"><li>• Observe the general safety instructions.</li></ul>

p50051 = 29 **Optimization of the speed control for drives with a mechanical system capable of oscillation**

(duration up to 10 min)

The following parameters are set automatically:

p50225	P gain of the speed controller (Kp)
p50226	Integral time of the speed controller (Tn)
p50228	Speed setpoint, smoothing time constant
p50540	Speed controller acceleration time

The frequency response of the controlled system for frequencies between 1 and 100 Hz is recorded during this optimization run.

For this purpose, the drive is first accelerated to a basic speed (p50565, factory setting = 20%). A sinusoidal speed setpoint with a low amplitude (p50566, factory setting = 1%) is then switched in. The frequency of this additional setpoint is changed in 1 Hz increments from 1 to 100 Hz. For each frequency, an average is generated over a specific time (p50567, factory setting = 1 s).

The value set at p50567 essentially defines the duration of this optimization run. For a setting of 1 s it takes about 3 to 4 min.

The measured frequency response of the controlled system forms the basis for determining its optimal speed controller setting.

 **WARNING**

**Uncontrolled motor movement**

For motors with a suspended or drawing load, uncontrolled movement can occur during the optimization run which can lead to death, serious injury or property damage.

- The optimization run must not be executed if the motor is connected to a mechanical load that is able to move it while it is in a torque-free state (e.g. a suspended or drawing load).

**Notes regarding optimization runs**

For drives with limited travel distance, the optimization run for field weakening (p50051 = 27) should be interrupted by entering the SHUTDOWN command at the earliest after the 1st field weakening measuring point has been plotted or the friction characteristic has been plotted (p50051 = 28) and at the earliest after determining the measuring point at 10% of the maximum speed - without fault message F60052 being initiated. Once the optimization run in question (p50051 = 27 or p50051 = 28) has been restarted, it will resume at a more advanced point, meaning that it can be completed in several stages even in cases where the travel distance is limited.



In the following cases, each optimization run is completely executed again after a restart:

- If a fault occurs during the optimization run
- If the electronic supply is switched off prior to restarting the optimization run in question
- If a different drive data set from the previous one is selected
- If a different optimization run is started in the meantime

The parameters for the drive data set that has been selected in each case are optimized.

The drive data set selection must remain the same throughout the optimization runs to avoid a fault being output.

## 8.9 Manual optimization

Manual optimization is best performed using the STARTER commissioning tool.

STARTER provides the following functions for this purpose:

- Function generator
- Trace

### 8.9.1 Optimization of closed-loop armature current control

#### Determining the armature circuit parameters (3 options)

**1. Determining the armature-circuit parameters according to the motor list**

Take the armature circuit resistance (p50110) and armature circuit inductance (p50111) from the motor manufacturers data.

Disadvantage: The data is very imprecise and/or the actual values deviate significantly.

Feeder cable resistances are not taken in the armature-circuit resistance. Additional smoothing reactors and feeder cable inductances are not taken into account in the armature-circuit inductance.

**2. Roughly estimating the armature-circuit parameters from the rated data for the motor and line supply**

$$p50110 = \frac{p50101}{10 \times p50100}$$

p50110 = Armature-circuit resistance [Ω]  
p50101 = Rated armature voltage for motor [V]  
p50100 = Rated armature current for motor [A]

The basis of this formula is that for the rated armature current, there is a drop of 10% of the rated armature voltage across the armature circuit resistance Ra.

$$p50111 = \frac{1.4 \times r50071}{p50100}$$

p50111 = Armature-circuit inductance [mH]  
r50071 = Rated armature supply voltage for units [V]  
p50100 = Rated armature current for motor [A]

This formula is based on the empirical value: The transition point from discontinuous to continuous current is approximately 30% of the rated motor armature current.

**3. Determining the armature circuit parameters by measuring the current/voltage**

• **Establish closed-loop current controlled operation**

- p50084 = 2: Select closed-loop current controlled operation
- p50153 = 0: Precontrol disabled
- p50082 = 0: Switch-off the field to prevent motor from moving and, where necessary, lock the rotor of the DC motor if retentiveness is too high.
- p50354 = 5%: Threshold for overspeed protection
- Enter 0 for the main setpoint.
- If "OPERATION ENABLE" has been applied and the "SHUTDOWN" command is entered, an armature current of approximately 0% will now flow.

- **Calculate the armature circuit resistance p50110 from the armature current and armature voltage**
  - Gradually increase the main setpoint (shown at r52011) until the actual armature current value (r50019 as a % of the unit's rated armature current) reaches approximately 70% of the motor's rated armature current.
  - Calculate the armature circuit resistance:  
 $R_a[\Omega] = r50038 / (r50019 \times p50100) = \text{armature voltage [V]} / \text{armature current [A]}$
- **Calculate the armature circuit inductance p50111 from the armature current at the transition point from discontinuous to continuous current**
  - Make an oscilloscope trace of the armature current.
  - Starting from 0, gradually increase the main setpoint (shown at r52011) until the armature current reaches the transition point from discontinuous to continuous current.
  - Calculate the armature circuit inductance using the following formula:  
 $L_a[\text{mH}] = 0.4 \times r50015 / (r50019 \times p50100)$   
= armature voltage [V] / armature current at the transition point from discontinuous to continuous current [A]

### Overall optimization of the armature circuit

- **Checking the precontrol characteristic**

**Procedure**

  - Set the function generator to a triangular waveform (0% to 100%), period = 10000 ms
  - Supply point: p50601[4] (see function diagram 6855)
  - Set p50082 = 0 (field off)
  - p50153 = 3 (influence of EMF disabled)
  - Record signals r52121 (output, precontrol) and r52110 (output, armature current controller)
  - The parameters of the precontrol ( $R_a$  [p50110],  $L_a$  [p50111] and  $\lambda_a$  [p51591]) are correctly set if the armature current controller output has the lowest possible value (e.g. less than 5%) over the complete setpoint range.
- **Checking the step response**

**Procedure**

  - Set the function generator to a squarewave, with  
Step height = e.g. 5%  
Offset = various values, e.g. 80%  
Period = 1000 ms  
Pulse width = 500 ms
  - Supply point: p50601[4] (see function diagram 6855)
  - Set p50082 = 0 (field off)
  - Record signals r52118 (I<sub>a</sub>-set) and r52117 (I<sub>a</sub>-act)
  - Change controller parameters K<sub>p</sub> (p50155) and T<sub>n</sub> (p50156) until the step response provides a satisfactory result.
  - In order to eliminate the influence of non-linearity of the armature circuit inductance and gating unit, the armature current controller adaptation can be activated (see function chart 6855).

## 8.9.2 Optimization of closed-loop field-current control

### Determining the field circuit resistance (2 options)

1. **Roughly estimate the field circuit resistance from the rated motor data**  
p50112 = rated excitation voltage/rated excitation current of motor
2. **Determine the field-circuit resistance by comparing the field current setpoint and actual value**
  - p50112 = 0: Results in a 180° field precontrol output and, therefore, field current actual value = 0
  - p50082 = 3: So that the field remains permanently switched on, even when the line contactor drops out
  - p50254 = 0 and p50264 = 0: Only field precontrol active; field-current controller disabled
  - Set p50102 to rated excitation current.
  - Increase p50112 until the actual field current (r50035 converted to amperes using r50073[1]) equals the required setpoint (p50102).
  - Set p50082 back to the system's operating value.

### Overall optimization of closed-loop field-current control

- **Checking the precontrol characteristic**  
**Procedure**
  - Set the function generator to a triangular waveform (0% to 100%), period = 10000 ms
  - Supply point: p50611[0] (see function diagram 6905)
  - Set p50082 = 3 (field continuously on)
  - Record the signals r52271 (output, precontrol) and r52260 (output, field current controller)
  - The parameters of the precontrol (Rf [p50112], Lf [p50116] and λf [p51597]) have been correctly set if the output of the field controller has the lowest possible value (e.g. less than 5%) over the complete setpoint range.
- **Checking the step response**  
**Procedure**
  - Set the function generator to a squarewave, with  
step height = e.g. 5%  
offset = various values, e.g. 80%  
period = 1000 ms  
pulse width = 500 ms
  - Supply point: p50611[0] (see function diagram 6905)
  - Set p50082 = 3 (field continuously on)
  - Record signals r52268 (If-set) and r52265 (If-act)
  - Change controller parameters Kp (p50255) and Tn (p50256) until the step response provides a satisfactory result.
  - The field current controller adaptation can be activated (see function chart 6908) to eliminate the influence of non-linearity of the field inductance and gating unit.

### 8.9.3 Optimizing the speed controller

#### Basic information

The objective of the closed-loop control is to compensate the system deviation as a result of changes to the setpoint and disturbances.

The evaluation is performed in the time domain:

- The control loop fulfills the requirement for steady-state accuracy, if the system deviation as a result of a setpoint step (reference input) converges towards zero. The rise time  $t_{an}$  and settling time  $t_{aus}$  specify the speed.
- The overshoot defines the damping. For a step change of the setpoint or disturbance variable, the controlled variable must not excessively overshoot the steady-state final value.

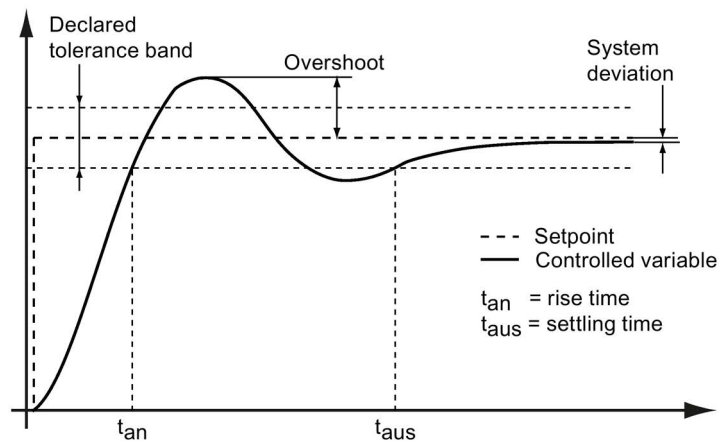


Figure 8-44 Setpoint step to evaluate a controller

## Controller optimization

### Procedure

- Set the function generator to a triangular waveform with
  - Step height = 5%
  - Offset = 10%
  - Period = 1000 ms
  - Pulse width = 500 ms
- Supply point: p50625[C] (see function diagram 6810)
- Record signals r52174 (n-set) and r52167 (n-act)

### Assessment

If the step response of the speed controller is recorded after performing the optimization run for the speed controller, then the significant increase of the setpoint step can be clearly seen – which is characteristic for optimization according to the symmetrical optimum.

A controller adjusted according to the symmetrical optimum has a significant overshoot, however, a favorable response to disturbances.

This optimization has especially established itself in drive technology as many systems require a good disturbance variable compensation. This is the reason why the optimization run for the speed controller sets the controller parameters according to the symmetrical optimum.

An improved response to setpoint changes with the response to disturbances remaining the same can be achieved using the reference model. See Chapter "Function descriptions", Section "Speed controller".

## Operation

### 9.1 Basic information

#### 9.1.1 Parameter

##### Parameter types

The following adjustable and display parameters are available:

- Adjustable parameters (can be written and read)  
These parameters have a direct effect on how a function responds.  
Example: Ramping time of a ramp-function generator
- Display parameters (can only be read)  
These parameters are used to display internal variables.  
Example: Actual motor current

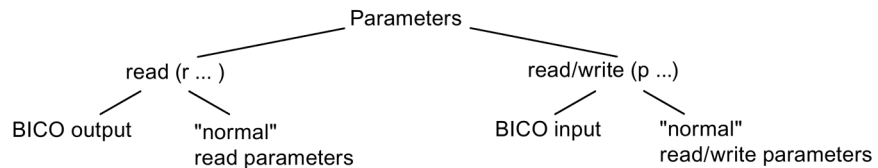


Figure 9-1 Parameter types

All these drive parameters can be read via PROFIBUS and changed by means of p parameters using the mechanisms defined in the PROFIdrive profile.

### Parameter categories

The parameters of the individual drive objects are categorized into data sets as follows:

- Data set independent parameters  
These parameters exist only once per drive object.
- Data set dependent parameters  
These parameters can exist several times for each drive object and can be addressed via the parameter index for reading and writing. A distinction is made between various types of data set:
  - CDS: Command Data Set  
By parameterizing several command data sets and switching between them, the drive can be operated with different pre-configured signal sources.
  - DDS: Drive Data Set  
The drive data set contains the parameters for switching between different automatic speed control configurations.

The CDS and DDS can be switched over during normal operation. Additional types of data set also exist, but these can only be activated indirectly by means of a DDS changeover.

- EDS – Encoder Data Set

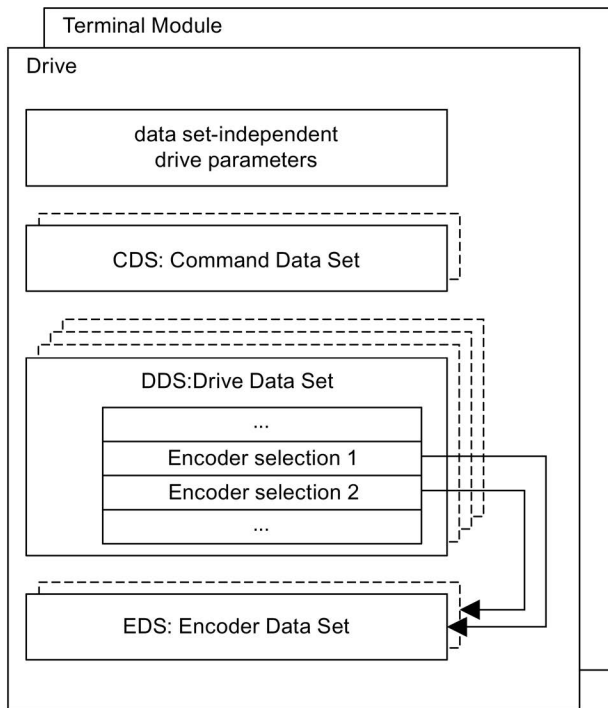


Figure 9-2 Parameter categories



## Saving parameters in a non-volatile memory

The modified parameter values are stored in the volatile RAM. When the drive system is switched off, this data is lost.

The data must be saved in the non-volatile memory, as described below, so that the changes are available the next time the drive is switched on.

There are various methods:

- Save parameters using the BOP20:  
press the P button on the BOP20 until the display flashes.  
Flashing stops once the parameters have been saved.
- Saving parameters with STARTER  
See "Copy RAM to ROM" function
- Saving parameters  
p0977 = 1; automatically reset to 0

---

### Note

The power supply to the Control Unit may first be switched off only after saving has finished (i.e. after saving has started, wait until the parameter has the value 0 again).

---

## Resetting parameters

The (loaded to the RAM) parameter values can be reset to the factory setting as follows:

p0009 = 30          Parameter reset  
p0976 = 1          Start restoring all parameters to their factory settings

After this has been done, p0976 is automatically set to 0 and p0009 is set to 1.

The parameter values are reset in the volatile memory (RAM). If the reset parameter values are also to be transferred into the ROM, then "Save parameters in a non-volatile memory" must be executed.

## Deleting all user data

User data includes:

- Parameter values
- Additional parameter data sets (see p0802, p0803, p0804)
- The DCC block library
- DCC charts

This data is saved in the non-volatile memory (ROM). All user data is deleted from the ROM as follows:

- p0009 = 30      Parameter reset
- p0976 = 200     Start to delete all user data

The operation may take several minutes. The device automatically powers up during this time. As a result, the device in STARTER goes offline. Re-connect with the drive. After this has been done, p0976 is automatically set to 0 and p0009 is set to 0.

---

**Note**

Data on the memory card is not deleted by setting p0976 = 200. In spite of this, when deleting all user data, it is not permissible that a memory card is inserted. An inserted memory card would mean that for an automatic ramp-up after p0976 = 200, as usual, the data would be read from the memory card (see also Chapter "Memory card functions"). The device would power-up with the parameter assignment from the memory card.

---

**Access level**

The parameters are subdivided into access levels. The SINAMICS DCM List Manual specifies the access level at which the parameter can be displayed and modified. The required access levels 0 to 4 can be set in p0003.

Table 9- 1    Access levels

Access level	Comment
0 User-defined	Parameter from the user-defined list (p0013)
1 Standard	Parameters for the simplest possible operations (e.g. p50303 = ramp-function generator ramp-up time)
2 Extended	Parameters for handling the basic functions of the device
3 Expert	Expert knowledge is already required for these parameters (e.g. knowledge of assigning BICO parameters).
4 Service	Please contact your local Siemens office for the password for parameters with access level 4 (Service). It must be entered into p3950.

## 9.1.2 Data sets

### CDS: Command data set

The BICO parameters (binector and connector inputs) are grouped together in a command data set. These parameters are used to interconnect the signal sources of a drive.

By parameterizing several command data sets and switching between them, the drive can be operated with different pre-configured signal sources.

A command data set contains the following (examples):

- Binector inputs for control commands (digital signals)
  - ON/OFF, enable signals (p0844, etc.)
  - Jog (p1055, etc.)
- Connector inputs for setpoints (analog signals)
  - Speed setpoint (p50433)
  - Torque setpoints (p50500, p50501)

A drive object can manage two command data sets.

The following parameters are available for selecting command data sets and for displaying the currently selected command data set:

- Binector input p0810 BI: Command data set (CDS) selection
- r0836: Displays selected data set

#### Example: Switching between command data set 0 and 1

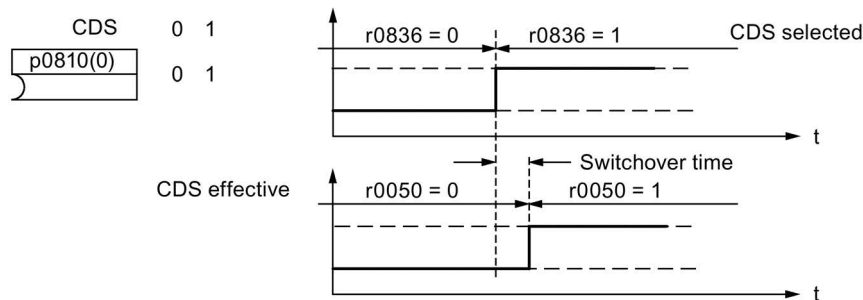


Figure 9-3 Switching the command data set (example)

### DDS: Drive data set

A drive data set contains various adjustable parameters that are relevant for open-loop and closed-loop drive control:

- Numbers of the assigned encoder data sets:
  - p0187 and p0188: Up to 2 assigned encoder data sets (EDS)
- Various control parameters, e.g.:
  - Speed limits min./max. (p50512, p50513)
  - Characteristic data of ramp-function generator (p50295 ff)
  - Characteristic data of controller (p50540 ff)
  - ...

The parameters that are grouped together in the drive data set are identified in the SINAMICS DCM List Manual by "DDS" and are provided with index [0...n].

It is possible to parameterize several drive data sets. You can switch easily between different drive configurations (control type, motor, encoder) by selecting the corresponding drive data set.

A drive object can manage 4 drive data sets.

Binector inputs p0820 and p0821 are used to select a drive data set. They represent the number of the drive data set (0 to 3) in binary format (where p0821 is the most significant bit).

- p0820 BI: Drive data set selection DDS, bit 0
- p0821 BI: Drive data set selection DDS, bit 1

### EDS: Encoder data set

An encoder data set contains various adjustable parameters for the connected encoder that are relevant for configuring the drive.

- Adjustable parameters, e.g.:
  - Encoder interface component number (p0141)
  - Encoder component number (p0142)
  - Encoder type selection (p0400)

The parameters that are grouped together in the encoder data set are identified in the parameter list by "EDS" and are provided with index [0...n].

A separate encoder data set is required for each encoder controlled by the Control Unit. Up to 2 encoder data sets are assigned to a drive data set via parameters p0187 and p0188.

It is only possible to switch an encoder data set by means of a DDS switchover. When a drive data set is selected, the assigned encoder data sets are selected automatically.

## Example of data set assignment

Table 9- 2 Example, data set assignment

DDS	Encoder 1 (p0187)	Encoder 2 (p0188)
DDS 0	EDS 0	EDS 1
DDS 1	EDS 0	EDS 0
DDS 2	EDS 0	EDS 0
DDS 3	EDS 1	-

### 9.1.2.1 Function diagrams and parameters

#### Function diagrams (see the SINAMICS DCM List Manual)

- 8560 Command data sets (CDS)
- 8565 Drive data sets (DDS)
- 8570 Encoder data sets (EDS)

#### Overview of important parameters (refer to the SINAMICS DCM List Manual)

##### Adjustable parameters

- p0140 Encoder data sets (EDS) number
- p0170 Command data sets (CDS) number
- p0180 Drive data sets (DDS) number
- p0187 Encoder 1 encoder data set number
- p0188 Encoder 2 encoder data set number
- p0809 Copy command data set (CDS)
- p0810 BI: Command data set CDS bit 0
- p0819[0...2] Copy drive data set DDS
- p0820 BI: Drive data set selection DDS, bit 0
- p0821 BI: Drive data set selection DDS, bit 1

### 9.1.2.2 Using data sets

#### Copying a command data set

Set parameter p0809 as follows:

1. p0809[0] = Number of the command data set to be copied (source)
2. p0809[1] = Number of the command data to which the data is to be copied (target)
3. p0809[2] = 1

Starts copying.

Copying is finished when p0809[2] = 0.

#### Copying a drive data set

Set parameter p0819 as follows:

1. p0819[0] = Number of the drive data set to be copied (source)
2. p0819[1] = Number of the drive data set to which the data is to be copied (target)
3. p0819[2] = 1

Starts copying.

Copying is finished when p0819[2] = 0.

#### Uncommissioned data sets

Drive commissioning can be completed even if uncommissioned data sets (EDS, DDS) are available.

Uncommissioned data sets are marked as "uncommissioned".

The attributes are displayed in STARTER or in the expert list or OPs.

Activating these data sets is not permitted and any attempt to do so will be rejected with an error.

Assigning these data sets to a drive data set (DDS) is only possible by means of a commissioning step (p0009 ≠ 0, p0010 ≠ 0).

---

#### Note

If there is no DDS dataset with the attribute "commissioned", the drive remains in a controller inhibit state.

---

### 9.1.3 Drive objects

A drive object is a self-contained software function with its own parameters and potentially its own faults and alarms. Drive objects can be provided as standard (e.g. automatic speed control), or can be added individually or in groups times (e.g. TM31).

Properties of a drive object:

- Separate parameter space
- Separate window in STARTER
- Separate fault/alarm system
- Separate PROFIdrive telegram for process data

#### Drive objects in the SINAMICS DC MASTER

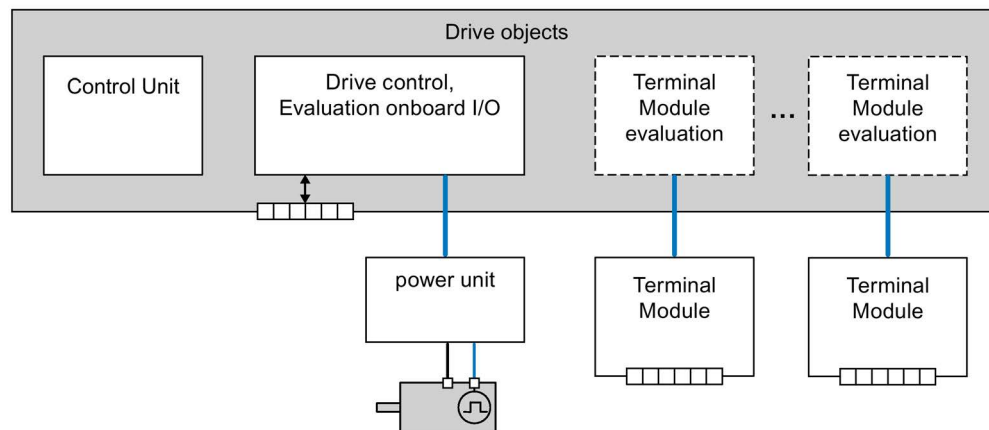


Figure 9-4 Drive objects

- Automatic speed control (DC\_CTRL)  
Automatic speed control handles closed-loop control of the motor. The I/Os on the CUD are evaluated within this drive object.
- Control Unit (CU\_DC)  
This drive object contains a variety of different system parameters.
- Evaluation of optional Terminal Module  
An independent drive object handles evaluation of each optional Terminal Module.

### Configuring drive objects

If, after first commissioning, additional drive objects are configured or deleted, they must be added or deleted in STARTER or activated through parameters (see Chapter "Commissioning optional additional modules (Page 324)").

---

#### Note

Each installed drive object is allocated a number between 0 and 63 during first commissioning so that they can be identified internally.

---

### Overview of important parameters (refer to the SINAMICS DCM List Manual)

Adjustable parameters

- p0101 Drive object numbers
- p0107 Drive object type
- p0108 Drive object configuration

Display parameters

- r0102 Number of drive objects

### Standard drive objects

- Automatic speed control
- Control Unit



## 9.1.4 Memory card functions

This chapter describes the basic functions of the memory card in the SINAMICS DCM system.

### Basic information

The CUD (Control Unit for the SINAMICS DCM) manages three memory areas:

- A volatile memory, the **RAM**, also called work memory
- A non-volatile memory, the **ROM**, also called **flash memory**
- An optionally available portable memory card

---

#### Note

Memory cards can be ordered as an option (S01/S02) or as accessories, see Chapter "Ordering information for options and accessories (Page 30)".

The functionality in SINAMICS DCM is not guaranteed for memory cards from other manufacturers!

SINAMICS DCM does not evaluate the position of the write protection slide switch.

Before removing the memory card from the slot, it is recommended that the "Safely remove memory card" function is selected using p9400 = 2. Wait for p9400 = 3 ("Card can be safely removed"). P9400 is set = 0 after the memory card has been removed ("No memory card inserted").

---

The work memory receives all project information and application programs while the device is being operated. To save the current data from the work memory, you must copy it to non-volatile memory **before** shutting down, see Chapter "Commissioning", "Copy RAM to ROM" function.

An optional memory card is used:

- For saving various parameter data sets
- For transferring the parameter data sets to additional SINAMICS DCM drives
- For series commissioning

The memory card is needed:

- For installing firmware updates
- For using an AOP30 in languages other than German, English and Chinese
- To use the function "SINAMICS Link" (see Chapter "Communication via SINAMICS Link")
- To load the DCC block library into the drive

---

**Note**

The memory card supplied from Siemens as option S01 or S02 includes, when supplied, a dump of the internal device firmware. These files are required to update the firmware as well as to use the "SINAMICS Link" function. These files can be deleted for other applications.

Before you use the card for the functions described in this chapter, copy these files to a local folder of your PG/PC and delete the files on the memory card.

---

## Parameter data sets

Parameter data sets represent all of the parameters of a project – including the DCC charts and the project itself. Parameter data sets differ on the basis of drive configuration (power unit, motor, encoder, etc. used) and application (e.g. function modules, type of control).

Different data volumes can be saved in the three memory areas:

- ROM: Four parameter data sets with the indices 0, 10, 11, and 12
- The parameter data set with the index 0 is active in the RAM
- Memory card: Depending on the free storage space, up to 101 parameter data sets (indices 0 to 100)

---

**Note**

The DCC library itself is not saved as a part of the parameter data set.

---

## Copying parameter data sets to the memory card

There are three options for copying parameter data sets to the memory card:

- **The electronics power supply is switched off**
  - Insert the memory card that does **not** contain a parameter data set with index 0 into the CUD.
  - Switch on the electronics power supply
  - The parameter data set with index 0 is loaded from the ROM into the RAM
  - Then the complete and updated parameter data set with the index 0 is automatically copied to the memory card **without a prompt**.
- **The electronics power supply is switched on**
  - Insert a memory card into the CUD
  - Execute command "RAM to ROM" (using p0977=1– or by pressing the "P" button on the BOP20 operator panel until the display starts to flash). The actual parameter data set is copied automatically, first to the ROM and then to the memory card with index 0. If the memory card already contains a parameter data set with the index 0, this will be overwritten without a prompt appearing.

- **The electronics power supply is switched on**
    - The save operation is initiated via parameter:
      - p0802 = 0 ... 100: Target on the memory card
      - p0803 = 0/10/11/12: Source in the device memory
      - p0804 = 2: Start data transfer
- 

**Note**

If when switching on, a memory card with a parameter data set with index 0 is inserted in the CUD, the parameter data set with index 0 in the non-volatile memory of the CUD is overwritten with the parameter data set with index 0 on the memory card.

---

**Note**

When a memory card is inserted, the RAM to ROM command (p0977 = 1) will copy the parameter data set with the index 0 from the ROM to the memory card. A parameter data set that might have been previously saved on the memory card is overwritten.

---

**Note**

While saving (BOP20 flashes, RDY LED flashes), the electronic power supply must NOT be switched off. Switching off while saving leads to the loss of the most recently performed and not yet saved device parameterization.

---

**Note**

When options are being used (DCC, SMC10, SMC30, TM15, TM31, TM150 etc.) and with certain device configurations, storage can take several minutes.

---


## Copying parameter data sets from the memory card to non-volatile memory

There are two ways of copying parameter data sets from the memory card to non-volatile memory:

- **The electronics power supply is switched off**
  - Insert a memory card containing a parameter data set with the index 0 into the CUD.
  - Switch on the system. The new parameter data is copied to the RAM, and then "RAM to ROM" is automatically executed. The parameter data set with the index 0 which was previously in the ROM will be overwritten.
  - The system will then boot with the new parameter data set.
- **The electronics power supply is switched on**
  - The save operation is initiated via parameter:
    - p0802 = 0 ... 100: Source on the memory card
    - p0803 = 0/10/11/12: Target in the device memory (ROM)
    - p0804 = 1: Start data transfer

**Note**

The parameter data set in the ROM is overwritten during system start-up. If a memory card with a parameter data set is inserted when the system is switched on, the parameter data set with the index 0 in the ROM will be overwritten by the new one with the index 0 on the memory card.

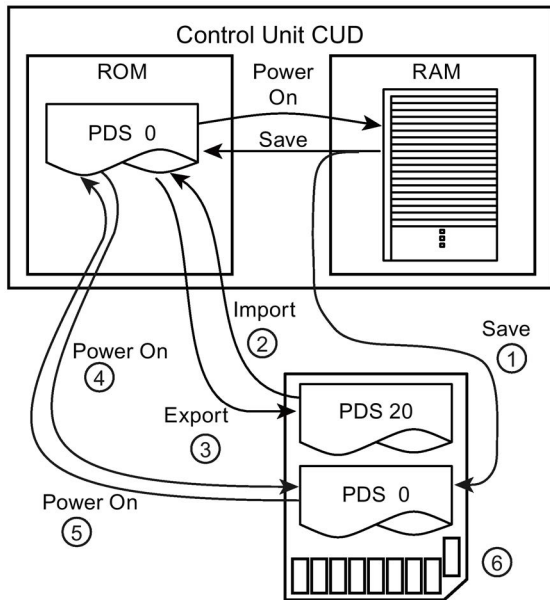

- ① Memory card available: PDS 0 is copied to the card in parallel
- ② p0802 = 20; p0803 = 0; p0804 = 1
- ③ p0802 = 20; p0803 = 0; p0804 = 2
- ④ For POWER ON, no PDS 0 on the card: PDS 0 is copied from the ROM to the memory card
- ⑤ At POWER ON, PDS 0 on the card: PDS 0 is copied to the ROM
- ⑥ Memory card

PDS = Parameter data set

Figure 9-5 Copying parameter data sets

**Using the memory card for series commissioning**

The memory card can also be used for series commissioning of several devices with the same parameter assignment.

Procedure:

1. Completely commission a "sample" drive. As soon as all of the parameters have been correctly set, carry out "RAM to ROM".
2. Switch-off the system and insert a memory card into the CUD. Switch on the system.

3. The parameter assignment is saved on the memory card. If DCC charts are activated in the system, then these as well as the DCC library are also saved on the memory card.
4. Remove the card.
5. Insert the card into a CUD that is switched-off and has still not been parameterized. Switch on the system (POWER ON).
6. When powering up, the parameter assignment is transferred into the CUD and copied into the ROM as well as into the RAM. If DCC charts and the DCC library were saved on the memory card, then these are also copied.
7. The card can be removed once the system has powered-up. The CUD that was still not parameterized now has the same parameter assignment as the original "sample" drive.

---

**Note**

The article number of the device from which the parameter data set originated is also saved in a parameter data set. If the parameter data set is loaded to a device with another article number (POWER ON with the memory card inserted), then the device signals an inconsistent topology (ramp-up stops with display "33" on the BOP, fault A1420 is output). This occurs, if e.g. a parameter set that was generated from a 30 A device is loaded into a 60 A device. In this state, the user can accept the parameter set by setting p9906 = 3. The system continues to power up.

The same procedure also applies if a parameter data set from a standard CUD is loaded into an Advanced-CUD - or vice versa. The power-up procedure stops with display "33" on the BOP; the parameter set is accepted using p9906 = 3 and the system continues to power up.

---

**Important parameters**

- p0977: Save all parameters (for more information, see the SINAMICS DCM List Manual).
- p0802: Data transfer of parameters [0,10,11,12], memory card as source or target
- p0803: Data transfer of parameters [0...100], non-volatile device memory as source or target
- p0804: Start of parameter data transfer and specification of transfer direction:
  - p0804 = 1: Transfer from the memory card to non-volatile device memory
  - p0804 = 2: Transfer from non-volatile device memory to memory card

### Safely removing a memory card

Removing the memory card must be requested using p9400.

Procedure:

p9400 = 2     Request to "safely remove" the memory card

p9400 = 3     Feedback: "You can safely remove the memory card"  
Remove the memory card

p9400 = 100   Feedback: "It is not possible to safely remove the memory card"  
SINAMICS DCM is accessing the memory card. Leave the memory card in the  
unit and try again later.

p9400 = 0     Message: No memory card inserted

---

#### Note

If the memory card is removed without a request being made, this can destroy the file system on the memory card.

---

### 9.1.5 BICO technology: Interconnecting signals

Every drive contains a large number of interconnectable input and output variables and internal control variables.

The drive unit can be adapted to a wide range of requirements using BICO technology (Binector Connector Technology).

Digital and analog signals, which can be interconnected as required by means of BICO parameters, are identified by the prefix BI, BO, CI, or CO in their parameter name.

These parameters are identified accordingly in the parameter list or in the function diagrams.

---

#### Note

The STARTER commissioning tool is recommended when using BICO technology.

---

 
 
### 9.1.5.1 Binectors, connectors

#### Binectors, BI: Binector input, BO: Binector output

A binector is a digital (binary) signal without a unit which can assume the value 0 or 1.

Binectors are subdivided into binector inputs (signal sink) and binector outputs (signal source).

 

Table 9- 3 Binectors

Abbreviation	Symbol	Name	Description
BI		Binector input (signal sink)	Can be interconnected to a binector output as source. The number of the binector output must be entered as a parameter value.
BO		Binector output (signal source)	Can be used as a source for a binector input.

#### Connectors, CI: Connector input, CO: Connector output

A connector is a digital signal, e.g. in 32-bit format. It can be used to emulate words (16 bits), double words (32 bits) or analog signals. Connectors are subdivided into connector inputs (signal sink) and connector outputs (signal source).

Table 9- 4 Connectors

Abbreviation	Symbol	Name	Description
CI		Connector input (signal sink)	Can be interconnected to a connector output as source. The number of the connector output must be entered as a parameter value.
CO		Connector output (signal source)	Can be used as a source for a connector input.

### 9.1.5.2 Interconnecting signals using BICO technology

To interconnect two signals, a BICO input parameter (signal sink) must be assigned to the desired BICO output parameter (signal source).

The following information is required to connect a binector/connector input to a binector/connector output:

- Binectors: Parameter number, bit number, and drive object ID
- Connectors with no index: Parameter number and drive object ID
- Connectors with index: Parameter number, index, and drive object ID
- Data type (signal source for connector output parameter)

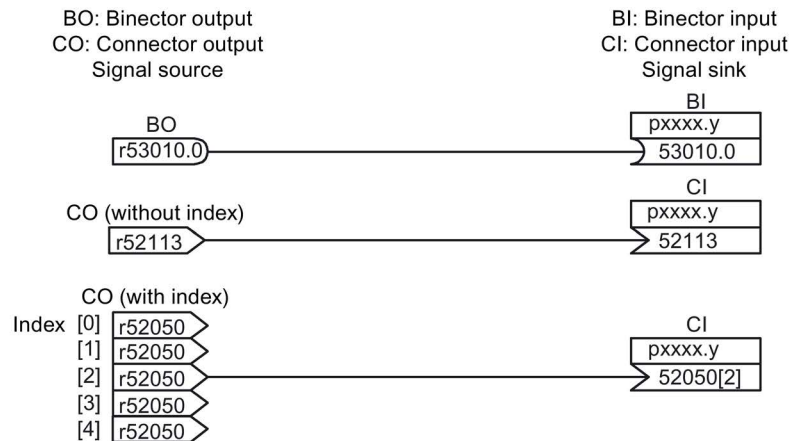


Figure 9-6 Interconnecting signals using BICO technology

**Note**

A connector input (CI) cannot be just interconnected with any connector output (CO, signal source). The same applies for binector input (BI) and binector output (BO). For each CI and BI parameter, the parameter list shows under "data type" the information on the data type of the parameter and the data type of the BICO parameter. For CO parameters and BO parameters, only the data type of the BICO parameter is shown.

*Notation:*

Data types BICO input: Data type parameter/Data type BICO parameter

Example: Unsigned32 / Integer16

Data types BICO output: Data type BICO parameter

Example: FloatingPoint32

The possible interconnections between the BICO input (signal sink) and BICO output (signal source) are listed in the table titled "Possible combinations for BICO interconnections", which can be found in the "Explanations on the parameter list" section of the SINAMICS DCM List Manual.

The BICO parameter interconnection can be implemented in different command data sets (CDS). The different interconnections in the command data sets are activated by switching data sets. Interconnections across drive objects are also possible.



### 9.1.5.3 Internal encoding of the binector/connector output parameters

Internal encoding is required for writing BICO input parameters via PROFIBUS, for example.

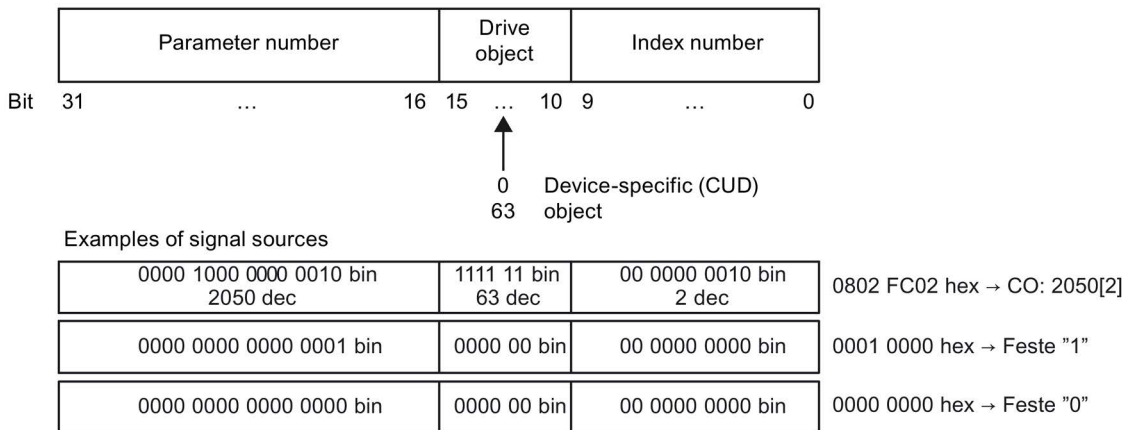


Figure 9-7 Internal encoding of the binector/connector output parameters

### 9.1.5.4 Example: Interconnecting digital signals

Suppose you want to operate a drive via terminals DI 0 and DI 3 on the CUD using jog 1 and jog 2.

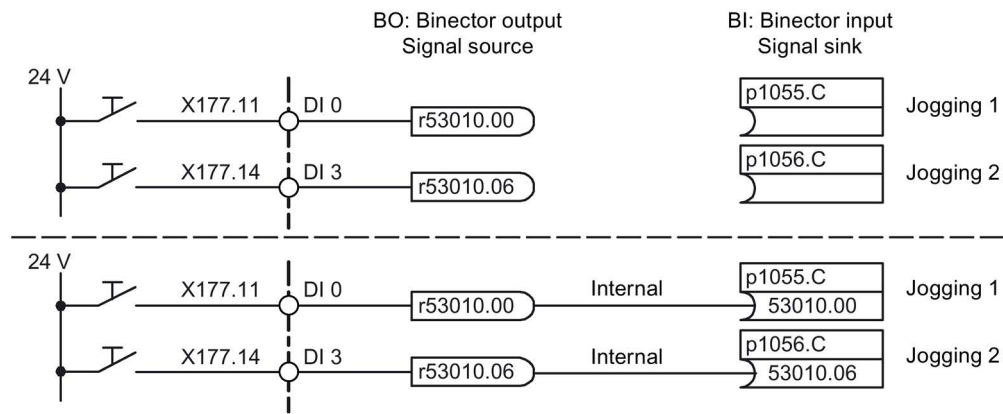


Figure 9-8 Interconnecting digital signals (example)

### 9.1.5.5 Information on BICO technology

#### Binector-connector converters and connector-binector converters

##### Binector-connector converter

- Several digital signals are converted to a 32-bit integer double word or to a 16-bit integer word.
- p2080[0...15] BI: PROFIdrive PZD send bit-serial

##### Connector-binector converter

- A 32-bit integer double word or a 16-bit integer word is converted to individual digital signals.
- p2099[0...1] CI: PROFIdrive PZD selection receive bit-by-bit

#### Fixed values for interconnection using BICO technology

The following connector outputs are available for interconnecting any fixed value settings:

- p2900[0...n] CO: Fixed value\_%\_1
- p2901[0...n] CO: Fixed value\_%\_2
- p2930[0...n] CO: Fixed value\_M\_1

Example:

These parameters can be used to interconnect the scaling factor for the main setpoint or to interconnect an additional torque.

## 9.2 Parameterizing using the BOP20 (Basic Operator Panel 20)

### 9.2.1 General information about the BOP20

The BOP20 can be used to power drives up and down during the commissioning phase as well as display and modify parameters. Faults can be diagnosed as well as acknowledged.

## Overview of displays and keys

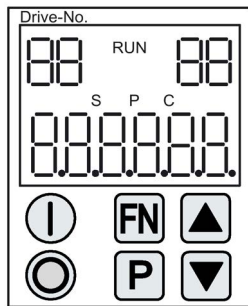


Figure 9-9 Overview of displays and keys

## Information on the displays

Table 9- 5 Displays

Display	Meaning
Top left 2 digits	The active drive object of the BOP is displayed here. The displays and key operations always refer to this drive object.
RUN	Is displayed, if at least one drive in the drive line-up is in the RUN state (in operation). RUN is also displayed via bit r0899.2 of the drive.
Top right 2 digits	The following is displayed in this field: <ul style="list-style-type: none"> <li>• More than 6 digits: Characters that are present but cannot be seen (e.g. "r2" → 2 characters to the right are invisible, "L1" → 1 character to the left is invisible)</li> <li>• Faults: Selects/displays other drives with faults</li> <li>• Designation of BICO inputs (bi, ci)</li> <li>• Designation of BICO outputs (bo, co)</li> <li>• Source object of a BICO interconnection with a drive object different than the active one</li> </ul>
S	Is displayed if at least one parameter was changed and the value has not yet been transferred to the non-volatile memory.
P	Is displayed if, for a parameter, the value only takes effect after the P key is pressed.
C	Is displayed if at least one parameter was changed and the calculation for consistent data management has still not been initiated.
Bottom 6 digits	Displays. parameters, indices, faults, and alarms, for example
The currently displayed characters flash at 1 Hz	Saving "RAM to ROM" is active (e.g. initiated by p0977 = 1 or by pressing the P button for a longer period of time (3 s))

**Note**

During a data save operation initiated by the user, the electronic power supply for the SINAMICS DC MASTER must not be interrupted.

An active saving process is indicated by the following actions:







- The RDY LED flashes (see the "Description of functions" chapter, "Description of the LEDs on the CUD" section)
- The BOP20 flashes

Interrupting the electronic power supply while saving can lead to the loss of the actual device parameter assignment. Also refer to Chapter "Operation", Section "Memory card functions".

For certain user actions (e.g. restore factory setting) a two-digit number is displayed on the BOP20. This number provides information about the drive state. The significance of these numbers is provided in Appendix B.

**Information on the keys**

Table 9- 6 Keys

Key	Name	Meaning
	ON	Power up the drives for which the "ON/OFF1" command should come from the BOP. Binector output r0019.0 is set using this key.
	OFF	Power down the drives for which the "ON/OFF1", "OFF2", or "OFF3" commands should come from the BOP. Binector outputs r0019.0, .1 and .2 are simultaneously reset when this key is pressed. After the key has been released, binector outputs r0019.1 and .2 are again set to a "1" signal. <b>Note:</b> Whether these keys are active can be defined by assigning appropriate BICO parameters (e.g. it is possible to use these keys to control all of the existing drives at the same time).
	Functions	The meaning of these keys depends on the current display. <b>Note:</b> The effectiveness of this key to acknowledge faults can be defined via BICO parameterization.
	Parameters	The meaning of these keys depends on the current display. If this key is pressed for 3 s, the "Copy RAM to ROM" function is executed. The "S" displayed on the BOP disappears.
	Increase	The keys depend on the current display and are used to either increase or decrease values.
	Decrease	

## BOP20 functions

Table 9- 7 Functions

Name	Description
Backlighting	The backlighting can be set using p0007 in such a way that it switches itself off automatically after the set time if no actions are carried out.
Switch active drive	From the BOP perspective, the active drive is defined using p0008 or using the keys "FN" and "Arrow up".
Units	The units are not displayed on the BOP.
Access level	The access level for the BOP is defined using p0003. The higher the access level, the more parameters can be selected using the BOP.
Parameter filter	Using the parameter filter in p0004, the available parameters can be filtered according to their particular function.
Select status display	Actual values and setpoints are displayed on the status display. The status display can be set via p0006.
User parameter list	Parameters can be selected for access using the user parameter list in p0013.
Hot swapping	<p>The BOP can be unplugged and plugged while energized.</p> <ul style="list-style-type: none"> <li>• The ON and OFF keys have a function. When unplugging, the drives are stopped. After plugging, the drives must be switched on again.</li> <li>• The ON and OFF keys have no function Unplugging and plugging has no effect on the drives.</li> </ul>
Key operation	<p>The following applies to the "P" and "FN" keys:</p> <ul style="list-style-type: none"> <li>• When used in a combination with another key, "P" or "FN" must be pressed before the other key.</li> </ul>

## Overview of important parameters (refer to the SINAMICS DCM List Manual)

### All drive objects

- p0005 BOP status display selection
- p0006 BOP status display mode
- p0013 BOP user-defined list
- p0971 Drive object, save parameters

### Drive object, Control Unit (CU\_DC)

- r0002 Control Unit status display
- p0003 BOP access level
- p0004 BOP display filter
- p0007 BOP backlighting
- p0008 BOP drive object selection
- p0009 Device commissioning, parameter filter
- p0011 BOP password input (p0013)
- p0012 BOP password confirmation (p0013)
- r0019 CO/BO: Control word, BOP
- p0977 Save all parameters

### Drive object (DC\_CTRL)

- p0010 Commissioning, parameter filter

## 9.2.2 Displays and using the BOP20

### Characteristics

- Status display
- Changing the active drive object
- Displaying/changing parameters
- Displaying/acknowledging faults and alarms
- Controlling the drive using the BOP20


### Status display

The operating display for each drive object can be set using p0005 and p0006. Using the operating display, you can change into the parameter display or to another drive object. The following functions are possible:

- Changing the active drive object
  - Press the "FN" and "Arrow up" keys -> the drive object number at the top left flashes
  - Select the required drive object using the arrow keys
  - Confirm with the "P" key
- Parameter display
  - Press the "P" key
  - The required parameter can be selected using the arrow keys
  - Press the "FN" key -> "r00000" is displayed
  - Press the "P" key -> returns to the status display

**Parameter display**

The parameters are selected in the BOP20 by their number. The parameter display is reached from the operating display by pressing the "P" key. Parameters can be searched for using the arrow keys. The parameter value is displayed by pressing the "P" key again. You can toggle between the drive objects by simultaneously pressing the "FN" key and an arrow key. You can toggle between "r00000" and the parameter that was last displayed by pressing the "FN" key in the parameter display.

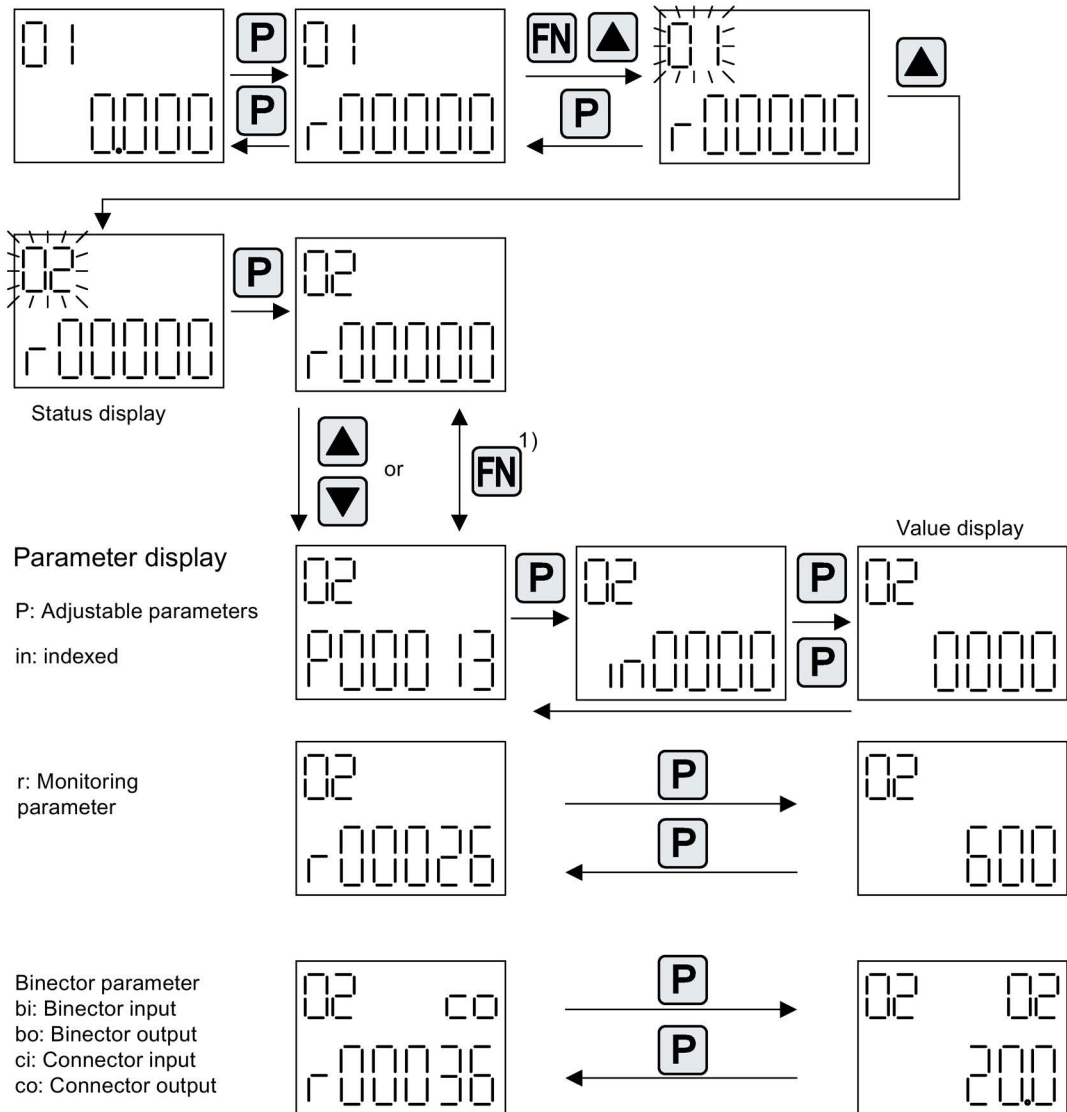

1) You can switch between "r00000" and the parameter that was last displayed by pressing the FN key in the parameter display.

Figure 9-10 Parameter display



### Value display

To switch from the parameter display to the value display, press the "P" key. In the value display, the values of the adjustable parameters can be increased and decreased using the arrow. The cursor can be selected using the "FN" key.

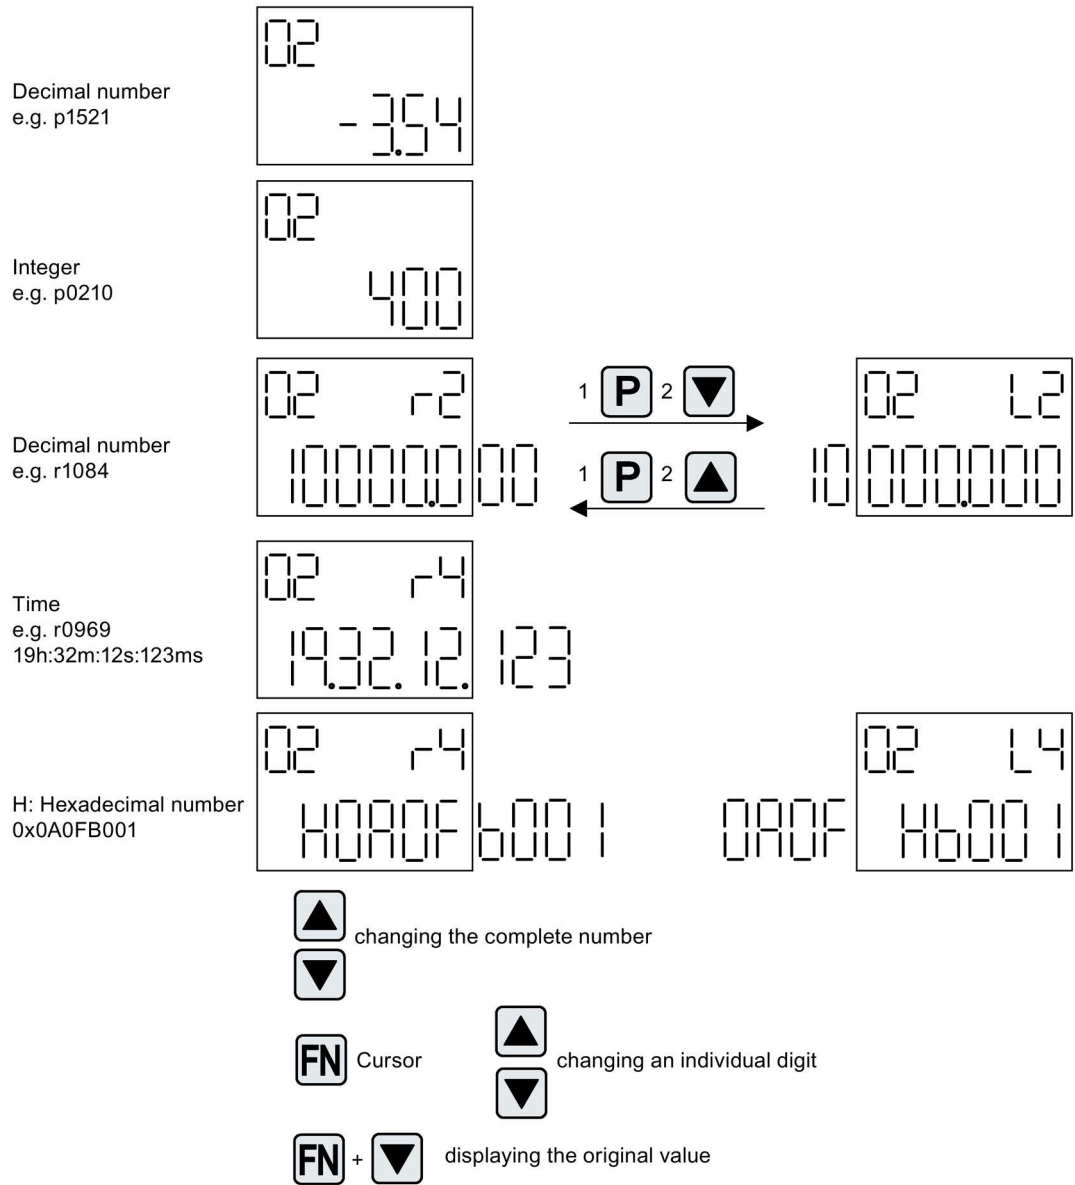


Figure 9-11 Value display

**Example: Changing a parameter**

Requirement: The appropriate access level is set  
(for this particular example, p0003 = 3).

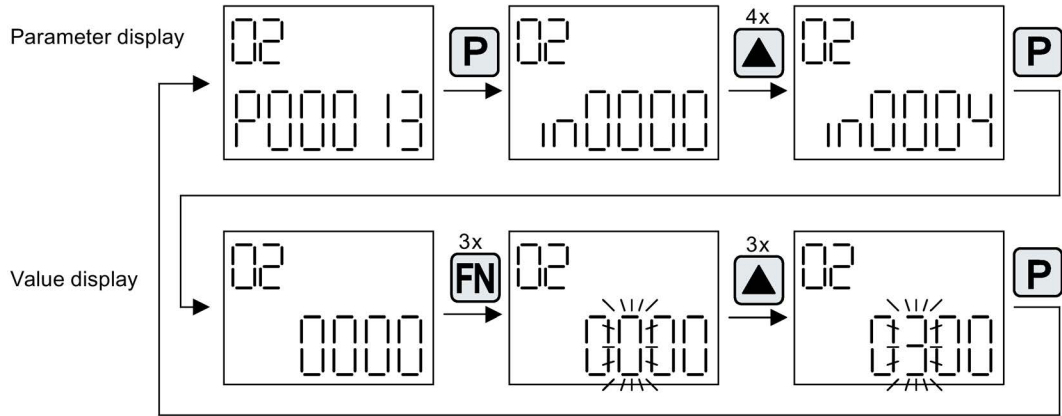


Figure 9-12 Example: Changing p0013[4] from 0 to 300

**Example: Changing binector and connector input parameters**

For the binector input p0840[0] (OFF1) of drive object 2 binector output r0019.0 of the Control Unit (drive object 1) is interconnected.

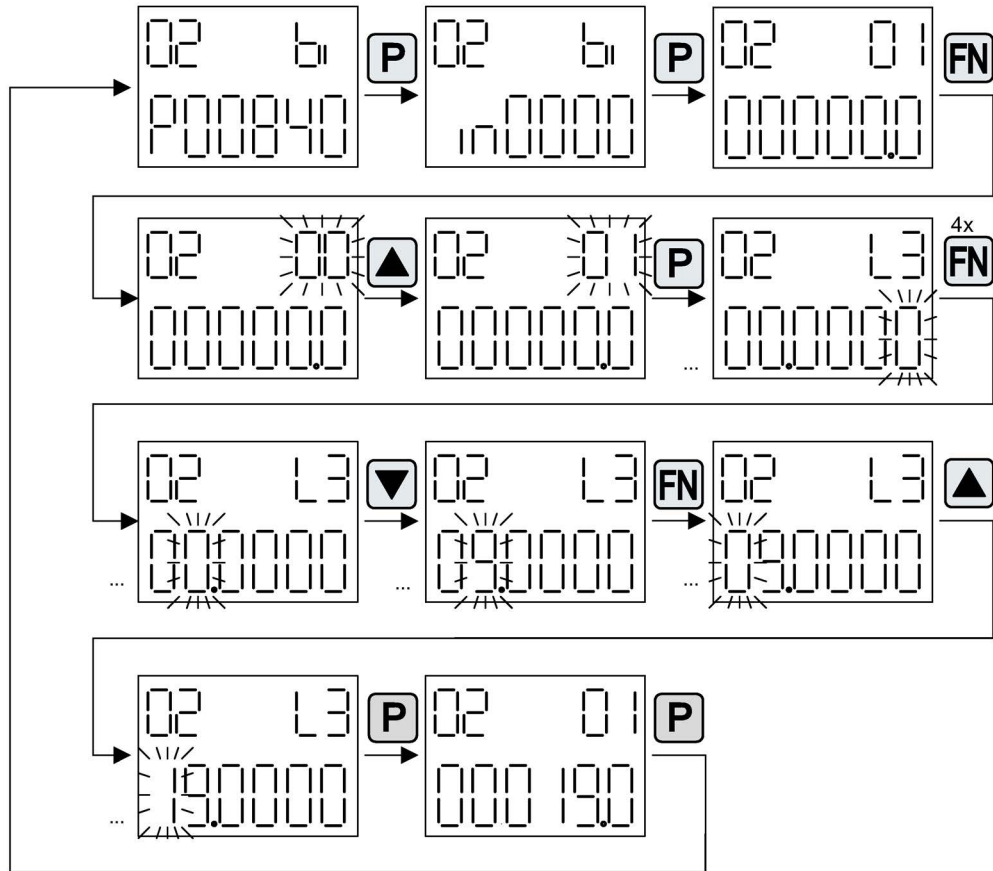


Figure 9-13 Example: Changing indexed binector parameters

### 9.2.3 Displaying faults and alarms

#### Displaying faults

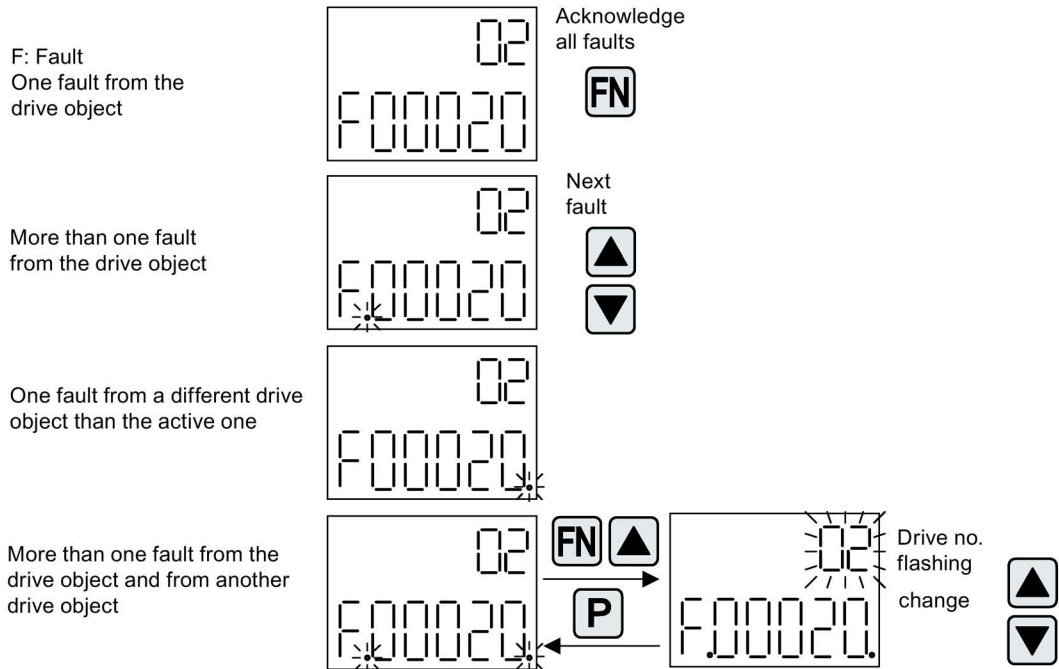


Figure 9-14 Faults

#### Displaying alarms

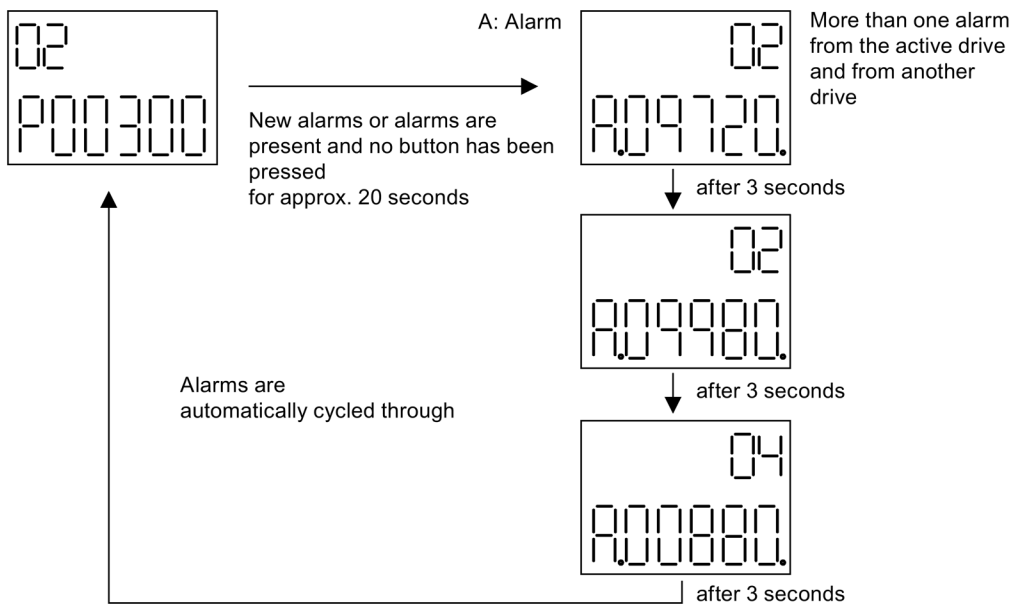


Figure 9-15 Alarms

## 9.2.4 Controlling the drive using the BOP20

When commissioning the drive, it can be controlled via the BOP20. A control word is available on the Control Unit drive object (r0019) for this purpose, which can be interconnected with the appropriate binector inputs of e.g. the drive.

The interconnections do not function if a standard PROFIdrive telegram was selected as its interconnection cannot be disconnected.

Table 9- 8 BOP20 control word

Bit (r0019)	Name	Example, interconnection parameters
0	ON / OFF (OFF1)	p0840
1	No coast down/coast down (OFF2)	p0844
2	No fast stop/fast stop (OFF3)	p0848
7	Acknowledge fault (0 → 1)	p2102
13	Motorized potentiometer, raise	p1035
14	Motorized potentiometer, lower	p1036

### Note

For simple commissioning, only bit 0 should be interconnected. When interconnecting bits 0 ... 2, then the system is powered-down according to the following priority: OFF2, OFF3, OFF1.

### 9.3 Controlling via the AOP30 operator panel

**Note**

The OFF switch on the AOP30 operator panel does not have an EMERGENCY OFF function.

The OFF switch on the AOP30 operator panel does not have an STO function regarding functional safety.

**Note**

To operate the AOP30, p2030 = 3 must be set.

An operator panel is located in the cabinet door of the cabinet unit for operating, monitoring, and commissioning tasks. It has the following features:

- Graphical, backlit LCD for plain-text display and a "bar display" of process variables
- LEDs for displaying the operating states
- Help function describing the causes of and remedies for faults and alarms
- Keypad for controlling a drive under normal operating conditions
- LOCAL/REMOTE switchover for selecting the control terminal (master control assigned to operator panel or customer terminal block/PROFIBUS)
- Numeric keypad for entering setpoints or parameter values
- Function keys for prompted navigation through the menus
- Two-stage safety concept to protect against accidental or unauthorized changes to settings
- IP54 degree of protection (when installed)

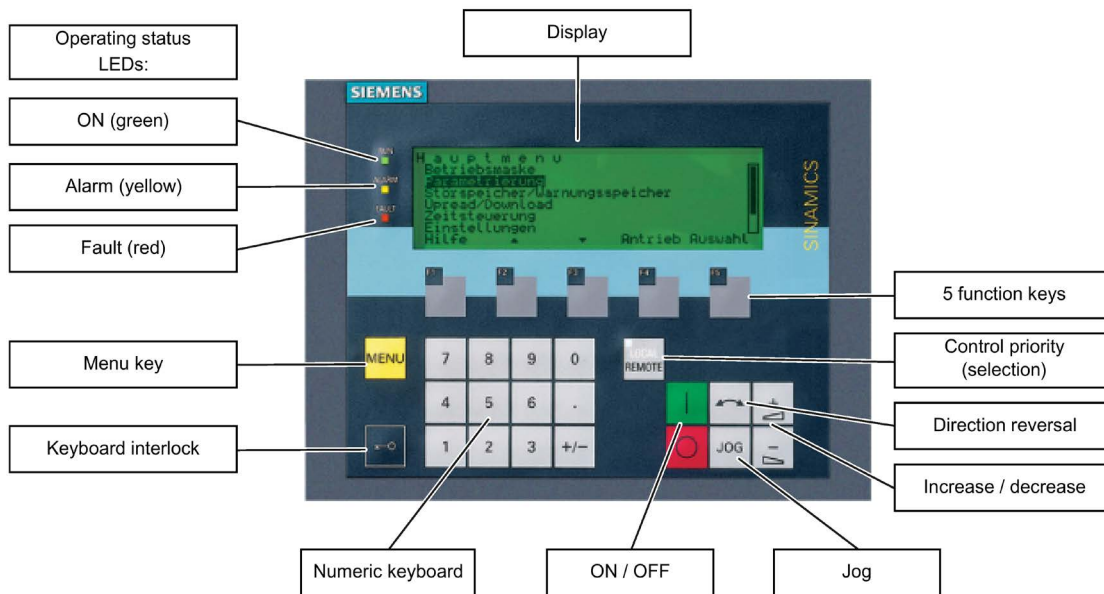


Figure 9-16 Components of the cabinet unit operator panel (AOP30)

### 9.3.1 Overview and menu structure


#### Description

The operator panel can be used for:

- Assigning parameters (commissioning)
- Monitoring status variables
- Controlling the drive
- Diagnosing faults and alarms

All the functions can be accessed via a menu.

Your starting point is the main menu, which you can always call up using the yellow MENU key:

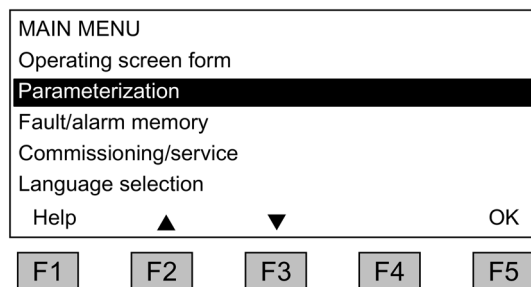


Dialog screen for the main menu:

This can be accessed with the "MENU" key.

Press "F2" or "F3" to navigate through the menu options in the main menu.

Menu structure of the operator panel

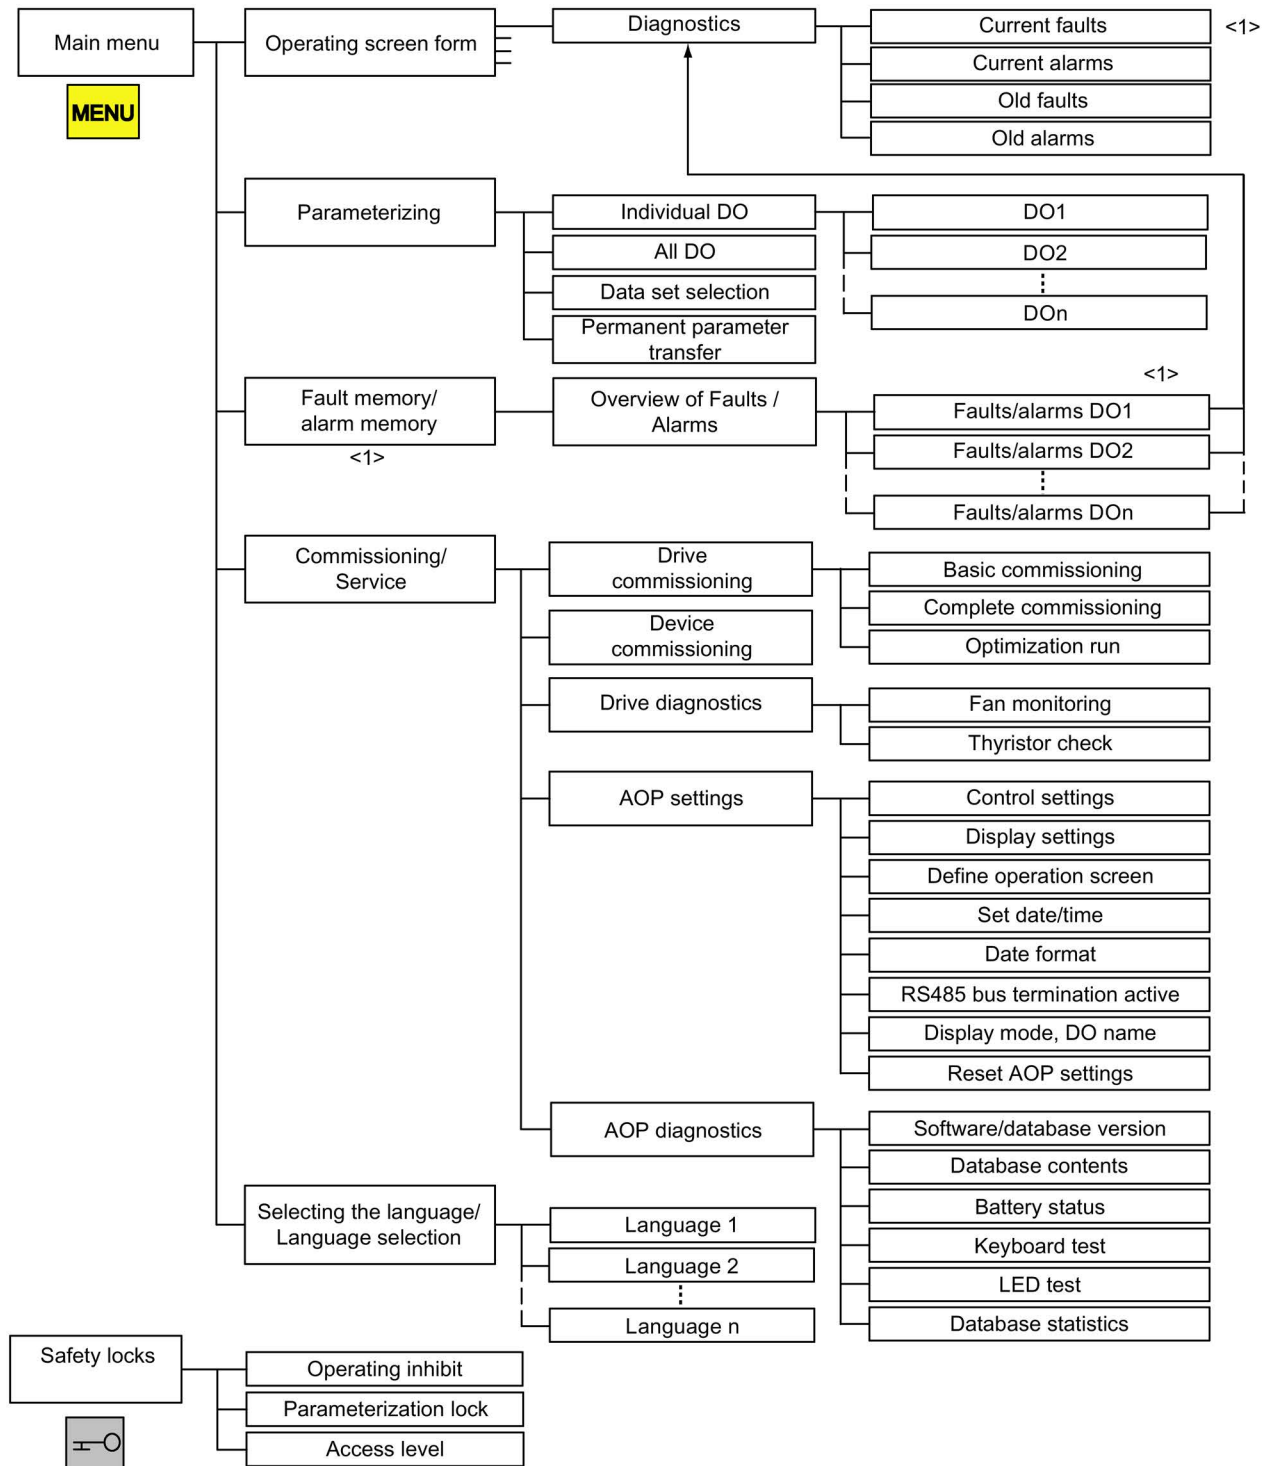

<1> Help texts can be called for all alarms and faults

Figure 9-17 Menu structure of the AOP30 operator panel



## 9.3.2 Menu: Operation screen

### Description

The operation screen displays the most important status variables for the drive unit:

In the factory setting, it displays the operating state of the drive, the direction of rotation, the time, as well as four drive variables (parameters) in numerical format and two values in the form of a bar display for continuous monitoring.

You can call up the operation screen in one of three ways:

1. Automatically after ramping-up is complete
2. From the main menu, by selecting the "Operation screen" menu command and F5 ("OK")
3. From the "Fault/alarm overview" screen, by selecting F4 ("Tools+/"Back") and F5 ("OK") if the jump is from the operation screen into this screen

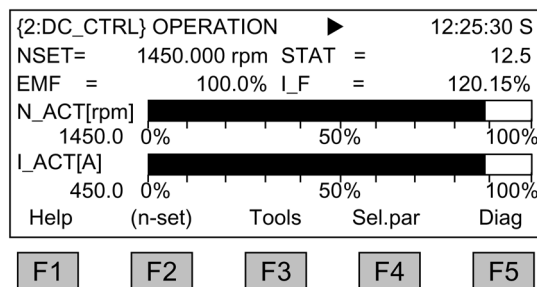


Figure 9-18 Operation screen

If a fault was registered during ramping-up, the system automatically branches from the operation screen into which the jump was made following the ramping-up process into the fault screen. This also happens if the system is on the operation screen and the first fault is registered here.

You can use F2 in the LOCAL state to enter the setpoint via the numeric keypad, if the drive is in the OPERATION state or the system setting "Save AOP setpoint" is set to YES.

You can switch to an alternative operation screen with F3 "Tools." It is used to display technological variables and can be defined or changed at "Menu" - "Commissioning / service" - "AOP settings" - "Define operation screen".

The individual parameters of the operation screen can be selected using F4 ("Sel. par"). F1 ("Help+") can be used to display the corresponding parameter number of the short identifier and call up a description of the parameter.

### Setting options

When you choose Commissioning / service – AOP settings – Define operation screen, you can adjust the display type and the values displayed as required (see "AOP settings (Page 387)" Chapter).

### 9.3.3 Parameterization menu

You can adjust the unit settings in the Parameterization menu.

Two display types can be selected in the AOP:

1. All parameters  
All the parameters present in the unit are listed with this option. The DO to which the parameter currently selected belongs (inverted) is displayed in curly brackets in the top left of the screen. With this display type, the response time for turning a page is dependent on the number of DOs and is generally longer than with parameter lists that only display one DO.
2. DO selection  
With this display type, you can pre-select a DO so that only the parameters for this DO are listed. (The expert list in STARTER is only displayed in this DO view.)

In both cases, the set access level governs which parameters are displayed. You can set the access level in the menu for safety inhibits, which can be called up using the key button.

The parameters for access levels 1 and 2 are sufficient for simple applications.

At access level 3 ("Expert"), you can change the structure of the function by interconnecting BICO parameters.

The Parameterization menu offers four options:

- **Individual DO**  
Shows the parameters of a DO to be selected in advance
- **All DOs**  
Shows the parameters of all DOs in list format (as described previously)
- **Data set selection**

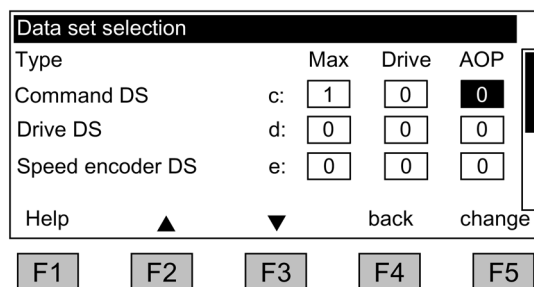


Figure 9-19 Data set selection

In the "AOP" column of the "Data set selection" screen, you can choose which of the data sets selected is currently displayed on the operator panel. The data set numbers that are set in the drive (i.e. are currently active) are displayed in the "Drive" column. The "Max" column shows the maximum data set number to be entered for the AOP30 display.

In parameter lists, data set parameters are indicated by the letter c, d, or e between the parameter number and parameter designator. The number at the right of the first row from the top shows which data set a highlighted parameter comes from.

In the commissioning wizard, the drive is commissioned using the data set selected on this screen in the AOP column.

The data set selection dialog appears whenever a data set parameter is changed in the parameter list. The data set selected in the data set selection screen is a default setting.

- **Permanent parameter transfer**

Parameter changes in the SINAMICS DC MASTER are only made temporarily in the RAM. If a parameter assignment is intended to be permanent, it is possible to trigger a save process at this point. Depending on the configuration, this can take from 45 s to several minutes.


Also refer to Chapter "Operation", Section "Memory card functions".

### 9.3.4 Menu: Fault/alarm memory

When you select this menu, a screen appears containing an overview of faults and alarms that are present.


For each drive object, the system indicates whether any faults or alarms are present. ("Fault" or "Alarm" appears next to the relevant drive object).

In the graphic below, you can see that at least one active fault/alarm is present for the "DC\_CTRL" drive object. No faults or alarms are indicated for the other drive two objects.

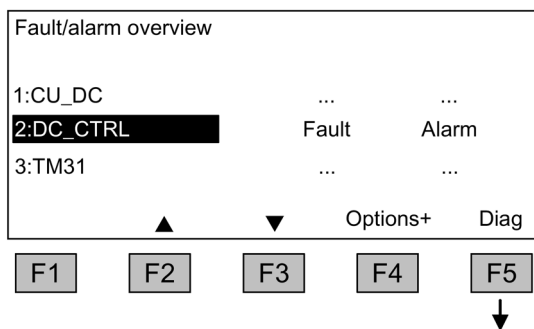



#### Overview of Faults / Alarms

When you navigate to the line with active alarms/faults and then press the F5 <Diag> key, the system displays a screen in which you may select the current or old alarms/faults.

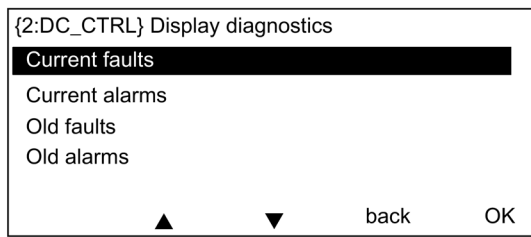

**Display diagnostics**


When you navigate to the required line and then press the F5 <OK> key, the corresponding faults/alarms are displayed. The list of current faults is selected here as an example.

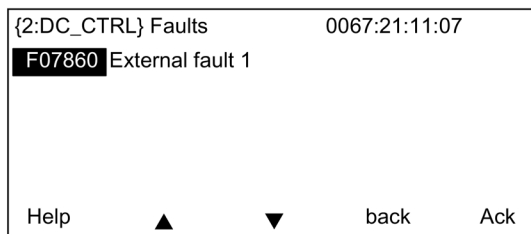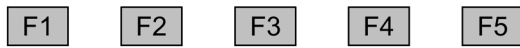

**Current faults display**

A maximum of eight current faults are displayed along with their fault number and a description of the fault.

To display additional help regarding the cause of the problem and how to solve it, choose F1 <Help>.

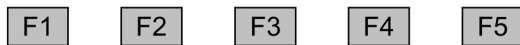

To acknowledge the faults, choose F5 <Ack>. If a fault cannot be acknowledged, the fault remains.

**9.3.5 Menu: Commissioning/Service**

**9.3.5.1 Drive commissioning**

Selecting this option enables you to re-commission the drive from the main menu, using the AOP wizard.

**Basic commissioning**

A few key parameters (such as the maximum speed, ramp-up time, and ramp-down time) are requested. The changes can then be permanently saved in the final confirmation screen.

**Complete commissioning**

Complete commissioning, with entry of the motor and encoder data, is carried out. Following this, key motor parameters are recalculated on the basis of the motor data. The parameter values calculated during the previous commissioning process are lost. The calculated values are then overwritten during a subsequent optimization run.

**Optimization run**

The selection screen for the optimization runs appears.

### 9.3.5.2 Device commissioning

In this menu, you can enter the device commissioning status directly. This is the only way to reset parameters to the factory setting, for example.

### 9.3.5.3 AOP settings

#### Control settings

This defines the settings for the control keys in LOCAL mode (see the section titled "Operation/Operation via the operator panel") as well as additional settings that are relevant for drive control.

#### Display settings

In this menu, you set the lighting, brightness, and contrast for the display.

#### Define operation screen

In this menu, you can switch between five operation screens. You can set the parameters to be displayed.

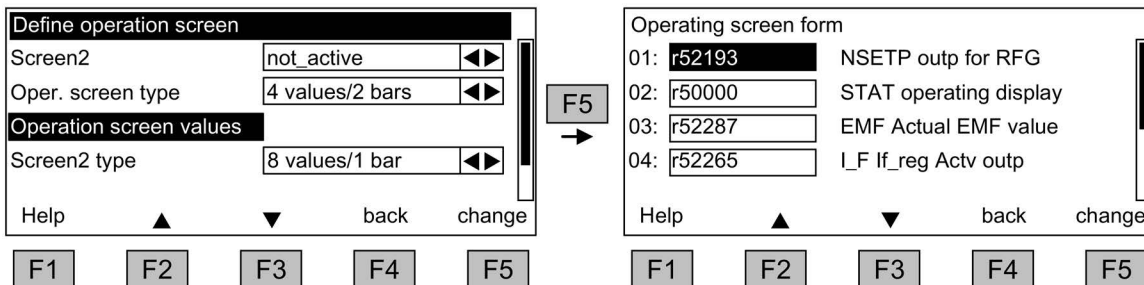


Figure 9-20 Define operation screen

The following screenshot shows how entries are assigned to the screen positions:

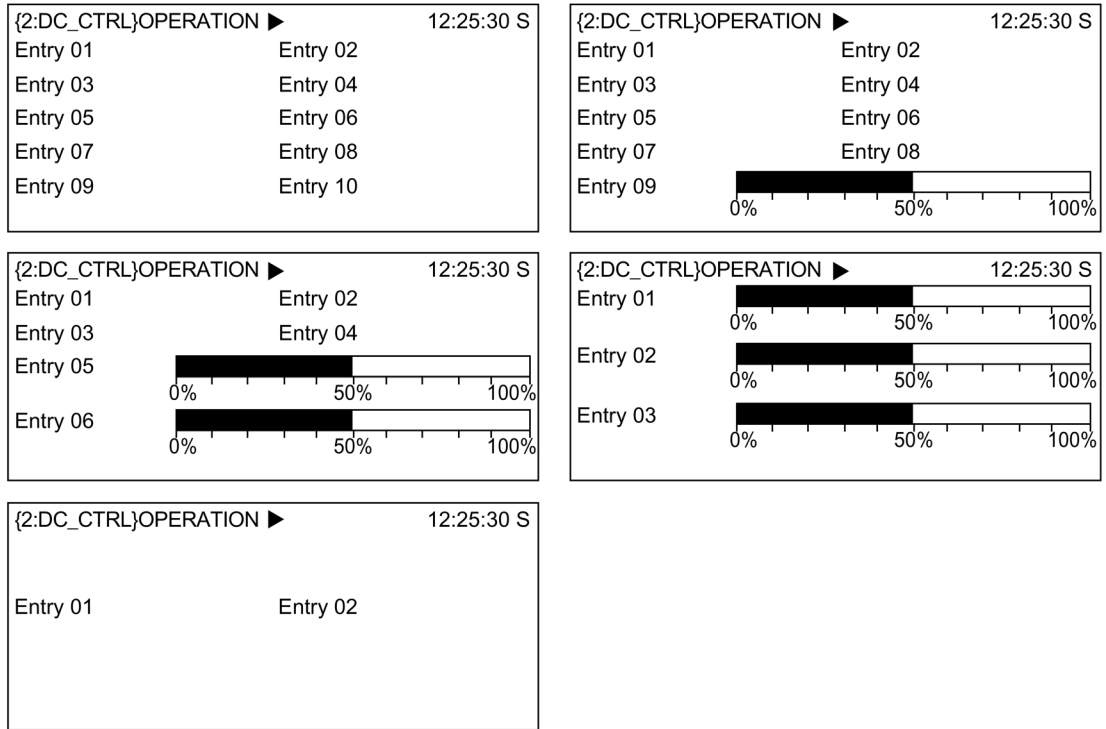


Figure 9-21 Positions of entries on the operation screen

### 9.3.5.4 Lists of signals for the operation screen

The following tables list some of the main signals for the operation screen along with their associated reference variables and default settings for quick commissioning.

#### DC\_CTRL object

Table 9- 9 List of signals for the operation screen - DC\_CTRL object

Signal		Parameter	Short name	Unit	Scaling (100%=...) see table below
Factory setting (entry no.)					
N setpoint following limitations	(1)	r50029	NSET	rpm	p2000
Status display	(2)	r50000	STAT	-	-
Actual EMF value	(3)	r52287	EMF	%	-
Field current actual value	(4)	r52265	I_F	%	-
Speed actual value	(5)	r00021	N_ACT	rpm	p2000
Actual armature current value	(6)	r00027	I_ACT	A	p2002
Armature firing angle	(7)	r50018	ALF_A	°	-
Field firing angle	(8)	r50034	ALF_F	°	-
Motor temperature rise	(9)	r50014.0	TEMP	%	-
Thyristor temperature rise	(10)	r50014.1	TEMP1	%	-
<b>For diagnostic purposes</b>					
Speed setpoint smoothed		r0020	NSET	rpm	p2000
Actual speed value, motor encoder		r0061	N_ACT	rpm	p2000
Actual speed value following smoothing		r0063	N_ACT	rpm	p2000
<b>For further diagnostic purposes</b>					
PROFIBUS setpoint		r2050	PBSET	rpm	p2000

#### Scalings for DC\_CTRL object

Table 9- 10 Scalings for DC\_CTRL object

Variable	Scaling parameter	Default for quick commissioning
Reference speed	100% = p2000	p2000
Reference voltage	100% = p2001	p2001 = 1,000 V
Reference current	100% = p2002	p2002 = Current limit (p0640)
Reference torque	100% = p2003	p2003 = 2 × rated motor torque
Reference power	100% = r2004	r2004 = (p2003 × p2000 × π) / 30
Reference temperature	100% = 100 °C	-

## TM31 object

Table 9- 11 List of signals for the operation screen – TM31 object

Signal	Parameter	Short name	Unit	Scaling (100% = ...)
Analog input 0 [V, mA]	r4052[0]	AI_UI	V, mA	V: 100 V / mA: 100 mA
Analog input 1 [V, mA]	r4052[1]	AI_UI	V, mA	V: 100 V / mA: 100 mA
Analog input 0, scaled	r4055[0]	AI_%	%	V: 100 V / mA: 100 mA
Analog input 1, scaled	r4055[1]	AI_%	%	V: 100 V / mA: 100 mA

## Setting the date/time

### Settings: MENU – Commissioning/Service – AOP settings

For date stamping in the case of fault codes and alarms, and for AOP time display on the operation screen

The AOP30 contains a battery-buffered real-time clock.

You set the date and time on this screen.

### Synchronization

You can also set whether and/or how the AOP30 and drive unit are to be synchronized. Synchronizing the AOP with the drive enables fault codes and alarms to be date-stamped and time-stamped (in the default setting, time-stamping occurs in accordance with the CU runtime).

- None (factory setting)  
The AOP30 and drive unit times are not synchronized.
- AOP → Drive
  - Activating this option synchronizes the AOP and drive unit immediately, whereby the current AOP time is transferred to the drive unit.
  - The current AOP30 time is transferred to the drive unit every time the AOP30 is started.
  - At 02:00 (AOP time) every day, the current AOP30 time is transferred to the drive unit.
- Drive → AOP
  - If a time-of-day master is connected to the drive, then activating this option enables the AOP and drive unit to be synchronized immediately, whereby the current drive unit time is transferred to the AOP30.
  - The current drive unit time is transferred to the AOP30 every time the AOP30 is restarted.
  - At 02:00 (AOP time) every day, the current drive unit time is transferred to the AOP30.



## Date format

The date format can be set in this menu:

- DD.MM.YYYY: European date format
- MM/DD/YYYY: North American date format

## RS485 bus termination active

Settings are not effective: The RS485 bus termination is continuously active.

## DO name display mode

A user-definable DO name can be activated/deactivated on this screen.

In the drive, there is the option of entering a user-defined, 25-character DO name for each DO, using the configuration software.

The possible number of characters in a DC name display is limited by the screen in question:

1. DO name in screens displaying the current DO  
Examples of screens in this category are operation screens, parameter lists, quick commissioning wizard screens, etc.  
The maximum text length is 7 characters. Example {2:DC\_CTRL}  
Texts of up to 7 characters in length are displayed in full. The first 6 characters of texts that are 8 to 25 characters in length are displayed with "..." as the 7th character.
2. DO names in the overview of faults and alarms (alarm overview)  
The maximum text length is 12 characters. Example 2: HOIST 1234  
Texts of up to 12 characters in length are displayed in full.  
The first 11 characters of texts that are 13 to 25 characters in length are displayed with "..." as the 12th character.

Texts that have been shortened can be displayed in full for around 3 seconds by pressing the "+/-" button, provided that the "User-definable DO name" function is activated.

## Reset AOP settings

When you choose this menu option, the AOP factory settings for the following are restored:

- Language
- Display (brightness, contrast)
- Operation screen
- Control settings

---

### Note

When you reset parameters, all settings that are different from the factory settings are immediately reset on the operator panel. This may cause the unit to switch to an unwanted operating state. For this reason, you should always take great care when resetting parameters.

---

### 9.3.5.5 AOP30 diagnostics

#### Software/database version

This menu command shows the versions of the software and database.

The database version must be compatible with the drive software version (refer to parameter r0018).

#### Database contents

Shows detailed information on the drive objects (DOs) present in the system

#### Battery status

This menu displays the battery voltage (in volts and as a bar chart). The battery ensures that the data in the database and the current time are retained.

When the battery voltage is represented as a percentage, a battery voltage of  $\leq 2$  V is equal to 0%, and a voltage of  $\geq 3$  V to 100%.

The data is secure up to a battery voltage of 2 V.

- If the battery voltage is  $\leq 2.45$  V, the message "Replace battery" is displayed in the status bar.
- If the battery voltage is  $\leq 2.30$  V, the system displays the following message: "Alarm, weak battery".
- If the battery voltage is  $\leq 2$  V, the system displays the following message: "Caution: The battery is dead".
- If the time and/or database are unavailable due to lack of voltage after a prolonged system downtime, the loss is established by means of a CRC check when the system is switched on again. This triggers a message instructing the user to replace the battery and then load the database and/or set the time.

For instructions on how to change the battery, see "Maintenance and servicing".

#### Keyboard test

On this screen, you can check that the keys are functioning properly. Keys that you press are represented on a symbolic keyboard on the display. You can press keys in any order you wish. You cannot exit the screen (F4 – "Back") until you have pressed each key at least once.

---

#### Note

Alternatively, you can exit the keyboard test screen by pressing any key and holding it down.

---

#### LED test

On this screen, you can check that the 4 LEDs are functioning properly.

#### Database statistics

Data related to the database is displayed here (e.g. free memory for additional DOs).

### 9.3.6 Sprachauswahl/Language selection

The operator panel downloads the texts for the different languages from the drive.

In the delivery condition without a memory card, you can toggle between German and English. With memory card (from V1.2), French, Italian, Spanish and Russian are also automatically available. The memory card must remain inserted for operation with these languages. The software provided for the update also includes all of the language packages that are available.

You can change the language of the operator panel via the "Sprachauswahl/Language selection" menu.

---

#### Note

Languages in addition to those that are currently available for the operator panel are available on request.

---

### 9.3.7 Operation via the operator panel (LOCAL mode)

You activate the control keys by switching to LOCAL mode. If the green LED in the LOCAL/REMOTE key does not light up, the key is not active.

---

#### Note

If the "OFF in REMOTE" function is activated, the LED in the LOCAL/REMOTE key flashes.

---

All of the supplementary setpoints are deactivated for LOCAL master control.

After the master control has been transferred to the operator panel, none of the BICO interconnections at bit 0 to bit 10 of the control word for the sequence control are active (refer to function diagram 2501).

#### 9.3.7.1 LOCAL/REMOTE key



**Activate LOCAL mode:** Press the LOCAL key

**LOCAL mode:** LED lights up

**REMOTE mode:** LED does not light up; the ON, OFF, JOG, direction reversal, faster, and slower keys are not active.

### Settings: Menu – Commissioning/Service – AOP settings – Control settings

#### Save LOCAL mode (factory setting: Yes)

- **Yes:** The "LOCAL" or "REMOTE" operating state is saved when the power supply is switched off and restored when the power supply is switched back on.
- **No:** The "LOCAL" or "REMOTE" operating state is not saved. "REMOTE" is activated when the power supply is switched on.

#### OFF in REMOTE (factory setting: No)

- **Yes:** The OFF key functions in REMOTE mode even if the drive is being controlled by external sources (PROFIBUS, customer terminal strip, NAMUR terminal strip).  
WARNING: This function is not an EMERGENCY STOP function.
- **No:** The OFF key only functions in LOCAL mode.

#### LOCAL/REMOTE also during operation (factory setting: No)

- **Yes:** You can switch between LOCAL and REMOTE when the drive is switched on (motor is running).
- **No:** Before switching to LOCAL, a check is carried out to determine whether the drive is in the "Operation" status. If it is, switchover is prevented and the error message "Local mode during operation not possible" is output. Before the system switches to REMOTE, the drive is switched off and the setpoint is set to 0.

### 9.3.7.2 ON key/OFF key



**ON key:** Active in LOCAL if no operator inhibit lock is activated

**OFF key:** Always active in LOCAL; active in REMOTE under certain conditions (if the system setting "OFF in REMOTE" is set to "Yes")

OFF key acts as

- **OFF1:** Ramp-down on the down ramp (p50303)  
At speed 0: Disconnection (only if line contactor is present)
- **OFF2:** Immediate pulse inhibit, motor coasts down
- **OFF3:** Ramp-down on the quick stop ramp (p50296)

Factory setting: OFF1

### 9.3.7.3 CCW/CW changeover

#### Settings: Menu – Commissioning/Service – AOP settings – Control settings



CCW/CW changeover (factory setting: No)

- **Yes:** CCW/CW changeover by means of the CCW/CW key functions in LOCAL mode
- **No:** The CCW/CW key is inactive.

For safety reasons, the CCW/CW key is disabled in the factory setting (normally pumps and fans must only be operated in one direction).

The direction of rotation that is currently selected is indicated on the operation screen by means of an arrow next to the operating state.

### 9.3.7.4 Jogging

#### Settings: Menu – Commissioning/Service – AOP settings – Control settings



JOG key active (factory setting: No)

- **Yes:** In "LOCAL" mode, the JOG key is active in the state "Ready for Switching On" (not in "Operation").
- **No:** The JOG key is not active.

See also function diagram 3125 in the SINAMICS DCM List Manual.

The speed for the JOG function is entered using parameter p50436.

### 9.3.7.5 Increase setpoint/Decrease setpoint



You can use the Increase and Decrease keys to enter the setpoint with a resolution of 1% of the maximum speed.

Alternatively, the setpoint can also be entered via the numeric keypad. To do this, press F2 while on the operation screen. The system displays an inverted edit field for entering the required speed. Enter the required value using the numeric keypad. Press F5 ("OK") to confirm the setpoint.

Any speed between 0 and the maximum speed (p2000) can be entered using the numeric keypad.

Setpoint entry in LOCAL mode is unipolar. You can change the direction of rotation by pressing the key that allows you to switch between CCW/CW rotation.

- CW rotation and "Raise key" mean:  
The displayed setpoint is positive and the speed is increased.
- CCW rotation and "Increase" key mean:  
The setpoint displayed is negative and the speed is increased.

### 9.3.7.6 AOP setpoint

#### Settings: MENU – Commissioning / Service – AOP Settings – Control Settings

##### Save AOP setpoint (factory setting: No)

- **Yes:** In LOCAL mode, the last setpoint (once you have released the Increase or Decrease key or confirmed a numeric entry) is saved. The next time you switch the system ON in LOCAL mode, the saved value is selected. This is also the case if you switched to REMOTE in the meantime or the power supply was switched off. When the system is switched from REMOTE to LOCAL mode while the drive is switched on (motor is running), the actual value that was last present is set as the output value for the motorized potentiometer setpoint and saved. If the system is switched from REMOTE to LOCAL mode while the drive is switched off, the motorized potentiometer setpoint that was last saved is used.
- **No:** On power-up in LOCAL mode, the speed is always set to the value entered under "AOP starting setpoint". When the system is switched from REMOTE to LOCAL mode while the drive is switched on (motor is running), the actual value that was last present is set as the output value for the AOP setpoint.

##### AOP setpoint ramp-up time (factory setting: 20 s)

Defines the speed at which the setpoint specified by the AOP is increased when the "+" key is pressed.

##### AOP setpoint ramp-down time (factory setting: 30 s)

Defines the speed at which the setpoint specified by the AOP is decreased when the "-" key is pressed.

##### AOP starting setpoint (factory setting: 0.000 rpm)

The AOP starting setpoint is the speed setpoint which is active when the drive is switched on (with the "ON" key on the AOP30); The "Save setpoint" system setting must be set to "No" for this purpose (see also the description of the "Save AOP setpoint" system setting).

---

##### Note

The internal drive ramp-function generator is always active.

---

### 9.3.7.7 Inhibiting AOP LOCAL mode

#### Settings: MENU – Commissioning / Service – AOP Settings – Control Settings

##### Inhibit AOP local mode (factory setting: No)

- **Yes:** Deactivates the "Control via operator panel" function, thereby disabling the LOCAL/REMOTE key.
- **No:** Activates the LOCAL/REMOTE key.

**Note**

LOCAL functionality can also be inhibited on the drive by means of the p0806 parameter (BI: Inhibit master control).

**9.3.7.8 Acknowledging errors via the AOP**

**Settings: MENU – Commissioning / Service – AOP Settings – Control Settings**

**Acknowledge fault from the AOP** (factory setting: Yes)

- **Yes:** Errors can be acknowledged via the AOP.
- **No:** Faults cannot be acknowledged via the AOP.

**9.3.7.9 Timeout monitoring**

In "LOCAL" mode or if "OFF in REMOTE" is active, the drive is shut down after 1 s if the data cable between the AOP and drive is disconnected.

**9.3.7.10 Operator inhibit lock/Parameters disable**

**Operator inhibit lock/Parameters disable**



To prevent the control keys from being operated and parameters from being changed unintentionally, you can activate an operator inhibit lock/parameters disable using a key-operated pushbutton. Two key icons appear at the top right of the display when these safety inhibits are enabled.

Table 9- 12 Operator inhibit lock/parameters disable

Inhibit type	Online mode	Offline mode
No safety inhibit		
Operator lock		
Parameter disable		
Operator inhibit lock + parameters disable		

Settings

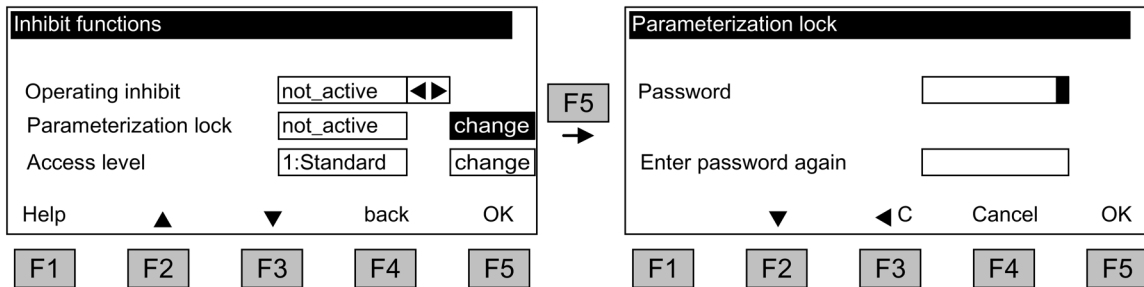


Figure 9-22 Setting safety inhibits

The "Operator inhibit lock" setting can be changed directly via <F5> ("Change") once you have selected the selection box.

When "Parameters disable" is activated, you may enter a numeric password (twice). You must also enter this password when deactivating "Parameters disable".

**Operator inhibit lock** (factory setting: Not active)

- **Active:** The parameters can still be viewed, but a parameter value cannot be saved (message: "Note: Operator inhibit lock active"). The OFF key (red) is enabled. The LOCAL/REMOTE, ON (green), JOG, CW/CCW, INCREASE, and DECREASE keys are disabled.

**Parameters disable** (factory setting: Not active)

- **Active:** Parameters cannot be changed unless a password is entered. Parameters are assigned in the same way as in the operator inhibit lock state. If you try to change parameter values, the message "Note: Parameters disable active" is displayed. All the control keys, however, remain enabled.

**Access level** (factory setting: Expert):

The different parameters required for this complex application are filtered so that they can be displayed as clearly as possible. You select them according to the access level.

An expert level, which must only be used by expert personnel, is required for certain actions.



## 9.3.8 Faults and alarms

### Displaying faults and alarms

If a fault occurs, the drive displays the fault(s) and/or alarm(s) on the operator panel. Faults are indicated by means of the red "FAULT" LED lighting up.

The "Fault/alarm overview" also appears automatically in the following two cases:

1. When a fault is registered while the system is ramping up
2. If the first fault is registered on the operation screen

You can use the F1 (Help) function on the screen to call up information about the cause of the fault and how to remedy it. You can use F5 (Ack.) to acknowledge a stored fault.

Any alarms that are pending are indicated by means of the yellow "ALARM" LED lighting up. Additionally, a note relating to the cause of the alarm is displayed in the status bar of the operator panel.

### What is a fault?

A fault is a message from the drive indicating an error or other exceptional (unwanted) status. This could be caused by a fault within the converter or an external fault triggered, for example, by the winding temperature monitoring function for the motor. The faults are displayed and can be reported to a higher-level control system via PROFIBUS.

### What is an alarm?

An alarm is the response to a fault condition identified by the drive. It does not result in the drive being switched off and does not have to be acknowledged. Alarms are "self-acknowledging"; that is, they are reset automatically when the cause of the alarm has been eliminated.

### Displaying faults and alarms

Every fault and alarm is entered in the fault/alarm buffer along with the time at which it occurred. This time stamp can take two forms:

- Number of days, hours, minutes, and seconds since the AOP was first switched on (format **DDDD: HH:MM:SS**) (no "AOP → Drive" time synchronization)
- System time (format **YY:MM:DD HH:MM:SS** = Year:Month:Day Hour:Minute:Second), in cases where a time-of-day master is present in the system (if "AOP → Drive" time synchronization is active, for example).

You can call up an overview screen that displays the current status of faults and/or alarms for every drive object in the system by choosing MENU – Fault/alarm memory.

A shortcut menu offering the "Back" and "Ack." options appears when you press F4 ("Tools+"). (You can use F4 to exit the shortcut menu.) The function required can be selected using F2 and F3 and executed by pressing F5 ("OK").  
The "Ack." function sends an acknowledgement signal to each drive object.  
The red FAULT LED goes out once all the faults have been acknowledged.

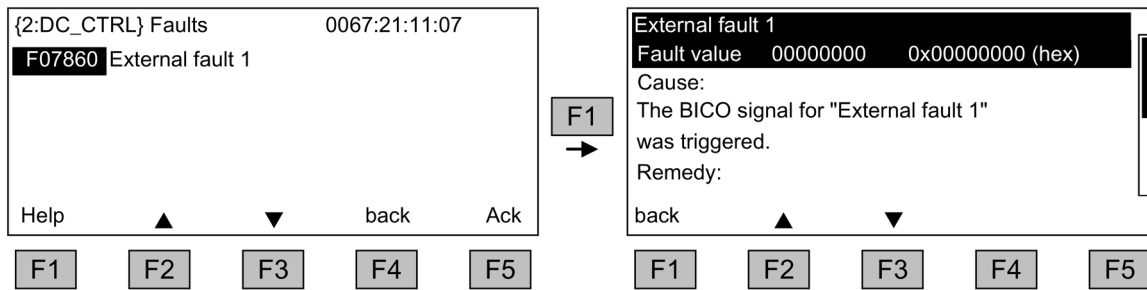


Figure 9-23 Fault screen

You can use F5 (Ack.) to acknowledge a stored fault.

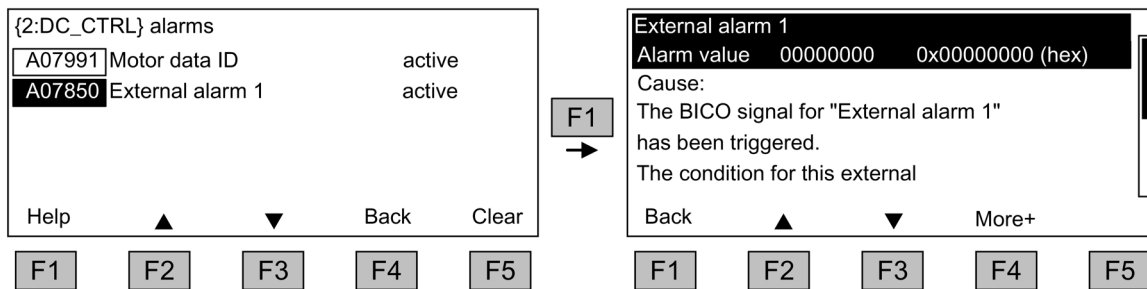


Figure 9-24 Alarm screen

Alarms that are no longer active are removed from the alarm memory with F5 (Clear).  
The screen can be updated via a submenu with F4 (More+).

### 9.3.9 Saving the parameters permanently

#### Description

If parameters are changed using the operator panel (confirm with OK in the Parameter editor), the new values are initially stored in the volatile memory (RAM) of the converter. An "S" flashes in the top right of the AOP display until they are saved permanently. This indicates that at least 1 parameter has been changed and not yet stored permanently.

2 methods are available for permanently saving parameters that have been changed:

- To store the parameters permanently, choose <MENU> <Parameterization> <OK> <Permanent parameter transfer>.
- When confirming a parameter setting with the OK key, press it for > 1 s. The system displays a message asking you whether the setting is to be saved in the EEPROM. If you press "Yes", the system saves the setting in the EEPROM. If you press "No", the setting is not saved permanently and the "S" starts flashing to indicate this fact.

In both cases, **all** changes that have not yet been saved permanently are stored in the EEPROM. Depending on the configuration, this can take from 45 s to several minutes. Also refer to the "CompactFlash Card functions" chapter.

---

#### Note

During a data save operation initiated by the user, the electronics power supply for the SINAMICS DC MASTER must not be interrupted.

An active saving process is indicated by the following actions:

- The RDY-LED flashes (see Chapter "AUTOHOTSPOT")
- The BOP20 flashes

Interrupting the power supply while saving can lead to the loss of the current device parameter assignments. See also Chapter "AUTOHOTSPOT".

---

### 9.3.10 Parameterization errors

If an error is made when reading or writing parameters, a popup window explaining the cause of the problem in plain text appears.

Example:           Parameter write error  
                      Value limit exceeded

### 9.3.11 Assigning parameters to make AOP30 time-of-day master

The AOP30 contains an integrated real-time clock. The SINAMICS DCM system time can be synchronized with this real-time clock.

Activate this function:

- On the AOP30 in the "Menu" – "Commissioning / Service" – "AOP settings" – "Date and Time" menu command activate to "AOP sets clock in SINAMICS".

The current time in the AOP30 is then written into the drive.

In the display for faults and alarms, the time stamp is now displayed in the format YY-MM-DD hh:mm in real-time. The time stamp mode and the current time can be read from the parameters p3100, p3102 and p3103. For details, please see the SINAMICS DCM List Manual.

The current time is resynchronized at each power-up. (The AOP30 must be switched on together with the drive). During uninterrupted duty, synchronization takes place every day at 02:00.

## Descriptions of functions

### 10.1 Inputs/outputs

#### 10.1.1 Overview of inputs/outputs

Table 10- 1 Overview of inputs and outputs

Component	Digital	Analog
CUD	<ul style="list-style-type: none"> <li>• 4 inputs (2 inputs freely available, 2 inputs with ON/OFF1 and controller enable pre-assigned)</li> <li>• 4 bidirectional inputs/outputs</li> <li>• 4 outputs</li> <li>• 1 incremental encoder input</li> </ul>	<ul style="list-style-type: none"> <li>• 7 inputs</li> <li>• 2 outputs</li> <li>• 1 temperature sensor input</li> </ul>
Power unit	<ul style="list-style-type: none"> <li>• 1 relay output</li> </ul>	<ul style="list-style-type: none"> <li>• 1 input for analog tachometer</li> </ul>
TM15	<ul style="list-style-type: none"> <li>• 24 bidirectional inputs/outputs</li> </ul>	-
TM31	<ul style="list-style-type: none"> <li>• 8 inputs</li> <li>• 4 bidirectional inputs/outputs</li> <li>• 2 relay outputs</li> </ul>	<ul style="list-style-type: none"> <li>• 2 inputs</li> <li>• 2 outputs</li> <li>• 1 temperature sensor input</li> </ul>
TM150	-	<ul style="list-style-type: none"> <li>• 12 inputs for max. 12 temperature sensors (PT100, PT1000, KTY84, PTC, bimetal contact) Number depending on connection type</li> </ul>
Technical data for inputs and outputs: <ul style="list-style-type: none"> <li>• For the CUD and power unit, see Chapter "Connecting (Page 91)"</li> <li>• For the TM15, TM31 and TM150, see Chapter "Additional system components (Page 191)"</li> </ul>		

#### 10.1.2 Digital inputs/outputs

##### Function diagrams in the SINAMICS DCM List Manual

2050	Digital inputs DI 0 ... DI 3
2055	Digital outputs DO 0 ... DO 3
2060	Digital inputs/outputs, bi-directional DI/DO 4 and DI/DO 5
2065	Digital inputs/outputs, bi-directional DI/DO 6 and DI/DO 7

### 10.1.3 Analog inputs

#### Properties

Table 10- 2 Properties of the analog inputs

Inputs	Properties
AI 0, AI 1	<ul style="list-style-type: none"> <li>Differential inputs</li> <li>Voltage inputs -10 to +10 V or Current inputs -20 to +20 mA or 4 to 20 mA</li> <li>Hardware input filter: T = 1 ms</li> <li>Integrating measuring procedure. Averaging time = 1 ms. The average value determined during this time is provided in BICO format.</li> </ul>
AI 2	<ul style="list-style-type: none"> <li>Differential input</li> <li>Voltage input -10 to +10 V</li> <li>Hardware input filter: T = 1 ms</li> <li>Integrating measuring procedure. Averaging time = 1 ms. The average value determined during this time is provided in BICO format.</li> </ul> <p>An external armature current actual value can also be connected to this input (see FP6902).</p>
<p>The 3 inputs AI 0, AI 1 and AI 2 of a CUD on the left and the 3 inputs AI 0, AI 1 and AI 2 of a CUD on the right can be operated so that they are averaged during the same measuring interval. The 6 mean values are provided on 6 BICOs (see FP2083).</p>	
AI 3, AI 4, AI 5, AI 6	<ul style="list-style-type: none"> <li>Differential inputs</li> <li>Voltage inputs -10 to +10 V</li> <li>Hardware input filter: T = 100 µs</li> <li>Sampling measuring procedure. Sampling time = 250 µs. The mean value taken from 4 sampling values is provided in BICO format.</li> </ul> <p>An external actual armature current value can also be connected to these inputs (see FP6850).</p>
Tachometer input XT1.103/104	<ul style="list-style-type: none"> <li>Input referred to ground</li> <li>High-voltage input -270 V .. +270 V</li> <li>Hardware input filter: T = 1 ms</li> <li>Integrating measuring procedure. Averaging time = 1 ms. The average value determined during this time is provided in BICO format.</li> </ul> <p>This input is designed for connecting an analog tachometer, but can also be used in other ways.</p>

#### Function diagrams

- 2075 Analog inputs, AI 0 and XT1.103/104
- 2080 Analog inputs, AI 1 and AI 2
- 2085 Analog inputs, AI 3 and AI 4
- 2090 Analog inputs, AI 5 and AI 6

### 10.1.4 Analog outputs

See function diagram 2095 in the SINAMICS DCM Parameter Manual

## 10.2 Communication, IT security

---

### Note

IT security (industrial security)

In order to ensure the safe operation of your systems, you must take suitable measures, e.g. industrial security or network segmentation. You can find more information on Industrial Security on the Internet at:

IT security (<http://www.industry.siemens.com/topics/global/en/industrial-security>)

---

## 10.3 Communication according to PROFIdrive

PROFIdrive is the PROFIBUS and PROFINET profile for drive technology with a wide range of applications in production and process automation systems.

PROFIdrive is independent of the bus system used (PROFIBUS, PROFINET).

---

### Note

PROFINET for drive technology is standardized and described in the following document:

- **PROFIdrive – Profile Drive Technology**  
PROFIBUS User Organization e. V.  
Haid-und-Neu-Straße 7, D-76131 Karlsruhe, Germany  
<http://www.profibus.com>
  - IEC 61800-7
- 

## PROFIdrive device classes

Table 10- 3 PROFIdrive device classes

PROFIdrive	PROFIBUS DP	PROFINET IO
Peripheral device (P device)	DP slave (I slaves)	IO Device
Controller (higher-level controller or host of the automation system)	Class 1 DP master	IO Controller
Supervisor (engineering station)	Class 2 DP master	IO Supervisor

**Properties of the Controller, Supervisor and drive units**

Table 10- 4 Properties of the Controller, Supervisor and drive units

Properties	Controller	Supervisor	Drive unit
As bus node	Active		Passive
Send messages	Permitted without external request		Only possible on request by the controller
Receive messages	Possible without any restrictions		Only receive and acknowledge permitted

- Drive unit (PROFIBUS: Slave, PROFINET IO: IO Device)  
Example: Control Unit CUD
- Controller (PROFIBUS: Master Class 1, PROFINET IO: IO Controller)  
A controller is typically a higher-level controller in which the automation program runs.  
Example: SIMATIC S7 and SIMOTION
- Supervisor (PROFIBUS: Master Class 2, PROFINET IO: IO Supervisor)  
Devices for configuring, commissioning, operator control and monitoring while the bus is in operation – and devices, which only exchange non-cyclic data with drive units and controllers.  
Examples: Programming devices, human machine interfaces

**Communication services**

Two communication services are defined in the PROFIdrive profile; namely, cyclic data exchange and acyclic data exchange.

- Cyclic data exchange via a cyclic data channel:  
Motion control systems require cyclically updated data in operation for open-loop and closed-loop control tasks. This data must be sent to the drive units in the form of setpoints or transmitted from the drive units in the form of actual values, via the communications system. Transmission of this data is usually time-critical.
- Acyclic data exchange via an acyclic data channel:  
An acyclic parameter channel for exchanging parameters between the controller/ supervisor and drive units is additionally available. Access to this data is not time-critical.
- Alarm channel  
Alarms are output on an event-driven basis, and show the occurrence and expiry of error states.



## Interface IF1 and IF2

The Control Unit CUD can communicate via two separate interfaces (IF1 and IF2).

Table 10- 5 Properties of IF1 and IF2

	<b>IF1</b>	<b>IF2</b>
PROFIdrive	Yes	No
Standard telegrams	Yes	No
Isochronous mode	No	No
Drive object types	All	All
Can be used for	PROFINET IO, PROFIBUS DP	PROFINET IO, PROFIBUS DP
Cyclic operation possible	Yes	Yes
PROFIsafe possible	No	No

---

### Note

For additional information on the IF1 and IF2 interfaces, see Chapter "Parallel operation of communication interfaces (Page 438)".

---

### 10.3.1 Application classes

There are different application classes for PROFIdrive according to the scope and type of the application processes. PROFIdrive features a total of six application classes, two of which are discussed here.

#### Application class 1 (standard drive)

In the most basic case, the drive is controlled via a speed setpoint by means of PROFIBUS/PROFINET. In this case, speed control is fully handled in the drive controller. Typical application examples include simple frequency converters for controlling pumps and fans.

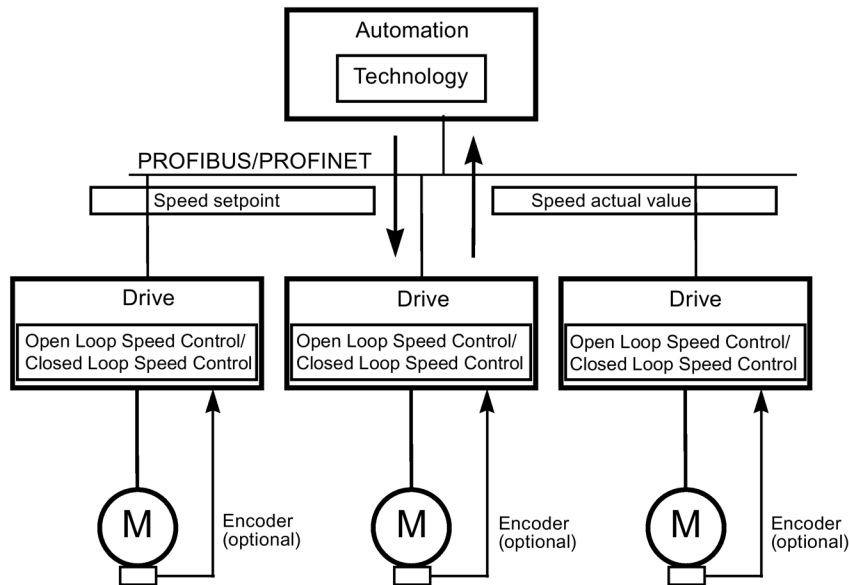


Figure 10-1 Application class 1

### Application class 2 (standard drive with technology function)

The total process is subdivided into a number of small subprocesses and distributed among the drives. This means that the automation functions no longer reside exclusively in the central automation device but are also distributed in the drive controllers.

Of course, this distribution assumes that communication is possible in every direction, i.e. also cross-communication between the technology functions of the individual drive controllers. Specific applications include setpoint cascades, winding drives, and speed synchronization applications for continuous processes with a continuous web.

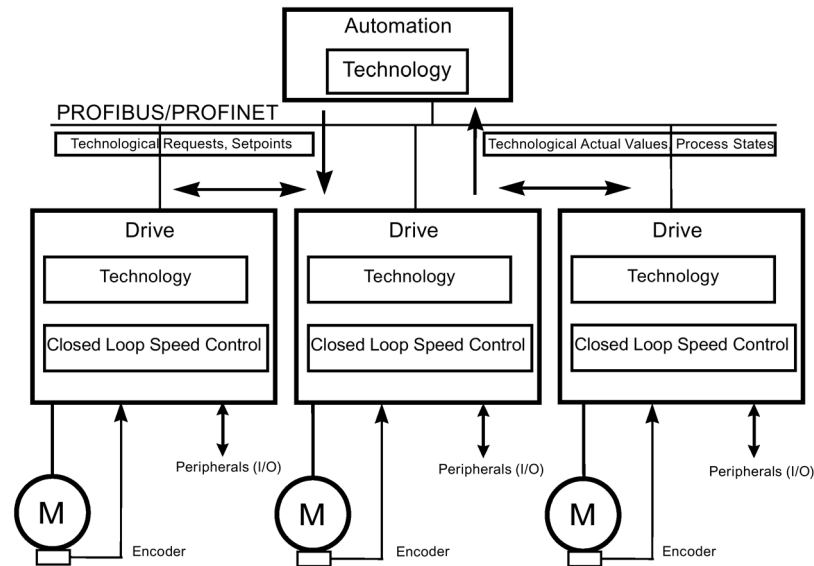


Figure 10-2 Application class 2

### Selection of telegrams as a function of the application class

The telegrams listed in the table below (see also Chapter "Telegrams and process data (Page 410)") can be used in the following application classes:

Table 10-6 Selection of telegrams as a function of the application class

Telegram (p0922 = x)	Description	Class 1	Class 2
1	Speed setpoint, 16-bit	x	x
3	Speed setpoint, 32-bit with 1 position encoder		x
4	Speed setpoint, 32-bit with 2 position encoders		
20	Speed setpoint, 16-bit VIK-NAMUR	x	x
220	Speed setpoint, 32-bit for metal industry	x	
352	Speed setpoint, 16-bit, PCS7	x	x
999	Free telegrams	x	x

## 10.3.2 Cyclic communication

Cyclic communication is used to exchange time-critical process data.

### 10.3.2.1 Telegrams and process data

When a telegram is selected via p0922, the drive unit (Control Unit) process data that is transferred is determined.

From the perspective of the drive unit, the received process data represents the receive words and the process data to be sent the send words.

The receive and send words comprise the following elements:

- Receive words: Control words or setpoints
- Send words: Status words or actual values

### PROFIdrive telegrams

- Standard telegrams

The standard telegrams are structured in accordance with the PROFIdrive profile. The internal process data links are set up automatically in accordance with the telegram number setting.

The following standard telegrams can be set via p0922:

- 1 Speed setpoint, 16-bit
- 3 Speed setpoint, 32-bit with 1 position encoder
- 4 Speed setpoint, 32-bit with 2 position encoders
- 20 Speed setpoint, 16-bit VIK-NAMUR

- Manufacturer-specific telegrams

The manufacturer-specific telegrams are structured in accordance with internal company specifications. The internal process data links are set up automatically in accordance with the telegram number setting.

The following vendor-specific telegrams can be set via p0922:

- 220 Speed setpoint, 32-bit for metal industry
- 352 Speed setpoint, 16-bit, PCS7
- 390 Control Unit with digital inputs/outputs

- Free telegrams (p0922 = 999)

The send and receive telegrams can be configured as required by using BICO technology to interconnect the send and receive process data.

	DC_CTRL	CU_DC	TM31, TM15DI_DO, TM150	ENCODER
<b>Receive process data</b>				
DWORD connector output	r2060[0 ... 62]	-	-	r2060[0 ... 2]
WORD connector output	r2050[0 ... 63]	r2050[0 ... 19]	r2050[0 ... 4]	r2050[0 ... 3]
Binector output	r2090.0 ... 15 r2091.0 ... 15 r2092.0 ... 15 r2093.0 ... 15		r2090.0 ... 15 r2091.0 ... 15	r2090.0 ... 15 r2091.0 ... 15 r2092.0 ... 15 r2093.0 ... 15
Free binector-connector converter	p2080[0 ... 15], p2081[0 ... 15], p2082[0 ... 15], p2083[0 ... 15], p2084[0...15] / r2089[0 ... 4]			
<b>Send process data</b>				
DWORD connector input	p2061[0 ... 62]	-	-	p2061[0 ... 10]
WORD connector input	p2051[0 ... 63]	p2051[0 ... 24]	p2051[0 ... 4]	p2051[0 ... 11]
Free connector-binector converter	p2099[0 ... 1] / r2094.0 ... 15, r2095.0 ... 15			

### Notes on telegram interconnections

- When you change p0922 = 999 (factory setting) to p0922 ≠ 999, the telegrams are interconnected and blocked automatically.
- Exceptions to this are the telegrams 20, 220, and 352. Here, selected PZDs can be interconnected as required in the send/receive telegram.
- When you change p0922 ≠ 999 to p0922 = 999, the previous telegram interconnection is retained and can be changed.
- If p0922 = 999, a telegram can be selected in p2079. A telegram interconnection is automatically made and blocked. The telegram can also be extended.

This is an easy method for creating extended telegram interconnections on the basis of existing telegrams.

**Notes on the telegram structure**

- The parameter p0978 contains the drive objects that use a cyclic PZD exchange. A zero is used to demarcate the drive objects that do not exchange PZD.
- If the value 255 is written to p0978, this drive object is visible to the PROFIdrive controller and empty (without actual process data exchange). This permits cyclic communication of a PROFIdrive controller in the following cases:
  - With unchanged configuration to drive units that have a different number of drive objects.
  - With deactivated drive objects, without having to change the project
- The following must apply to ensure conformity with the PROFIdrive profile:
  - Interconnect PZD receive word 1 as control word 1 (STW1).
  - Interconnect PZD send word 1 as status word 1 (STW1). (Use WORD format for PZD1)
- One PZD = one word.
- Only one of the interconnection parameters (p2051 or p2061) can have the value ≠ 0 for a PZD word.
- Physical word and double word values are inserted in the telegram as referenced variables.
 

They refer to 100% = 16384 = pxxxx. However, you must take into account the internal scaling of individual physical variables, e.g. r0080 torque, see SINAMICS DCM List Manual.
- The reference variable is specified for each BICO in the parameter list. Most BICOs have the unit "%".
 

The following then applies: Telegram content = 4000 hex (or 4000 0000 hex for double words) corresponds to the value 100%.

**Structure of the telegrams**

You can find the structure of the telegrams in the SINAMICS DCM List Manual in the following function diagram:

- 2420: PROFIdrive – Telegrams and process data

Drive object	Telegrams (p0922)
DC_CTRL	3, 4, 999
ENC	81, 82, 83, 999
TM15DI_DO	No predefined telegram.
TM31	No predefined telegram.
TM150	No predefined telegram.
CU_DC	390, 999

Depending on the drive object, the following maximum number of process data can be transferred for a user-defined telegram structure:

Drive objects	Maximum number of PZD	
	Send	Receive
DC_CTRL	64	64
ENC	12	4
TM15DI_DO	5	5
TM31	5	5
TM150	5	5
CU_DC	25	20

### Function diagrams (see the SINAMICS DCM List Manual)

- 2410 PROFIdrive – PROFIBUS (PB) / PROFINET (PN), addresses and diagnostics
- 2498 PROFIdrive – I\_DIGITAL interconnection

### 10.3.2.2 Description of control words and setpoints

#### Overview of control words and setpoints

Table 10-7 Overview of control words and setpoints, see function diagram [2440]

Abbreviation	Name	Signal number	Data type <sup>1)</sup>	Interconnection parameter <sup>2)</sup>
STW1	Control word 1 for telegram 1, 3, 4, 20, 352	1	U16	(bit-by-bit)
STW2	Control word 2 for telegram 3, 4	3	U16	(bit-by-bit)
NSET_A	Speed setpoint A (16-bit)	5	I16	p1070
NSET_B	Speed setpoint B (32-bit)	7	I32	p50621
G1_STW	Encoder 1 control word	9	U16	p0480[0]
G2_STW	Encoder 2 control word	13	U16	p0480[1]
A_DIGITAL	Digital output (16-bit)	22	U16	(bit-by-bit)
M_LIM	Torque limit	310	U16	p50605[0] p50500[0]
M_ADD	Supplementary torque	311	U16	p50619
STW1_BM	Control word 1, variant for BM	322	U16	(bit-by-bit)
STW2_BM	Control word 2, variant for BM	324	U16	(bit-by-bit)
CU_STW1	Control word 1 for Control Unit	500	U16	(bit-by-bit)

<sup>1)</sup> Data type to PROFIdrive Profile V4:  
I16 = Integer16, I32 = Integer32, U16 = Unsigned16, U32 = Unsigned32

<sup>2)</sup> Bit-by-bit interconnection: Refer to the following pages

**STW1 (control word 1)**

See function diagram [2442].

Table 10- 8 Control word 1 (STW1)

Bit	Meaning	Explanation	Operating condition	BICO
0	0 = OFF1 (OFF1)	0: Deceleration on the down ramp, then pulse inhibit, line contactor (if present) is opened	1	Bl: p0840
	0 → 1 = ON	Pulse enable possible		
1	0 = Coast down (OFF2)	0: Pulse inhibit, line contactor (if present) is opened	1	Bl: p0844 Bl: p0845
	1 = Do not coast down	Enable possible		
Note: Control signal OFF2 is generated by ANDing Bl: p0844 and Bl: p0845.				
2	0 = Quick stop (OFF3)	0: Deceleration on the quick stop ramp, then pulse inhibit, line contactor (if present) is opened.	1	Bl: p0848
	1 = No quick stop	Enable possible		
Note: Control signal OFF3 is generated by ANDing Bl: p0848 and Bl: p0849.				
3	0 = Inhibit operation	0: Pulse inhibit. The motor coasts down. The "Ready for Operation" state remains set.	1	Bl: p0852
	1 = Enable operation	1: Pulse enable, ramp-up with active setpoint		
4	0 = Inhibit ramp-function generator	0: The ramp-function generator output is set to setpoint "0".	1	Bl: p1140
	1 = Enable ramp-function generator			
5	0 = Stop ramp-function generator	0: The current setpoint is frozen at the ramp-function generator output.	1	Bl: p1141
	1 = Start ramp-function generator			
6	1 = Enable speed setpoint	1: The speed setpoint at the input of the ramp-function generator is enabled.	1	Bl: p1142
	0 = Inhibit speed setpoint	0: The speed setpoint at the input of the ramp-function generator is set to zero. The drive brakes in accordance with the set ramp-down time.		
7	0 → 1 = Acknowledge fault	A positive edge change acknowledges all the current faults.	-	Bl: p2103
	Note: Acknowledgement is realized with a 0/1 edge via Bl: p2103 or Bl: p2104 or Bl: p2105.			
8	Reserved		-	-
9	Reserved		-	-
10	1 = Control via PLC	1: PROFIBUS control words and setpoints are analyzed.	1	Bl: p0854
		0: PROFIBUS control words and setpoints are not analyzed.		
Note: This bit should not be set to "1" until the PROFIBUS slave has returned an appropriate status via ZSW1.9 = "1".				



Bit	Meaning	Explanation	Operating condition	BICO
11	1 = setpoint inversion	1: Setpoint is inverted	-	Bl: p1113
		0: The setpoint is not inverted		
12	Reserved		-	-
13	1 = Motorized potentiometer, higher	Only when p0922 = 1 or 352, otherwise reserved	-	Bl: p1035
14	1 = Motorized potentiometer, lower	Only when p0922 = 1 or 352, otherwise reserved	-	Bl: p1036
	Note: If "Motorized potentiometer, higher" and "Motorized potentiometer, lower" are both 0 or 1 at the same time, the current setpoint is frozen.			
15	1 = CDS bit 0 (only with telegrams p0922 = 20!)	1: Command data set changeover (CDS) bit 0 is active.	-	Bl: p0810
		0: Command data set changeover (CDS) bit 0 is inactive.		
	Reserved	When p0922 = 1 or 352	-	-

## STW2 (control word 2)

See function diagram [2444].



Table 10-9 Control word 2 (STW2)

Bit	Meaning	Interconnection parameter
0	Drive data set selection DDS, bit 0	p0820[0] = r2093.0
1	Drive data set selection DDS, bit 1	p0821[0] = r2093.1
2 to 11	Reserved	-
12	Master sign-of-life bit 0	p2045 = r2050[3]
13	Master sign-of-life bit 1	
14	Master sign-of-life bit 2	
15	Master sign-of-life bit 3	

**STW1\_BM (control word 1, metal industry)**

See function diagram [2425].

Table 10- 10 Description of STW1\_BM (control word 1, metal industry)

Bit	Meaning	Interconnection parameter
0	0 = OFF (OFF1)  = ON	p0840[0] = r2090.0
1	0 = OFF2 (immediate pulse cancellation with switching on inhibited) 1 = No OFF2 (enable is possible)	p0844[0] = r2090.1
2	0 = OFF3 (braking along the OFF3 ramp, then pulse suppression with switching on inhibited) 1 = No OFF3 (enable is possible)	p0848[0] = r2090.2
3	0 = Inhibit operation 1 = Enable operation	p2816[0] = r2090.3
4	0 = Set ramp-function generator zero 1 = Enable ramp-function generator	p1140[0] = r2090.4
5	0 = Freeze ramp-function generator 1 = Continue ramp-function generator	p1141[0] = r2090.5
6	0 = Speed setpoint = 0 1 = Speed setpoint enable	p1142[0] = r2090.6
7	 = Acknowledge fault	p2103[0] = r2090.7
8	Reserved	-
9	Reserved	-
10	1 = Control via PL <sup>1)</sup>	p0854[0] = r2090.10
11 to 15	Reserved <sup>2)</sup>	-

<sup>1)</sup> STW1.10 must be set in order for the drive object to accept the process data (PZD).

<sup>2)</sup> Interconnection is not disabled.

## STW2\_BM (control word 2, metal industry)

See function diagram [2426].

Table 10- 11 Description of STW1\_BM (control word 1, metal industry)

Bit	Meaning	Interconnection parameter
0	Command data set selection CDS bit 0	p0810 = r2093.0
1	Reserved	-
2	Drive data set selection, CDS bit 0 <sup>1)</sup>	p0820[0] = r2093.2
3	Drive data set selection, CDS bit 1 <sup>1)</sup>	p0821[0] = r2093.3
4	Reserved	-
5	1 = Bypass ramp-function generator	p50641[0] = r2093.5
6	Reserved	-
7	1 = Speed controller integration value set	p50695[0] = r2093.7
8	1 = Enable droop	p50684[0] = r2093.8
9	1 = Enable speed controller <sup>1)</sup>	p0856[0] = r2093.9
10	Reserved <sup>1)</sup>	-
11	0 = Speed-controlled mode 1 = Torque-controlled mode	p50687[0] = r2093.11
12	Reserved <sup>1)</sup>	-
13	Reserved <sup>1)</sup>	-
14	Reserved <sup>1)</sup>	-
15	Controller sign-of-life toggle bit	p2081[15] = r2093.15

<sup>1)</sup> Interconnection is not disabled.

## NSET\_A (speed setpoint A (16-bit))

- Speed setpoint with a 16-bit resolution with sign bit.
- Bit 15 determines the sign of the setpoint:
  - Bit = 0 → Positive setpoint
  - Bit = 1 → Negative setpoint
- The speed is normalized via p2000.  

$$\text{NSET\_A} = 4000 \text{ hex or } 16384 \text{ dec} \hat{=} \text{speed in p2000}$$

### NSET\_B (speed setpoint B (32-bit))

- Speed setpoint with a 32-bit resolution with sign bit.
- Bit 31 determines the sign of the setpoint:
  - Bit = 0 → Positive setpoint
  - Bit = 1 → Negative setpoint
- The speed is normalized via p2000.

$NSET\_B = 4000\ 0000\ \text{hex}$  or  $1\ 073\ 741\ 824\ \text{dec} \hat{=} \text{speed in p2000}$

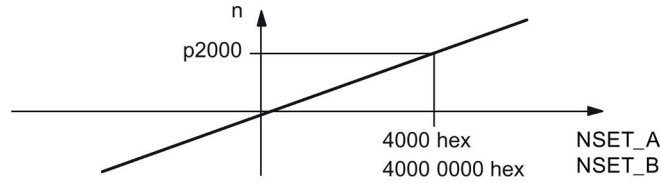


Figure 10-3 Normalization of speed

---

#### Note

##### Operation of motors in the field-weakening range

If the motors are to be operated in the field-weakening range > 2:1, the value of parameter p2000 must be set  $\leq 1/2$  x maximum speed of the drive object.

---

### Gn\_STW (encoder n control word)

This process data belongs to the encoder interface.

### A\_DIGITAL CU\_STW1

This process data is part of the central process data.

### 10.3.2.3 Description of status words and actual values

**Note**

The reference parameter is also specified for the relevant process data. The process data is generally normalized in accordance with parameters p2000 to r2004.

The following scalings apply:

- A temperature of 100 °C corresponds to 100%
- An electrical angle of 90° also corresponds to 100%.

### Overview of status words and actual values

Table 10- 12 Overview of status words and actual values, see function diagram [2450]

Abbreviation	Name	Signal number	Data type <sup>1)</sup>	Interconnection parameter
ZSW1	Status word 1	2	U16	r2089[0]
ZSW2	Status word 2	4	U16	r2089[1]
NACT_A	Speed setpoint A (16-bit)	6	I16	r0063
G1_ZSW	Encoder 1 status word	10	U16	r0481[0]
G1_XIST1	Encoder 1 actual position value 1	11	U32	r0482[0]
G1_XIST2	Encoder 1 actual position value 2	12	U32	r0483[0]
G2_ZSW	Encoder 2 status word	14	U16	r0481[1]
G2_XIST1	Encoder 2 actual position value 1	15	U32	r0482[1]
G2_XIST2	Encoder 2 actual position value 2	16	U32	r0483[1]
E_DIGITAL	Digital input (16-bit)	21	U16	r2089[2]
IAIST_GLATT	Absolute actual current value, smoothed	51	I16	r0027
MIST_GLATT	Actual torque value, smoothed	53	I16	r0080
PIST_GLATT	Active power, smoothed	54	I16	r0032
NACT_A_GLATT	Actual speed value, smoothed	57	I16	r0021
MELD_NAMUR	VIK-NAMUR message bit bar	58	U16	r3113
FAULT_CODE	Fault code	301	U16	r2131
WARN_CODE	Alarm code	303	U16	r2132
ZSW1_BM	Status word 1, variant for BM	323	U16	r2089[0]
ZSW2_BM	Status word 2, variant for BM	325	U16	r2089[1]
CU_ZSW1	Status word 1 for Control Unit	501	U16	r2089[1]

<sup>1)</sup> Data type according to PROFIdrive profile V4:  
 I16 = Integer16, I32 = Integer32, U16 = Unsigned16, U32 = Unsigned32

**ZSW1 (status word 1)**

See function diagram [2452].

Table 10- 13 Description of status word 1 (ZSW1)

Bit	Meaning	Explanation		Parameter
0	Ready for switching on	1	Ready for switching on Power supply on, electronics initialized, line contactor released if necessary, pulses inhibited	BO: r0899.0
		0	Not ready for switching on	
1	Ready for operation	1	Ready for operation Line voltage applied, i.e. line contactor closed (if present), field being built up	BO: r0899.1
		0	Not ready for operation Reason: No ON command has been issued.	
2	Operation enabled	1	Operation enabled Enable electronics and pulses, then ramp up to active setpoint	BO: r0899.2
		0	Operation disabled	
3	Fault active	1	Fault active The drive is faulty and, therefore, out of service. The drive switches to "switching on inhibited" once the fault has been acknowledged and the cause has been remedied. The active faults are stored in the fault buffer.	BO: r2139.3
		0	No fault active There are no faults in the fault buffer.	
4	Coasting down not active (OFF2 inactive)	1	Coasting down (OFF2) not active	BO: r0899.4
		0	Coasting down active (OFF2) An OFF2 command is active.	
5	Quick stop not active (OFF3 inactive)	1	Quick stop (OFF3) not active	BO: r0899.5
		0	Quick stop active (OFF3) An OFF3 command is active.	
6	Switching on inhibited active	1	Switching on inhibited Switching back on is only possible by means of OFF1 and then ON.	BO: r0899.6
		0	No switching on inhibited Switching on is possible.	
7	Alarm active	1	Alarm active The drive is operational again. No acknowledgement necessary. The active alarms are stored in the alarm buffer.	BO: r2139.7
		0	No alarm active No alarms in the alarm buffer.	
8	Speed setpoint/actual value deviation in tolerance	1	Setpoint/actual value monitoring in tolerance band Actual value within tolerance band; dynamic overshoot or undershoot permitted for $t < t_{max}$ , $t_{max}$ can be parameterized. See FP8020 and FP2534	BO: r2197.7
		0	Setpoint/actual value monitoring not within tolerance band	

Bit	Meaning	Explanation		Parameter
9	Control request "1" is always present	1	The automation system is requested to assume control.	BO: r0899.9
		0	Control is only possible at the unit itself	
10	n setpoint reached or exceeded	1	n setpoint reached or exceeded	BO: r2199.1
		0	n setpoint not reached	
Note: The message is parameterized as follows: p50373 (threshold value), p50374 (hysteresis) See FP8020 and FP2537				
11	I or M limit not reached (when p0922 = 1 or 352)	1	I or M limit not reached	BO: r1407.7 (inverted)
		0	I or M limit reached or exceeded	
	I or M limit not reached (when p0922 = 20)	1	I or M limit not reached	BO: r0056.13 (inverted)
		0	I or M limit reached or exceeded	
12	Holding brake released (when p0922 = 1 or 352)	1	Holding brake is released	BO: r0899.12
		0	Holding brake is closed	
	Reserved (when p0922 = 20)			
13	No motor overtemperature alarm	1	Alarm overtemperature motor not pending	BO: r2135.14 (inverted)
		0	Motor overtemperature alarm pending	
14	Motor rotates forward (n_act ≥ 0)	1	Motor rotates forward (n_act ≥ 0)	BO: r2197.3
		0	Motor does not rotate forward (n_act < 0)	
15	Reserved (when p0922 = 1 or 352)			
	CDS display (when p0922 = 20)	1	CDS selection bit 0 selected	BO: r0836.0
		0	CDS selection bit 0 not selected	

## ZSW2 (status word 2)

See function diagram [2454].

Table 10- 14 Status word 2 (ZSW2)

Bit	Meaning	Interconnection parameter
0	1 = Drive data set selection DDS effective, bit 0	p2081[0] = r0051.0
1	1 = Drive data set selection DDS effective, bit 1	p2081[1] = r0051.1
2	Reserved	-
3	Reserved	-
4	Reserved	-
5	1 = Alarm class bit 0	p2081[5] = r2139.11
6	1 = Alarm class bit 1	p2081[6] = r2139.12
7	Reserved	-
8	Reserved	-
9	Reserved	-
10	1 = Enable pulses	p2081[10] = r0899.11
11 to 15	Reserved	-

**ZSW1\_BM (status word 1, metal industry)**

See function diagram [2428].

Table 10- 15 Status word 1, metal industry (ZSW1 BM) <sup>1)</sup>

Bit	Meaning	Interconnection parameter
0	1 = Ready to switch on	p2080[0] = r0899.0
1	1 = Ready	p2080[1] = r0899.1
2	1 = Enable operation 1	p2080[2] = r2811.0
3	1 = Fault present	p2080[3] = r2139.3
4	0 = Coast to stop active (OFF2)	p2080[4] = r0899.4
5	0 = Quick stop active (OFF3)	p2080[5] = r0899.5
6	1 = Switching on inhibited active	p2080[6] = r0899.6
7	1 = Alarm present	p2080[7] = r2139.7
8	1 = Speed setpoint/actual-value deviation in tolerance	p2080[8] = r2197.7
9	1 = Control requested <sup>2)</sup>	p2080[9] = r0899.9
10	1 = n comparison value reached or exceeded	p2080[10] = r2199.1
11	1 = Torque limit not reached	p2080[11] = r1407.7
12	1 = Open holding brake	p2080[12] = r0899.12
13 to 15	Reserved <sup>3)</sup>	-

- 1) ZSW1 BM is formed via binector-connector converter (BI: p2080[0...15], inversion: p2088[0].0...p2088[0].15).
- 2) The drive object is ready for acceptance.
- 3) Interconnection is not disabled.

**ZSW2\_BM (status word 2, metal industry)**

See function diagram [2429].

Table 10- 16 Status word 2, metal industry (ZSW2 BM)

Bit	Meaning	Interconnection parameter
0 to 4	Reserved <sup>1)</sup>	-
5	1 = Alarm class bit 0	p2081[5] = r2139.11
6	1 = Alarm class bit 1	p2081[6] = r2139.12
7	Reserved	-
8	Reserved	-
9	1 = Speed setpoint limited	p2081[9] = r1407.11
10	1 = Upper torque limit reached	p2081[10] = r1407.8
11	1 = Lower torque limit reached	p2081[11] = r1407.9
12	1 = Encoderless operation because of fault	p2081[12] = r1407.13
13	Reserved	-
14	Reserved	-
15	Controller sign of life toggle bit	p2081[15] = r2093.15

- 1) Interconnection is not disabled.



**NACT\_A (speed setpoint A (16-bit))**

- Actual speed value with 16-bit resolution.
- The speed actual value is normalized in the same way as the setpoint (see NSET\_A).

**NACT\_B (speed setpoint B (32-bit))**

- Actual speed value with 32-bit resolution.
- The speed actual value is normalized in the same way as the setpoint (see NSET\_B).

**Gn\_ZSW (encoder n status word)**

**Gn\_XIST1 (encoder n actual position value 1)**

**Gn\_XIST2 (encoder n actual position value 2)**

This process data belongs to the encoder interface.

**E\_DIGITAL  
CU\_ZSW1**

This process data is part of the central process data.

**IAIST\_GLATT**

The absolute current actual value smoothed with p0045 is displayed.

**MIST\_GLATT**

The actual torque value smoothed with p0045 is displayed.

**PIST\_GLATT**

The active power smoothed with p0045 is displayed.

**NACT\_A\_GLATT**

The actual speed value smoothed with p0045 is displayed.

**MELD\_NAMUR**

Display of the NAMUR message bit bar.

**WARN\_CODE**

Display of the alarm code (see function diagram [8065]).

**FAULT\_CODE**

Display of the fault code (see function diagram [8060]).

### 10.3.2.4 Control and status words for encoders

The process data for the encoders is available in various telegrams. For example, telegram 3 is provided for speed control with 1 position encoder and transmits the process data of encoder 1.

The following process data is available for the encoders:

- Gn\_STW encoder n control word (n = 1, 2)
- Gn\_ZSW encoder n status word
- Gn\_XIST1 encoder n act. pos. value 1
- Gn\_XIST2 encoder n act. pos. value 2

---

**Note**

Encoder 1: Motor encoder

Encoder 2: Direct measuring system

---

#### Example of encoder interface



Figure 10-4 Example of encoder interface (encoder-1: Two actual values, encoder-2: One actual value)

#### Encoder n control word (Gn\_STW, n = 1, 2)

The encoder control word controls the encoder functions.

See function diagram [4720].

Table 10- 17 Description of the individual signals in Gn\_STW

Bit	Name	Signal status, description	
0 1 2 3	Find refer- ence mark or flying measure- ment	Functions	
		If bit 7 = 0, then find reference mark request applies:	
		Bit	Meaning
		0	Function 1      Reference mark 1
		1	Function 2      Reference mark 2
		2	Function 3      Reference mark 3
		3	Function 4      Reference mark 4
		If bit 7 = 1, then find flying measurement request applies:	
		0	Function 1      Probe 1 rising edge
		1	Function 2      Probe 1 falling edge
		2	Function 3      Probe 2 rising edge
		3	Function 4      Probe 2 falling edge
		<b>Note:</b>	
		<ul style="list-style-type: none"> <li>• Bit x = 1      Request function</li> <li>  Bit x = 0      Do not request function</li> </ul>	
<ul style="list-style-type: none"> <li>• If more than 1 function is activated, then the following applies: The values for all functions cannot be read until each activated function has terminated and this has been confirmed in the corresponding status bit (ZSW.0/.1/.2/.3 "0" signal again).</li> <li>• Reference mark search It is possible to search for a reference mark.</li> <li>• External zero mark</li> <li>• Flying measuring Positive and negative edges can be simultaneously selected.</li> </ul>			
4 5 6	Command	Bit 6, 5, 4      Meaning	
		000      No function	
		001      Activate selected function	
		010      Read generated value	
		011      Cancel function	
		(x: Function selected using bit 0 to 3)	
7	Mode	1      Not permitted	
		0      Reference mark search (fine resolution via p0418)	
8... 12	Reserved	-	
13	Request cyclic absolute value	1      Request cyclic transfer of the absolute actual position value in Gn_XIST2. Used for (e.g.): <ul style="list-style-type: none"> <li>• Additional measuring system monitoring</li> <li>• Synchronization during ramp-up</li> </ul>	
		0      No request	
14	Parking encoder	1      Request parking encoder (handshake with Gn_ZSW bit 14)	
		0      No request	

Bit	Name	Signal status, description
15	Acknowledge encoder error	0/1 Request to reset encoder errors <p>1) Signal must be reset by user.</p>
		0 No request

**Example: Reference mark search**

Assumptions for the example:

- Distance-coded reference mark
- Two reference marks (function 1/function 2)
- Position control with encoder 1

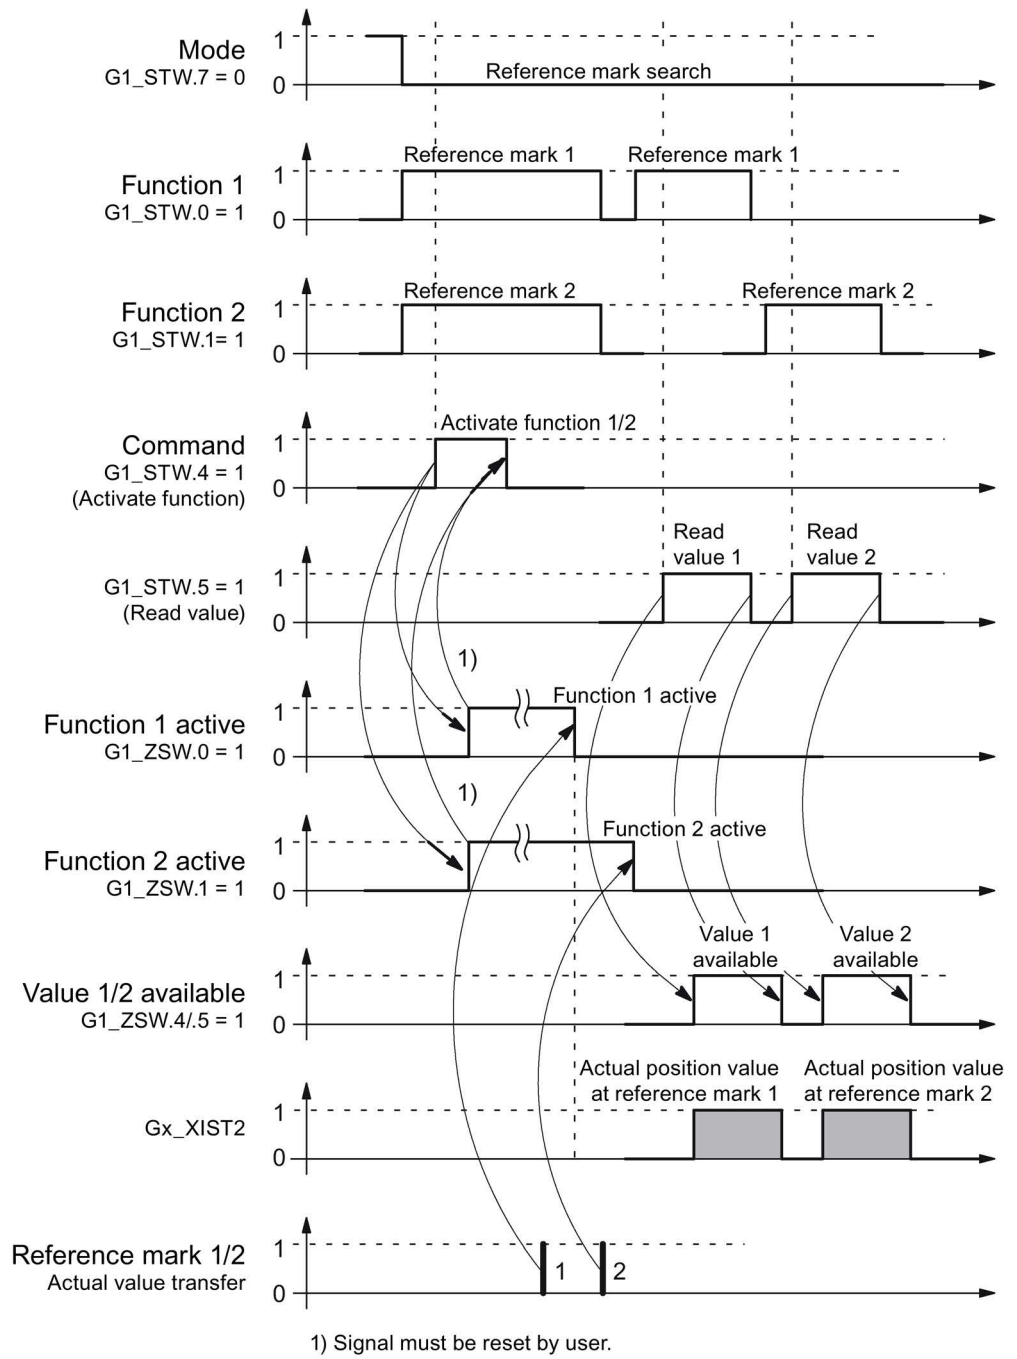


Figure 10-5 Sequence chart for "Reference mark search"

## Encoder 2 control word (G2\_STW)

- See G1\_STW

**Encoder n status word (Gn\_ZSW, n = 1, 2)**

The encoder status word is used to display states, errors and acknowledgements.

See function diagram [4730]

Table 10- 18 Description of the individual signals in Gn\_ZSW

Bit	Name	Signal status, description		
0 1 2 3	Reference mark search	Status: Function 1 - 4 active	Valid for "Reference mark search" and "Flying measurement"	
			Bit	Meaning
			0	Function 1 Reference mark 1
			1	Function 2 Reference mark 2
			2	Function 3 Reference mark 3
			3	Function 4 Reference mark 4
<b>Note:</b>				
<ul style="list-style-type: none"> <li>Bit x = 1 function active</li> <li>Bit x = 0 function inactive</li> </ul>				
4 5 6 7	Value 1 - 4 available	Status: Value 1 - 4 available	Applies to reference mark search	
			Bit	Meaning
			4	Value 1 Reference mark 1 Probe 1 rising edge
			5	Value 2 Reserved
			6	Value 3 Reserved
			7	Value 4 Reserved
<b>Note:</b>				
<ul style="list-style-type: none"> <li>Bit x = 1 value available</li> <li>Bit x = 0 value not available</li> <li>Only one single value can be retrieved. Reason: There is only one common status word Gn_XIST2 to read the values.</li> </ul>				
8	Reserved	1	Reserved	
		0	Reserved	
9	Reserved	1	Reserved	
		0	Reserved	
10	Reserved	-		
11	Encoder fault acknowledge active	1	Encoder fault acknowledge active <b>Note:</b> See at STW.15 (acknowledge encoder error)	
		0	No acknowledgement active	
12	Reserved	-		

Bit	Name	Signal status, description	
13	Transmit absolute value cyclically	1	Acknowledgement for Gn_STW.13 (request absolute value cyclically) <b>Note:</b> Cyclic transmission of the absolute value can be interrupted by a function with higher priority. • See Gn_XIST2
		0	No acknowledgement
14	Parking encoder	1	Parking encoder active (i.e. parking encoder switched off)
		0	No active parking encoder
15	Encoder fault	1	Error from encoder or actual-value sensing is active. <b>Note:</b> The error code is stored in Gn_XIST2.
		0	No error is active.

### Encoder 1 actual position value 1 (G1\_XIST1)

- Resolution: Encoder lines • 2n  
n: Fine resolution, no. of bits for internal multiplication  
The fine resolution is specified via p0418.
- Used to transfer the cyclic actual position value to the controller.
- The transferred value is a relative, free-running actual value.
- Any overflows must be evaluated by the master controller.

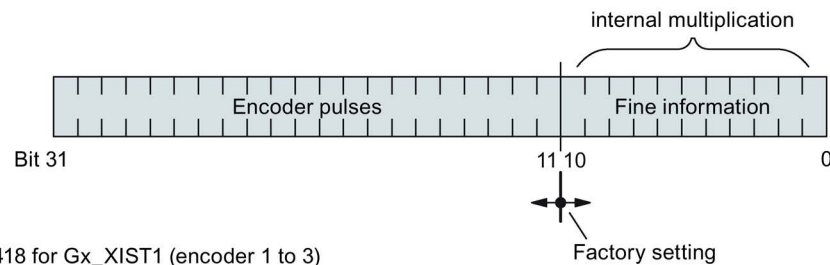


Figure 10-6 Subdivision and settings for Gx\_XIST1

- Encoder lines of incremental encoder
  - For encoders with sin/cos 1Vpp:  
Encoder lines = No. of sinusoidal signal periods
- After power-up: Gx\_XIST1 = 0
- An overflow in Gx\_XIST1 must be viewed by the master controller.
- There is no modulo interpretation of Gx\_XIST1 in the drive.

**Encoder 1 actual position value 2 (G1\_XIST2)**

Different values are entered in Gx\_XIST2 depending on the function.

- Priorities for Gx\_XIST2

The following priorities should be considered for values in Gx\_XIST2:

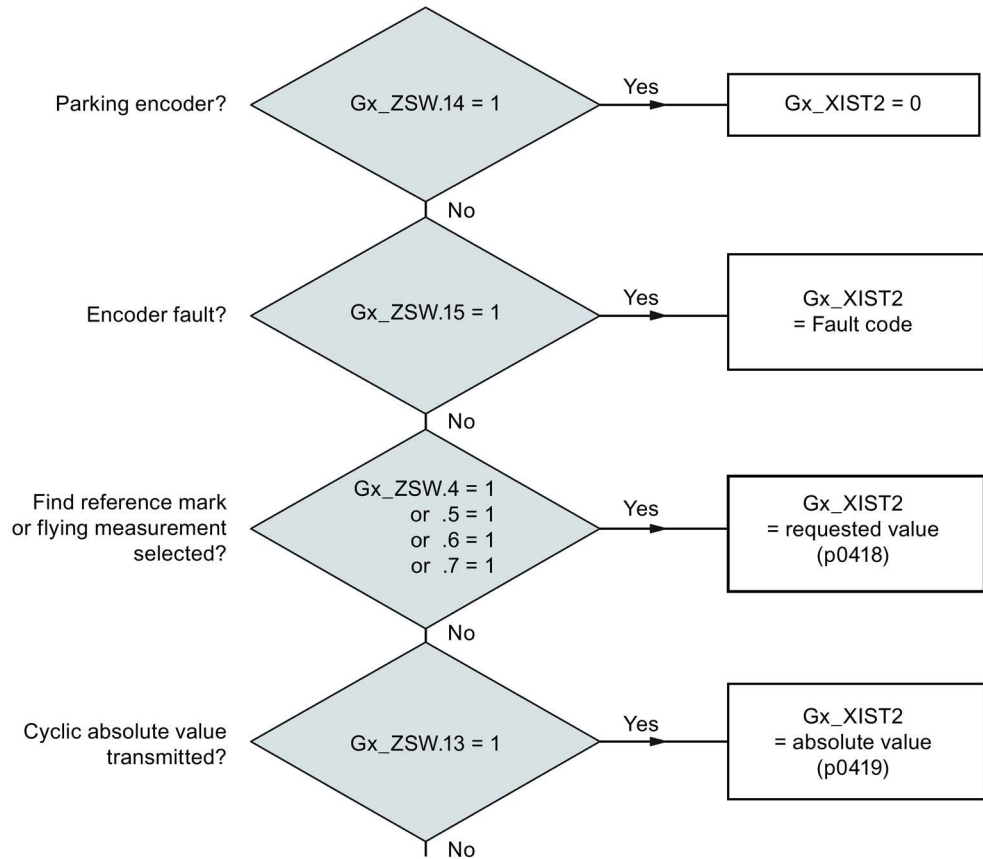


Figure 10-7 Priorities for functions and Gx\_XIST2

- Resolution: Encoder pulses • 2n

n: Fine resolution, no. of bits for internal multiplication

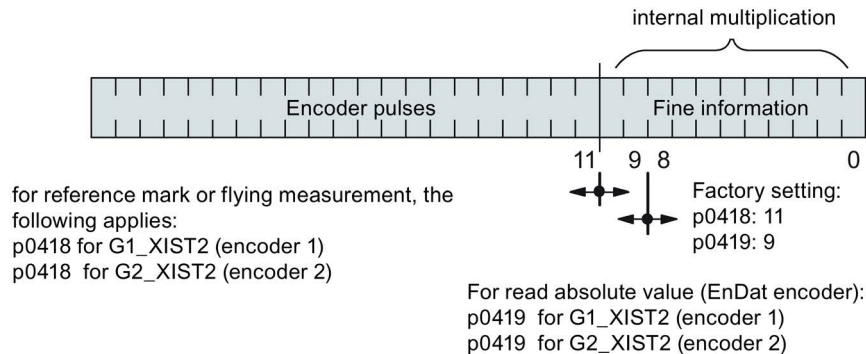


Figure 10-8 Subdivision and settings for Gx\_XIST2



- Encoder lines of incremental encoder
  - For encoders with sin/cos 1Vpp:  
Encoder lines = No. of sinusoidal signal periods

### Error code in Gn\_XIST2

Table 10- 19 Error code in Gn\_XIST2

n_XIST2	Meaning	Possible causes / description
1	Encoder fault	One or more existing encoder faults. Detailed information in accordance with drive messages.
2	Zero mark monitoring	–
3	Abort parking sensor	<ul style="list-style-type: none"> <li>• Parking drive object already selected.</li> </ul>
4	Abort find reference mark	<ul style="list-style-type: none"> <li>• A fault exists (Gn_ZSW.15 = 1)</li> <li>• Encoder has no zero mark (reference mark)</li> <li>• Reference mark 2, 3 or 4 is requested</li> <li>• Switchover to "Flying measurement" during search for reference mark</li> <li>• Command "Read value x" set during search for reference mark</li> <li>• Inconsistent position measured value with distance-coded reference marks.</li> </ul>
5	Abort retrieve reference value	<ul style="list-style-type: none"> <li>• More than four values requested</li> <li>• No value requested</li> <li>• Requested value not available</li> </ul>
6	Abort flying measurement	<ul style="list-style-type: none"> <li>• No probe configured p0488, p0489</li> <li>• Switch over to "reference mark search" during flying measurement</li> <li>• Command "Read value x" set during flying measurement</li> </ul>
7	Abort get measured value	<ul style="list-style-type: none"> <li>• More than one value requested</li> <li>• No value requested</li> <li>• Requested value not available</li> <li>• Parking encoder active</li> <li>• Parking drive object active</li> </ul>
8	Abort absolute value transmission on	<ul style="list-style-type: none"> <li>• Absolute encoder not available</li> <li>• Alarm bit absolute value protocol set</li> </ul>
3841	Function not supported	–

### Encoder 2 status word (G2\_ZSW)

- See Gn\_ZSW

**Encoder 2 actual position value 1 (G2\_XIST1)**

- See Gn\_XIST1

**Encoder 2 actual position value 2 (G2\_XIST2)**

- See Gn\_XIST2

**Function diagrams (see the SINAMICS DCM List Manual)**

- 4720 Encoder evaluation – Encoder interface, receive signals, encoders 1 ... 2
- 4730 Encoder evaluation – Encoder interface, send signals, encoders 1 ... 2
- 4735 Encoder evaluation – Reference mark search with external zero mark, encoders 1 ... 2

**Overview of important parameters (see SINAMICS DCM List Manual)**

**Adjustable parameter drive, CU\_S parameter is marked**

- p0418[0...15] Fine resolution Gx\_XIST1 (in bits)
- p0419[0...15] Fine resolution absolute value Gx\_XIST2 (in bits)
- p0480[0...2] CI: Encoder control word Gn\_STW signal source

**Display parameters drive**

- r0481[0...2] CO: Encoder status word Gn\_ZSW
- r0482[0...2] CO: Encoder actual position value Gn\_XIST1
- r0483[0...2] CO: Encoder actual position value Gn\_XIST2
- r0487[0...2] CO: Diagnostic encoder control word Gn\_STW
- r0979[0...30] PROFIdrive encoder format

### 10.3.2.5 Extended encoder evaluation

The standard parameter r0979[0...30] describes the assignment from the telegram configuration view.

Index 1 describes the encoder type. Subindex 1 provides further properties of the encoder:

Table 10- 20 r0979 subindex 1

Bit	Signal	Description
0	= 0 = 1	Rotating encoder Linear encoder
1	= 0 = 1	No fine resolution possible Fine resolution possible
2	= 0 = 1	64-bit not possible Reserved
3 - 28		In accordance with the PROFIdrive profile definition
29	= 0 = 1	Encoder switchable Encoder not switchable
30	= 0 = 1	Interface information still to be received No further interface information will be received
31	= 0 = 1	Data in the substructure is invalid Data in the substructure is valid

### 10.3.2.6 Central control and status words

#### Description

The central process data exists for different telegrams. For example, telegram 390 is used for transferring digital inputs and digital outputs.

The following central process data is available:

#### Receive signals:

- CU\_STW1 Control Unit control word
- A\_DIGITAL digital outputs


#### Transmit signals:

- CU\_ZSW1 Control Unit status word
- E\_DIGITAL digital inputs
- E\_DIGITAL\_1 digital inputs

**CU\_STW1 (control word for Control Unit, CU)**

See function diagram [2495].

Table 10- 21 Description of CU\_STW1 (control word for Control Unit)

Bit	Meaning	Remarks		Interconnection parameter
0	Reserved	-	-	-
1	RTC PING	-	This signal is used to set the UTC time using the PING event.	p3104 = r2090.1
2...6	Reserved	-	-	-
7	Acknowledge faults		Acknowledge faults	p2103[0] = r2090.7
8...9	Reserved	-	-	-
10	Control transferred	0	The CU has control Once the propagated faults have been acknowledged at all drive objects, the fault is also implicitly acknowledged at drive object 1 (DO1 ≙ CU).	p3116 = r2090.10
		1	External control has control The propagated faults must be acknowledged at all drive objects and must also be explicitly acknowledged at drive object 1 (DO1 ≙ CU).	
11...15	Reserved	-	-	-

**A\_DIGITAL (digital outputs)**

This process data can be used to control the Control Unit outputs.  
See function diagram [2497].

Table 10- 22 Description of A\_DIGITAL (digital outputs)

Bit	Meaning	Interconnection parameter
0	Digital output 0 (DO 0)	p50771[0] = r2091.0
1	Digital output 1 (DO 1)	p50772[0] = r2091.1
2	Digital output 2 (DO 2)	p50773[0] = r2091.2
3	Digital output 3 (DO 3)	p50774[0] = r2091.3
4...15	Reserved	-

### CU\_ZSW1 (status word of the DO1 telegram (telegrams 39x))

See function diagram [2496].

Table 10- 23 Description of CU\_ZSW1 (status word of the CU)

Bit	Meaning	Interconnection parameter
0...2	Reserved	-
3	1 = Fault present. The active faults are stored in the fault buffer. 0 = No fault present. There are no faults in the fault buffer.	p2081[3] = r2139.3
4...6	Reserved	-
7	1 = Alarm present. The active alarms are stored in the alarm buffer. 0 = No alarm present. There are no alarms in the alarm buffer.	p2081[7] = r2139.7
8	1 = Synchronize system time.	p2081[8] = r0899.8
9	1 = No group alarm present.	p2081[9] = r3114.9
10	1 = No group fault present.	p2081[10] = r3114.10
11	Reserved, always "1"	-
12...15	Reserved	-

### E\_DIGITAL (digital inputs)

See function diagram [2498].

Table 10- 24 Description of E\_DIGITAL (digital inputs)

Bit	Meaning	Interconnection parameter <sup>1)</sup>
0	CUD digital input 4 (DI 4) <sup>2)</sup>	p2082[0] = r53010.8
1	CUD digital input 5 (DI 5) <sup>2)</sup>	p2082[1] = r53010.10
2	CUD digital input 6 (DI 6) <sup>2)</sup>	p2082[2] = r53010.12
3	CUD digital input 7 (DI 7) <sup>2)</sup>	p2082[3] = r53010.14
4...7	Reserved	-
8	CUD digital input 0 (DI 0)	p2082[8] = r53010.0
9	CUD digital input 1 (DI 1)	p2082[9] = r53010.2
10	CUD digital input 2 (DI 2)	p2082[10] = r53010.4
11	CUD digital input 3 (DI 3)	p2082[11] = r53010.6
12...15	Reserved	-

<sup>1)</sup> Default can be freely changed.

<sup>2)</sup> Can be set via p50789[0...3] as digital input or digital output.

### 10.3.2.7 Diagnostics channels for cyclic communication

Alarms and faults can be transferred via two independent diagnostic channels DS0 and DS1. The information transferred is saved in parameters r0945[8] for faults and in r2122[8] for alarms. This allows the alarms and faults from a SINAMICS drive to be integrated into the system diagnostics of a higher-level controller and automatically displayed on an HMI. This function is certified for PROFINET and PROFIdrive.

The function is activated via the appropriate parameterization in the configuration tool being used, e.g. using HW Config or TIA Portal. The functionality is then transferred at the next power up to drive.

The messages of the diagnostic channels depend on the bus system being used for data transfer.

Table 10- 25 Messages in relation to bus system

		PROFIdrive error classes		SINAMICS messages		Fault/alarm
		Faults	Alarms	Faults	Alarms	
PN	GSD	Yes	Yes	No	No	Is detected and localized
	TIA	Yes	Yes	Yes	Yes	Is detected and localized, allows problems to be directly resolved

- The alarms and faults correspond to the error classes defined in the PROFIdrive profile.
- You can select whether alarms and faults are transferred to a higher-level controller either as SINAMICS messages or using the error classes of the PROFIdrive profile.
- The alarms and faults can be mapped with standard resources (e.g. GSDML)
- The alarms or faults are logically and locally signaled:
  - With alarm or fault number
  - With assignment of the drive object, message value and hardware component assignment
  - In a user-friendly way with plain message texts
  - Display with user-defined names for drive objects and components
  - SINAMICS transfers the messages in the order that they have occurred
  - SINAMICS does not record any time stamps
  - The time stamps are generated from the higher-level controller when the messages are received
  - To transfer the SINAMICS messages, the extended channel diagnostics is used
- The existing mechanisms of TIA and S7 Classic can be used.
- The messages are compatible with PROFINET controllers.

- Alarms or faults are acknowledged using the already known acknowledgment routes.
- Transfer possible via interface IF1 and/or IF2

---

**Note**

**Restriction in the case of shared device**

If Shared device is activated, only one of the controllers can receive diagnoses.

---

**Transmission in the case of cyclic communication**

- For PROFINET, there is a unique assignment of the drive objects to the slots of the cyclic communication. The diagnostics is issued at the MAP/PAP-submodule.

**Transmission in the case of acyclic communication**

- There is no slot or subslot configured at which diagnostics can be issued.
- Faults or alarms that occur are routed along the BICO connections to the drive objects.

**Display of error classes according to PROFIdrive**

- For transfer with PROFINET, the PROFIdrive error class and the extended channel diagnostics.

### 10.3.3 Parallel operation of communication interfaces

The two cyclic interfaces for the setpoints and actual values differ by the parameter ranges used (BICO technology, etc.) and the functions that can be used. The interfaces are designated as cyclic interface 1 (IF1) and cyclic interface 2 (IF2).

Cyclic process data (setpoints / actual values) are processed using interfaces IF1 and IF2. The following interfaces are used:

- Onboard interfaces of the Control Unit for PROFIBUS DP
- An additional interface (COMM-BOARD) for PROFINET or Ethernet/IP (CBE20 Communication Board Ethernet) for insertion in the Control Unit as an option.

Parameter p8839 is used to set the parallel use of the Control Unit onboard interfaces and COMM-BOARD in the SINAMICS system. The functionality is assigned to interfaces IF1 and IF2 using indices.

For example, the following applications are possible:

- PROFIBUS DP for control and PROFINET to acquire actual values / measured values of the drive
- PROFIBUS DP for control and PROFINET for engineering only
- Mixed mode with two masters (the first for logic and coordination, and the second for technology)
- SINAMICS Link via IF1 (CBE20 Communication Board Ethernet); PROFIBUS (only DO Drive, max. 16 PZD) IF2
- Operation of redundant communication interfaces

### Assignment of communication interfaces to cyclic interfaces

The two cyclic interfaces for the setpoints and actual values differ by the parameter ranges used (BICO technology, etc.) and the functions that can be used. The interfaces are designated as cyclic interface 1 (IF1) and cyclic interface 2 (IF2).

With the factory setting p8839 = 99, the communication interfaces are permanently assigned one of the cyclic interfaces (IF1, IF2), depending on the communication system, e.g. PROFIBUS DP, PROFINET.

The assignment to the cyclic interfaces can essentially be freely defined by user parameterization for the parallel operation of the communication interfaces.



## Properties of the cyclic interfaces IF1 and IF2

The following table shows the different features of the two cyclic interfaces:

Table 10- 26 Properties of the cyclic interfaces IF1 and IF2

Feature	IF1	IF2
Setpoint (BICO signal source)	r2050, r2060	r8850, r8860
Actual value (BICO signal sink)	p2051, p2061	p8851, p8861
PROFIdrive conformance	Yes	No
PROFIdrive telegram selection (p0922)	Yes	No
Isochronous mode possible (p8815[0])	No	No
PROFIsafe possible (p8815[1])	No	No
Direct data exchange (PROFIBUS only)	Yes	Yes
List of drive objects (p0978)	Yes	Yes
Max. PZD (16-bit) setpoint / actual value DC_CTRL	64 / 64	64 / 64
Max. PZD (16-bit) setpoint / actual value encoder	4 / 12	4 / 12
Max. PZD (16-bit) setpoint / actual value TM31	5 / 5	5 / 5
Max. PZD (16-bit) setpoint / actual value TM15DI_DO	5 / 5	5 / 5
Max. PZD (16-bit) setpoint / actual value TM150	5 / 5	5 / 5
Max. PZD (16-bit) setpoint / actual value CU (device)	20 / 25	20 / 25

Table 10- 27 Implicit assignment of hardware to cyclic interfaces for p8839[0] = p8839[1] = 99

Plugged hardware interface	IF1	IF2
No option, only use Control Unit onboard interface (PROFIBUS, PROFINET or USS)	Control Unit onboard	--
CUD with CBE20 Communication Board Ethernet	COMM BOARD	Control Unit onboard PROFIBUS or Control Unit onboard USS

Parameter p8839[0,1] is used to set the parallel operation of the hardware interfaces and the assignment to the cyclic interfaces IF1 and IF2 for the Control Unit drive object.

The object sequence for process data exchange via IF2 depends on the object sequence from IF1; see "List of drive objects" (p0978).

The factory setting of p8839[0.1] = 99 enables the implicit assignment (see previous table).

An alarm is generated in case of invalid or inconsistent parameterization of the assignment.

**Parameters for IF2**

The following parameters are available in order to optimize the IF2 for a PROFIBUS or PROFINET interface:

- Receive and send process data:  
r8850, p8851, r8853, r8860, p8861, r8863<sup>1)</sup>
- Diagnostic parameters:  
r8874, r8875, r8876<sup>1)</sup>
- Binector-connector converters:  
p8880, p8881, p8882, p8883, p8884, r8889<sup>1)</sup>
- Connector-binector converters:  
r8894, r8895, p8898, p8899<sup>1)</sup>

<sup>1)</sup> Significance of 88xx identical to 20xx

**Note**

Using the HW Config configuration tool, a PROFIBUS/PROFINET slave with two interfaces cannot be shown. In parallel operation, this is the reason that SINAMICS appears twice in the project or in two projects, although physically it is just one device.

**Parameter**

<b>p8839</b>	<b>PZD Interface hardware assignment</b>
Description:	Assigning the hardware for cyclic communication via PZD interface 1 and interface 2.
Values:	0: Inactive
	1: Control Unit onboard
	2: COMM BOARD
	99: Automatic

For p8839, the following rules apply:

- The setting of p8839 applies for all drive objects of a Control Unit (device parameter).
- For the setting p8839[0] = 99 and p8839[1] = 99 (automatic assignment, factory setting), the hardware used is automatically assigned to interfaces IF1 and IF2. Both indices must be selected so that the automatic assignment is activated. If both indices are not selected, then an alarm is output and the setting p8839[x] = 99 is treated just like 'inactive'.
- An alarm is issued if the same hardware (Control Unit onboard or COMM-BOARD) is selected in p8839[0] and p8839[1]. Then the setting of p8839[0] is valid, and the setting of p8839[1] is treated as 'inactive'.
- If p8839[x] is set to 2, and the COMM-BOARD is missing/defective, then the corresponding interface is not automatically supplied from the Control Unit onboard interface. Message A08550 is output instead.

## Overview of important parameters (see SINAMICS DCM List Manual)

- p0922 IF1 PROFIdrive PZD telegram selection
- p0978[0...24] List of drive objects
- p8815[0...1] IF1/IF2 PZD functionality selection
- p8839[0...1] PZD Interface hardware assignment

### 10.3.4 Acyclic communication

#### 10.3.4.1 General information about acyclic communication

With acyclic communication, as opposed to cyclic communication, data transfer takes place only when an explicit request is made (e.g. in order to read and write parameters).

The "Read data record" and "Write data record" services are available for acyclic communication.

The following options are available for reading and writing parameters:

- S7 protocol

This protocol uses the STARTER commissioning tool, for example, in online mode via PROFIBUS.

- PROFIdrive parameter channel with the following data sets:

- PROFIBUS: Data block 47 (0x002F)

The DPV1 services are available for master class 1 and class 2.

- PROFINET: Data block 47 and 0xB02F at global access, data set 0xB02E as local access

---

#### Note

Please refer to the following documentation for a detailed description of acyclic communication:

Reference: PROFIdrive Profile V4.2, October 2015, Order No: 3.172

---

#### Note

##### Addressing

- PROFIBUS DP:

The addressing is carried out via the logical address or the diagnostics address.

- PROFINET IO:

The addressing is only undertaken using a diagnostics address which is assigned to a module as of slot 1. Parameters cannot be accessed via slot 0.

---

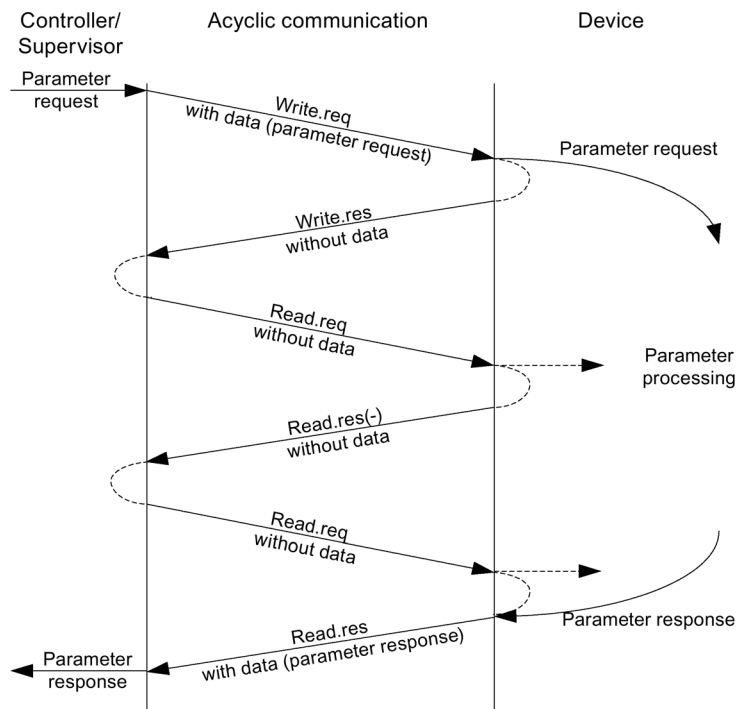


Figure 10-9 Reading and writing data

### Properties of the parameter channel

- One 16-bit address exists for each parameter number and subindex.
- Concurrent access by several PROFIBUS masters (master class 2) or PROFINET IO supervisor (e.g. commissioning tool).
- Transfer of different parameters in one access (multiple parameter request).
- Transfer of complete arrays or part of an array possible.
- Only one parameter request is processed at a time (no pipelining).
- A parameter request/response must fit into a data set (max. 240 bytes).
- The request or the response header is user data.

### 10.3.4.2 Structure of orders and responses

#### Structure of parameter request and parameter response

Table 10- 28 Parameter request

	Parameter request			Offset
Values for write access only	Request header	Request reference	Request ID	0
		Axis	Number of parameters	2
	1st parameter address	Attribute	Number of elements	4
		Parameter number		6
		Subindex		8
	...			
	nth parameter address	Attribute	Number of elements	
		Parameter number		
		Subindex		
	1st parameter value(s)	Format	Number of values	
		Values		
		...		
	...			
	nth parameter value(s)	Format	Number of values	
Values				
...				

Table 10- 29 Parameter response

	Parameter response			Offset
Values for read access only	Response header	Request reference mirrored	Response ID	0
		Axis mirrored	Number of parameters	2
Error values for negative response only	1st parameter value(s)	Format	Number of values	4
		Values or error values		6
		...		
...				
	nth parameter value(s)	Format	Number of values	
		Values or error values		
		...		

**Description of fields in DPV1 parameter request and response**

Table 10- 30 Fields

Field	Data type	Values	Remark
Request reference	Unsigned8	0x01 ... 0xFF	
	Unique identification of the request/response pair for the master. The master changes the request reference with each new request. The slave mirrors the request reference in its response.		
Request ID	Unsigned8	0x01 0x02	Read request Write request
	Specifies the type of request. In the case of a write request, the changes are made in a volatile memory (RAM). A save operation is needed in order to transfer the modified data to the non-volatile memory (p0971, p0977).		
Response ID	Unsigned8	0x01 0x02 0x81 0x82	Read request (+) Write request (+) Read request (-) Write request (-)
	Mirrors the request identifier and specifies whether request execution was positive or negative. Negative means: Cannot execute part or all of request. The error values are transferred instead of the values for each subresponse.		
Drive object number	Unsigned8	0x00 ... 0xFF	Number
	Specification of the drive object number for a drive unit with more than one drive object. Different drive objects with separate parameter number ranges can be accessed over the same DPV1 connection.		
Number of parameters	Unsigned8	0x01 ... 0x27	No. 1 ... 39 Limited by DPV1 telegram length
	Defines the number of adjoining areas for the parameter address and/or parameter value for multi-parameter requests. The number of parameters = 1 for single requests.		
Attribute	Unsigned8	0x10 0x20 0x30	Value Description Text (not implemented)
	Type of parameter element accessed.		
Number of elements	Unsigned8	0x00 0x01 ... 0x75	Special function No. 1 ... 117 Limited by DPV1 telegram length
	Number of array elements accessed.		
Parameter number	Unsigned16	0x0001 ... 0xFFFF	No. 1 ... 65535
	Addresses the parameter to be accessed.		
Subindex	Unsigned16	0x0000 ... 0xFFFF	No. 0 ... 65535
	Addresses the first array element of the parameter to be accessed.		

Field	Data type	Values	Remark	
Format	Unsigned8	0x02	Data type integer8	
		0x03	Data type integer16	
		0x04	Data type integer32	
		0x05	Data type unsigned8	
		0x06	Data type unsigned16	
		0x07	Data type unsigned32	
		0x08	Data type floating point	
		Other values	See PROFIdrive profile V3.1	
		0x40	Zero (without values as a positive subresponse to a write request)	
		0x41	Byte	
		0x42	Word	
		0x43	Double word	
		0x44	Error	
		The format and number specify the adjoining space containing values in the telegram. For write access, it is preferable to specify data types according to the PROFIdrive profile. Bytes, words and double words are also possible as a substitute.		
Number of values	Unsigned8	0x00 ... 0xEA	No. 0 ... 234	
			Limited by DPV1 telegram length	
Specifies the number of subsequent values.				
Error values	Unsigned16	0x0000 ... 0x00FF	Significance of the error values → refer to the following table "Error values in the DPV1 parameter responses"	
			The error values in the event of a negative response. If the values make up an odd number of bytes, a zero byte is attached. This ensures the integrity of the word structure of the telegram.	
Values	Unsigned16	0x0000 ... 0x00FF		
			The values of the parameter for read or write access. If the values make up an odd number of bytes, a zero byte is attached. This ensures the integrity of the word structure of the telegram.	

**Error values in DPV1 parameter responses**

Table 10- 31 Error values in DPV1 parameter responses

Error value	Meaning	Remark	Additional info
0x00	Illegal parameter number.	Access to a parameter that does not exist.	–
0x01	Parameter value cannot be changed.	Modification access to a parameter value that cannot be changed.	Subindex
0x02	Lower or upper value limit exceeded.	Modification access with value outside value limits.	Subindex
0x03	Invalid subindex.	Access to a subindex that does not exist.	Subindex
0x04	No array.	Access with subindex to non-indexed parameter.	–
0x05	Wrong data type.	Modification access with a value that does not match the data type of the parameter.	–
0x06	Illegal set operation (only reset allowed).	Modification access with a value not equal to 0 in a case where this is not allowed.	Subindex
0x07	Description element cannot be changed.	Modification access to a description element that cannot be changed.	Subindex
0x09	No description data available.	Access to a description that does not exist (the parameter value exists).	–
0x10	Read job will not be executed.	The read request is refused because know-how protection is active.	
0x0B	No operating priority.	Modification access with no operating priority.	–
0x0F	No text array exists.	Access to a text array that does not exist (the parameter value exists).	–
0x11	Request cannot be executed due to operating status.	Access is temporarily not possible for unspecified reasons.	–
0x14	Illegal value.	Modification access with a value that is within the limits but is illegal for other permanent reasons (parameter with defined individual values).	Subindex
0x15	Response too long.	The length of the present response exceeds the maximum transfer length.	–
0x16	Illegal parameter address.	Illegal or unsupported value for attribute, number of elements, parameter number, subindex or a combination of these.	–
0x17	Illegal format.	Write request: Illegal or unsupported parameter data format.	–
0x18	Number of values inconsistent.	Write request: A mismatch exists between the number of values in the parameter data and the number of elements in the parameter address.	–
0x19	Drive object does not exist.	You have tried to access a drive object that does not exist.	–
0x20	Parameter text cannot be changed	–	–
0x21	Service not supported.	Illegal or unknown request ID	–
0x65	Parameter presently deactivated.	You have tried to access a parameter that, although available, does not currently perform a function (e.g. n control set and access to a V/f control parameter).	–



Error value	Meaning	Remark	Additional info
0x6B	Write access for the enabled controller.	Write access is possible while the device is in the "Controller enable" state. Pay attention to the parameter attribute "changeable" in the SINAMICS DCM List Manual (C1, C2, U, T).	–
0x6C	Parameter %s [%s]: Unknown unit.	–	–
0x6D	Parameter %s [%s]: Write access only in the commissioning state, encoder (p0010 = 4).	–	–
0x6E	Parameter %s [%s]: Write access only in the commissioning state, motor (p0010 = 3).	–	–
0x6F	Parameter %s [%s]: Write access only in the commissioning state, power unit (p0010 = 2).	–	–
0x70	Parameter %s [%s]: Write access only in the quick commissioning mode (p0010 = 1).	–	–
0x71	Parameter %s [%s]: Write access only in the ready mode (p0010 = 0).	–	–
0x72	Parameter %s [%s]: Write access only in the commissioning state, parameter reset (p0010 = 30).	–	–
0x73	Parameter %s [%s]: Write access only in the commissioning state, Safety (p0010 = 95).	–	–
0x74	Parameter %s [%s]: Write access only in the commissioning state, tech. application/units (p0010 = 5).	–	–
0x75	Parameter %s [%s]: Write access only in the commissioning state (p0010 not equal to 0).	–	–
0x76	Parameter %s [%s]: Write access only in the commissioning state, download (p0010 = 29).	–	–
0x77	Parameter %s [%s] must not be written during download.	–	–
0x78	Parameter %s [%s]: Write access only in the commissioning state, drive configuration (device: p0009 = 3).	–	–
0x79	Parameter %s [%s]: Write access only in the commissioning state, define drive type (device: p0009 = 2).	–	–

10.3 Communication according to PROFIdrive

Error value	Meaning	Remark	Additional info
0x7A	Parameter %s [%s]: Write access only in the commissioning state, data record base configuration (device: p0009 = 4).	–	–
0x7B	Parameter %s [%s]: Write access only in the commissioning state, device configuration (device: p0009 = 1).	–	–
0x7C	Parameter %s [%s]: Write access only in the commissioning state, device download (device: p0009 = 29).	–	–
0x7D	Parameter %s [%s]: Write access only in the commissioning state, device parameter reset (device: p0009 = 30).	–	–
0x7E	Parameter %s [%s]: Write access only in the commissioning state, device ready (device: p0009 = 0).	–	–
0x7F	Parameter %s [%s]: Write access only in the commissioning state, device (device: p0009 not equal to 0).	–	–
0x81	Parameter %s [%s] must not be written during download.	–	–
0x82	Transfer of master control is blocked by BI: p0806.	–	–
0x83	Parameter %s [%s]: Requested BICO interconnection not possible.	BICO output does not supply float values. The BICO input, however, requires a float value.	–
0x84	Parameter %s [%s]: Parameter change inhibited (refer to p0300, p0400, p0922)	–	–
0x85	Parameter %s [%s]: Access method not defined.	–	–
0x87	Write job will not be executed..	The write request is rejected because know-how protection is active.	–
0xC8	Below currently valid limit.	Modification request for a value that, although within "absolute" limits, is below the currently valid lower limit.	–
0xC9	Above currently valid limit.	Modification request for a value that, although within "absolute" limits, is below the currently valid lower limit (e.g. governed by the current converter rating).	–
0xCC	Write access not permitted.	Write access is not permitted because an access code is not available.	–

### 10.3.4.3 Determining the drive object numbers

Further information about the drive system (e.g. drive object numbers) can be determined as follows using parameters p0101, r0102, and p0107/r0107:

1. The value of parameter r0102 ("Number of drive objects") for drive object/axis 1 is read via a read request.

Drive object 1 is the Control Unit (CU) which is a minimum requirement for each drive system.

2. Depending on the result of the initial read request, further read requests for drive object 1 are used to read the indices for parameter p0101 ("Drive object numbers"), as specified by parameter r0102.

Example:

If the number of drive objects is "5", the values of indices 0 to 4 of parameter p0101 are read. Of course, the relevant indexes can also be read at once.

---

#### Note

The first two points provide you with the following information:

- The number of drive objects that exist in the drive system
- The numbers of the existing drive objects

3. Following this, parameter r0107/p0107 ("Drive object type") is read for each drive object (indicated by the drive object number).

Depending on the drive object, parameter 107 can be either an adjustable parameter or a display parameter.

The value in parameter r0107/p0107 indicates the drive object type. The coding for the drive object type is specified in the parameter list.

4. As of here, the list of parameters applies to the particular drive object.

### 10.3.4.4 Example 1: Read parameters

#### Requirements

- The PROFIdrive controller has been commissioned and is fully operational.
- PROFIdrive communication between the controller and the device is operational.
- The controller can read and write data sets in conformance with PROFIdrive DPV1.

#### Task description

Following the occurrence of at least one fault (ZSW1.3 = "1") on object drive 2, the active fault codes must be read from the fault buffer r0945[0] ... r0945[7].

The request is to be handled using a request and response data block.

**Basic procedure**

1. Create a request to read the parameters.
2. Invoke the request.
3. Evaluate the response.

**Create the request**

Parameter request			Offset
Request header	Request reference = 25 hex	Request ID = 01 hex	0 + 1
	Axis = 02 hex	Number of parameters = 01 hex	2 + 3
Parameter address	Attribute = 10 hex	Number of elements = 08 hex	4 + 5
	Parameter no. = 945 dec		6
	Subindex = 0 dec		8

**Information about the parameter request:**

- Request reference:  
The value is selected at random from the valid value range. The request reference establishes the relationship between request and response.
- Request ID:  
01 hex → This identifier is required for a read request.
- Axis:  
02 hex → Drive 2, fault buffer with drive- and device-specific faults
- Number of parameters:  
01 hex → One parameter is read.
- Attribute:  
10 hex → The parameter values are read.
- Number of elements:  
08 hex → The actual fault incident with eight faults is to be read.
- Parameter number:  
945 dec → p0945 (fault code) is read.
- Subindex:  
0 dec → Reading starts at index 0.

**Initiate parameter request**

If ZSW1.3 = "1" → Initiate parameter request.

### Evaluate parameter response

Parameter response			Offset
Response header	Request reference mirrored = 25 hex	Response ID = 01 hex	0 + 1
	Axis mirrored = 02 hex	Number of parameters = 01 hex	2 + 3
Parameter value	Format = 06 hex	Number of values = 08 hex	4 + 5
	1st value = 1355 dec		6
	2nd value = 0 dec		8
	...		...
	8th value = 0 dec		20

#### Information about the parameter response:

- Request reference mirrored:  
This response belongs to the request with request reference 25.
- Response ID:  
01 hex → Read request positive, values stored as of 1st value.
- Axis mirrored, number of parameters:  
The values correspond to the values from the request.
- Format:  
06 hex → Parameter values are in the unsigned16 format.
- Number of values:  
08 hex → Eight parameter values are available.
- 1st value ... 8th value  
A fault is only entered in value 1 of the fault buffer for drive 2.

### 10.3.4.5 Example 2: Write parameters (multi-parameter request)

#### Requirements


- The PROFIdrive controller has been commissioned and is fully operational.
- PROFIdrive communication between the controller and the device is operational.
- The controller can read and write data sets in conformance with PROFIdrive DPV1.

#### Task description

Jog 1 and 2 are to be set up via the input terminals of the CUD. A parameter request is to be used to write the corresponding parameters as follows:

- BI: p1055 = r53010.0 Jog bit 0
- BI: p1056 = r53010.6 Jog bit 1
- p50436[0] = 5% Jog 1 speed setpoint
- p50436[1] = 10% Jog 2 speed setpoint

The request is to be handled using a request and response data block.

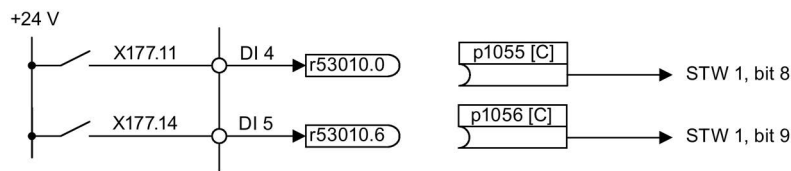

Input in BI: p1055 and BI: p1056

Object  
 0: Device  
 2: DC\_CTRL  
 63: Wiring on itself

Parameter number	Index number		
r53010	2	0	= CF12 0400 Hex
r53010	2	6	= CF12 0406 Hex
31 ... 16	15 ... 10	9 ... 0	

Figure 10-10 Task description for multi-parameter request (example)

#### Basic procedure

1. Create a request to write the parameters.
2. Invoke the request.
3. Evaluate the response.

## 1. Creating a request

Table 10- 32 Parameter request

Parameter request			Offset
Request header	Request reference = 40 hex	Request ID = 02 hex	0 + 1
	Axis = 02 hex	Number of parameters = 04 hex	2 + 3
1st parameter address	Attribute = 10 hex	Number of elements = 01 hex	4 + 5
	Parameter no. = 1055 dec		6
	Subindex = 0 dec		8
2nd parameter address	Attribute = 10 hex	Number of elements = 01 hex	10 + 11
	Parameter no. = 1056 dec		12
	Subindex = 0 dec		14
3rd parameter address	Attribute = 10 hex	Number of elements = 01 hex	16 + 17
	Parameter no. = 53436 dec		18
	Subindex = 0 dec		20
4th parameter address	Attribute = 10 hex	Number of elements = 01 hex	22 + 23
	Parameter number = 50436 dec		24
	Subindex = 1 dec		26
1st parameter value(s)	Format = 07 hex	Number of values = 01 hex	28 + 29
	Value = CF12 hex		30
	Value = 0400 hex		32
2nd parameter value(s)	Format = 07 hex	Number of values = 01 hex	34 + 35
	Value = CF12 hex		36
	Value = 0406 hex		38
3rd parameter value(s)	Format = 08 hex	Number of values = 01 hex	40 + 41
	Value = 40A0 hex		42
	Value = 0000 hex		44
4th parameter value(s)	Format = 08 hex	Number of values = 01 hex	46 + 47
	Value = 4120 hex		48
	Value = 0000 hex		50

### Information about the parameter request:

- Request reference:  
The value is selected at random from the valid value range. The request reference establishes the relationship between request and response.
- Request ID:  
02 hex → This identifier is required for a write request.
- Axis:  
02 hex → The parameters are written to drive 2.
- Number of parameters  
04 hex → The multi-parameter request comprises four individual parameter requests.

**1st parameter address ... 4th parameter address**

- Attribute:  
10 hex → The parameter values are to be written.
- Number of elements  
01 hex → One array element is written.
- Parameter number  
Specifies the number of the parameter to be written (p1055, p1056, p50436).
- Subindex:  
0 dec → ID of the first array element.

**1st parameter value ... 4th parameter value**

- Format:  
07 hex → Data type, unsigned32  
08 hex → Data type, floating point
- Number of values:  
01 hex → A value is written to each parameter in the specified format.
- Value:  
BICO input parameter: Enter signal source  
Adjustable parameter: Enter value

**2. Initiating the parameter request**

**3. Evaluating the parameter response**

Parameter response			Offset
Response header	Request reference mirrored = 40 hex	Response ID = 02 hex	0
	Axis mirrored = 02 hex	Number of parameters = 04 hex	2

**Information about the parameter response**

- Request reference mirrored:  
This response belongs to the request with request reference 40.
- Response ID:  
02 hex → Write request positive
- Axis mirrored:  
02 hex → The value matches the value from the request.
- Number of parameters:  
04 hex → The value matches the value from the request.



## 10.4 Communication via PROFIBUS DP

### 10.4.1 PROFIBUS connection



**! WARNING**

**Electric shock during connection while voltage is present**

When connecting the PROFIBUS cable while voltage is present, there is a danger of coming into contact with live components behind the terminal.

Touching live components can result in death or serious injury.

- Only connect the PROFIBUS cable to connector X126 when the unit is in a de-energized state.

#### Position of PROFIBUS connection and diagnostics LEDs

The PROFIBUS connection and diagnostics LEDs are located on the Control Unit (CUD).

The PROFIBUS connection is via a 9-pin Sub-D socket X126. The connections are electrically isolated.

See also Figure 6-44 Terminal/connector arrangement on the "Control Unit (CUD)" (Page 156) and Chapter "Description of the LEDs on the CUD (Page 635)".

#### PROFIBUS connection

Table 10- 33 PROFIBUS connector assignment

Connector X126	Pin	Signal name	Technical specifications
	1	-	Not assigned
	2	-	Not assigned
	3	RxD/TxD-P	RS485 receive/transmit data P (B)
	4	CNTR-P	Control signal (TTL)
	5	DGND	PROFIBUS data ground
	6	VP	Positive supply voltage (5 V +/-10%)
	7	-	Not assigned
	8	RxD/TxD-N	RS485 receive/transmit data N (A)
	9	-	Not assigned

"Control Unit (CUD)" module

### Bus connector

The cables must be connected using PROFIBUS bus connectors as these contain the necessary bus terminating resistors.

Suitable PROFIBUS bus connector: Article No. 6GK1500-0FC10

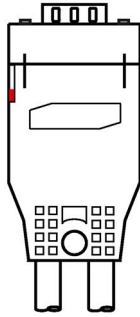


Figure 10-11 PROFIBUS bus connector

### Bus terminating resistor

The bus terminating resistor must be switched on or off depending on its position in the bus, otherwise the data will not be transmitted properly.

Principle: The terminating resistors must only be switched on at both ends of the bus line; the resistors must be switched off at all other connectors.

The cable shield must be connected at both ends and over a large surface area.

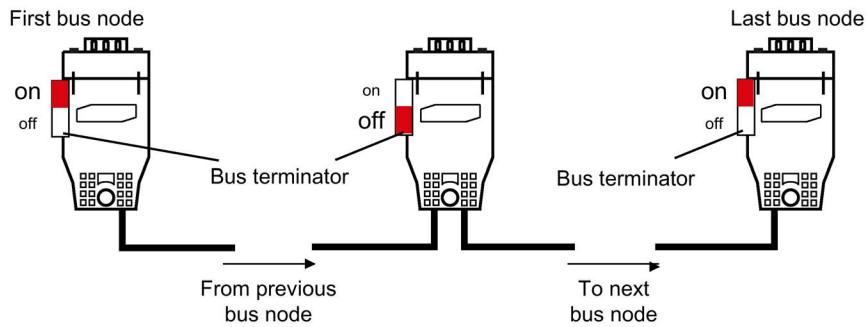


Figure 10-12 Position of the bus terminating resistors

## 10.4.2 General information about PROFIBUS

### 10.4.2.1 General information about PROFIBUS for SINAMICS

PROFIBUS is an open international fieldbus standard for a wide range of production and process automation applications.

The following standards ensure open, multi-vendor systems:

- International standard EN 50170
- International standard IEC 61158

PROFIBUS is optimized for high-speed, time-critical data communication at field level.

---

#### Note

PROFIBUS for drive technology is standardized and described in the following document:

#### **PROFIdrive Profile Drive Technology**

PROFIBUS User Organization e. V.  
 Haid-und-Neu-Straße 7, D-76131 Karlsruhe, Germany  
<http://www.profibus.com>

---

<b>NOTICE</b>
<b>Destruction of the CAN bus nodes</b>
No CAN cables must be connected to interface X126. If CAN cables are connected, the CUD and other CAN bus nodes may be destroyed.

### Master and slave

- Master and slave properties

Properties	Master	Slave
As bus node	Active	Passive
Send messages	Permitted without external request	Only possible on request by master
Receive messages	Possible without any restrictions	Only receive and acknowledge permitted

- Master

Masters are categorized into the following classes:

- Master class 1 (DPMC1):

Central automation stations that exchange data with the slaves in cyclic and acyclic mode. Communication between the masters is also possible.

Examples: SIMATIC S7, SIMOTION

- Master class 2 (DPMC2):

Devices for configuration, commissioning, operator control and monitoring during bus operation. Devices that only exchange data with the slaves in acyclic mode.

Examples: Programming devices, human machine interfaces

- Slaves

With respect to PROFIBUS, the SINAMICS drive unit is a slave.

### Bus access method

PROFIBUS uses the token passing method, i.e. the active stations (masters) are arranged in a logical ring in which the authorization to send is received within a defined time frame.

Within this time frame, the master with authorization to send can communicate with other masters or handle communication with the assigned slaves in a master/slave procedure.

### PROFIBUS telegram for cyclic data transmission and acyclic services

Each drive unit that supports cyclic process data exchange uses a telegram to send and receive all the process data. A separate telegram is sent in order to perform all the acyclic services (read/write parameters) under a single PROFIBUS address. The acyclic data is transferred with a lower priority after cyclic data transmission.

The overall length of the telegram increases with the number of drive objects that are involved in exchanging process data.

### Sequence of drive objects in the telegram

On the drive side, the sequence of drive objects in the telegram is displayed via a list in p0978[0...24] where it can also be changed.

You can use the STARTER commissioning tool to display the sequence of drive objects for a commissioned drive system in online mode in the project navigator under "Drive unit" > "Communication" > "Telegram configuration".

When you create the configuration on the controller side (e.g. HW Config), the process-data-capable drive objects for the application are added to the telegram in this sequence.

The following drive objects can exchange process data:

- Control Unit (CU\_DC)
- Terminal Module 15 (TM15)
- Terminal Module 31 (TM31)
- Terminal Module 150 (TM150)
- DC drive control (DC\_CTRL)

---

**Note**

The sequence of drive objects in HW Config must be the same as that in the drive (p0978).

---

The structure of the telegram depends on the drive objects taken into account during configuration. Configurations are permitted that do not take into account all of the drive objects that are present in the drive system.

**Example:**

The following configurations, for example, are possible:

- Configuration with CU\_DC, DC\_CTRL
- Configuration with DC\_CTRL, TM31, TM31
- etc.

#### 10.4.2.2 Example of a telegram structure for acyclic data acquisition

##### Task

The drive system comprises the following drive objects:

SINAMICS DCM with the objects

- CU\_DC
- DC\_CTRL

##### Configuration settings (e.g. HW Config for SIMATIC S7)

The components are mapped to objects for configuration.

Due to the telegram structure shown, the objects in the "DP slave properties" overview must be configured as follows:

- CU\_DC                      Standard telegram 390
- DC\_CTRL                   Standard telegram 352

**DP slave properties – Overview – Drive-ES / STARTER**

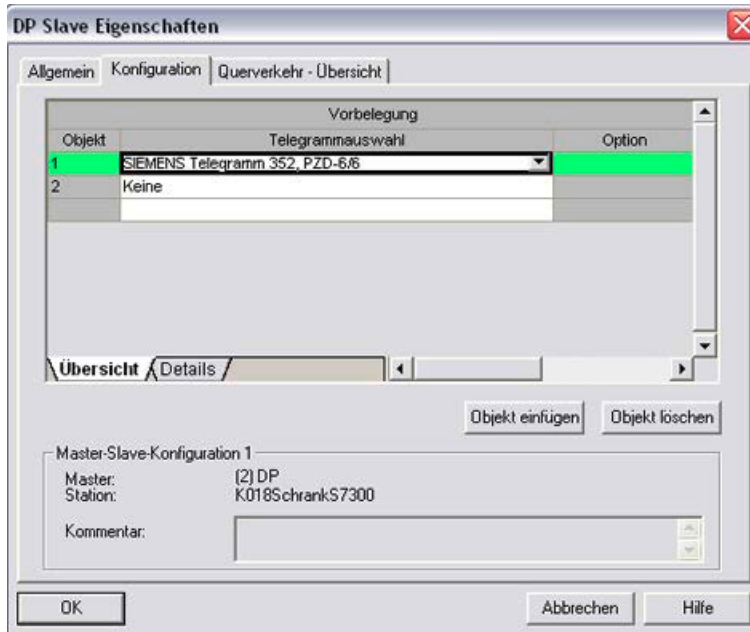


Figure 10-13 Slave properties – Overview

When you click "Details", the properties of the configured telegram structure are displayed (e.g. I/O addresses, axis separator).

**DP slave properties – Details**

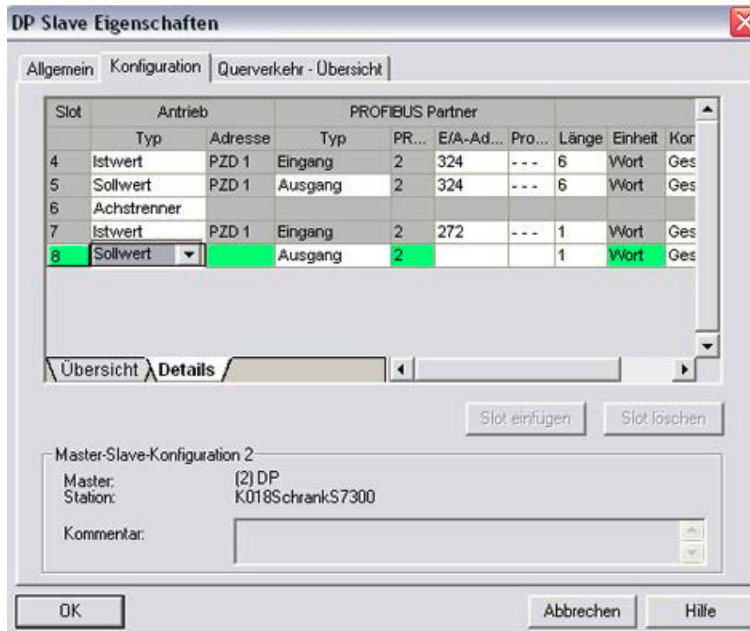


Figure 10-14 Slave properties – Details

The axis separator separates the objects in the telegram as follows:

- Slot 4 and 5:       Object 2 → DC\_CTRL
- Slot 7 and 8:       Object 1 → CU\_DC

## 10.4.3       Commissioning PROFIBUS

### 10.4.3.1     Setting the PROFIBUS interface

#### Interfaces and diagnostic LED

See Chapter "PROFIBUS connection (Page 455)".

---

#### **Note**

A teleservice adapter can be connected to the PROFIBUS interface (X126) for remote diagnostics purposes.

---

#### Setting the PROFIBUS address

The PROFIBUS address is set at parameter p0918.

The factory setting is

- For the left CUD: 126
- For the right CUD: 125

Each PROFIBUS address in a PROFIBUS line can only be assigned once. When several Control Units are connected to a PROFIBUS line, you set the addresses differently than the factory setting.

The PROFIBUS address can be changed

- Using the BOP20 (only possible on the left CUD)
- Using the AOP30 (if available)
- Using STARTER

You must switch to DO 1 (CU) to change the bus address using the BOP. Access level p0003 = 3 is required to change p0918.

When using the STARTER commissioning tool, make sure that the bus address p0918 in the offline project matches the online value. If this is not the case, the value is overwritten at the next upload or download.

The PROFIBUS address must be saved in a non-volatile way using the "Copy RAM to ROM" function.

The change made to the bus address takes effect after POWER ON.

### 10.4.3.2 PROFIBUS interface in operation

#### Generic station description file

A generic station description file clearly and completely defines the properties of a PROFIBUS slave.

The GSD files can be found:

- On the Internet. For the link, see "Preface (Page 3)"
- On the memory card in the directory \\SIEMENS\SINAMICS\DATA\CFG\
  - Universal module
  - Axis separator
  - Standard telegram1, PZD-2/2
  - Standard telegram20, PZD-2/6
  - SIEMENS telegram 220, PZD-10/10
  - SIEMENS telegram 352, PZD-6/6
  - Free telegram, PZD-4/4
  - Free telegram, PZD-8/8
  - Free telegram, PZD-16/16
  - Free telegram, PZD-32/32
  - Free telegram, PZD-64/64
  - Slave-to-slave, PZD-1
  - Slave-to-slave, PZD-2
  - Slave-to-slave, PZD-4
  - Slave-to-slave, PZD-8

The SINAMICS S DXB GSD file contains among other things standard telegrams, free telegrams and slave-to-slave telegrams for configuring direct data exchange. With the aid of these telegram parts and an axis separator, a telegram for the drive unit must be composed for each drive object.

Processing a GSD file in HW Config is covered in the SIMATIC documentation. Suppliers of PROFIBUS components can provide their own bus configuration tool. The description of the respective bus configuration tool is described in the relevant documentation.

#### Note for commissioning for VIK-NAMUR

To be able to operate a SINAMICS drive as a VIK-NAMUR drive, standard telegram 20 must be set and the VIK-NAMUR identification number activated via p2042 =1.



## Device identification

Identification for individual slaves facilitates diagnostics and provides an overview of the nodes on the PROFIBUS.

The information for each slave is stored in the following CU-specific parameter:  
r0964[0...6] device identification

## Bus terminating resistor and shielding

Reliable data transmission via PROFIBUS depends, amongst other things, on the setting of the bus terminating resistors and the shielding of the PROFIBUS cables.

- Bus terminating resistor  
The bus terminating resistors in the PROFIBUS plugs must be set as follows:
  - First and last nodes in the line: Switch on terminating resistor
  - Other nodes in the line: Switch off terminating resistor
- Shielding of the PROFIBUS cables  
The cable shield must be connected in the plug through a large surface area at both ends. See also Chapter "PROFIBUS connection (Page 455)".

### 10.4.3.3 Commissioning PROFIBUS

#### Preconditions and assumptions for commissioning

PROFIBUS slave

- The PROFIBUS address to be set for the application is known.
- The telegram type for each drive object is known by the application.

PROFIBUS master

- The communication properties of the SINAMICS DCM slave must be available in the master (GSD file or Drive ES slave OM).

### Commissioning steps (example with SIMATIC S7)

1. Set the PROFIBUS address on the slave.
2. Set the telegram type on the slave.
3. Perform the following in the HW Config:
  - Connect the drive unit to PROFIBUS and assign the address.
  - Set the telegram type.

The same telegram type as on the slave should be set for every drive object exchanging process data via PROFIBUS.

The master can send more process data than the slave uses. A telegram with a larger PZD number than is assigned for the drive object STARTER can be configured on the master.

The PZDs not supplied by the drive object are filled with zeros.

The setting "without PZD" can be defined on a node or object (e.g. infeed controlled via terminals).

4. Assign the I/O addresses according to the user program.

#### 10.4.3.4 Diagnostics options

The standard slave diagnostics can be read online in the HW config.

#### 10.4.3.5 SIMATIC HMI addressing

You can use a SIMATIC HMI as a PROFIBUS master (master class 2) to access SINAMICS directly. With respect to SIMATIC HMI, SINAMICS behaves like a SIMATIC S7. For accessing drive parameters, the following simple rule applies:

- Parameter number = data block number
- Parameter sub-index = bit 0 ... 9 of data block offset
- Drive object number = bit 10 ... 15 of data block offset

### Pro Tool and WinCC flexible

The SIMATIC HMI can be configured flexibly with "Pro Tool" or "WinCC flexible".

The following specific settings for drives must be observed when configuration is carried out with Pro Tool or WinCC flexible.

Controllers: Protocol always "SIMATIC S7 - 300/400"

Table 10- 34 Additional parameters

Field	Value
Network parameter profile	DP
Network parameter baud rate	Any
Communication partner address	PROFIBUS address of the drive unit
Communication partner slot/rack	Don't care, 0

Table 10- 35 Variables: "General" tab

Field	Value
Name	Any
Controller	Any
Type	Depending on the addressed parameter value, e.g.: INT: for integer 16 DINT: for integer 32 WORD: for unsigned 16 REAL: for float
Area	DB
DB (data block number)	Parameter number 1 ... 65535
DBB, DBW, DBD (data block offset)	Drive object No. and sub-index Bit 15 ... 10: Drive object No. 0 ... 63 Bit 9 ... 0: Sub-index 0 ... 1023 Or expressed differently DBW = 1024 * drive object No. + sub-index
Length	Not activated
Acquisition cycle	Any
Number of elements	1
Decimal places	Any

**Note**

- You can operate a SIMATIC HMI together with a drive unit independently of an existing controller.  
A basic "point-to-point" connection can only be established between two nodes (devices).
- The "variable" HMI functions can be used for drive units. Other functions cannot be used (e.g. "messages" or "recipes").
- Individual parameter values can be accessed. Entire arrays, descriptions, or texts cannot be accessed.

### 10.4.3.6 Monitoring, telegram failure

When monitoring telegram failure, SINAMICS differentiates between two cases:

- Telegram failure with a bus fault

After a telegram failure, and the additional monitoring time has elapsed (p2047), bit r2043.0 is set to "1" and alarm A01920 is output. Binector output r2043.0 can be used for a quick stop, for example.

Once the delay time p2044 has elapsed, fault F01910 is output. Fault F01910 triggers fault response OFF3 (quick stop) on the DO DC\_CTRL. If no OFF response is to be triggered, the fault response can be reparameterized accordingly.

Fault F01910 can be acknowledged immediately. The drive can then be operated even without PROFIdrive.

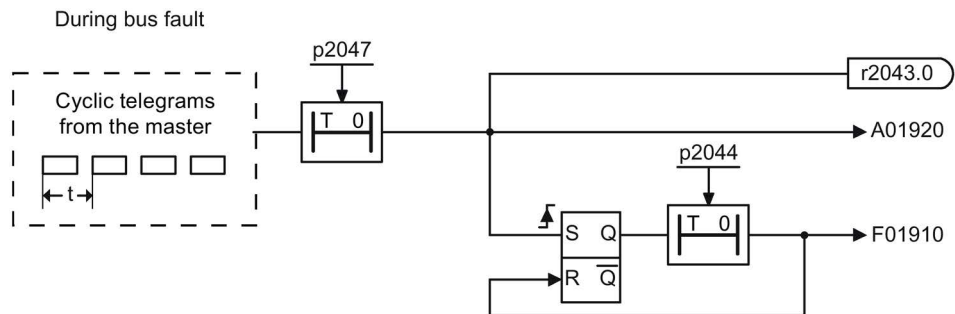


Figure 10-15 Monitoring of telegram failure with a bus fault

- Telegram failure with a CPU stop

After telegram failure, bit r2043.0 is set to "1". Binector output r2043.0 can be used for a quick stop, for example.

Once the delay time p2044 has elapsed, fault F01910 is output. Fault F01910 triggers fault response OFF3 (quick stop) on the DO DC\_CTRL. If no OFF response is to be triggered, the fault response can be reparameterized accordingly.

Fault F01910 can be acknowledged immediately. The drive can then be operated even without PROFIdrive.

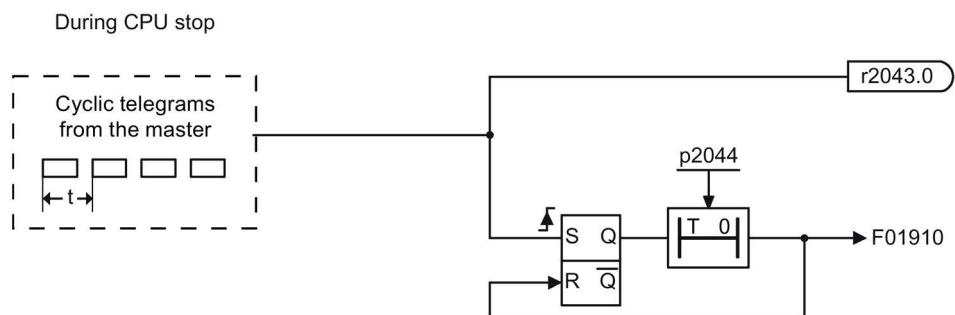


Figure 10-16 Monitoring telegram failure for a CPU stop

### **Example: Quick stop at telegram failure**

**Settings:**

- CU p2047 = 20 ms
- DC\_CTRL p2044 = 0 s

**Sequence:**

1. Following a telegram failure, and once the additional monitoring time (p2047) has elapsed, binector output r2043.0 of drive object CU switches to "1".  
Alarm A01920 and fault F01910 are output at the same time for the DC\_CTRL drive objects.
2. When F01910 is output, an OFF3 is triggered for the drive.

---

**Note**

The additional monitoring time p2047 is only useful for cyclic communication.

---

### 10.4.4 Direct data exchange

For PROFIBUS DP, the master interrogates all of the slaves one after the other in a DP cycle. In this case, the master transfers its output data (setpoints) to the particular slave and receives as response the input data (actual values). Fast, distributed data transfer between drives (slaves) is possible using the "direct data exchange" function without direct involvement from the master.

The following terms are used for the function described in this chapter:

- Direct data exchange
- Data Exchange Broadcast (DXB.req)
- Direct data exchange (is used in the following)

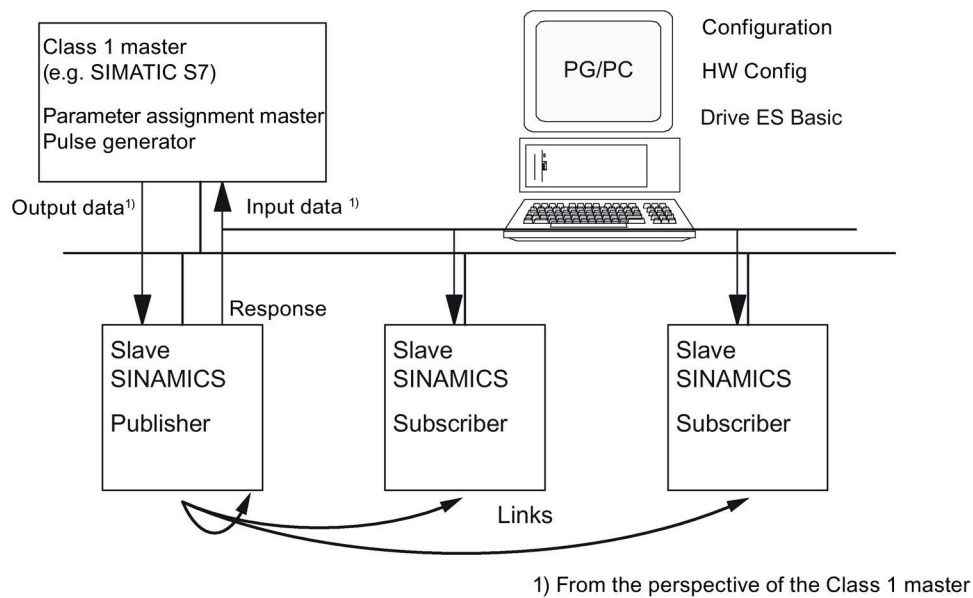


Figure 10-17 Direct data exchange with the publisher-subscriber model

#### Publisher

With the "direct data exchange" function, at least one slave must act as the publisher.

The publisher is addressed by the master when the output data is transferred with a modified layer 2 function code (DXB.req). The publisher then sends its input data for the master with a broadcast telegram to all bus nodes.

#### Subscriber

The subscribers evaluate the broadcast telegrams, sent from the publishers, and use the data which has been received as setpoints. These setpoints of the publisher are used, in addition to the setpoints received from the master, corresponding to the configured telegram structure (p0922).

## Links and taps

The links configured in the subscriber (connections to publisher) contain the following information:

- From which publisher is the input data received?
- What is the content of the input data?
- Where are the additional setpoints received?

Several taps are possible within a link. Several input data or input data areas, which are not associated with one another, can be used as setpoint via a tap.

Links are possible on the drive unit itself. This internal link corresponds, as far as the timing is concerned, to a link via PROFIBUS.

## Requirements

The following requirements should be observed for the "direct data exchange" function:

- STARTER as of Version 4.2
- Configuration:
  - Drive ES Basic, Drive ES SIMATIC or Drive ES PCS7 as of Version 5.3 SP3
  - Alternatively using a GSD file
- Firmware as of Version 1.2
- The maximum number of process data per drive can be identified from the value in r2050
  - minus the resources that have already been used
- A maximum of 16 links to publishers

## Applications

For example, the following applications can be implemented using the "direct data exchange" function:

- Axis couplings
- Specifying binector connections from another slave

### 10.4.4.1 Setpoint assignment in the subscriber

#### Information about setpoints

- Number of setpoint  
When bus communication is being established, the master signals the slave the number of setpoints (process data) to be transferred using the configuring telegram (ChkCfg).
- Contents of the setpoints  
The structure and contents of the data are determined using the local process data configuration for the "SINAMICS slave".
- Operation as "standard" slave  
The drive unit (slave) only receives its setpoints as output data from the master.
- Operation as subscriber  
When a slave is operated as a subscriber, some of the setpoints are defined by one or more publishers rather than by the master.  
The slave is informed of the assignment via the parameterization and configuration telegram when bus communication is being established.

### 10.4.4.2 Activating/parameterizing slave-to-slave communication

The "direct data exchange" function must be activated in the publishers as well as in the subscribers, whereby only the subscriber is to be configured. The publisher is automatically activated during bus startup.

#### Activation in the publisher

The master is informed about which slaves are to be addressed as publishers with a modified layer 2 function code (DXB req) via the configuration of the subscriber links.

The publisher then sends its input data not only to the master but also as a broadcast telegram to all bus nodes.

These settings are made automatically using the bus configuration tool (e.g. HW Config).

#### Activation in the subscriber

The slave, which is to be used as subscriber, requires a filter table. The slave must know which setpoints are received from the master and which are received from a publisher.

The filter table is created automatically via the bus configuration tool (e.g. HW Config).

The following diagram shows the information contained in the filter table.



### Parameterizing telegram (SetPrm)

The filter table is transferred, as a dedicated block from the master to the slave with the parameterizing telegram when a bus communication is established.

Blockheader	Block-Len <sup>1)</sup>	12 – 244
	Command	0xE2
	Slot	0x00
	Specifier	0x00
Filter table header	Version identifier	0xE2
	Number of links	0 – 3
	Offset Link1 <sup>2)</sup>	
	...	
Link1	Offset Link n <sup>2)</sup>	
	Publisher DP address	
Tap1	Publisher input length	
	Offset in the publisher data	
	Target offset in the subscriber	
Tap2	Length of the tapping	
	...	
Link2	Publisher DP address	
	...	

1) Specified in bytes

2) Calculated as of version identifier

Figure 10-18 Filter block in the parameterizing telegram (SetPrm)

### Configuration telegram (ChkCfg)

Using the configuration telegram, a slave knows how many setpoints are to be received from the master and how many actual values are to be sent to the master.

For direct data exchange, a special space ID is required for each tap. The PROFIBUS configuration tool (e.g. HW Config) generates this ID. The ID is then transferred with the ChkCfg into the drive devices that operate as subscribers.

### 10.4.4.3 Commissioning of the PROFIBUS slave-to-slave communication

The commissioning of direct data exchange between two SINAMICS drives using the additional Drive ES Basic package is described below.

#### Settings in HW Config

The project below is used to describe the settings in HW Config.

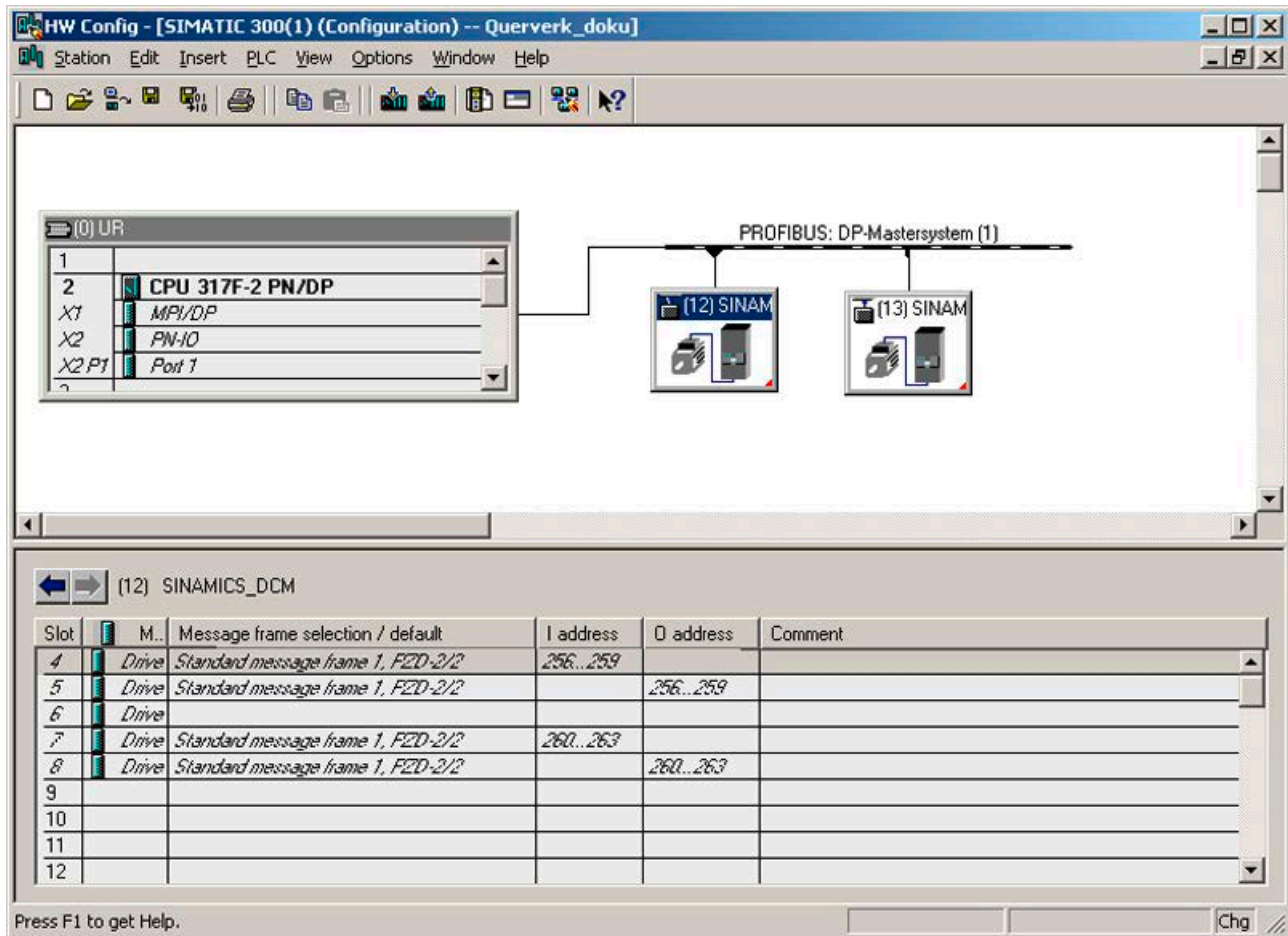


Figure 10-19 Example project of a PROFIBUS network in HW Config

## Procedure

1. Select a slave (e.g. SINAMICS DCM) and use its properties to configure the telegram for the connected drive object.
2. In the "Configuration" tab of the drive unit, select e.g. the standard telegram 1 for the associated drive in the telegram selection.

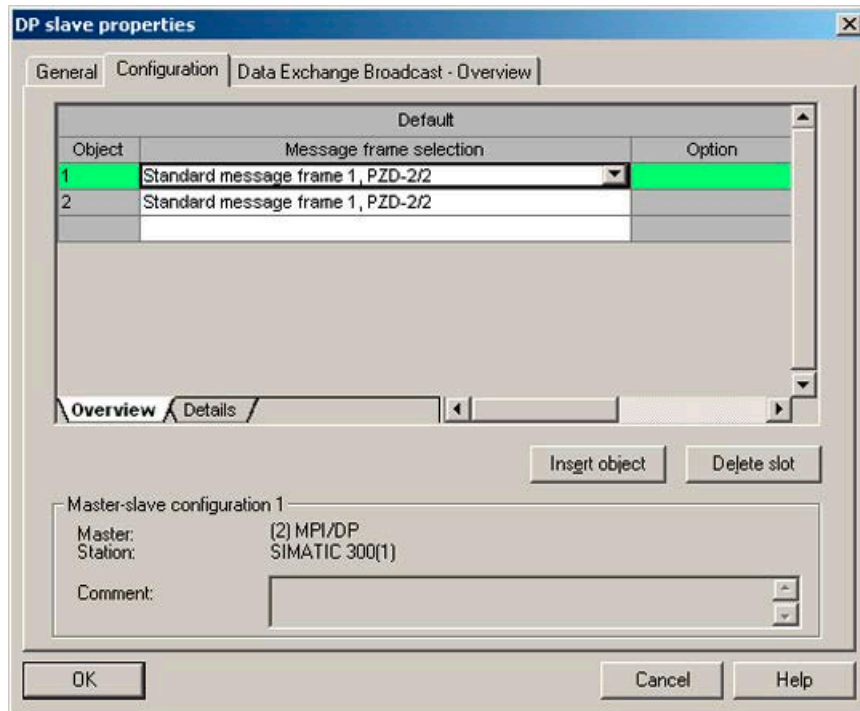


Figure 10-20 Telegram selection for drive object

- Then go to the detail view.  
Slots 4/5 contain the actual value / setpoint for the drive object.  
Slots 7/8 are the telegram portions for the actual value / setpoint of the CU.

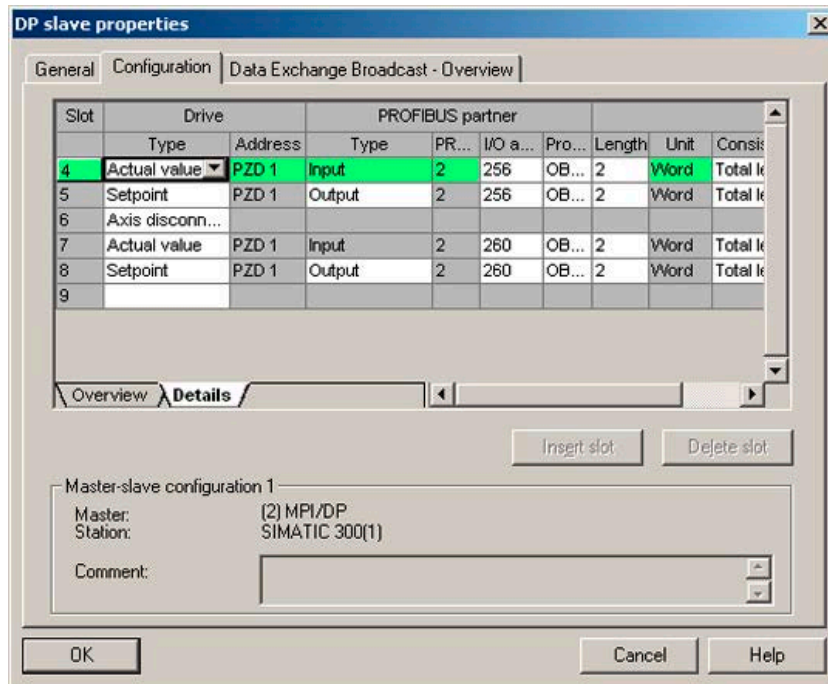


Figure 10-21 Detail view of slave configuration

- The "Insert slot" button can be used to create a new setpoint slot for the SINAMICS DCM drive object.

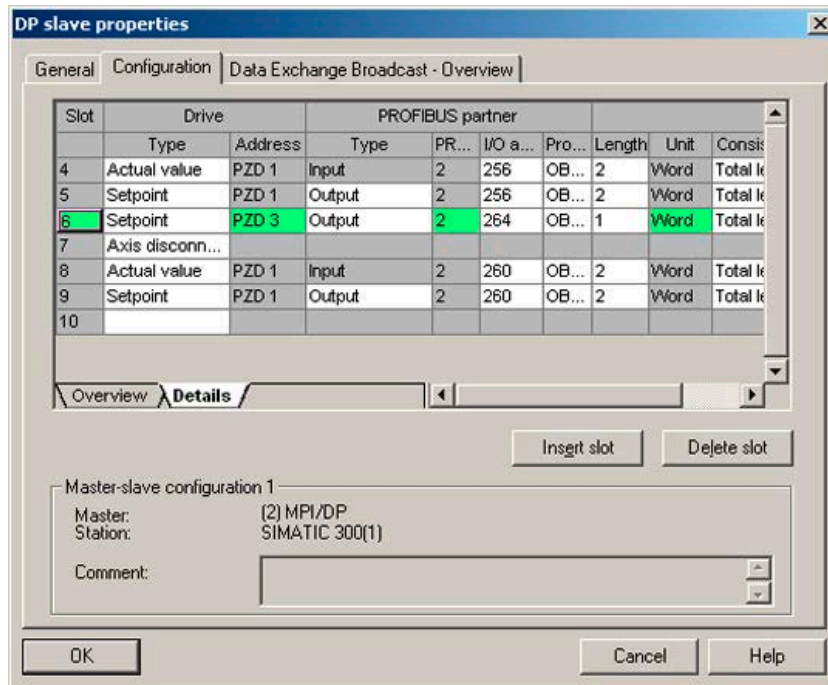


Figure 10-22 Insert new slot

5. Assign the setpoint slot the type "direct data exchange".
6. Select the publisher DP address in the "PROFIBUS address" column.  
All PROFIBUS DP slaves from which actual value data can be requested are listed here. It also provides the possibility of sharing data via direct data exchange within the same drive group.
7. The "I/O address" column displays the start address for each DO.  
Select the start address of the DO data to be read. This is 200 in the example.  
If the complete data of the publisher is not read, set this via the "Length" column. You may also offset the start address for the request so that data can be read out in the middle of the DO telegram.

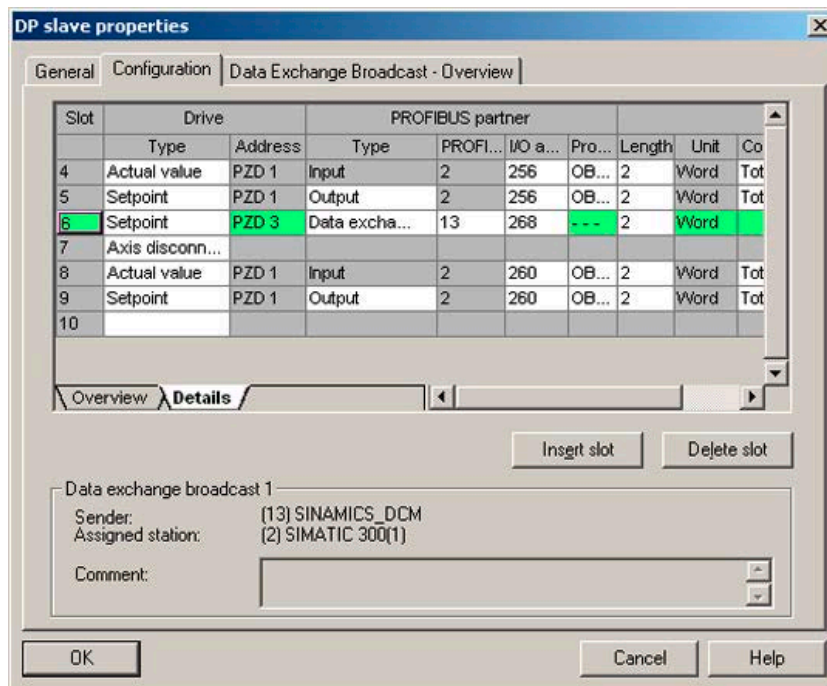


Figure 10-23 Configuring the direct data exchange nodes

- The "Direct data exchange – Overview" tab shows you the configured direct data exchange relationships which correspond to the current status of the configuration in HW Config.

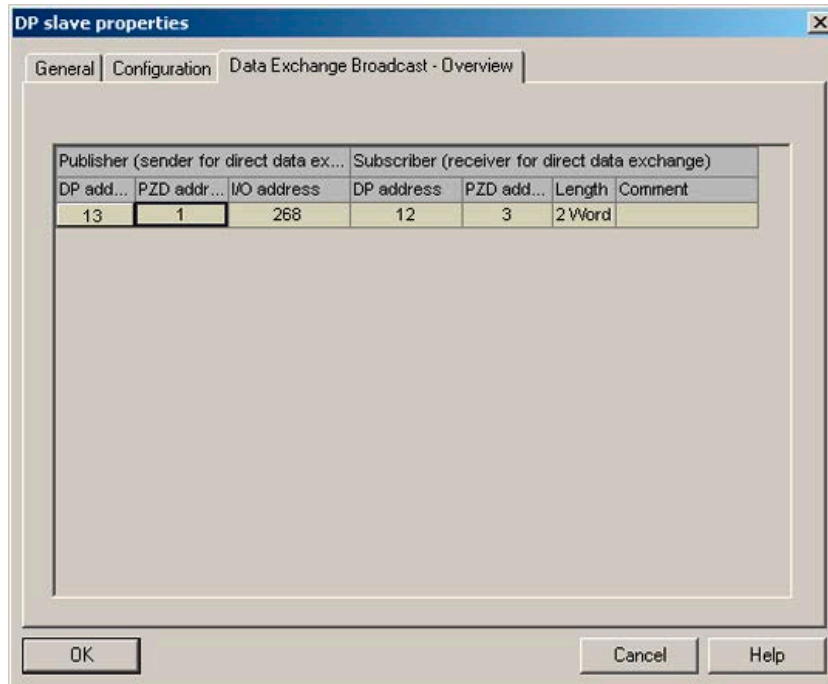


Figure 10-24 Direct data exchange – Overview

- When the direct data exchange link has been created, the standard telegram for the drive object is replaced with the "User-defined" telegram in the configuration overview.

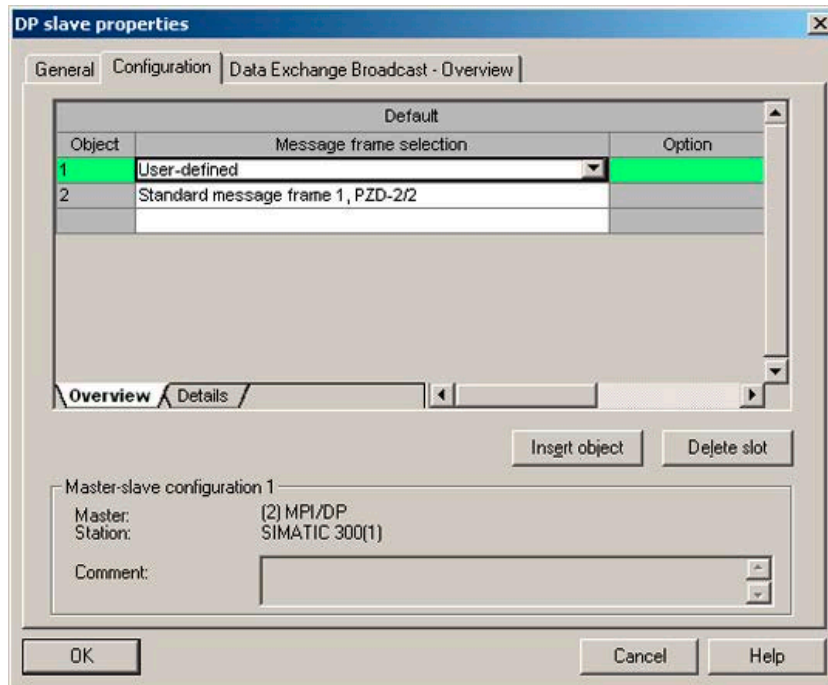


Figure 10-25 Telegram assignment for direct data exchange

10. The details after the creation of the direct data exchange link for the drive object of the SINAMICS DCM are as follows:

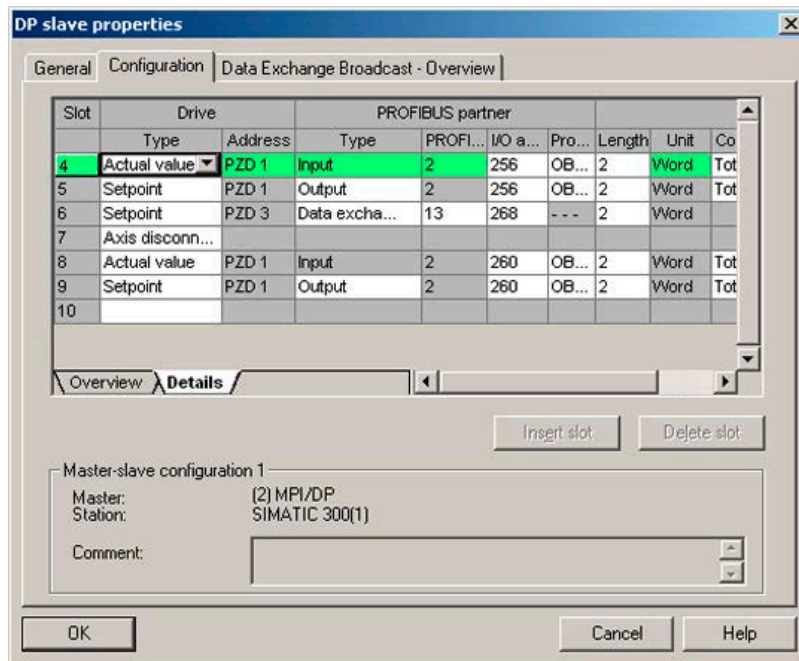


Figure 10-26 Details after the creation of the direct data exchange link

11. You must adjust the standard telegrams accordingly for every DO (drive object) of the selected CU that shall actively participate in direct data exchange.

### Commissioning in STARTER

Direct data exchange is configured in HWConfig and is simply an extension of an existing telegram. Telegrams can be extended in STARTER (e.g. p0922 = 999).

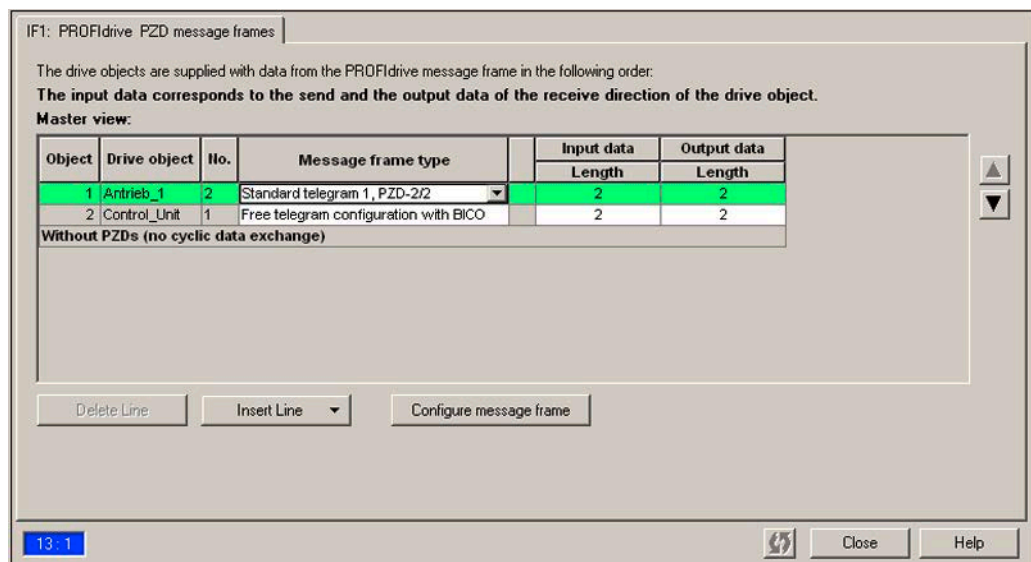


Figure 10-27 Configuring the direct data exchange links in STARTER

In order to terminate the configuration of direct data exchange for the DOs, the telegram data of the DOs in STARTER must be matched to those in the HW Config and must be extended. The configuration is made centrally via the configuration of the respective CU.

**Procedure**

1. In the overview for the PROFIBUS telegram, you can access the telegram components of the drive objects, here DC\_CTRL. Select the telegram type "Free telegram configuration" for the configuration.
2. Enter the telegram lengths for the input data and output data according to the settings in HW Config. For direct data exchange links, the input data consists of the telegram component of the master and the direct data exchange data.
3. Then set the telegram component in the telegram selection to the standard telegram for drive objects (in the example: Standard telegram 1), which results in a split display of the telegram types (standard telegram + telegram extension). The telegram extension represents the telegram portion of direct data exchange.

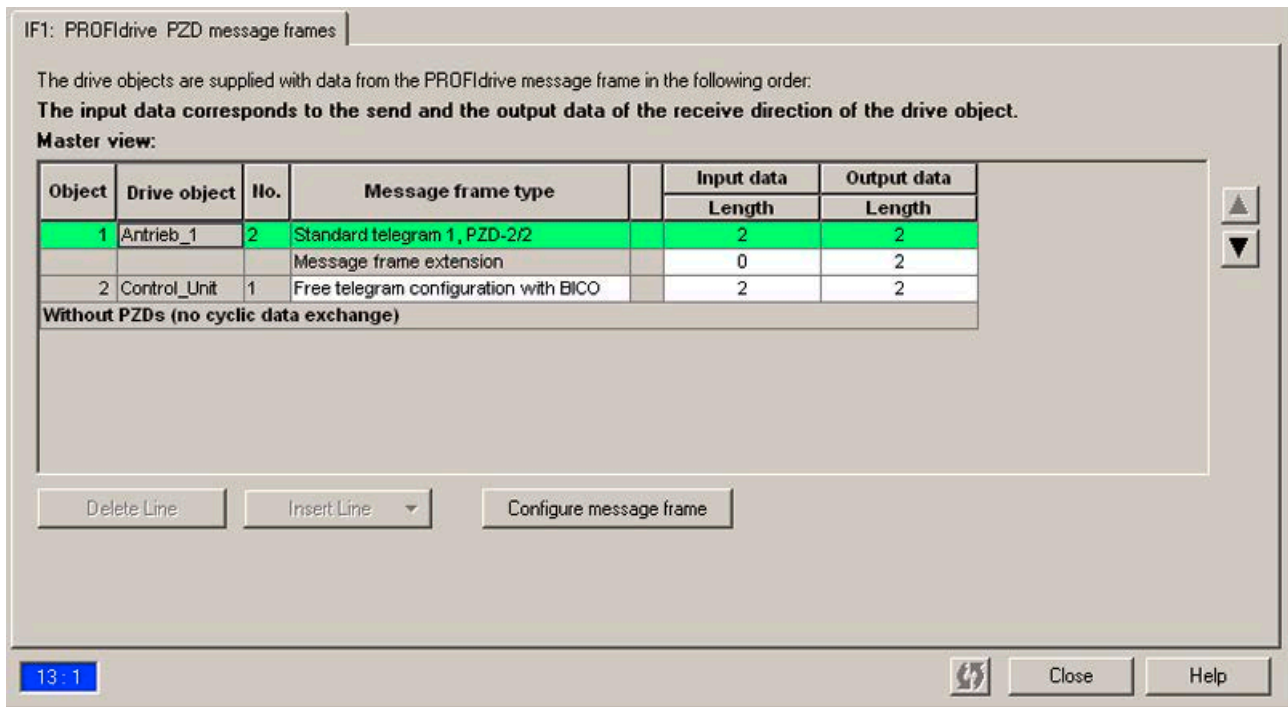


Figure 10-28 Display of the telegram extension

By selecting the item "Communication → PROFIBUS" for the drive object "DC\_CTRL" in the project navigator, you obtain the structure of the PROFIBUS telegram in the receive and send directions. The telegram extension from PZD3 onwards is the component for direct data exchange.



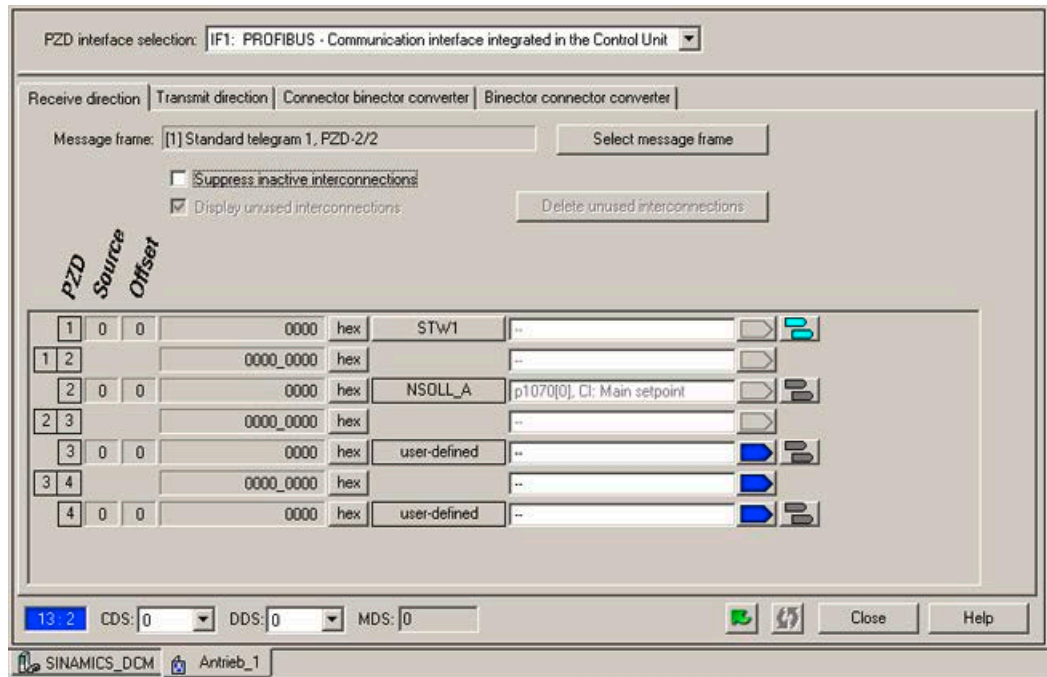


Figure 10-29 Configuring the PROFIBUS direct data exchange in STARTER

To connect the drive objects to the process data which is received via direct data exchange, you also need to connect the appropriate connectors to the corresponding signal sinks. A list for the connector shows all signals that are available for interconnection.

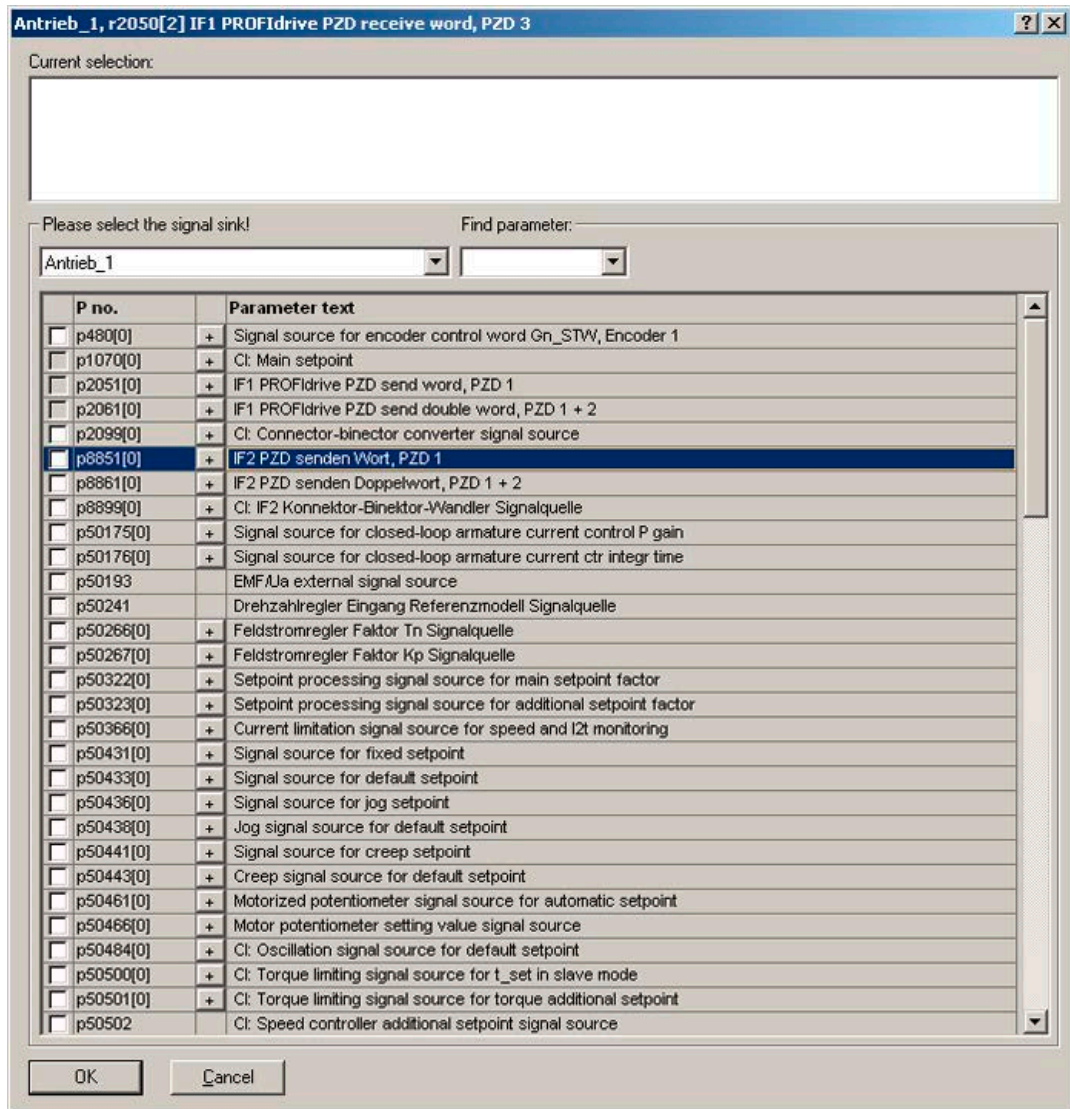


Figure 10-30 Linking the PZDs for direct data exchange with external signals

#### 10.4.4.4 GSD during operation

##### Generic station description file

In special generic station description files (GSD), the properties of a PROFIBUS slave are uniquely and fully described to use PROFIBUS direct data exchange for SINAMICS.

The GSD files can be found:

- On the Internet. For the link, see "Preface (Page 3)"
- On the memory card in the directory \\SIEMENS\SINAMICS\DATA\CFG\
  - Universal module
  - Axis separator
  - Standard telegram1, PZD-2/2
  - Standard telegram20, PZD-2/6
  - SIEMENS telegram 220, PZD-10/10
  - SIEMENS telegram 352, PZD-6/6
  - Free telegram, PZD-4/4
  - Free telegram, PZD-8/8
  - Free telegram, PZD-16/16
  - Free telegram, PZD-32/32
  - Free telegram, PZD-64/64
  - Slave-to-slave, PZD-1
  - Slave-to-slave, PZD-2
  - Slave-to-slave, PZD-4
  - Slave-to-slave, PZD-8

The SINAMICS S DXB GSD file contains among other things standard telegrams, free telegrams and slave-to-slave telegrams for configuring direct data exchange. The user must take these telegram parts and an axis separator after each drive object to compose a telegram for the drive unit.

Processing a GSD file in HW Config is covered in the SIMATIC documentation. Suppliers of PROFIBUS components can provide their own bus configuration tool. The description of the respective bus configuration tool is described in the relevant documentation.

##### Device identification

Identification for individual slaves facilitates diagnostics and provides an overview of the nodes on the PROFIBUS.

The information for each slave is stored in the Control Unit parameter r0964[0...6] device identification.

#### 10.4.4.5 Diagnostics of the PROFIBUS slave-to-slave communication in STARTER

Since the PROFIBUS direct data exchange is implemented on the basis of a broadcast telegram, only the subscriber can detect connection or data faults, e.g. via the publisher data length (see "Configuration telegram").

The publisher can only detect and report an interruption of the cyclic connection to the DP master (A01920, F01910). The broadcast telegram to the subscriber will not provide any feedback. A fault of a subscriber must be fed back via direct data exchange. In case of a "master drive" 1:n, however, the limited quantity framework (see "Links and requests") should be observed. It is not possible to have n subscribers report their status via direct data exchange directly to the "master drive" (publisher)!

Diagnostics can be performed using the diagnostic parameters r2075 (Receive PROFIBUS diagnostics telegram offset PZD) and r2076 (Send PROFIBUS diagnostics telegram offset PZD). The parameter r2074 (PROFIBUS diagnostics, receive bus address PZD) displays the DP address of the setpoint source of the respective PZD.

r2074 and r2075 enable the source of a direct data exchange relationship to be verified in the subscriber.

---

#### Note

The subscribers do not monitor the existence of an isochronous publisher sign of life.

---

#### Faults and alarms with PROFIBUS direct data exchange

Alarm A01945 signals that the connection to at least one publisher of the drive device is missing or has failed. Any interruption to the publisher is also reported by fault F01946 at the affected drive object. A failure of the publisher only impacts the respective drive objects.

More detailed information on the messages can be found in the SINAMICS DCM List Manual.

#### 10.4.5 Messages via diagnostics channels

Messages can be displayed not only via the well-known commissioning tools (STARTER, SCOUT). After the activation of a diagnostic function, the messages are also transferred to the higher-level controller via the standardized diagnostic channels. The messages are evaluated there or forwarded for convenient display to the corresponding user interfaces (SIMATIC HMI, TIA Portal, etc.). The messages are shown on the respective user interfaces similarly as in STARTER.

In this way, problems or faults can be located immediately regardless of the tool currently being used, and then corrected immediately. No further tools must therefore be called for the correction.

## Activating the diagnostics function

The diagnostics function is activated or deactivated via the parameterization of the relevant configuration tool (HW Config, TIA Portal, etc.).

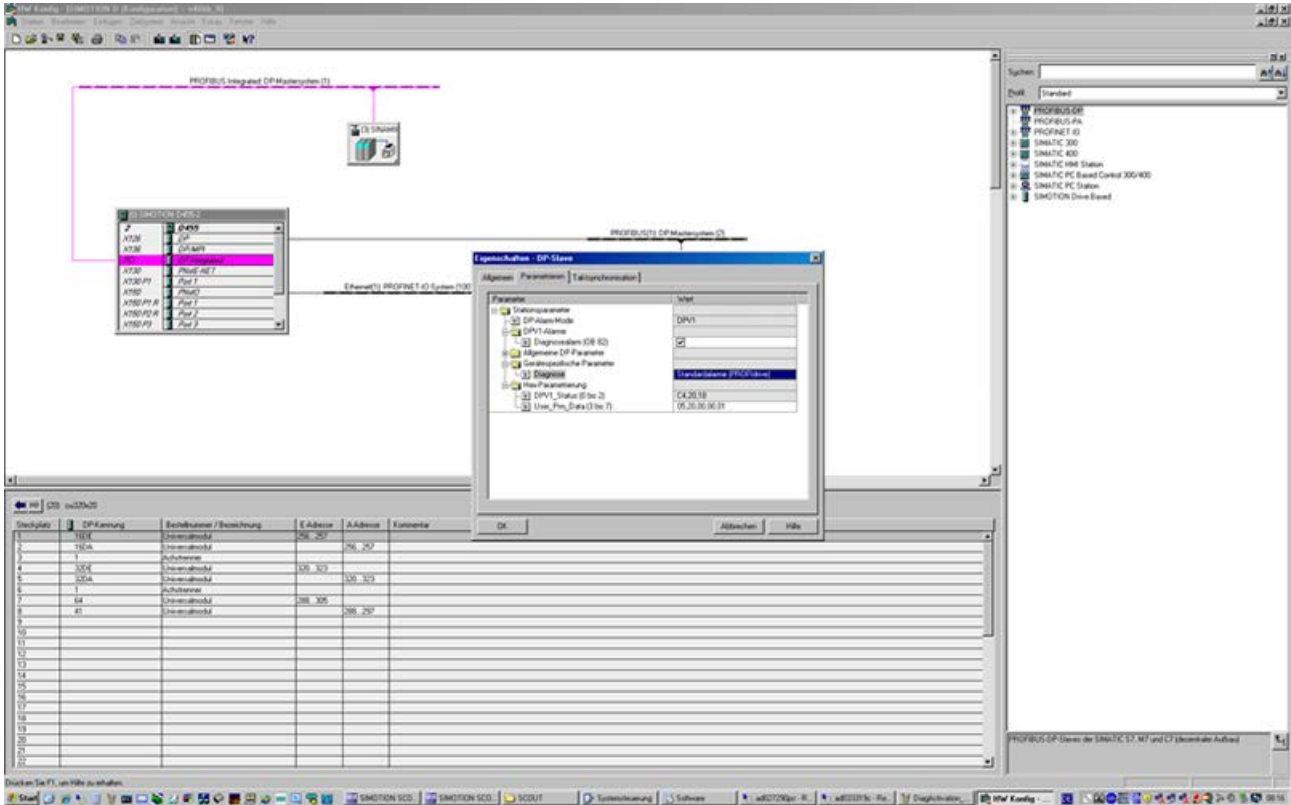


Figure 10-31 Activation of PROFIBUS

The following parameter assignments are possible:

Setting	Code for parameter assignment
Inactive	0
PROFIdrive error classes	1

When establishing the communication between SINAMICS and a master/controller, the activated diagnostics mode of this master/controller is first transferred to the drive. With activated diagnostics, SINAMICS first transfers all pending messages to the master/controller.

## Messages

The following PROFIBUS error texts can be displayed:

### Line faulted

A line supply fault has occurred (phase failure, voltage level, etc.). Check the line supply and fuses. Check the supply voltage. Check the wiring.

**Power electronics faulted**

An impermissible operating state of the power electronics was detected (overcurrent, overtemperature, etc.). Check compliance with the permissible load cycles. Check the ambient temperatures (fan).

**Overtemp. electronic component**

The temperature in the component has exceeded the highest permissible limit. Check the ambient temperature / control cabinet ventilation.

**Ground fault / inter-phase short-circuit detected**

A ground fault / inter-phase short-circuit was detected in the power cables or in the motor windings. Check the power cables (connection). Check the motor.

**Motor overload**

The motor was operated outside the permissible limits (temperature, current, torque...). Check the load cycles and set limits. Check the ambient temperature / motor cooling.

**Communication to the controller faulted**

The communication to the higher-level controller (internal coupling, PROFIBUS, PROFINET, etc.) is faulted or interrupted. Check the state of the higher-level controller. Check the communication connection/wiring. Check the bus configuration/cycles.

**Actual position/speed value error**

An illegal signal state was detected while evaluating the encoder signals (track signals, zero marks, absolute values, etc.). Check the encoder / state of the encoder signals. Observe the maximum permissible frequencies.

**Internal communication faulted**

The internal communication between the SINAMICS components is faulted or interrupted. Check the DRIVE-CLiQ wiring. Ensure an EMC-compliant installation. Observe the maximum permissible quantity structures / cycles.

**External signal state error**

A measured value / signal state read-in via the input area (digital/analog/temperature) has assumed an impermissible value/state. Identify and check the relevant signal. Check the set thresholds.

**Application / function faulted**

The application / technological function has exceeded a (set) limit (position, velocity, torque, etc.). Identify and check the relevant limit. Check the setpoint specification of the higher-level controller.

**Error in the parameterization / commissioning**

An error was identified in the parameterization or in a commissioning procedure, or the parameterization does not match the actual device configuration. Determine the exact cause of the error with the commissioning tool, adapt the parameterization or device configuration.

## 10.5 Communication via PROFINET IO

### 10.5.1 Activating online mode: STARTER via PROFINET IO

#### Description

The following options are available for online operation via PROFINET IO:

- Online operation via IP

#### Requirements

- STARTER with Version  $\geq 4.1.5$  (SINAMICS DCM is supported starting only from STARTER Version 4.1.5)
- CBE20

#### STARTER via PROFINET IO (example)

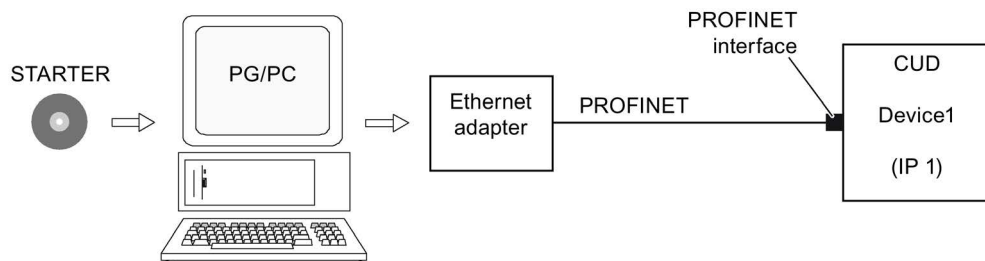


Figure 10-32 STARTER via PROFINET (example)

#### Procedure for activating online mode with PROFINET

1. Assign the PG/PC a fixed, free IP address. In our example, we have selected 169.254.11.1. Set the subnet mask to 255.255.0.0.
2. Make the settings in STARTER
3. Select online operation in STARTER.

## Setting the IP address in Windows 7

### Note

The following procedure is based on the Windows 7 operating system. Under other operating systems (such as Windows XP), operation may differ slightly.

1. In the PG/PC call the control panel using the "Start > Control Panel" menu item.
2. In the control panel of your PG/PC, under "Network and Internet", select the "Network and Sharing Center" function.
3. For your network card that is displayed, click the connection link.
4. Click in the status dialog of the connection on "Properties" and acknowledge the subsequent confirmation prompt with "Yes".
5. In the properties dialog of the connection, select the "Internet protocol 4 (TCP/IPv4)" element and then click "Properties".
6. In the properties dialog, activate the "Use the following IP address" option.
7. Set the IP address of the PG/PC access interface to the Control Unit to 169.254.11.1 and the subnet mask to 255.255.0.0.

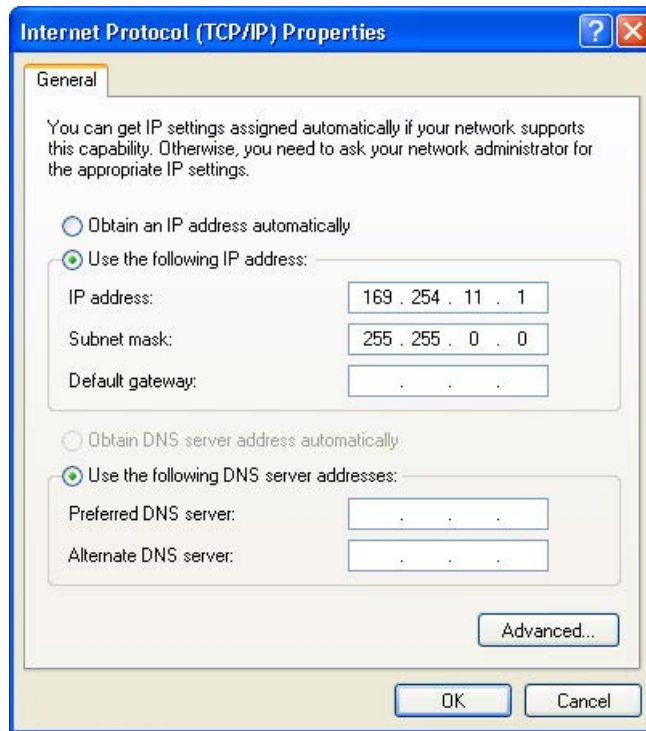


Figure 10-33 Example: IPv4 address of the PG/PC

8. Click "OK" and close the Windows-specific window of the network connections.



## Setting the interface in STARTER

In STARTER, you set communication via PROFINET as follows:

1. Call the menu "Tools > Set PG/PC interface ...".
2. Select the "Access point of the application", and therefore the interface parameter assignment (in the example we use the access point "S7ONLINE (STEP 7)" and the interface parameterization "TCP/IP(Auto) -> Belkin F5D 5055").

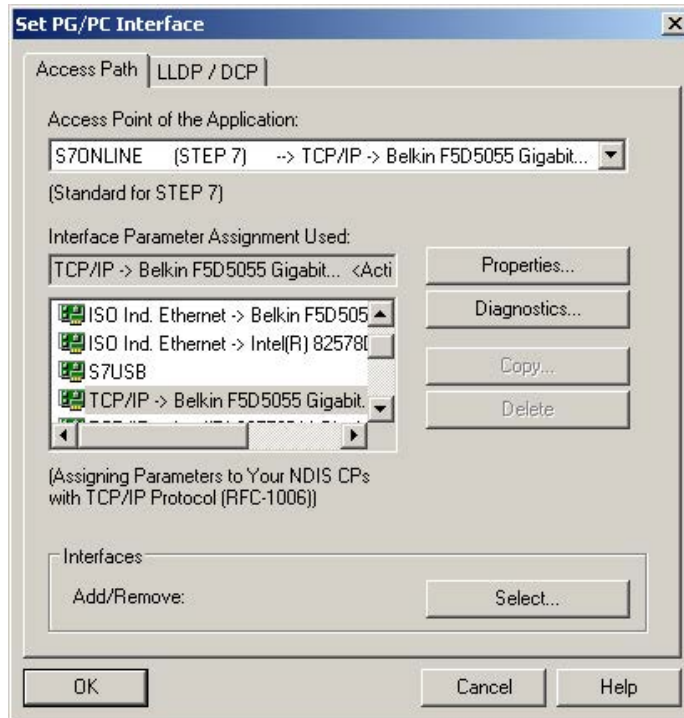


Figure 10-34 Setting the PG/PC interface

If the desired interface does not yet exist in the selection list, you can create it.

3. Click the "Select" button.

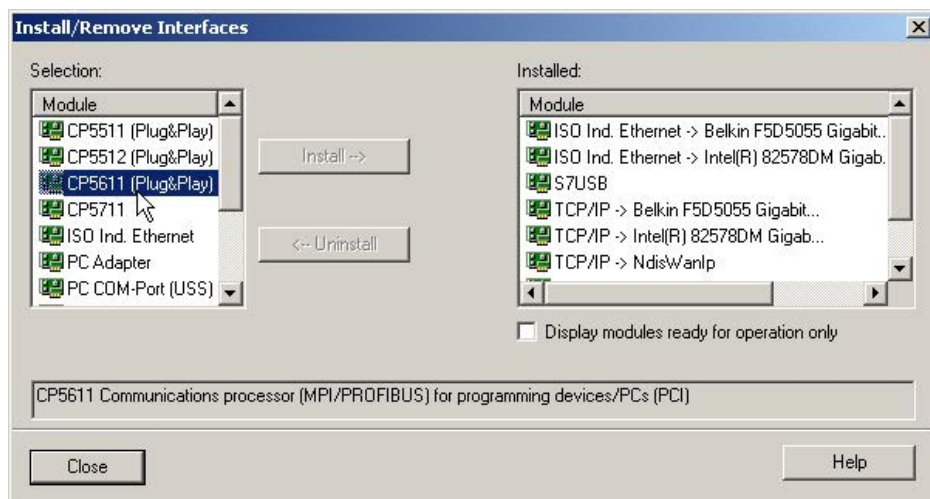


Figure 10-35 Installing the interface

4. In the selection list on the left-hand side, select the module that you want to use as the interface.

5. Click the "Install" button.

The selected module is then listed in the "Installed" list.

6. Click the "Close" button.

You can then check the IP address of the integrated Ethernet interface as follows:

1. Select the drive unit and call the shortcut menu "Target device > Online access ...".

2. Click the "Module addresses" tab.

The IP address that you set must be located under "Connect to target station".

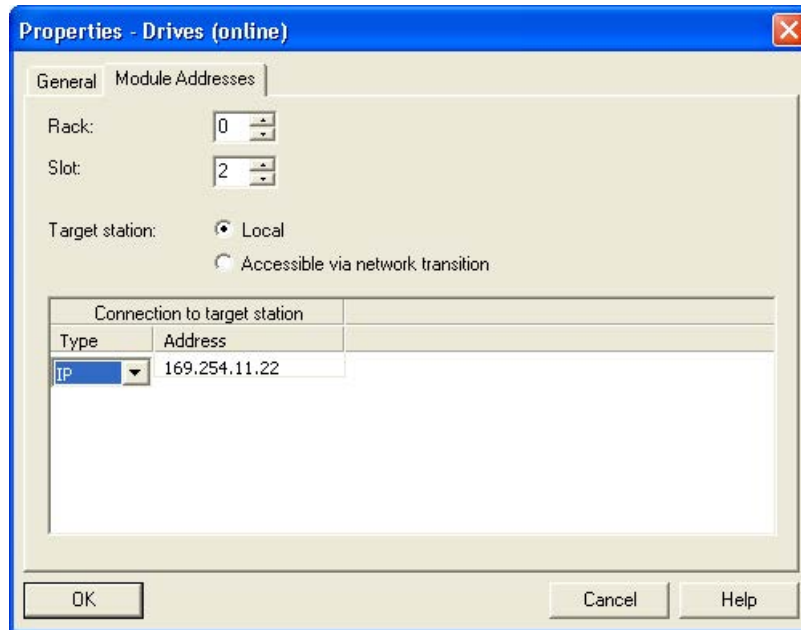


Figure 10-36 Setting online access

## Assigning the IP address and name for the PROFINET interface of the drive unit

With STARTER, you can assign an IP address and a name to the PROFINET interface (e.g. CBE20) of the drive unit. The following steps are required:

1. Connect the programming device via a Crosslink-Ethernet cable with the CBE20, inserted in the CUD.
2. Switch on the Control Unit.
3. Open STARTER.
4. Call the menu "Project > Accessible nodes" or click the "Accessible nodes" icon.
  - The search is performed for available nodes connected to PROFINET.
  - The Control Unit is identified and displayed under "Accessible nodes" as the bus node with the IP address 0.0.0.0, without any type information.

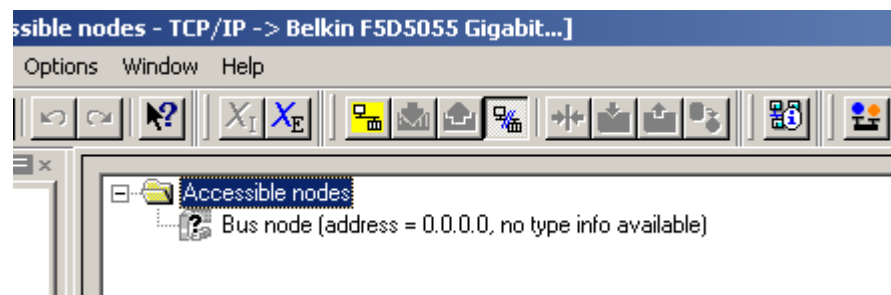


Figure 10-37 Bus nodes found

5. Right-click the bus node entry to open the shortcut menu "Edit Ethernet node ...".
  - In the selection window that opens "Edit Ethernet node" you will also see the MAC address.
6. Under "Set IP configuration", enter the IP address that you selected (e.g. 169.254.11.33) and the subnet mask (e.g. 255.255.0.0).
7. Click the "Set IP configuration" button.
  - The data transfer is confirmed.
8. Click the "Update" button.
  - The bus node is identified as a drive unit.
  - The address and the type are specified.

In the "Edit Ethernet node" selection window you can also assign a device name to the drive unit that has been detected.

9. In the "Device name" field, enter the name that you have selected.

---

**Note**

ST (Structured Text) conventions must be satisfied for the name assignment of IO devices in PROFINET (SINAMICS components). The names must be unique within PROFINET. Rules for assigning names:

- Other than "-" and ".", no special characters (such as accented characters, spaces, brackets) are permitted in the name of an IO device.
  - The device name must not begin or end with the "-" character.
  - The device name must not begin with a number.
  - Maximum total length of 240 characters (lowercase characters, numbers, hyphen, or period)
  - A name component within the device name, e.g. a string between two periods, must not exceed 63 characters.
  - The device name must not take the form n.n.n.n (n = 0...999).
  - The device name must not begin with the character sequence "port-xyz" or "port-xyz-abcde" (a, b, c, d, e, x, y, z = 0...9).
- 

In the "Device name" field, enter the name that you have selected.

10. Click the "Assign name" button.

- The data transfer is confirmed.

11. Click the "Update" button.

- The bus node is detected as drive unit and is consecutively numbered.
- The address, device name and the type are specified.

12. Close the "Edit Ethernet node" window.

13. Activate the option button in front of the detected drive unit and click the "Accept" button.

The SINAMICS drive with CBE20 is transferred as a drive object into the project tree. You can now continue to configure the drive object.

14. Click the "Connect to target system" button and then call the menu "Target system > Load > To target device", to load the project to the Control Unit memory card.

The IP address and device name are stored non-volatile on the memory card of the Control Unit.

## 10.5.2 General information about PROFINET IO

### General information

PROFINET IO is an open Industrial Ethernet standard for a wide range of production and process automation applications. PROFINET IO is based on Industrial Ethernet and observes TCP/IP and IT standards.

Deterministic signal processing in real time is important in industrial networks. PROFINET IO satisfies these requirements.

International standard IEC 61158 ensures open, multi-vendor systems.

PROFINET IO is optimized for high-speed, time-critical data communication at field level.

### PROFINET IO

Within the context of Totally Integrated Automation (TIA), PROFINET IO is the systematic development of the following systems:

- PROFIBUS DP, the established fieldbus
- Industrial Ethernet, the communications bus for the cell level.

Experience gained from both systems was integrated into PROFINET IO. An Ethernet-based automation standard defined by PROFIBUS International (PROFIBUS user organization), PROFINET IO is a manufacturer-independent communication and engineering model.

PROFINET IO defines every aspect of the data exchange between IO controllers (devices with what is known as "master functionality" and the IO devices (those with what is known as "slave functionality") as well as carrying out parameterization and diagnostics. A PROFINET IO system is configured in virtually the same way as a PROFIBUS system.

A PROFINET IO system is assembled from the following devices:

- An IO controller controls automation tasks.
- An IO device is controlled and monitored by an IO controller. An IO device consists of several modules and submodules.
- An IO supervisor is an engineering tool, typically based on a PC, with which the individual IO devices (drive units) are parameterized and diagnosed.

### IO devices: Drive units with PROFINET interface

- SINAMICS DCM with inserted CBE20

Cyclic communication using PROFINET IO with IRT or using RT is possible on all drive units equipped with a PROFINET interface. This means that error-free communication using other standard protocols is guaranteed within the same network.

---

**Note**

PROFINET for drive technology is standardized and described in the following document:

- **PROFIBUS profile PROFIdrive – Profile Drive Technology**  
Version V4.1, May 2006  
PROFIBUS User Organization e. V.  
Haid-und-Neu-Straße 7, D-76131 Karlsruhe, Germany  
<http://www.profibus.com>, Order Number 3.172, spec. Chapter 6
  - IEC 61800-7
- 

**Note**

For a CUD with inserted CBE20, the cyclic PZD channel is deactivated for PROFIBUS DP. By setting parameter p8839 = 1, the PZD channel can be reactivated, see Chapter "Parallel operation of communication interfaces (Page 438)".

---

### 10.5.2.1 Real-time (RT) and isochronous real-time (IRT) communication

#### Real-time communication

When communication takes place via TCP/IP, the resultant transmission times may be too long and non-deterministic to meet production automation requirements. When communicating time-critical IO user data, PROFINET IO therefore uses its own real-time channel, rather than TCP/IP.

Real time means that a system processes external events over a defined period.

#### Determinism

Determinism means that a system will react in a predictable ("deterministic") manner. With PROFINET IO with IRT, it is possible to precisely determine (predict) transmission times.

#### PROFINET IO with RT (Real Time)

Real-time data is treated with a higher priority than TCP(UDP)/IP data. Transmission of time-critical data takes place at guaranteed time intervals. RT communication is the basis for data exchange with PROFINET IO.

#### PROFINET IO with IRT (Isochronous Real Time)

Isochronous real time: Real time property of PROFINET IO where IRT telegrams are transferred deterministically via planned communication paths in a defined sequence to achieve the best possible synchronism and performance between the IO controller and IO device (drive unit). IRT is also known as time-scheduled communication whereby knowledge about the network structure (topology) is utilized. IRT requires special network components that support planned data transfer.

Minimum cycle times of 500  $\mu$ s and a jitter accuracy of less than 1  $\mu$ s can be achieved with this transmission method.

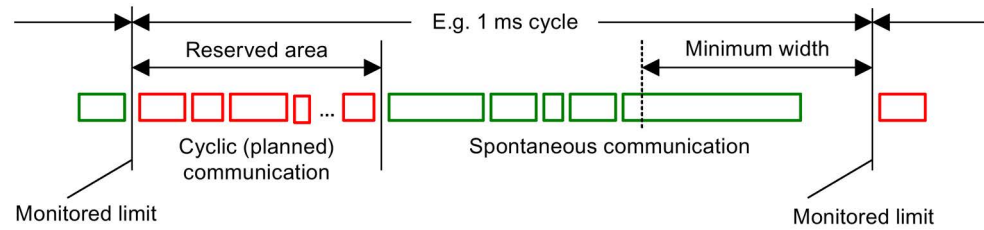


Figure 10-38 Bandwidth distribution/reservation, PROFINET IO

## 10.5.2.2 Addresses

### MAC address

Every Ethernet and PROFINET interface is assigned a worldwide unique device identifier in the factory. This 6-byte long device identifier is the MAC address. The MAC address is divided up as follows:

- Three bytes for the manufacturer's ID
- Three bytes for the device identifier (consecutive number)

The MAC address is on a label (CBE20), e.g. 08-00-06-6B-80-C0

### IP address

The TCP/IP protocol is a prerequisite for establishing a connection and parameterization. To allow a PROFINET device to be addressed as a node on Industrial Ethernet, this device requires a unique IP address in the network. The IP address is made up of 4 decimal numbers with a range of values from 0 through 255. The decimal numbers are separated by a decimal point. The IP address comprises:

- The address of the node (also called host or network node)
- The address of the (sub) network

### IP address assignment

The IP addresses of IO devices can be assigned by the IO controller and always have the same subnet screen as the IO controller. In this case, the IP address is not stored permanently. The IP address entry is lost after POWER ON/OFF. The IP address can be assigned retentively via the STARTER function "Accessible nodes".

This function can also be performed with HW Config of STEP 7. The function is called "Edit Ethernet node" here.

---

**Note**

If the network is part of an existing Ethernet company network, obtain the information (IP address) from your network administrator.

---

**Device name (NameOfStation)**

When it is shipped, an IO device does not have a device name. An IO device can only be addressed by an IO controller, for example, for the transfer of project engineering data (including the IP address) during startup or for user data exchange in cyclic operation, after it has been assigned a device name with the IO supervisor.

---

**Note**

The device name must be stored retentively either with STARTER or with HW Config of STEP 7.

---

---

**Note**

You can enter the address data for the ports of the optional CBE20 module in STARTER in the expert list using parameters p8940, p8941, p8942 and p8943.

---

**Replacing the Control Unit (CUD) (IO device)**

If the IP address and device name are stored in non-volatile memory, this data is also forwarded with the memory card of the Control Unit.

If a complete Control Unit needs to be replaced due to a device or module defect, the new Control Unit automatically parameterizes and configures using the data on the memory card. Following this, cyclic exchange of user data is restarted. The memory card allows module exchange without an IO supervisor when a fault occurs in a PROFINET device.

**10.5.2.3 Data transmission**

**Properties**

The PROFINET interface on a drive unit supports the simultaneous operation of:

- IRT – Isochronous real-time Ethernet
- RT – Real-time Ethernet
- Standard Ethernet services (TCP/IP, LLDP, UDP and DCP)



## PROFIdrive telegram for cyclic data transmission, acyclic services

Telegrams to send and receive process data are available for each drive object of a drive unit with cyclic process data exchange.

In addition to cyclic data transfer, acyclic services can also be used for parameterizing and configuring the drive unit. These acyclic services can be utilized by the IO supervisor or IO controller.

### Sequence of drive objects in the telegram

On the drive side, the sequence of drive objects in the telegram is displayed via a list in p0978[0...24] where it can also be changed.

You can use the STARTER commissioning tool to display the sequence of drive objects for a commissioned drive system in online mode in the project navigator under "Drive unit" > "Communication" > "Telegram configuration".

When you create the configuration on the controller side (e.g. HW Config), the process-data-capable drive objects for the application are added to the telegram in this sequence.

The following drive objects can exchange process data:

- Control Unit (CU\_DC)
- Terminal Module 15 (TM15)
- Terminal Module 31 (TM31)
- Terminal Module 150 (TM150)
- DC drive control (DC\_CTRL)

---

#### Note

The sequence of drive objects in HW Config must be the same as that in the drive (p0978).

---

The structure of the telegram depends on the drive objects taken into account during configuration. Configurations are permitted that do not take into account all of the drive objects that are present in the drive system.

#### Example:

The following configurations, for example, are possible:

- Configuration with CU\_DC, DC\_CTRL
- Configuration with DC\_CTRL, TM31, TM31
- etc.

### 10.5.2.4 Communication channels for PROFINET

#### Control Unit with CBE20 Communication Board Ethernet

A Communication Board can be optionally inserted in the Control Unit CUD:

- The CBE20 Communication Board is a PROFINET switch with four PROFINET ports.

#### Overview of important parameters

(See the SINAMICS DCM List Manual)

- p8829 CBE20 remote controller number
- p8940[0...239] CBE20 name of station
- p8941[0...3] CBE20 IP address of station
- p8942[0...3] CBE20 default gateway of station
- p8943[0...3] CBE20 subnet mask of station
- p8944 CBE20 DHCP mode
- p8945 CBE20 interface configuration
- r8950[0...239] CBE20 name of active station
- r8951[0...3] CBE20 IP address of active station
- r8952[0...3] CBE20 default gateway of active station
- r8953[0...3] CBE20 subnet mask of active station
- r8954 CBE20 DHCP mode active
- r8955[0...5] CBE20 MAC address of station
- r8959 CBE20 DAP ID

### 10.5.3 Drive control with PROFINET

#### PROFINET interfaces

The CBE20 Communication Board Ethernet can be inserted in the option slot of a CUD. The Communication Board Ethernet CBE20 is a PROFINET switch with four ports.

---

#### Note

##### Ring topology

When connecting the ports, it must be ensured that for standard applications a ring topology is not created. Additional information on ring topologies can be found in Chapter "Media redundancy (Page 499)".

---

## References

- The integration of a SINAMICS Control Unit in a PROFINET IO system is described in detail in System Manual "SIMOTION SCOUT Communication" "Communication with SIMOTION (<https://support.industry.siemens.com/cs/de/en/view/109749943>)".
- For an example of how to link a Control Unit to a SIMATIC S7 via PROFINET IO, please refer to the FAQ "PROFINET IO communication between an S7-CPU and SINAMICS S120" on the Internet.
- For a description of the CBE20 Communication Board Ethernet and how you can use this in the drive, see Chapter "Option Board: Communication Board Ethernet CBE20 (Page 192)".

## Telegrams

PROFIdrive telegrams are available for implementing cyclic communication via PROFINET IO (see Chapter "Communication according to PROFIdrive", cyclic communication).

## DCP flashing

This function checks the correct assignment to a module and its interfaces.

1. In HW Config or the STEP 7 Manager, select the menu item "Target system" > Ethernet > Edit Ethernet node".

The "Edit Ethernet Node" dialog box opens.

2. Click the "Browse" button.

The "Browse Network" dialog box opens and displays the connected nodes.

3. Select the CUD with inserted CBE20 as node.

The "DCP flashing" function is then activated via the "Flash" button.

The "DCP flashing" function is activated on the RDY LED (READY LED 2 Hz, green/orange or red/orange) on the CUD.

The LED will continue to flash as long as the dialog is open. When the dialog is closed, the LED will go out automatically. The function is available as of STEP 7 V5.3 SP1 via Ethernet.

## STEP 7 routing with CBE20 Communication Board Ethernet

The CBE20 does not support STEP 7 routing between PROFIBUS and PROFINET IO.

### Connecting the PC to the STARTER commissioning tool

You can go online with STARTER in a number of ways, which are illustrated below:

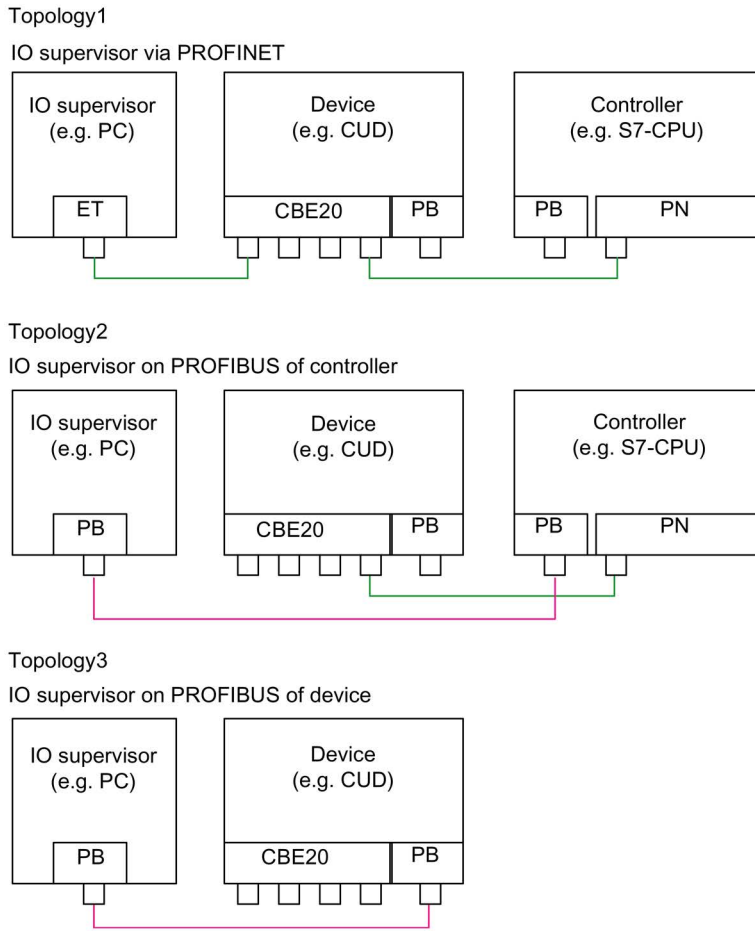


Figure 10-39 Connecting the IO supervisor

---

**Note**

SINAMICS does not support routing from PROFIBUS to PROFINET and vice versa.

---

**Note**

If a CBE20 Communication Board Ethernet fails (e.g. due to a power failure), then communication with the subsequent nodes is interrupted at this point.

---

### 10.5.3.1 Media redundancy

To increase the availability of PROFINET, you can create a ring topology for redundancy purposes. If the ring is interrupted at one point, the data paths between the devices are automatically reconfigured. Following reconfiguration, the devices can once again be accessed in the resulting new topology.

To create a ring topology with media redundancy, route the two ends of a line-type PROFINET topology to a switch which serves as redundancy manager (e.g. a suitable SCALANCE switch). Closing the linear bus topology is realized using two ports (ring ports) of the SCALANCE redundancy manager, which monitors the data telegrams in the PROFINET ring. All other connected PROFINET nodes are redundancy clients.

The Media Redundancy Protocol (MRP) is the standard procedure for media redundancy. Using this procedure, a maximum of 50 devices can participate in each ring. In the case of an interrupted cable, data transfer is only briefly interrupted as the system switches over to the redundant data path.

If a short-term interruption is not permitted, data transfer must be set to IRT High Performance. The uninterruptible MRRT is automatically set.

From a CBE20, only the first two ports are capable of establishing a ring topology.

---

#### Note

In order to use the ring topology, the GSDML file version V2.3 must be installed.

This file can be found, for example, on the memory card as  
"\\SIEMENS\SINAMICS\DATA\CFG\PNGSD.ZIP".

---

### Configuring media redundancy

The ring topology is configured by appropriately configuring the participating devices individually in STEP 7.

## 10.5.4 RT classes for PROFINET IO

PROFINET IO is a scalable realtime communication system based on Ethernet technology. The scalable approach is expressed with three realtime classes.

#### RT

RT communication is based on standard Ethernet. The data is transferred via prioritized Ethernet telegrams. Because standard Ethernet does not support any synchronization mechanisms, isochronous operation is not possible with PROFINET IO with RT!

The real update cycle in which cyclic data is exchanged depends on the bus load, the devices used and the quantity framework of the I/O data. The update cycle is a multiple of the send cycle.

### IRT

Two options are available with this RT class:

- IRT "high flexibility"
- IRT "high performance"

Only option IRT "high performance" is supported.

Software preconditions for configuring IRT:

- STEP 7 5.4 SP4 (HW Config)

---

#### Note

For further information about configuring the PROFINET interface for the I/O controller and I/O device, please refer to the following document: SIMOTION SCOUT Communication System Manual.

---

### IRT "high flexibility"

The telegrams are sent cyclically in a deterministic cycle (Isochronous Real Time). The telegrams are exchanged in a bandwidth reserved by the hardware. One IRT time interval and one standard Ethernet time interval are created for each cycle.

### IRT "high performance"

---

#### Note

**Only option IRT "high performance" is supported.**

The IRT "high performance" real-time class is supported by the drives of the SINAMICS S110 and S120 series and is described here for reasons of completeness.

---

In addition to the bandwidth reservation, the telegram traffic can be further optimized by configuring the topology. This enhances the performance during data exchange and the deterministic behavior. The IRT time interval can thus be further optimized or minimized with respect to IRT "high flexibility".

In addition to the isochronous data transfer provided by IRT, even the application itself (position control cycle, IPO cycle) can be isochronous in the devices. This is an essential requirement for closed-loop axis control and synchronization via the bus. Isochronous data transfer with cycle times well below one millisecond and with a deviation in the cycle start (jitter) of less than a microsecond provide sufficient performance reserves for demanding motion control applications.

The RT classes IRT "high flexibility" and IRT "high performance" can be selected as options in the synchronization settings configuration area of HW Config. In the description below, both these classes are simply referred to as "IRT".

In contrast to standard Ethernet and PROFINET IO with RT, the telegrams for PROFINET IO with IRT are transferred according to a schedule.

### Modules

The following S110/S120 modules support the IRT "high performance":

- S120 CU320 together with the CBE20
- S120 CU320-2 DP together with the CBE20
- S120 CU320-2 PN
- S120 CU310 PN
- S120 CU310-2 PN
- S110 CU305 PN

### Comparison between RT and IRT

Table 10- 36 Comparison between RT and IRT

RT class	RT	IRT "high flexibility"	IRT "high performance"
Transmission mode	Switching based on the MAC address; prioritization of the RT telegrams possible using Ethernet-Prio (VLAN tag)	Switching using the MAC address; bandwidth reservation by reserving an IRT "high flexibility" interval in which only IRT "high flexibility" frames are transferred but, for example, no TCP/IP frames.	Path-based switching according to a topology-based plan; no transmission of TCP/IP frames and IRT "high flexibility" frames in the IRT "high performance" interval.
Isochronous application in the IO controller	No	No	Yes
Determinism	Variance of the transmission duration by started TCP/IP telegrams	Guaranteed transmission of the IRT "high flexibility" telegrams in the current cycle by the reserved bandwidth.	Exactly planned transfer; times for transmission and receiving are guaranteed for any topologies.
Reload the network configuration after a change	Not relevant	Only when the size of the IRT "high flexibility" interval needs to be modified (reservation of position is possible).	Always when the topology or the communications relationships change.
Maximum switching depth (number of switches in one line)	10 at 1 ms	61	64
For possible send cycles, see subitem "Send cycles and update cycles for RT classes" in table "Adjustable send cycles and update cycles"			

### Set the RT class

The RT class is set by means of the IO controller interface properties. If RT class IRT "high performance" is set, it is not possible to operate any IRT "high flexibility" devices on the IO controller and vice versa. IO devices with RT can always be operated, regardless of the IRT class setting.

You can set the RT class in the HW Config for the associated PROFINET device.

1. In HW Config, double-click item PROFINET interface in the module.  
The "Properties" dialog box opens.
2. Select the RT class under RT class on the "Synchronization" tab.
3. Once you have selected "IRT", you can also choose between option "high flexibility" and "high performance".

---

**Note**

The "high performance" option must not be selected for SINAMICS DCM, otherwise an error message is issued.

---

4. Confirm with "OK".

### Synchronization domain

The sum of all devices to be synchronized form a synchronization domain. The whole domain must be set to a single, specific RT class (real-time class) for synchronization. Different synchronization domains can communicate with one another via RT.

For IRT, all IO devices and IO controllers must be synchronized with a common synchronization master.

RT allows an IO controller to communicate with a drive unit outside a synchronization domain or "through" another synchronization domain. As of version 5.4 SP1, STEP 7 supports multiple synchronization domains on a single Ethernet subnet.

Example:

- Synchronization domain IRT: SIMOTION2 with SINAMICS
- SINAMICS, which is assigned to the IO system of SIMOTION1, is arranged in the topology in such a way that its RT communication must be established through the IRT synchronization domain.

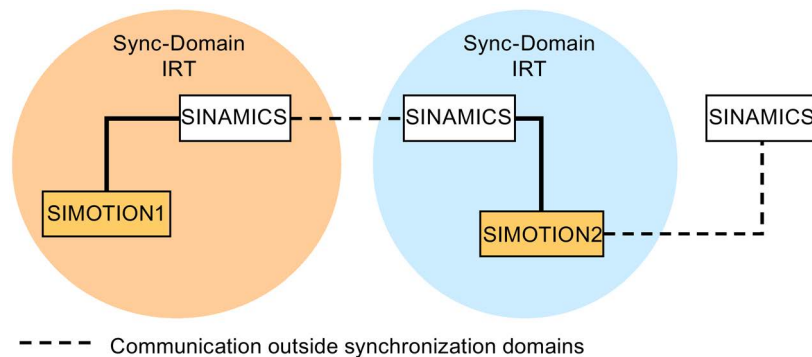


Figure 10-40 RT communication across the limits of synchronization domains



## Update cycles and send cycles for RT classes

### Definition of the update time / send cycle

If we take a single IO device in the PROFINET IO system as an example, this device has been supplied with new data (outputs) by the IO controller and has transferred new data (inputs) to the IO controller within the update time. The send cycle is the shortest possible update cycle.

All cyclic data is transferred within the send cycle. The actual send cycle that can be set depends on various factors:

- Bus load
- Type of devices used
- Computing capacity available in the IO controller
- Supported send clocks in the participating PROFINET devices of a synchronization domain. A typical send cycle is, e.g. 1 ms.

The table below specifies the reduction ratios which can be set between the send cycle and the update times for IRT "high performance", IRT "high flexibility", and RT.

Table 10- 37 Settable send cycles and update cycles

Send cycle		Reduction ratio between update and send cycles	
		RT IRT "high flexibility" <sup>4)</sup>	IRT "high performance"
Range "even" <sup>1)</sup>	250, 500, 1000 µs	1, 2, 4, 8, 16, 32, 64, 128, 256, 512	1, 2, 4, 8, 16 <sup>2)</sup>
	2000 µs	1, 2, 4, 8, 16, 32, 64, 128, 256	1, 2, 4, 8, 16 <sup>2)</sup>
	4000 µs	1, 2, 4, 8, 16, 32, 64, 128	1, 2, 4, 8, 16 <sup>2)</sup>
Range "odd" <sup>3)</sup>	375, 625, 750, 875, 1125, 1250 µs ... 3875 µs (increment 125 µs)	Not supported <sup>5)</sup>	1

Explanations for the previous table:

- 1) It is only possible to set send cycles from the "even" range when IO devices with RT class "RT" are assigned to a synchronization domain. Likewise, only the reduction ratios from the "even" range can be set for a send cycle setting from the "even" range.
- 2) It is generally only possible to set a reduction ratio of 1:1 between the update time and send cycle for IO devices (ET200S IM151-3 PN HS, SINAMICS S) which are operated in isochronous mode. In this case, the update time mode must always be set to "fixed factor" (under "I/O device" properties, "IO cycle" tab, "Mode" drop-down menu). This means that STEP 7 will not automatically adjust the update cycle and thus the update cycle will always correspond to the send cycle.
- 3) The send cycles from the "uneven" range can be set only if a synchronization domain does not include any IO devices with RT class "RT". Likewise, only the reduction ratios from the "uneven" range can be set for a send cycle setting from the "uneven" range.
- 4) Isochronous operation is not compatible with IRT "high flexibility".
- 5) Uneven send cycles can be used only if the IO systems assigned to the synchronization domain do not include any RT or IRT "high flexibility" devices.

Furthermore, the send cycles which can actually be set are determined by the intersection of the send cycles supported by all the devices in the synchronization domain.

The reduction ratio between the update cycle of an IO device and the send cycle is set in the "Properties" of the PROFINET interface for the relevant device.

---

**Note**

There is no intersection between the send cycles for the "even" and "odd" ranges!

---

**Send cycles for SINAMICS drive units**

A SINAMICS drive unit with PROFINET interface which supports IRT permits send cycle settings of between 0.25 ms and 4.0 ms in a 250 µs time frame.

**Topology rules**

**Topology rules for RT**

- A topology can be, but need not be configured for RT. If a topology has been configured, the devices must be wired in accordance with the topology.
- Otherwise, the wiring between devices is entirely optional.

**Topology rules for IRT**

- Mixed operation is not supported by STEP 7 V5.4 SP4, i.e. IRT "high performance" cannot be combined with IRT "high flexibility" in the same synchronization domain.
- A synchronization domain with IRT "high performance" can contain a maximum of one IRT "high performance" island. "Island" means that the devices must be interconnected to match the configured topology. A synchronization master must be positioned in the relevant island.
- IRT "high flexibility" is subject to the same topology rules as IRT "high performance", the only exception being that a topology does not need to be configured. However, if a topology has been configured, the devices must be wired to match the topology.

**Device selection in HW Config**

**Hardware catalog:**

The drive unit from the appropriate device family entry in the hardware catalog must be configured.

### 10.5.5 PROFINET GSDML

As with PROFIBUS, when DriveES is present, the device can be inserted using a DriveES/STARTER interface or using a GSDML file.

The GSDML file is available as a zip archive on the memory card with the current firmware:

\\Siemens\SINAMICS\DATA\CFG\PNGSD.zip

See Chapter "Ordering information for options and accessories (Page 30)" for ordering data of the memory card.

Alternatively, the GSDML file can be requested from the Customer Support.

Table 10- 38 Submodules depending on the particular drive object

Module	Subslot 1 MAP	Subslot 2 PROFIsafe	Subslot 3 PZD telegram	Subslot 4 PZD extension	Max. number of PZD
D_CTRL	MAP	-	Telegrams: 1...352 free PZD-16/16, 32/32	PZD-2/2, -2/4, -2/6	64/64
Encoder	MAP	Reserved	Telegrams: 81, 82, 83 free PZD-4/4	PZD-2/2, -2/4, -2/6	4/12
TM31, TM15, DI_DO	MAP	Reserved	Telegrams: no free PZD-4/4	Reserved	5/5
TM150	MAP	Reserved	Telegrams: no free PZD-4/4	Reserved	7/7
Control Unit	MAP	Reserved	Telegrams: 390 free PZD-4/4	Reserved	20/25
TM15/TM17	Not supported.				

The telegrams in subslots 2, 3 and 4 can be freely configured, i.e. they can also remain empty.

### 10.5.6 Communication with CBE20

The CBE20 is a Communication Board that can be flexibly used and which can be operated with different communication profiles. Only one firmware of a communication profile can be loaded at any one time. The available firmware files are saved with the communication profiles in UFW files.

The required file is selected using parameter p8835. A POWER ON must be carried out after selecting the desired UFW file. During the subsequent system boot, the corresponding UFW file is loaded. The new selection then becomes active.

Table 10- 39 UFW files and selection in the pointer file

UFW file and folder on the memory card	Functionality (p8835)	Pointer file content
/SIEMENS/SINAMICS/CODE/CB/CBE20_1.UFW	PROFINET device	1
/SIEMENS/SINAMICS/CODE/CB/CBE20_3.UFW	SINAMICS Link	3
/SIEMENS/SINAMICS/CODE/CB/CBE20_4.UFW	EtherNet/IP	4
/SIEMENS/SINAMICS/CODE/CB/CBE20_5.UFW	Modbus TCP	5
/OEM/SINAMICS/CODE/CB/CBE20.UFW	Customized	99

**Note**

All communication profiles are saved on the memory card. Some communication profiles (UFW files) can also be saved to the flash memory in the device itself. In this case, the memory card does not have to be inserted.

p8835=1 (PROFINET): The memory card does not have to be inserted.

p8835 = 3 (SINAMICS Link): The memory card must remain inserted.

p8835 = 4 (EtherNet/IP): The memory card does not have to be inserted.

p8835 = 5 (Modbus TCP): The memory card must remain inserted.

**Identification of the firmware version**

Using parameter r8858, the loaded firmware version of the PROFINET interface can be identified uniquely.

**Overview of important parameters (see SINAMICS DCM List Manual)**

- p8835                      CBE20 firmware selection
- r8858[0...39]          COMM BOARD read diagnostics channel
- r8859[0...7]            COMM BOARD identification data

**10.5.7 Messages via diagnostics channels**

Messages can be displayed not only via the well-known commissioning tools (STARTER, SCOUT). After the activation of a diagnostic function, the messages are also transferred to the higher-level controller via the standardized diagnostic channels. The messages are evaluated there or forwarded for convenient display to the corresponding user interfaces (SIMATIC HMI, TIA Portal, etc.). The messages are shown on the respective user interfaces similarly as in STARTER.

In this way, problems or faults can be located immediately regardless of the tool currently being used, and then corrected immediately. No further tools must therefore be called for the correction.

## Activating the diagnostics function

The diagnostics function is activated or deactivated via the parameterization of the relevant configuration tool (HW Config, TIA Portal, etc.).

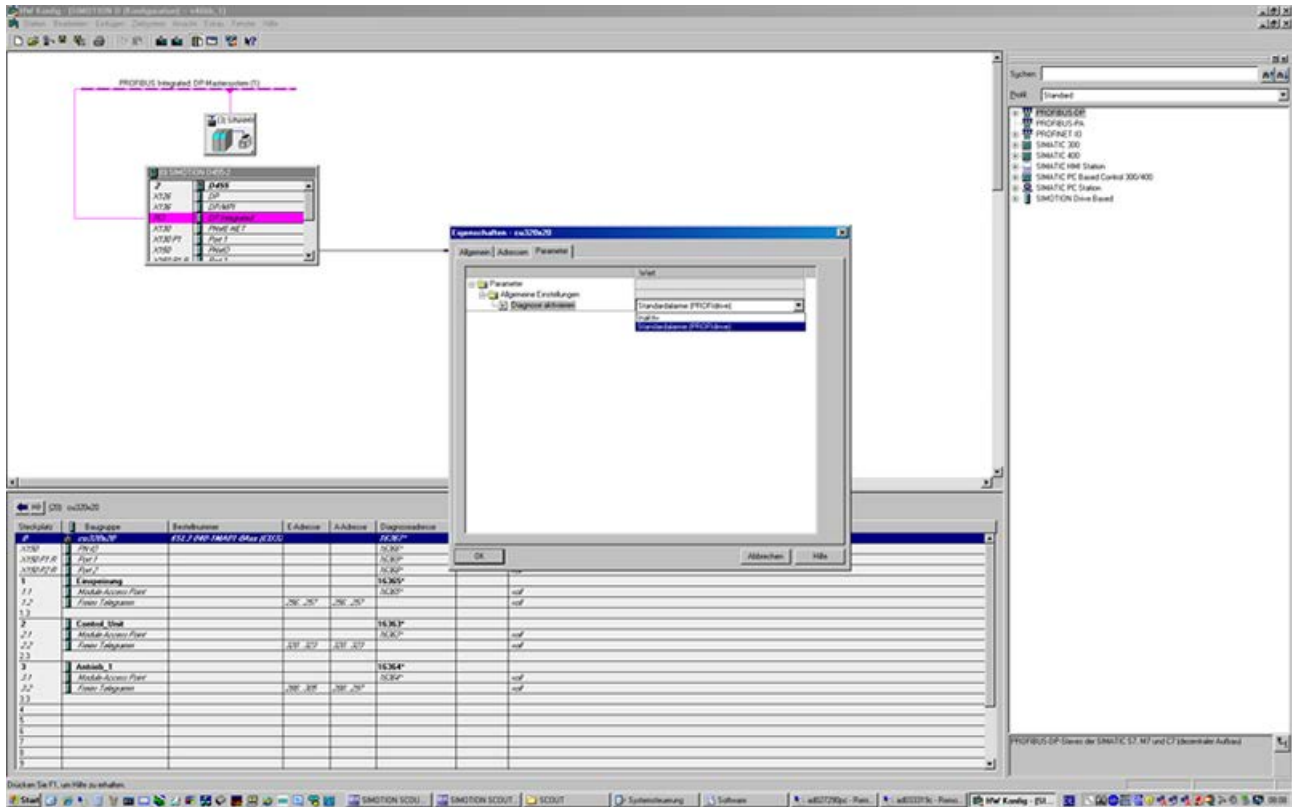


Figure 10-41 Activation of PROFINET

The following parameter assignments are possible:

Setting	Code for parameter assignment
Inactive	0
PROFIdrive error classes	1

When establishing the communication between SINAMICS and a master/controller, the activated diagnostics mode of this master/controller is first transferred to the drive. With activated diagnostics, SINAMICS first transfers all pending messages to the master/controller.

## Messages

The following PROFIdrive error texts are displayed during forwarding via the PROFINET diagnostics channel:

### **Hardware/software fault**

A hardware or software malfunction was detected. Carry out a POWER ON for the relevant component. If it occurs again, contact the hotline.

### **Line supply fault**

A line supply fault has occurred (phase failure, voltage level, etc.). Check the line supply and fuses. Check the supply voltage. Check the wiring.

### **Supply voltage fault**

An electronic power supply fault (48 V, 24 V, 5 V, etc.) was detected. Check the wiring. Check the voltage level.

### **Power electronics faulted**

An impermissible operating state of the power electronics was detected (overcurrent, overtemperature, etc.). Check compliance with the permissible load cycles. Check the ambient temperatures (fan).

### **Overtemperature of an electronic component**

The temperature in the component has exceeded the highest permissible limit. Check the ambient temperature / control cabinet ventilation.

### **Ground fault / inter-phase short-circuit detected**

A ground fault / inter-phase short-circuit was detected in the power cables or in the motor windings. Check the power cables (connection). Check the motor.

### **Motor overload**

The motor was operated outside the permissible limits (temperature, current, torque, etc.). Check the load cycles and set limits. Check the ambient temperature / motor cooling.

### **Communication to the higher-level controller faulted**

The communication to the higher-level controller (internal coupling, PROFIBUS, PROFINET, etc.) is faulted or interrupted. Check the state of the higher-level controller. Check the communication connection/wiring. Check the bus configuration/cycles.

### **Actual position/speed value incorrect or not available**

An illegal signal state was detected while evaluating the encoder signals (track signals, zero marks, absolute values, etc.). Check the encoder / state of the encoder signals. Observe the maximum permissible frequencies.

### **Internal (DRIVE-CLiQ) communication faulted**

The internal communication between the SINAMICS components is faulted or interrupted. Check the DRIVE-CLiQ wiring. Ensure an EMC-compliant installation. Observe the maximum permissible quantity structures / cycles.

**External measured value / signal state outside of the permissible range**

A measured value / signal state read-in via the input area (digital/analog/temperature) has assumed an impermissible value/state. Identify and check the relevant signal. Check the set thresholds.

**Application / technological function disrupted**

The application / technological function has exceeded a (set) limit (position, velocity, torque, etc.). Identify and check the relevant limit. Check the setpoint specification of the higher-level controller.

**Error in the parameterization/configuration/commissioning procedure**

An error was identified in the parameterization or in a commissioning procedure, or the parameterization does not match the actual device configuration. Determine the exact cause of the error with the commissioning tool, adapt the parameterization or device configuration.

**General drive fault**

Group fault, determine the exact cause of the fault with the commissioning tool.

**Auxiliary unit faulted**

The monitoring of an auxiliary unit (incoming transformer, cooling unit, etc.) has detected an illegal state. Determine the exact cause of the error and check the relevant device.

## 10.5.8 Support of I&M data sets 1...4

### Identification & Maintenance (I&M)

I&M data sets contain information for a standardized and simplified identification and maintenance of PROFIBUS/PROFINET devices. I&M data sets 1...4 contain plant-specific information, such as the installation location and date. PROFINET supports I&M data sets 0...4.

I&M data sets 1...3 can be set with the SIMATIC Manager (STEP 7) and also with HW Config (STEP 7).

### I&M parameters

Table 10- 40 Parameter designation, assignment and meaning

I&M parameter designation	Format	Size/ octets	Initialization	SINAMICS parameters	Meaning
I&M 0: IM_SUPPORTED	-	-	-	r8820[62,63]	The parameter indicates which I&M data sets are supported. The value 0x1E indicates that I&M data sets 1...4 are available.
I&M 1: TAG_FUNCTION	Visible string	32	Space 0x20...0x20	p8806[0...31]	Text that identifies the function or task of the device.
I&M 1: TAG_LOCATION	Visible string	22	Space 0x20...0x20	p8806[32...53]	Text that identifies the device location.
I&M 2: INSTALLATION_DATE	Visible string	16	Space 0x20...0x7E	p8807[0...15]	Text with the date of the installation or the initial commissioning of the device. The following date formats are supported: <ul style="list-style-type: none"> <li>• YYYY-MM-DD</li> <li>• YYYY-MM-DD hh:mm                             <ul style="list-style-type: none"> <li>- YYYY: Year</li> <li>- MM: Month 01...12</li> <li>- DD: Day 01...31</li> <li>- hh: Hours 00...23</li> <li>- mm: Minutes 00...59</li> </ul> </li> </ul> The separators between the individual specifications, i.e. hyphen '-', blank ' ' and colon ':', must be entered.



I&M parameter designation	Format	Size/ octets	Initialization	SINAMICS parameters	Meaning
I&M 3: DESCRIPTOR	Visible string	54	Space 0x20...0x20	p8808[0...53]	Text with any comments or notes.
I&M 4: SIGNATURE	Octet string	54	Space 0x00...0x00	r8809[0...53]	<p>The parameter is automatically populated by the system, in which case it contains a functional check signature for the change tracking with Safety Integrated. The check signature has the following format:</p> <ul style="list-style-type: none"> <li>• The first four octets (0...3) contain the content of parameter r9781 index 0: "SI change monitoring checksum (Control Unit)".</li> <li>• The second four octets (4...7) contain the content of parameter r9782 index 0: "SI change monitoring time stamp (Control Unit)".</li> <li>• The remainder (octets 8...53) contains zeroes.</li> </ul>

The I&M data sets 1...3 are stored permanently in the parameters p8806...p8808. Essential properties of these 3 parameters:

- They can be displayed in the STARTER expert list.
- The SINAMICS "Reset parameter" (p0976 = 1, p0970 = 1) function does not have any effect on the content of parameters.
- I&M data sets are not changed when the alternative parameter sets are stored or loaded. The transfer of parameter sets between a memory card and non-volatile device memory does not have any effect on the I&M data sets.

### Overview of important parameters (see SINAMICS DCM List Manual)

- p8806[0...53] Identification and Maintenance 1
- p8807[0...15] Identification and Maintenance 2
- p8808[0...53] Identification and Maintenance 3
- r8809[0...53] Identification and Maintenance 4

## 10.6 Communication via SINAMICS Link

### 10.6.1 Basic principles of SINAMICS Link

A drive unit (with a node number) most frequently comprises a Control Unit with a number of connected drive objects (DOs). SINAMICS Link allows data to be directly exchanged between up to 64 CU320-2 PN or CU320-2 DP Control Units or CUD. All of the participating Control Units must be equipped with a CBE20 in order that SINAMICS Link functions. Possible applications are, for example:

- Torque distribution for n drives
- Setpoint cascading for n drives
- Load distribution of drives coupled through a material web
- Master/slave function for infeed units
- Links between SINAMICS DC MASTER and SINAMICS S120

### Requirements

The following preconditions must be fulfilled to operate SINAMICS Link:

- One CBE20 must be inserted for each drive object.
- The following applies for the CUD:
  - An Advanced CUD must be inserted.
  - The memory card (the device firmware) must be inserted.

### Send and receive data

The SINAMICS Link telegram contains 32 indices (0...31) for the process data (PZD1...32). Each PZD is precisely 1 word long (= 16 bits). Indices that are not required are automatically filled with zeros. There is always a fixed assignment between the index and PZD: The index *i* corresponds to PZD *i*+1.

Index	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
PZD	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16

SINAMICS Link telegram content, Part 1

Index	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
PZD	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32

SINAMICS Link telegram content, Part 2

Each transfer cycle, every SINAMICS Link node can send 1 telegram with 32 PZD. Each node receives all of the telegrams that are sent. For each transfer cycle clock, a node can select and process up to 32 PZD from all telegrams that have been received. Single words and double words can be sent and received. You must write double words in two consecutive PZDs.

Limitations:

- In a telegram, a PZD may only be sent and received once. If a PZD occurs more than once in a telegram, then Alarm A50002 or A50003 is output.
- It is not possible to read in your own send data. An appropriate alarm is initiated. The following alarms are possible:
  - A50006: It is parameterized that own data sent can be received. This is not permitted.
  - A50007: The send telegram word is larger than possible in the project.
  - A50008: The receive telegram word is larger than possible in the project.
- The maximum number of PZDs that can be received and sent also depends on the drive object. The number of PZDs that can be evaluated corresponds to communication according to PROFIdrive; however, for SINAMICS Link, it is limited to a maximum of 32 PZDs.
- If, as a result of a project download, parameters of the CBE20 are change, then alarm A08531 is output. In this case, a POWER ON is required to activate the values.

### Transmission time

A transmission time of up to 1.5 ms is possible when using SINAMICS Link.

### Bus cycle and number of nodes

A maximum of 64 participants can communicate with one another via SINAMICS Link. To do so, set the maximum number of nodes with p8811 (project selection):

Number of participants / project no.	Number of PZD	Bus cycle (ms)
64	16	1 or 2
16	16	0.5
12	24	0.5
8	32	0.5

In the non-synchronized mode, the bus cycle of the SINAMICS Link can be set with p8812[1] to 1000  $\mu$ s or 2000  $\mu$ s.

After changing parameter p8811, p8812, p8835 or p8836, carry out a POWER ON to transfer the settings.

### 10.6.2 Topology

Only a line topology with the following structure is permitted for SINAMICS Link. You must manually set the parameters in the expert lists of the Control Units and drive objects. To do this, use the STARTER commissioning tool.

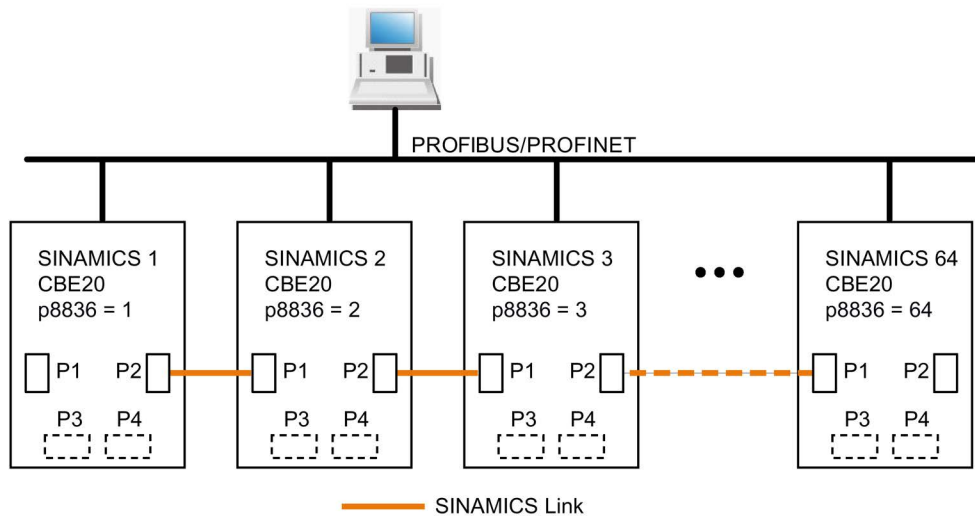


Figure 10-42 Maximum topology

### Features

- The CBE20 can be assigned to IF1 or IF2 when SINAMICS Link is used.  
 You must also make the following parameter settings in order to assign, e.g. IF1 to SINAMICS Link:
  - For IF1: p8839[0] = 2 (COMM BOARD)
  - For IF2: p8839[1] = 1 (Control Unit onboard)
 The data in the additional description are applicable for the case (IF1 ≙ SINAMICS Link).
- The number of the respective node must be entered manually in parameter p8836. Each node must be assigned a different number. Enter the numbers in ascending order starting with 1.
- If p8836 is set to 0, the nodes and the complete following line is shut down for SINAMICS Link.
- Gaps in the numbering are not permitted, as then SINAMICS Link would not function.
- The node with the number 1 is automatically the sync master of the communication link.

- The ports of the CBE20 must be interconnected strictly in accordance with the previous diagram. You must always connect port 2 (P2) of node n with port 1 (P1) of node n + 1.
- In the "SINAMICS Link" mode, ports 3 and 4 of the CBE20 can only be used to connect to the STARTER commissioning tool or Startdrive.

### Corresponding parameters for IF1 or IF2

Use different parameters for configuring, depending on which interface SINAMICS Link is assigned:

Table 10- 41 Corresponding parameters

Parameters	IF1	IF2
Setting of the processing mode for PROFIdrive STW1.10 "Control by PLC".	p2037	p8837
Connector output to interconnect the PZD (setpoints) received from the fieldbus controller in the word format.	r2050	r8850
Selects the PZD (actual values) to be sent to the fieldbus controller in the word format.	p2051	p8851
Displays the PZD (actual values) sent to the fieldbus controller in the word format.	r2053	r8853
Connector output to interconnect the PZD (setpoints) received from the fieldbus controller in the double word format.	r2060	r8860
Selects the PZD (actual values) to be sent to the fieldbus controller in the double word format.	p2061	p8861
Displays the PZD (actual values) sent to the fieldbus controller in the double word format.	r2063	r8863

### 10.6.3 Configuring and commissioning

#### Note

When using SINAMICS Link, the memory card must remain inserted in the CUD. p8835 cannot be set to 3 if it is not inserted.

### Commissioning

When commissioning, proceed as follows:

1. Set the Control Unit parameter p0009 = 1 (device configuration).
2. Set the Control Unit parameter p8835 = 3 (SINAMICS Link).
3. Using p8839, define which interface should be used (for example for IF1: p8839[0] = 2).

4. If SINAMICS Link is assigned to IF1, set parameter p2037 of the drive objects to 2 (do not freeze setpoints).  
If SINAMICS Link was assigned IF2, then p8837 must be used for the setting.
5. Assign the nodes in parameter p8836 to the SINAMICS Link node number.  
The first Control Unit is always assigned the number 1. Node number 0 means that for this Control Unit SINAMICS Link has been shut down. Observe the specifications under "Topology".
6. Check and/or correct the following parameters:
  - p8811 must be identical for all nodes
  - p8812[1] must be identical for all nodes
  - p8812[0] may be different for local nodes
7. Set the Control Unit parameter p0009 = 0 (ready).
8. Execute a "Copy RAM to ROM".
9. Carry out a POWER ON (switch off the Control Unit and switch on again).

## Sending data

---

### Note

The parameters listed in the following description refer to the assignment of SINAMICS Link to IF1. If you assigned SINAMICS Link to IF2, then you find the corresponding parameters in the "Table 10-41 Corresponding parameters (Page 515)".

---

In this example, the first "Control Unit 1" node has two drive objects: "Drive 1" and "Drive 2". Proceed as follows to send data:

1. If SINAMICS Link is assigned to IF1, then for each drive object, in its associated parameter p2051[0...31], you define which data (PZDs) should be sent.  
If SINAMICS Link was assigned IF2, then p8851 must be used for the setting. The data is simultaneously reserved in the send slot of the p8871[0...31].
2. Enter the double words in p2061[x].  
Double word data is simultaneously written to p8861[0...31].
3. For each drive object, allocate the send parameters in p8871[0...31] to a send slot of its own node.

Table 10- 42 Compile send data of drive 1 (DO2)

p2051[x] Index	p2061[x] Index	Contents	From parameter	Telegram word p8871
0	-	ZSW1	r0899	1
-	1	Actual speed value part 1	r0061[0]	2
-		Actual speed value part 2		3
-	3	Actual torque value part 1	r0080	4
-		Actual torque value part 2		5
5	-	Actual fault code	r2131	6
6	-	0	0	0
...	-	...	-	...
15	-	0	0	0
...	-	...	-	...
31	-	0	0	0

Table 10- 43 Compile send data of drive 2 (DO3)

p2051[x] Index	p2061[x] Index	Contents	From parameter	Slots in the send buffer p8871[x]	
				x	Telegram word
-	-	-	-	0...5 <sup>1)</sup>	0
0	-	ZSW1	r0899	6	7
-	1	Actual speed value part 1	r0061[0]	7	8
-		Actual speed value part 2		8	9
-	3	Actual torque value part 1	r0080	9	10
-		Actual torque value part 2		10	11
5	-	Actual fault code	r2131	11	12
6	-	0	0	12	0
...	-	...	-	...	...
15	-	0	0	15	0
...	-	...	-	...	...
31	-	0	0	31	0

<sup>1)</sup> 0...5 here remain free, as they are already assigned by DO2.

Table 10- 44 Compile send data of Control Unit 1 (DO1)

p2051[x] Index	p2061[x] Index	Contents	From parameter	Slots in the send buffer p8871[x]	
				x	Telegram word
-	-	-	-	0...11 <sup>2)</sup>	0
0	-	Control word, faults/alarms	r2138	12	13
-	1	Missing enables part 1	r0046	13	14
-		Missing enables part 2		14	15
15	-	0	0	15	0
...	-	...	-	...	...
31	-	0	0	31	0

2) 0...11 here remain free, as they are already assigned by DO2 and DO3.

Send slots PZD 16 to 31 are not required for this telegram and are therefore filled with a zero.

1. For double words (e.g. 1 + 2), assign two consecutive send slots, e.g. p2061[1] => p8871[1] = PZD 2 and p8871[2] = PZD 3.
2. Enter the following PZD into the next parameter slots of p2051[x] or p2061[2x].
3. You must fill the unused slots of p8871[0...31] with zeros.
4. The sequence of the PZDs in the send telegram of this node are defined in parameter p8871[0...31] by the entries in the required slots.

## Receiving data

The sent telegrams of all nodes are simultaneously available at the SINAMICS Link. Each telegram has a length of 32 PZD. Each telegram has a marker of the sender. You select those PZD that you want to receive for the relevant node from all telegrams. You can process a maximum of 32 PZD.

### Note

If you have not deactivated the evaluation of bit 10 with p2037 = 2, the first word of the receive data (PZD 1) must be a control word, where bit 10 = 1 is set.

In this example, Control Unit 2 receives selected data from the telegram of Control Unit 1. Proceed as follows to receive data:

1. In parameter p8872[0...31] enter the address of the node for which you want to read one or more PZDs (e.g. p8872[3] = 1 → from node 1, read in PZD 4, p8872[15] = 0 → do not read in PZD 16).
2. After setting the parameters, using parameter r2050[0...31] or r2060[0...31] you can read out the values.



Table 10- 45 Receive data for Control Unit 2

From the sender		Receiver					
Transfer from	Tel. word <sup>1)</sup> p8871[x]	Address p8872[x]	Receive buffer p8870[x]	Data transferred in		Parameter	Contents
				r2050[x]	r2060[x]		
p2051[0]	0	1	PZD 1	0	-	r0899	ZSW1
p2061[1]	1	1	PZD 2	-	1	r0061[0]	Actual speed value part 1
	2	1	PZD 3	-		r0061[0]	Actual speed value part 2
p2061[3]	3	1	PZD 4	-	3	r0080	Actual torque value part 1
	4	1	PZD 5	-			Actual torque value part 2
p2051[5]	5	1	PZD 6	5	-	r2131	Actual fault code
p2051[4]	6	1	PZD 7	6	-	r0899	ZSW1
p2061[5]	7	1	PZD 8	-	7	r0061[0]	Actual speed value part 1
	8	1	PZD 9	-			Actual speed value part 2
p2061[6]	9	1	PZD 10	-	9	r0080	Actual torque value part 1
	10	1	PZD 11	-			Actual torque value part 2
p2051[7]	11	1	PZD 12	11	-	r2131	Actual fault code
p2051[8]	12	1	PZD 13	12	-	r2138	Control word, faults/alarms
p2061[9]	13	1	PZD 14	-	13	r0046	Missing enables part 1
	14	1	PZD 15	-			Missing enables part 2
-	15	0	PZD 16	15	-	0	Empty
...	...	...	...	...	...	...	...
-	31	0	PZD 32	31	0	0	-

1) Tel.word = Telegram word

### Note

For double words, two PZD must be read in succession. To do this, read in a 32 bit setpoint, which is on PZD 2 + PZD 3 of the telegram of node 2. Map this setpoint to PZD 2 + PZD 3 of participant 1:

p8872[1] = 2, p8870[1] = 2, p8872[2] = 2, p8870[2] = 3

## Activating SINAMICS Link

To activate SINAMICS Link connections, perform a POWER ON for all nodes.

Without POWER ON, the following can be changed:

- The assignments of p2051[x]/2061[2x] and the links of the read parameters r2050[x]/2060[2x]
- Parameters p8870, p8871, and p8872 In this case, the SINAMICS Link connections can also be connected via p8842 = 1.

## 10.6.4 Example

### Task

Configure SINAMICS Link for two nodes and transfer the following values:

- Send data from node 1 to node 2
  - r0898 CO/BO: Control word, sequence control, drive 1 (1 PZD), in the example PZD 1
  - r0079 CO: Total torque setpoint (2 PZD), in the example PZD 2
  - r0021 CO: Smoothed actual speed (2 PZD), in the example PZD 3
- Send data from node 2 to node 1
  - r0899 CO/BO: Status word, sequence control, drive 2 (1 PZD), in the example PZD 1
- IF1 is used for SINAMICS Link.

### Procedure

1. For all nodes, set p0009 = 1 to change the device configuration.
2. For all CBE20 nodes, set the "SINAMICS Link" mode using p8835 = 3.
3. Limit the maximum number of nodes for all nodes with p8811 = 8. By setting p8811, parameter p8812[1] is preassigned, and parameter p8836, if necessary, is corrected.
4. Assign the node numbers for the devices involved:
  - Node 1 (≙ device 1): p8836 = 1
  - Node 2 (≙ device 2): p8836 = 2
5. Make the following interface setting for all nodes:
  - For IF1: p8839[0] = 2 (COMM BOARD)
  - For IF2: p8839[1] = 1 (Control Unit onboard)
6. For both nodes p0009 = 0, carry out a "Copy RAM to ROM" followed by a POWER ON in order to activate the modified firmware versions and the new settings in the CBE20.
7. Define the send data for node 1:
  - Define the PZD that node 1 should send:
    - p2051[0] = drive1:r0898 (PZD 1)
    - p2061[1] = drive1:r0079 (PZD 2 + PZD 3)
    - p2061[3] = drive1:r0021 (PZD 4 + PZD 5)
  - Place these PZD in the send buffer (p8871) of node 1:
    - p8871[0] = 1 (r0898)
    - p8871[1] = 2 (r0079 1st part)
    - p8871[2] = 3 (r0079 2nd part)
    - p8871[3] = 4 (r0021 1st part)
    - p8871[4] = 5 (r0021 2nd part)

8. Define the receive data for node 2:

- Specify that the data placed in the receive buffer p8872 of node 2 in locations 0 to 4 will be received by node 1:

p8872[0] = 1  
p8872[1] = 1  
p8872[2] = 1  
p8872[3] = 1  
p8872[4] = 1

- Specify that PZD1, PZD2, and PZD3 of node 1 will be placed in the receive buffer p8870 of node 2 in locations 0 to 4:

p8870[0] = 1 (PZD1)  
p8870[1] = 2 (PZD2 1st part)  
p8870[2] = 3 (PZD2 2nd part)  
p8870[3] = 4 (PZD3 1st part)  
p8870[4] = 5 (PZD3 2nd part)

- r2050[0], r2060[1] and r2060[3] subsequently contain (after step 13) the values of PZD 1, PZD 2 and PZD 3 of node 1.

9. Define the send data for node 2:

- Specify the PZD that node 2 should send:  
:p2051[0] = drive1:r0899 (PZD length is 1 word)
- Place this PZD in the send buffer (p8871) of node 2:  
p8871[0] = 1

10. Define the receive data for node 1:

- Specify the data that should be placed in the receive buffer p8872 of node 1 in location 0, received from node 2:

p8872[0] = 2


- Define that PZD1 of node 2 is saved in the receive buffer p8870 of node 1 in location 0:

p8870 [ 0] = 1

- r2050[0] subsequently contains (after step 13) the value of PZD 1 of node 2.

11. At the two nodes carry-out a "Copy RAM to ROM" to backup the parameterization and the data.

12. Set p8842 =1 to activate parameters p8870, p8871 and p8872.

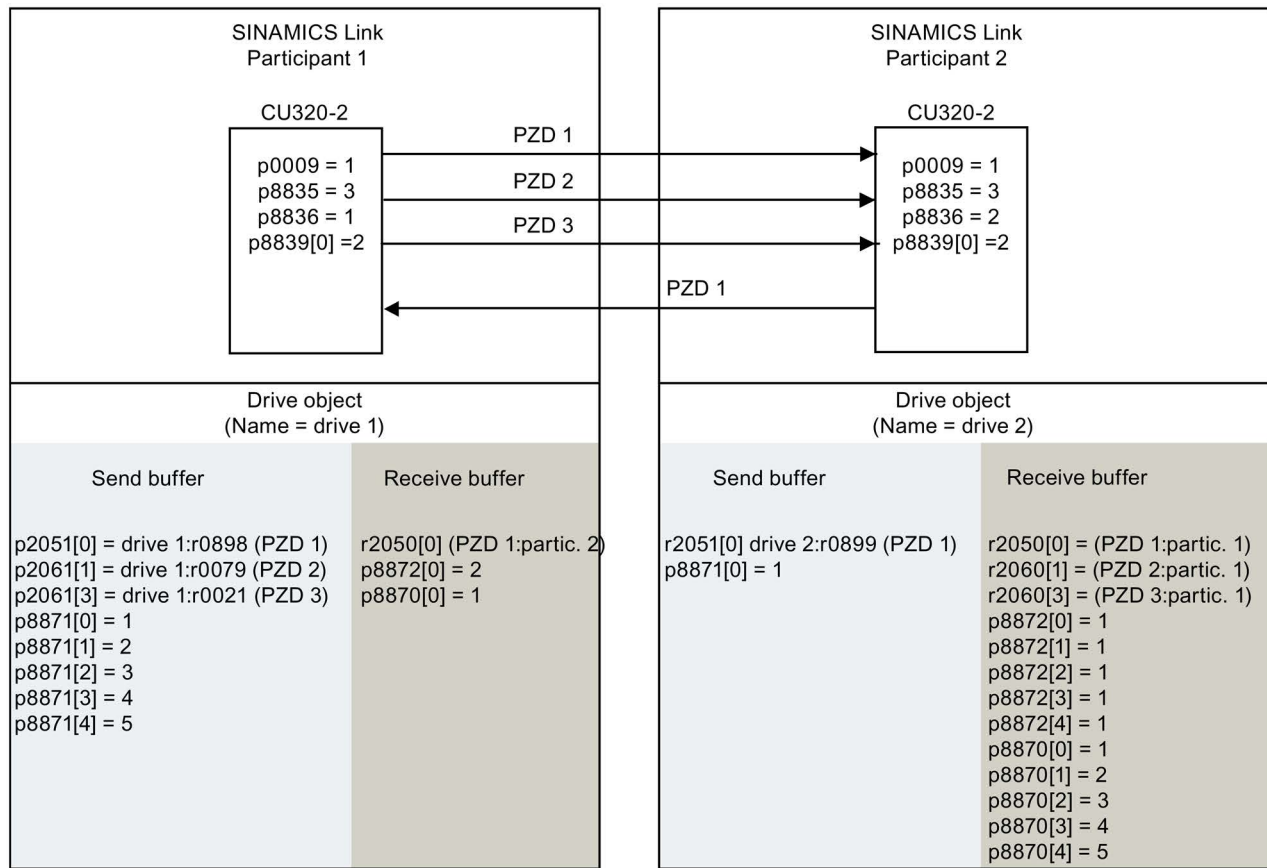

r0021: Speed actual value smoothed  
 r0079: Total torque setpoint  
 r0898: Control word sequence control drive 1  
 r0899: Status word sequence control drive 2

Figure 10-43 SINAMICS Link: Configuration example

### 10.6.5 Communication failure when booting or in cyclic operation

If at least one sender does not correctly boot after commissioning or fails in cyclic operation, then alarm A50005 is output to the other nodes: "Sender was not found on SINAMICS Link". The message contains the number of the faulted node. After you have resolved the fault at the node involved and the system has identified the node, the system automatically withdraws the alarm.

If several nodes are involved, the message occurs a multiple number of times consecutively with different node numbers. After you have resolved all of the faults, the system automatically withdraws the alarm.

When a node fails in cyclic operation, in addition to alarm A50005, fault F08501 is output: "COMM BOARD: Monitoring time, process data expired"

At node 1, fault F08501 is not triggered. This node should be used for specifying setpoint values to other nodes.

## 10.6.6 Examples: Transmission times for SINAMICS Link

### Example 1: Transmission times at a communication cycle of 1 ms

p2048 or p8848 = 1 ms

Bus cycle [ms]	Transmission time [ms]			
	Sync both	Sync send	Sync receive	Async both
0.5 <sup>*)</sup>	1.0	1.5	1.3	1.6
1.0	1.5	2.1	2.1	2.2
2.0	3.0	3.6	3.1	2.8

### Example 2: Transmission times at a communication cycle of 4 ms

p2048 or p8848 = 4 ms

Bus cycle [ms]	Transmission time [ms]			
	Sync both	Sync send	Sync receive	Async both
0.5 <sup>*)</sup>	1.0	3.0	2.8	4.6
1.0	1.5	3.6	3.6	5.2
2.0	3.0	5.1	4.6	5.8

<sup>\*)</sup> Only possible for SINAMICS S120/S150.

## 10.6.7 Function diagrams and parameters

### Function diagrams (see the SINAMICS DCM List Manual)

- 2197 Control Unit communication – SINAMICS Link overview  
(r0108.31 = 1, p8835 = 3)
- 2198 Control Unit communication – SINAMICS Link configuration  
(r0108.31 = 1, p8835 = 3)
- 2199 Control Unit communication – SINAMICS Link receive data  
(r0108.31 = 1, p8835 = 3)
- 2200 Control Unit communication – SINAMICS Link send data  
(r0108.31 = 1, p8835 = 3)

### Overview of important parameters (see SINAMICS DCM List Manual)

- p0115[0] Sampling time for additional functions
- p2037 IF1 PROFIdrive STW1.10 = 0 mode
- r2050[0...31] CO: IF1 PROFIdrive PZD receive word
- p2051[0...31] CI: IF1 PROFIdrive PZD send word
- r2060[0...30] CO: IF1 PROFIdrive PZD receive double word
- p2061[0...30] CI: IF1 PROFIdrive PZD send double word
- p8811 SINAMICS Link project selection
- p8812[0...1] SINAMICS Link cycle settings
- p8835 CBE20 firmware selection
- p8836 SINAMICS Link node address
- p8839[0...1] PZD interface hardware assignment
- p8870[0...31] SINAMICS Link PZD receive word
- p8871[0...31] SINAMICS Link PZD send word
- p8872[0...31] SINAMICS Link PZD receive address

## 10.7 EtherNet/IP


SINAMICS DCM supports the communication with the fieldbus EtherNet Industrial Protocol (EtherNet/IP or also EIP). EtherNet/IP is an open standard based on Ethernet, which is predominantly used in the automation industry. EtherNet/IP is supported by the Open DeviceNet Vendor Association (ODVA).

For communication with EtherNet/IP, a CBE20 Communication Board Ethernet is required. By setting p8835 = 4, you can choose the communication profile EtherNet/IP. After POWER ON, the profile becomes active.

### 10.7.1 Connection of SINAMICS DCM with EtherNet/IP to Ethernet networks

The SINAMICS DC MASTER version with option G20/G21 (CBE20 Communication Board Ethernet left/right) is required for the connection to EtherNet/IP. See Chapter "Ordering information for options and accessories (Page 30)" for ordering data.

For additional information on the CBE20 Communication Board Ethernet see Chapter "Option Board: Communication Board Ethernet CBE20 (Page 192)".

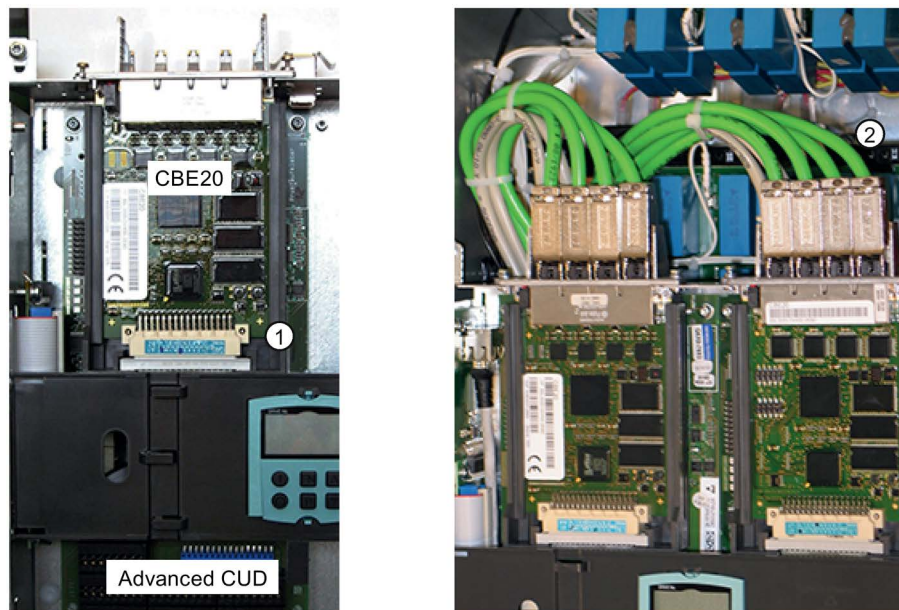

Picture left: Communication Board Ethernet CBE20 inserted in the option module slot ① of an Advanced CUD

Picture right: Maximum configuration with two CBE20. Four Ethernet cables ② for each CBE20.

Figure 10-44 CBE20

## 10.7.2 Configuration of SINAMICS DCM for EtherNet/IP

### 10.7.2.1 Setting the IP address and activating the EtherNet/IP protocol

#### Requirements

- Version with option G00/G10 (Advanced CUD)
- CBE20

The IP configuration is performed via STARTER or through direct parameter input via the BOP or AOP30.

Table 10- 46 Settable parameters on the drive object CU

Parameter		Note
p8941	IP address	Setting is mandatory
p8943	Subnet screen	Setting is mandatory
p8942	Default gateway	-
p8940	Name of station	In contrast to PROFINET, setting is not mandatory.
p8945 = 2	Save and activate IP configuration	Setting must be made when the parameters are entered directly.

In addition to direct input, the IP address can also be obtained via DHCP.

#### Configuration of EtherNet/IP on the drive unit

1. For setting the IP address directly via parameters, see the previous table.
2. Activation of EtherNet/IP
  - Set access level 3 (p0003 = 3) in the drive object CU (BOP object 1) via STARTER, BOP or AOP30.
  - Activate the device configuration on the CU by setting p0009 = 1.
  - Activate EtherNet/IP by setting p8835=4 on the CU.
  - Complete the device configuration on the CU by setting p0009 = 0.
  - Save the parameters (copy RAM to ROM).
  - Switch the device off and on again (POWER ON).
  - After power-up, the SINAMICS DC MASTER is visible as Ethernet/IP slave in the network.



### 10.7.2.2 Communication with the SINAMICS DCM

The Ethernet/IP communication with the SINAMICS DCM is possible with two CIP types:

- IMPLICIT: For cyclic I/O data (setpoints, actual values, control and status words)
- EXPLICIT: For acyclic message requests ("explicit messaging")

The following CIP / messaging classes are available for the SINAMICS DCM:

Class code (hex)	Class code	Object name
0x01	1	Identity object
0x04	4	Assembly object
0x06	6	Connection Manager object
0x32C*	7	Drive object
0x401 - 0x43E	1025 - 1086	Parameter object (reading/writing a single parameter value)

#### Implicit messaging – Cyclic communication as I/O slave

The cyclic communication is represented by Class 4 and the assembly object structure.

As standard, the SINAMICS DCM as I/O slave exchanges cyclic process data (PZDs) with a PLC or another control system.

Process data is the cyclic information such as control and status words as well as actual values and setpoints.

The following I/O assembly settings are to be made (from PLC perspective).  
4 ms is supported as the minimum value for RPI (Requested Packet Interval).

Assembly 101 – Receive data:	Length depends on the user settings
Assembly 102 – Send data:	Length depends on the user settings
Assembly 103 – Configuration data:	Length 0 bytes

16-bit integer is used as the data type.

The data length is the sum of the number of words transferred from each drive object.

Example 1:

DO	Number of words to be sent	Number of words to be received
DC_CTRL (drive)	10	10
CU	2	2
Sum = length	12 words = 24 bytes	12 words = 24 bytes

Example 2:

DO	Number of words to be sent	Number of words to be received
DC_CTRL (drive)	10	5
CU	0	0
TM31	1	1
Sum = length	11 words = 22 bytes	6 words = 12 bytes

In contrast to PROFIBUS and PROFINET communication, only connected PZDs in the drive can be used in the assembly.

In example 1, all ten words of the drive and the two words of the CU must have an active BICO connection. This means that all data received from the PLC must be connected to a parameter, which correspondingly also applies to the data sent to the PLC. All words must therefore be supplied with status or actual values.

The assembly for Ethernet/IP is automatically made up of the sum of the interconnected parameters r2067 for IF1 r8867 for IF2 of the respective drive object.

Corresponding to example 1, the total length for the send data would be:  
 DC\_CTRL r2067[1] = 10 + CU r2067[1] = 2 ≥ 12 words = 24 bytes

---

**Note**

For a firmware release < 1.5, the assembly must be manually created by setting p8842 = 1 on the CU.

---

If the change is to be permanent, copy RAM to ROM.

The sequence of the drive objects depends on the communication settings in the drive which can be accessed via the "communication item" of the associated drive in the project tree of the STARTER software.

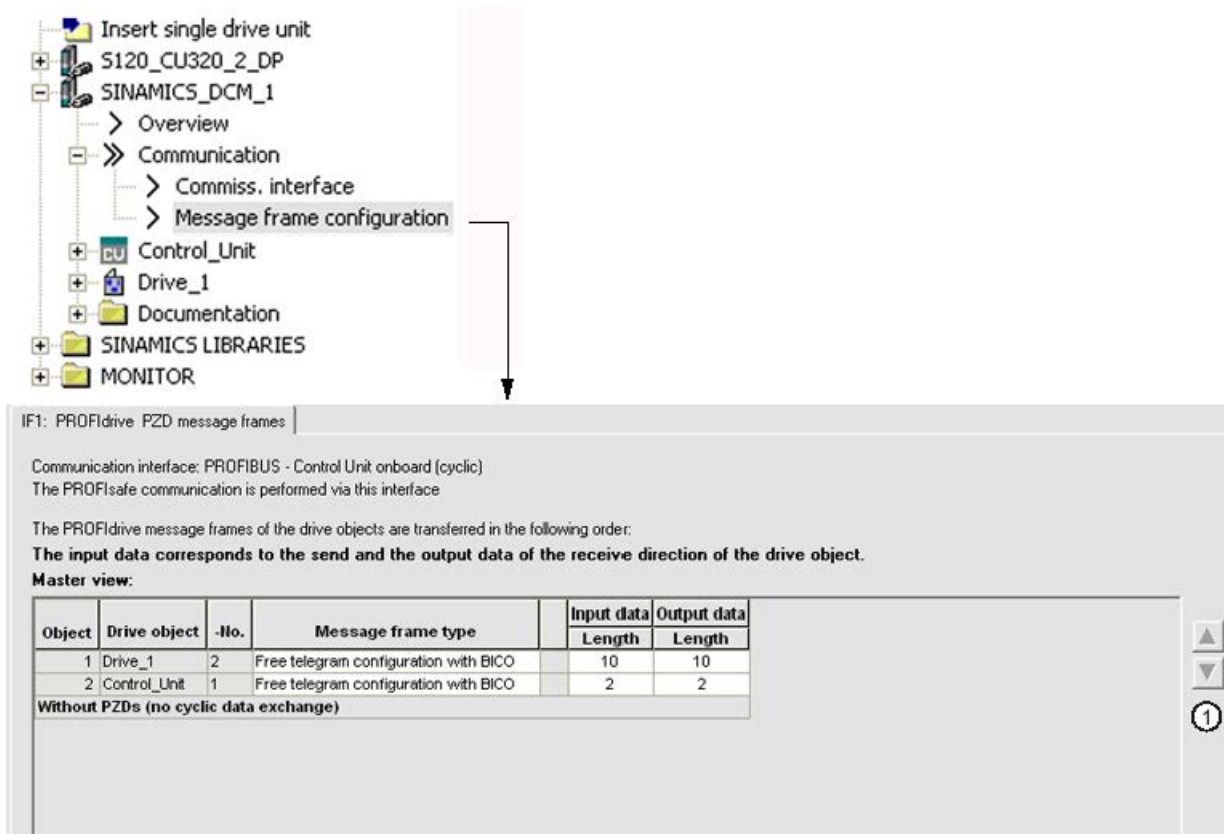


Figure 10-45 Changing the DO sequence

The sequence can only be changed offline using the arrows on the right ①. For the change to take effect, it must be subsequently downloaded from the PG/PC to the drive.

### Explicit messaging - acyclic or event-driven communication

Acyclic or event-driven information can also be read from the drive or written to the drive, e.g. read-out of the fault buffer when an error occurs.

"Explicit messaging" must be used in order to be able to use this information in the classes described in the following.

**Class 1 Identity object**

<b>Identity Object</b>	Class 01h
------------------------	-----------

Supported Services:	
Class	Get Attribute All
	Get Attribute Single
Instance	Get Attribute All
	Get Attribute Single
	Reset

Class Attribute					
#	Attributename	Service	Description	Datatype	Value
1	Revision	Get		UINT16	
2	Max Instance	Get		UINT16	
3	Num of Instances	Get		UINT16	

Instance Attribute							
#	Attributename	Service	Description	Datatype	Value	Device Type	Value
1	Vendor ID	Get	Device Vendor	UINT16	145	AC Drive	02h
						Profil	Siemens AC D 12h
						ODVA AC/DC Drive	
						Siemens Driv	PROFIdrive Device Type
2	Device Type	Get	General product type	UINT16			start with versioning from 10 and increment +10 for major change in EDS and +1 for minor change
3	Product Code	Get	DVC_TYPE	UINT16	r964[1]	Name	Definition
4	Revision	Get	Object Revision	UINT16	revision shou	Owned	True: The device or an object has an owner
					Bits	res	reserved
					0	Configured	True: Any parameters was changed
					1	res	reserved
					2	res	reserved
					3	Minor Fault recoverable	True: a fault accurse and can be reseted
					4-7	Minor Fault unrecoverable	True: a fault accurse and cannot be reseted
					8	Major Fault recoverable	True: a fault accurse and can be reseted by power cycle
					9	Major Fault unrecoverable	True: a fault accurse and cannot be reseted by power cycle
					10	res	
					11	Serial Number mapping	
5	Status	Get	Summary Status of Drive	UINT16	12-15		
6	Serial number	Get	Serial Number	UINT32	r8820 [32..47]		
						SINAMICS S	
						SINAMICS G120	
7	Product Name	Get	Name of product (max.32)	Short String		SINAMICS V.. (not supported)	

Figure 10-46 General drive information

### Class 32C Drive object

Drive Siemens Object Class 32Ch	
<b>Supported Services:</b>	
Class	Get Attribute All Get Attribute Single
Instance	Get Attribute Single Set Attribute Single

Class Attribute					
#	Attributename	Service	Description	Datatype	Value
1	Revision	Get		UINT16	
2	Max Instance	Get	Max slot num	UINT16	
3	Num of Instances	Get	Max slot ID	UINT16	

Instance Attribute									
#	Attributename	Service	Description	Datatype	Parameter Reference	Units	Scaling	Min	Max
2	Commissioning state	Set/Get	Commissioning state		P10	--	--	0	10000
3-18	stW1	Get	Bitwise access: Attr 3-STW1.0 Attr 18-STW1.15	STW1		--	--	0	1
19	Main Setpoint	Get	Main Setpoint	HSW		%	100	-200	200
20-35	ZSW1	Get	Bitwise access: Attr 20-ZSW1.0 Attr 35-ZSW1.15	ZSW1		--	--	0	1
36	Actual Frequency	Get	Actual Frequency	HW		%	100	-200	200
37	Ramp Up Time	Set/Get	Ramp Up Time	P1120[0]		sec	100	0	650
38	Ramp Down Time	Set/Get	Ramp Down Time	P1121[0]		sec	100	0	650
39	Current Limit	Set/Get	Current Limit	P064[0]		%	10	10	400
40	Frequency MAX Limit	Set/Get	Frequency MAX Limit	P1082[0]		Hz	100	1	649.99
41	Frequency MIN Limit	Set/Get	Frequency MIN Limit	P1083[0]		Hz	100	0	649.99
42	OFF3 Ramp Down Time	Set/Get	OFF3 Ramp Down Time	P1135[0]		sec	100	0	650
43	PID Enable	Set/Get	PID Enable	P2200[0]		--	--	Enable	No
44	PID Filter Time Constant	Set/Get	PID Filter Time Constant	P2265		sec	100	0	60
45	PID D Gain	Set/Get	PID D Gain	P2274		sec	1000	0	60
46	PID P Gain	Set/Get	PID P Gain	P2280		--	1000	0	65
47	PID I Gain	Set/Get	PID I Gain	P2285		sec	1000	0	60
48	PID Up Limit	Set/Get	PID Up Limit	P2291		%	100	-200	200
49	PID Down Limit	Set/Get	PID Down Limit	P2292		%	100	-200	200
50	Speed Setpoint	Get	Speed Setpoint	r0020		Hz	10	-3250	3250
51	Output Frequency	Get	Output Frequency	r0024		Hz	10	-3250	3250
52	Output Voltage	Get	Output Voltage	r0025		Vac	10	-3250	3250
53	DC Link Voltage	Get	DC Link Voltage	r0026[0]		Vac	10	-3250	3250
54	Actual Current	Get	Actual Current	r0027		A	100	0	655.35
55	Actual Torque	Get	Actual Torque	r0031		Nm	10	-3250	3250
56	Output Power	Get	Output Power	r0032		kW/HP	100	-325	325
57	Motor Temperature	Get	Motor Temperature	r0035[0]		°C	100	0	200
58	Power Unit Temperature	Get	Power Unit Temperature	r0037[0]		°C	100	0	200
59	Energy kWh	Get	Energy kWh	r0038		kWh	1	0	65535
60	CDS Eff (Local Mode)	Get	CDS Eff (Local Mode)	r0050		--	1	0	2
61	Status Word 2	Get	Status Word 2	r0053		--	Bit Mask	0	FFFF
62	Control Word 1	Get	Control Word 1	r0054		--	Bit Mask	0	FFFF
63	Motor Speed (Encoder)	Get	Motor Speed (Encoder)	r0061		rpm	10	-650	650
64	Digital Inputs	Get	Digital Inputs	r0722		--	Bit Mask	0	FFFF
65	Digital Outputs	Get	Digital Outputs	r0747		--	Bit Mask	0	FFFF
66	Analog Input 1	Get	Analog Input 1	r0752[0]		V/mA	1000	-20	20
67	Analog Input 2	Get	Analog Input 2	r0752[1]		V/mA	1000	-20	20
68	Analog Output 1	Get	Analog Output 1	r0774[0]		V/mA	1000	-20	20
69	Analog Output 2	Get	Analog Output 2	r0774[1]		V/mA	1000	-20	20
70	Fault Code 1	Get	Fault Code 1	r0947[0]		--	1	0	65535
71	Fault Code 2	Get	Fault Code 2	r0947[1]		--	1	0	65535
72	Fault Code 3	Get	Fault Code 3	r0947[2]		--	1	0	65535
73	Fault Code 4	Get	Fault Code 4	r0947[3]		--	1	0	65535
74	Fault Code 5	Get	Fault Code 5	r0947[4]		--	1	0	65535
75	Fault Code 6	Get	Fault Code 6	r0947[5]		--	1	0	65535
76	Fault Code 7	Get	Fault Code 7	r0947[6]		--	1	0	65535
77	Fault Code 8	Get	Fault Code 8	r0947[7]		--	1	0	65535
78	Pulse Frequency	Get	Pulse Frequency	r1801		kHz	100	0	16
79	Alarm Code 1	Get	Alarm Code 1	r2110[0]		--	1	0	65535
80	Alarm Code 2	Get	Alarm Code 2	r2110[1]		--	1	0	65535
81	Alarm Code 3	Get	Alarm Code 3	r2110[2]		--	1	0	65535
82	Alarm Code 4	Get	Alarm Code 4	r2110[3]		--	1	0	65535
83	PID Setpoint Output	Get	PID Setpoint Output	r2260		%	100	-100	100
84	PID Feedback	Get	PID Feedback	r2266		%	100	-100	100

Figure 10-47 32C drive object

As shown in the previous table, certain drive parameters can be read and written. Note that this function was originally created for SINAMICS AC drives. It can therefore only access parameters that are available on the SINAMICS DCM.

The function described in Chapter "Class 0x401 - 0x43E Writing and reading of parameters (Page 532)" is preferred instead of Class 0x32C for reading and writing parameter data.

### Class 0x401 - 0x43E Writing and reading of parameters

With this class, it is possible to read and write an arbitrary parameter of the respective drive object (DO).

Class value	Selects the DO. 0x4xx xx = object number
Instance	Represents the parameter number, e. g. p50100 ⇒ instance = 50100
Attribute	Represents the index to be read or written, e.g. index 0 ⇒ attribute = 0

The appropriate object number must be taken from the "Message frame configuration" shown in Figure 10-45 Changing the DO sequence (Page 529).

Generally, the following applies:

- Object number 1 = CU of the DCM ⇒ Class 401
- Object number 2 = drive unit of the DCM ⇒ Class 402

The data type of the parameter is specified by the drive and can be found in the SINAMICS DCM List Manual (Chapter "List of parameters").

---

#### Note

All bytes defined by the data type must be assigned, even if they are not used.

---

#### Examples

- INT/UINT 16 must be assigned to 4 bytes.
- Floating point 32, INT/UINT 32 must be assigned to 8 bytes.

## 10.7.3 Examples of the use of a Rockwell PLC

### 10.7.3.1 Configuration of a Rockwell PLC for the communication with SINAMICS DCM

#### Note

The user must have basic knowledge of Allen-Bradley / Rockwell PLCs.

The associated Allen-Bradley / Rockwell documentation should be used for detailed information about communication with Ethernet/IP and general programming of Rockwell PLCs.

A "Generic Ethernet/IP" module must be created in order to communicate with a SINAMICS DCM.

The following configurations must be made for the basic communication:

- Selection of the module, figures "Selection of the module (1), (2) and (3)"

The dialog box for the selection of the module for the appropriate Ethernet interface is selected in the I/O configuration through > right-click > New Module.

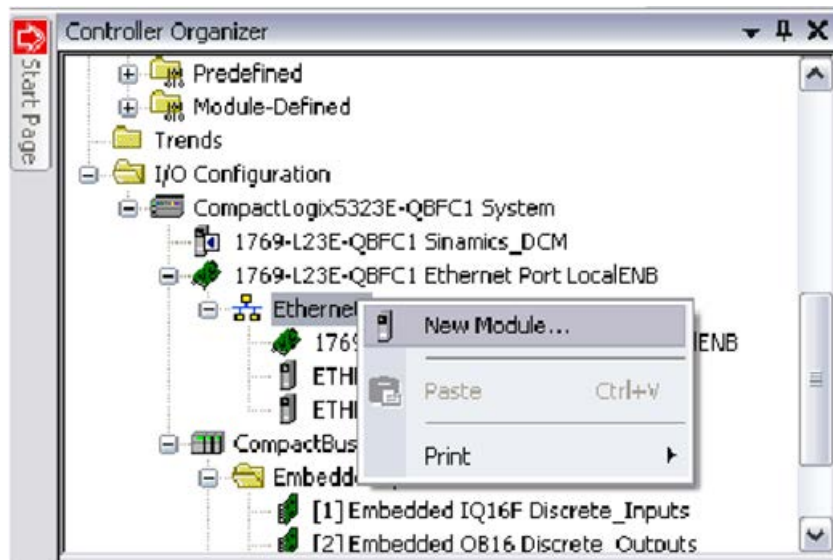


Figure 10-48 Selection of the module (1)

The "Generic Ethernet Module" is selected at Communication:

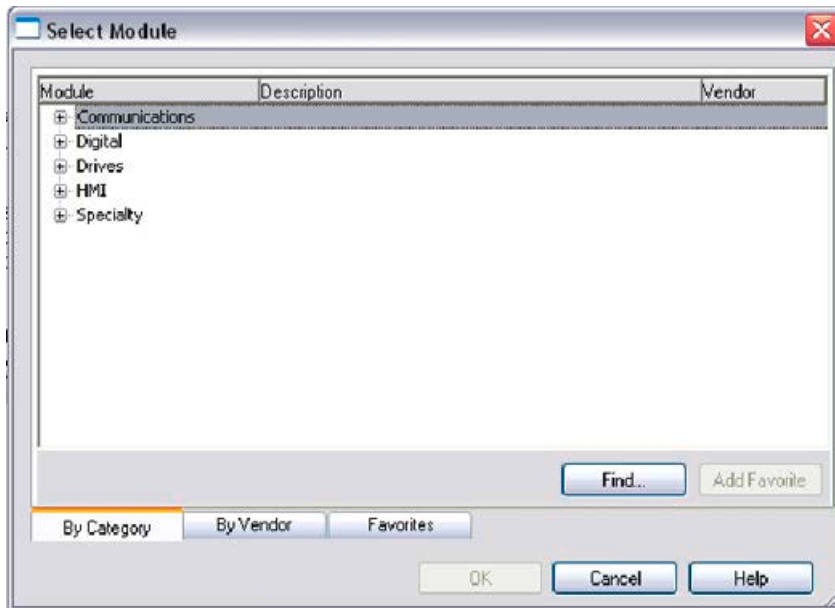


Figure 10-49 Selection of the module (2)

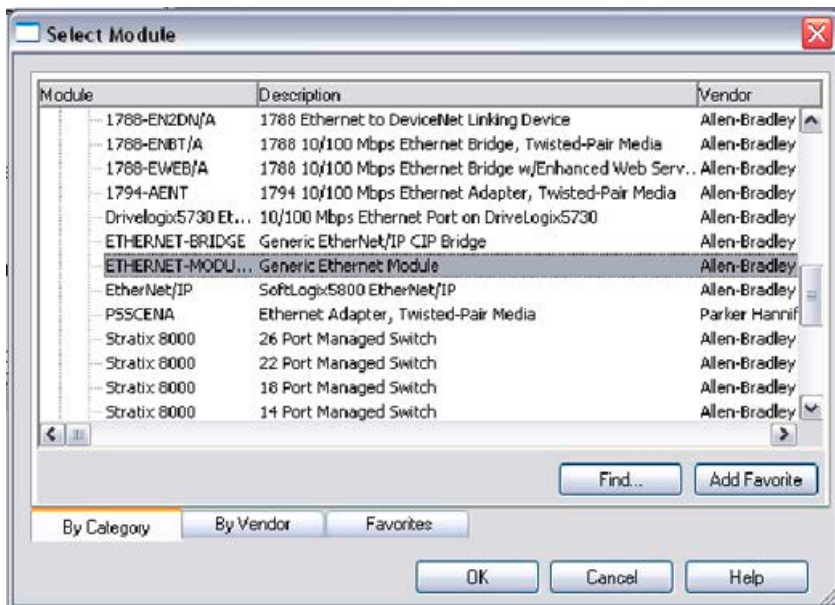


Figure 10-50 Selection of the module (3)

- After the module has been inserted by clicking OK, a new Ethernet/IP slave appears in the structure tree.  
A window is opened as follows by double-clicking with the left-hand mouse key or > right-hand mouse key > Properties.



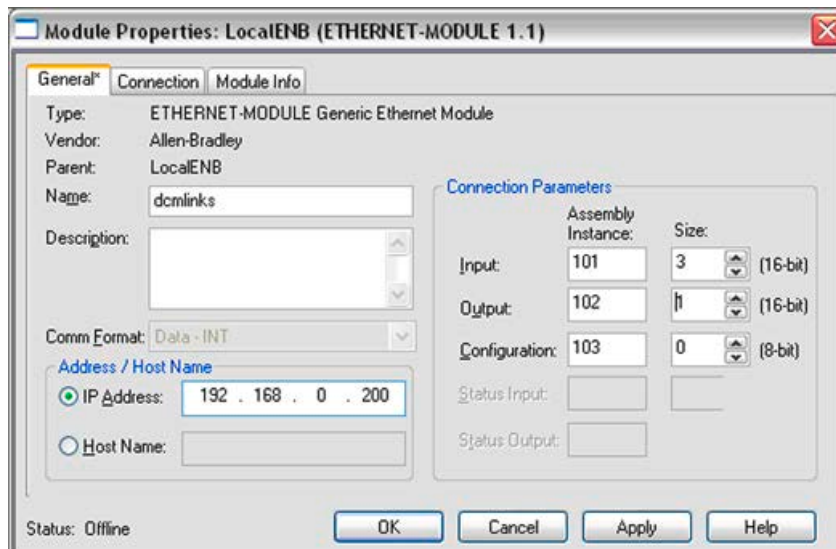


Figure 10-51 Properties

Make the following settings:

- Select a name to identify the drive
- Enter the IP address of the drive
- Set the "Connection Parameters" as described in Chapter "Implicit messaging – cyclic communication as I/O slave (Page 527)".

After the configuration has been activated, the drive data can be accessed via the input and output data fields (see following diagram).

For a better program documentation, it is recommended that aliases be defined for each input and output signal.

Name	Value	Force Mask	Style	Data
dcmlinks:C		{...}	{...}	AB:E
dcmlinks:I		{...}	{...}	AB:E
dcmlinks:I.Data		{...}	{...}	Decimal INT[3]
dcmlinks:I.Data[0]	128		Decimal	INT
dcmlinks:I.Data[1]	-5256		Decimal	INT
dcmlinks:I.Data[2]	-8		Decimal	INT
dcmlinks:O		{...}	{...}	AB:E
dcmlinks:O.Data		{...}	{...}	Decimal INT[3]
dcmlinks:O.Data[0]	0		Decimal	INT
dcmlinks:O.Data[1]	0		Decimal	INT
dcmlinks:O.Data[2]	0		Decimal	INT
Local1:C		{...}	{...}	AB:E
Local1:I		{...}	{...}	AB:E
Local2:C		{...}	{...}	AB:E
Local2:I		{...}	{...}	AB:E
Local2:O		{...}	{...}	AB:E
Local3:C		{...}	{...}	AB:E

Figure 10-52 Input data and output data

Now configure the drive in order to use Ethernet/IP.

### 10.7.3.2 Writing and reading parameters with Class 4xx

As described in Chapter "Class 0x401 - 0x43E Writing and reading of parameters (Page 532)", individual drive parameters can be read and written.

In order to use this function, a "MSG" message block must be inserted in the program (figure below). A control tag of the "MESSAG" type must be declared and assigned to the message block for saving the configuration and status information.

The class information is assigned to the block in the next step. The configuration dialog must be opened by clicking (1).

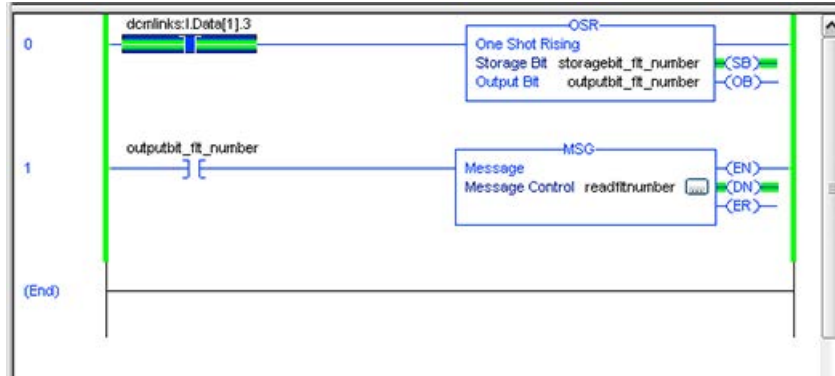


Figure 10-53 Inserting MSG

The configuration dialog shown in the following figure opens:

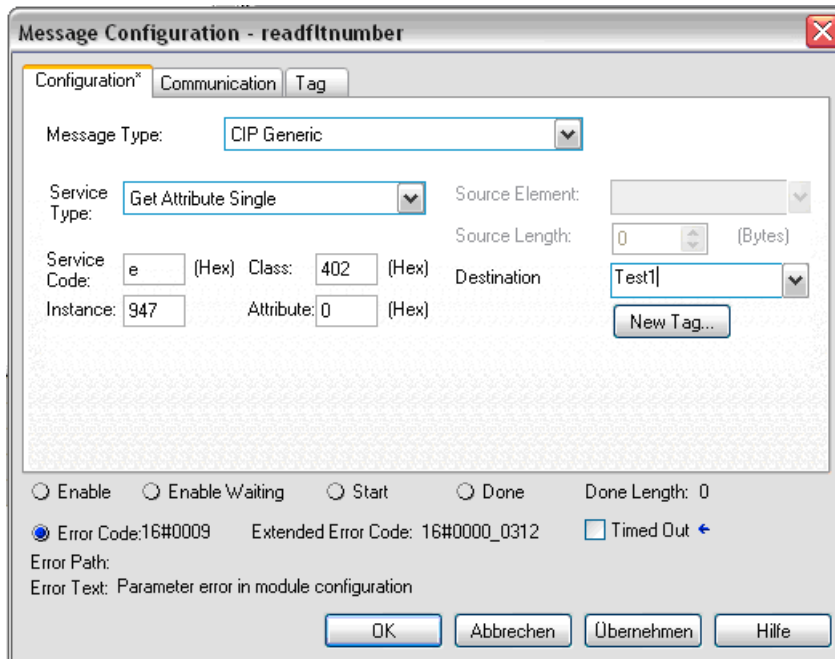


Figure 10-54 Configuration dialog

Configuration:

- Set "Message Type" to "CIP Generic"
- Set "Service Type" to
  - "Get Attribute Single" for reading
  - "Set Attribute Single" for writing
- Class: 4xx–xx represents the drive object number (as standard 02 for drive ⇒ 402)
- Instance: Parameter number
- Attribute: Index number
- Destination: Sufficiently large variable to store the queried value
- "Source Element" and "Source Length" must be defined for writing with service type "Set Attribute Single". The number of bytes must match the data type of the parameter to be written.

If the above settings have been activated, the source or destination EtherNet/IP slave to which the message is to be sent must be specified.

This is done on the "Communication" tab:

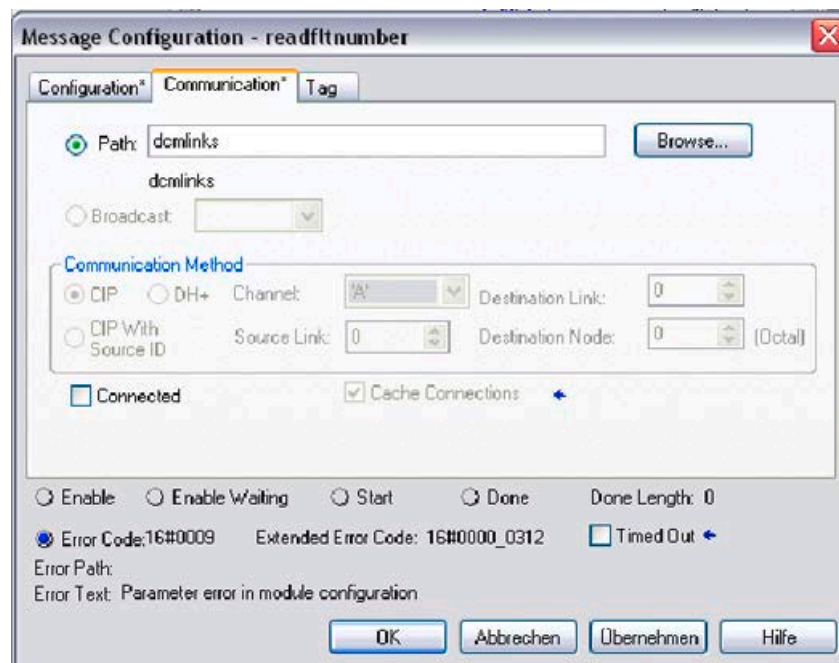


Figure 10-55 Communication

"Path": Defines the Ethernet/IP module, in this example "dcmlinks".

The previous example reads the active error number from parameter r947 index 0 on drive object number 2 (drive).

## 10.8 Communication via Modbus TCP

### 10.8.1 Overview

The Modbus protocol is a communication protocol based on a controller/device architecture.

Modbus offers three transmission modes:

- **Modbus ASCII** – Via a serial interface  
Data in the ASCII code. The data throughput is lower compared to RTU.
- **Modbus RTU** – Via a serial interface  
Data in the binary format. The data throughput is greater than in ASCII code.
- **Modbus TCP** – Via Ethernet  
Data as TCP/IP packages. TCP port 502 is reserved for Modbus TCP.

Only transfer type "Modbus TCP" is available for SINAMICS DCM.

### Modbus functionality

Process data and parameters are accessed via the Modbus register.

- Process data: 40100 - 40119  
A maximum of 10 process data (PZD) can be exchanged.
- Drive data: 40300 - 40522
- All parameters via DS47: 40601 - 40722

Modbus TCP always provides a basic Ethernet functionality, which corresponds to the functionality of Ethernet interface X127:

- Commissioning access for STARTER/Startdrive with S7 protocol
- DCP (Discovery and Configuration Protocol) to set the IP address etc.
- SNMP for identification

### General information about communication

Communication with Modbus TCP uses the Ethernet/PROFINET interface:

#### X1400:

For Modbus TCP with a CUD via a CBE20.

The following applies for the CUD:

- An advanced CUD must be inserted.
- The memory card (with the device firmware) must be inserted.

### Drive object that can be addressed via Modbus

With Modbus TCP, you always address the first drive object from the list of drive objects (p0978[0]). A DC\_CTRL drive object must be in this parameter.

- However, Modbus TCP is only activated if, under p0978[0], there is a drive object that is supported by Modbus TCP.
- If p0978[0] does not contain a valid drive object, then establishing communication is acknowledged with alarm A08555(2).

### Diagnostics LEDs in Modbus TCP

For Modbus TCP, diagnostic states are shown using the following LEDs:

X1400 (CBE20): "OPT" LED

The following states can be displayed using these LEDs:

Color	State	Significance
Green	Continuous light	Connections and setpoints are OK.
Green	Flashing light	Connection is OK, but no setpoints (dependent on timeout).
Red	Flashing light 2 Hz	No connection or setpoint timeout.

## 10.8.2 Configuring Modbus TCP via interface X1400

### Activating Modbus TCP via X1400 (CBE20)

1. For drive object DO1, set p8835 = 5 (Modbus TCP).
2. Set the IP address for the CBE20 using p8941.
3. Set the standard gateway for the CBE20 using p8942.
4. Set the subnet mask for the CBE20 using p8943.
5. Set the DHCP mode for the CBE20 using p8944.
6. Select the setting "Activate and save configuration" as interface configuration using p8945 = 2.
7. In the STARTER commissioning tool, check the list of drive object p0978.  
If required, change the sequence of the drive objects using the telegram configuration ("Drive device" > "Communication" > "Telegram configuration").
8. Save the settings in the STARTER commissioning tool and carry out a POWER ON.

### Modbus settings with interface X1400

Using the following parameters, set the communication for Modbus TCP with a X1400 interface:

Parameters	Explanation
r2050[0...19]	Connector output to interconnect the PZD received from the fieldbus controller via IF1.
p2051[0...24]	Selects the PZD (actual values) to be sent to the fieldbus controller in the word format via IF1.
r2053[0...24]	Displays the PZD (actual values) sent to the fieldbus controller in the word format via IF1.
r2054	Status display for the internal communication interface.
p8840	Setting the monitoring time to monitor the received process data via the COMM BOARD. If, within this time, the Control Unit does not receive any process data from the COMM BOARD, then the drive shuts down with fault F08501.
p8839[0...1]	Assigning the CBE20 Communication Board Ethernet (X1400) for cyclic communication via PZD interface 1 (IF1) and interface 2 (IF2).
r8850[0...19]	Connector output to interconnect the PZD (setpoints) received in the word format via IF2.
p8851[0...24]	Selects the PZD (actual values) to be sent in the word format via IF2.
r8853[0...24]	Displays the PZD (actual values) sent in the word format via IF2.
r8854	Status display for COMM BOARD.

### 10.8.3 Mapping tables

#### Modbus register and Control Unit parameters

The Modbus protocol contains register or bit numbers for addressing memory. You must assign the appropriate control words, status words, and parameters to these registers in the device.

The valid holding register address range extends from 40001 up to 40722. When trying to access other holding registers, the "Exception code" error is output

The process data are transferred into the register range from 40100 up to 40119.

---

#### Note

"R"; "W"; "R/W" in the "Access" column stands for read (with FC03); write (with FC06); read/write.

---

Table 10- 47 Assigning the Modbus register to the parameters – Process data

Register	Description	Access	Unit	Scaling	ON/OFF text or Value range	Data / parameter
<b>Control data</b>						
40100	Control word (see SINAMICS DCM List Manual, function block diagram 2442)	R/W	-	1	-	Process data 1
40101	Main setpoint	R/W	-	1	-	Process data 2
40102	STW 3	R/W	-	1	-	Process data 3
40103	STW 4	R/W	-	1	-	Process data 4
40104	PZD 5	R/W	-	1	-	Process data 5
40105	PZD 6	R/W	-	1	-	Process data 6
40106	PZD 7	R/W	-	1	-	Process data 7
40107	PZD 8	R/W	-	1	-	Process data 8
40108	PZD 9	R/W	-	1	-	Process data 9
40109	PZD 10	R/W	-	1	-	Process data 10
<b>Status data</b>						
40110	Control word (see SINAMICS DCM List Manual, function block diagram 2452)	R	-	1	-	Process data 1
40111	Main actual value	R	-	1	-	Process data 2
40112	ZSW 3	R	-	1	-	Process data 3
40113	ZSW 4	R	-	1	-	Process data 4
40114	PZD 5	R	-	1	-	Process data 5
40115	PZD 6	R	-	1	-	Process data 6
40116	PZD 7	R	-	1	-	Process data 7
40117	PZD 8	R	-	1	-	Process data 8
40118	PZD 9	R	-	1	-	Process data 9
40119	PZD 10	R	-	1	-	Process data 10

Table 10- 48 Assigning the Modbus register to the parameters – Parameter data

Register	Description	Access	Unit	Scaling	ON/OFF text or Value range	Data / parameter
<b>Drive identification</b>						
40300	Actual power unit code number	R	-	1	0 ... 65535	r0200
40301	Control Unit firmware	R	-	1	0 ... 65535	r50060
<b>Drive data</b>						
40322	Ramp-up time	R/W	s	100	10.00 ... 655.35	p50303
40323	Ramp-down time	R/W	s	100	10,00 ... 655.35	p50304
40324	Reference speed	R/W	RPM	1	6 ... 65535	p2000

Register	Description	Access	Unit	Scaling	ON/OFF text or Value range	Data / parameter
<b>Drive diagnostics</b>						
40340	Speed setpoint	R	RPM	1	-32768 ... 32767	r0020
40341	Actual speed value	R	RPM	1	-32768 ... 32767	r0021
40345	Actual current value	R	A	100	0 ... 655.35	r0027
40347	Actual active power	R	kW	100	0 ... 655.35	r0032
40349	Control priority	R	-	1	MANUAL   AUTO	r0807
<b>Fault diagnostics</b>						
40400	Failure number, index 0	R	-	1	0 ... 65535	r0947 [0]
40401	Failure number, index 1	R	-	1	0 ... 65535	r0947 [1]
40402	Failure number, index 2	R	-	1	0 ... 65535	r0947 [2]
40403	Fault number, index 3	R	-	1	0 ... 65535	r0947 [3]
40404	Fault number, index 4	R	-	1	0 ... 65535	r0947 [4]
40405	Fault number, index 5	R	-	1	0 ... 65535	r0947 [5]
40406	Fault number, index 6	R	-	1	0 ... 65535	r0947 [6]
40407	Fault number, index 7	R	-	1	0 ... 65535	r0947 [7]
40408	Alarm number	R	-	1	0 ... 65535	r2110 [0]
40409	Actual alarm code	R	-	1	0 ... 65535	r2132
40499	PRM ERROR code	R	-	1	0 ... 255	-
<b>Technology controller<sup>1)</sup></b>						
40500	Technology controller enable	R/W	-	1	0 ... 1	p2200, r2349.0
<b>Adapt technology controller<sup>1)</sup></b>						
40510	Time constant for actual-value filters of the technology controller	R/W	-	100	0.00 ... 60.0	p2265
40511	Scaling factor for actual value of the technology controller	R/W	%	100	0.00 ... 500.00	p2269
40512	Proportional amplification of the technology controller	R/W	-	1000	0.000 ... 65.535	p2280
40513	Integral time of the technology controller	R/W	s	1	0 ... 60	p2285
40514	Time constant D-component of the technology controller	R/W	-	1	0 ... 60	p2274
40515	Max. limit of technology controller	R/W	%	100	-200.0 ... 200.0	p2291
40516	Min. limit technology controller	R/W	%	100	-200.0 ... 200.0	p2292
<b>PID diagnostics</b>						
40521	Actual value of technology controller after filter	R	%	100	-100.0 ... 100.0	r2266
40522	Output signal technology controller	R	%	100	-100.0 ... 100.0	r2294

<sup>1)</sup> The technology controller parameters can only be accessed if, in the STARTER project, also the "Technology controller" function module is activated.



Table 10- 49 Assignment of the Modbus register for general parameter access using DS47

Register	Description	Access	Unit	Scaling	ON/OFF text or Value range	Data / parameter
40601	DS47 Control	R/W	-	-	-	-
40602	DS47 header	R/W	-	-	-	-
40603	DS47 data 1	R/W	-	-	-	-
...	...					
40722	DS47 data 120	R/W	-	-	-	-

**Note**

**Limited value range**

Modbus TCP registers have a maximum 16 bit width. The values of display parameters (r parameters) cannot always be represented with 16 bits. In these particular cases, the maximum value that can be represented is displayed.

- Unsigned: 65535
- Signed min: -32768
- Signed max: 32767

## 10.8.4 Read and write access using function codes

### Function codes used

For data exchange between the controller and device, predefined function codes are used for communication via Modbus.

The Control Unit uses the following Modbus function codes:

- FC 03: Holding register to read data from the inverter
- FC 06: Write single register to write to individual register
- FC 16: Write to multiple registers to write to several registers

### Structure of a Modbus TCP message

Application Data Unit (ADU)					
Modbus Application Header				Protocol Data Unit (PDU)	
Transaction ID	Protocol ID	Length	Unit ID	FCode	Data
2 Bytes	2 Bytes	2 Bytes	1 Byte	1 Byte	0 ... 252 Bytes

Figure 10-56 Individual components, including the Modbus Application Header (MBAP) and function code

**Structure of a read request via Modbus function code 03 (FC 03)**

Any valid register address is permitted as the start address.

Via FC 03, the control can address more than one register with one request. The number of addressed registers is contained in bytes 10 and 11 of the read request.

Table 10- 50 Structure of a read request for device number 17, example

Value	Byte	Description
MBAP header		
03 h	7	
00 h	8	Register start address "High" (register 40110)
6D h	9	Register start address "Low"
00 h	10	Number of registers "High" (2 registers: 40110; 40111)
02 h	11	number of registers "Low"

The response returns the corresponding data set:

Table 10- 51 Device response to the read request, example

Value	Byte	Description
MBAP header		
03 h	7	
04 h	8	Number of bytes (4 bytes are returned)
11 h	9	Data first register "High"
22 h	10	Data first register "Low"
33 h	11	Data second register "High"
44 h	12	Data second register "Low"

Table 10- 52 Invalid read request

Read request	Inverter response
Invalid register address	Exception code 02 (invalid data address)
Read a write-only register	Telegram in which all values are set to 0.
Read a reserved register	
Controller addresses more than 125 registers	Exception code 03 (invalid data value)
The start address and the number of registers of an address are located outside of a defined register block	Exception code 02 (invalid data address)

### Structure of a write request via Modbus function code 06 (FC 06)

Start address is the holding register address.

Via FC 06, with one request, only precisely one register can be addressed. The value, which is written to the addressed register, is contained in bytes 10 and 11 of the write request.

Table 10- 53 Structure of a write request for device number 17, example

Value	Byte	Description
MBAP header		
06 h	7	Function code
00 h	8	Register start address "High" (write register 40100)
63 h	9	Register start address "Low"
55 h	10	Register data "High"
66 h	11	Register data "Low"

The response returns register address (bytes 8 and 9) and the value (bytes 10 and 11), which the higher-level control had written to the register.

Table 10- 54 Device response to the write request, example

Value	Byte	Description
MBAP header		
06 h	7	Function code
00 h	8	Register start address "High"
63 h	9	Register start address "Low"
55 h	10	Register data "High"
66 h	11	Register data "Low"

Table 10- 55 Invalid write request

Write request	Inverter response
Incorrect address (a holding register address does not exist)	Exception Code 02 - invalid data address
Write to a "read-only" register	Exception Code 04 - device failure
Write to a reserved register	

For Exception Code 4, via the holding register 40499, you can read out the internal drive error code, which has occurred for the last parameter access via the holding register.

## 10.8.5 Communication via data set 47

Via FC 16, with one request, up to 122 registers can be written to directly one after the other, while for Write Single Register (FC 06) you must individually write the header data for each register.

**Header**

In addition to the transfer type, the start address and the number of the following registers in the header.

**User data**

You control the access in the user data via register 40601.

In register 40602, you define the access as well as the length of the request data.

Register 40603 contains the request reference – it is defined by the user – and the access type – reading or writing.

From register 40603 and higher, the request aligns communication via data set 47 according to PROFIdrive.

Register 40604 contains the number of the drive object and the number of parameters that are read out or written to.

Register 40605 contains the attribute that you use to control whether you read out the parameter value or the parameter attribute. In the number of elements you specify how many indices are read.

**10.8.5.1 Communication details**

General parameter access is realized using the Modbus register 40601 ... 40722.

Communication via DS47 is controlled using 40601. 40602 contains the function code (always = 47 = 2F hex) and the number of the following user data. User data are contained in registers 40603 ... 40722.

**Communication overview**

Value in the register				Explanation
40601	40602		40603 ... 40722	
0	47	...	...	Write values for acyclic access
1	47	Request length [bytes]	Request data	Activate acyclic access
2	47	Response length [bytes]	Response data	Response for a successful request
2	47	0	Error code	Response for an erroneous request

**Error codes**

- 1 hex: Invalid Length (invalid length)
- 2 hex: Invalid State (in the actual inverter state, this action is not permitted)
- 3 hex: Invalid function code (FC ≠ 2F hex)
- 4 hex: Response not ready (the response has still not been issued)
- 5 hex: Internal Error (general system error)

Incorrect access operations to parameters via data set 47 are logged in registers 40603 ... 40722. The error codes are described in the PROFIdrive profile.

### 10.8.5.2 Examples: Read parameter

Table 10- 56 Write parameter request: Reading parameter value of r0002 from device number 17

Value	Byte	Description
MBAP header		
10 h	7	Function code (write multiple)
0258 h	8,9	Register start address
0007 h	10,11	Number of registers to be read (40601 ... 40607)
0E h	12	Number of data bytes (7 registers, each 2 bytes = 14 bytes)
0001 h	13,14	40601: DS47 Control = 1 (activate request)
2F0A h	15,16	40602: Function 2F h (47), request length 10 bytes (0A h)
8001 h	17,18	40603: Request reference = 80 h, request identifier = 1 h
0101 h	19,20	40604: DO-Id = 1, number of parameters = 1
1001 h	21,22	40605: Attribute, number of elements = 1
0002 h	23,24	40606: Parameter number = 2
0000 h	25,26	40607: Subindex = 0

Table 10- 57 Start parameter request: Reading parameter value of r0002 from device number 17

Value	Byte	Description
MBAP header		
03 h	7	Function code (read)
0258 h	8,9	Register start address
0007 h	10,11	Number of registers to be read (40601 ... 40607)
0010 h	12,13	Number of registers

Table 10- 58 Response for successful read operation

Value	Byte	Description
MBAP header		
03 h	7	Function code (read)
20 h	8	Number of following data bytes (20 h: 32 bytes $\triangleq$ 16 registers)
0002 h	9,10	40601: DS47 Control = 2 (the request was executed)
2F08 h	11,12	40602: Function code 2F h (47), response lengths 8 bytes
8001 h	13,14	40603: Request reference mirrored = 80 h, response identifier = 1 (request parameter)
0101 h	15,16	40604: DO-ID = 1, number of parameters = 1
0301 h	17,18	40605: Format, number of elements = 1
001F h	19,20	40606: Parameter value = 1F h (31)

Table 10- 59 Response for unsuccessful read operation - read request still not completed

Value	Byte	Description
MBAP header		
03 h	7	Function code (read)
20 h	8	Number of following data bytes (20 h: 32 bytes $\triangleq$ 16 registers)
0001 h	9,10	40601: Check value 1 = request is processed
2F00 h	11,12	40602: Function 2F h(47), response length 0 (fault)
0004 h	13,14	40603: Error code: 0004 Response Not Ready (response has still not been issued)

10.8.5.3 Examples: Write parameter

Table 10- 60 Write parameter request: Writing the parameter value of p1121 from device number 17

Value	Byte	Description
MBAP header		
10 h	7	Function code (write multiple)
0258 h	8,9	Register start address
000A h	10,11	Number of registers to be written to (40601 ... 40610)
14 h	12	Number of data bytes (10 registers, each 2 bytes = 20 bytes)
0001 h	13,14	40601: C1 (activate request)
2F10 h	15,16	40602: Function 2F h (47), request length 16 bytes (10 h)
8002 h	17,18	40603: Request reference = 80 h, request identifier = 2 h (write)
0101 h	19,20	40604: DO-Id = 1, number of parameters = 1
1001 h	21,22	40605: Attribute, number of elements = 1
0461 h	23,24	40606: Parameter number = 1121
0000 h	25,26	40607: Subindex = 0
0801 h	27,28	40608: Format + number of values
4142 h	29,30	40609: Parameter value 12,15
6666 h	31,32	40610: Parameter value

Table 10- 61 Start parameter request: Writing the parameter value of p1121 from device number 17

Value	Byte	Description
MBAP header		
03 h	7	Function code (read)
0258 h	8,9	Register start address
0007 h	10,11	Number of registers to be written to (40601 ... 40610)
0010 h	12,13	Number of registers

Table 10- 62 Response for successful write operation

Value	Byte	Description
MBAP header		
03 h	7	Function code (read)
20 h	8	Number of following data bytes (20 h: 32 bytes $\hat{=}$ 16 registers)
0002 h	9,10	40601: DS47 Control = 2 (request was executed)
2F04 h	11,12	40602: Function code 2F h (47), response length 4 bytes
8002 h	13,14	40603: Request reference mirrored = 80 h, response identifier = 2 (change parameter)
0101 h	15,16	40604: DO-ID = 1, number of parameters = 1

Table 10- 63 Response for unsuccessful write operation - write request still not completed

Value	Byte	Description
MBAP header		
03 h	7	Function code (read)
20 h	8	Number of following data bytes (20 h: 32 bytes $\hat{=}$ 16 registers)
0001 h	9,10	40601: DS47 Control = 1 (request is processed)
2F00 h	11,12	40602: Function 2F h(47), response length 0 (fault)
0004 h	13,14	40603: Error code: 0004 Response Not Ready (response has still not been issued)

## 10.8.6 Communication sequence

### Logical error

If the device detects a logical error within a request, it responds to the controller with an "exception response". In the response, the device sets the highest bit in the function code to 1. If the device receives, for example, an unsupported function code from the controller, the device responds with an "exception response" with code 01 (illegal function code).

Table 10- 64 Overview of exception codes

Exception code	Modbus name	Remark
01	Illegal function code	An unknown (unsupported) function code was sent to the device.
02	Illegal Data Address	An invalid address was requested.
03	Illegal data value	An invalid data value was detected.
04	Server failure	The device has terminated during processing.

### Process data monitoring time (setpoint timeout)

The "Setpoint timeout" only applies for access to process data (40100 ... 40109, 40110 ... 40119). The "Setpoint timeout" is not generated for parameter data (40300 ... 40522).

#### Fieldbus interface:

In parameter p2040 you define the time for cyclic data exchange for process data.

Setting range 0 - 2000 s.

The time depends on the amount of data to be transferred and the control.

"Setpoint timeout" (F01910) is issued by the Modbus if p2040 is set to a value > 0 ms and no process data is requested within this time period.

#### COMM BOARD:

In parameter p8840 you define the time for cyclic process data exchange.

Setting range 0 - 2000 s.

The time depends on the amount of data to be transferred and the control.

"Setpoint timeout" (F08501) is issued by the Modbus if p8840 is set to a value > 0 ms and no process data is requested within this time period.

## 10.8.7 Messages and parameters

### Faults and alarms (see DCM List Manual)

- F01910 Fieldbus: Setpoint timeout
- A01925 Modbus TCP connection interrupted
- F08501 PN/COMM BOARD: Setpoint timeout
- A08526 PN/COMM BOARD: No cyclic connection
- A08555 Modbus TCP commissioning fault

### Overview of important parameters (see SINAMICS DCM List Manual)

- p0978[0...n] List of drive objects
- p2030 Fieldbus interface protocol selection
- p2040 Fieldbus interface monitoring time:
- r2050[0...19] CO: IF1 PROFIdrive PZD receive word
- p2051[0...24] CI: IF1 PROFIdrive PZD send word
- r2053[0...24] IF1 PROFIdrive diagnostics PZD send word
- r2054 PROFIBUS status
- p8835 CBE20 firmware selection
- p8839[0...1] PZD interface hardware assignment
- p8840 COMM BOARD monitoring time
- r8850[0...19] CO: IF2 PZD receive word
- p8851[0...24] CI: IF2 PZD send word
- r8853[0...24] IF2 diagnostics PZD send
- r8854 COMM BOARD state
- p8920[0...239] PN Name of Station
- p8921[0...3] PN IP address
- p8922[0...3] PN default gateway
- p8923[0...3] PN Subnet Mask
- p8924 PN DHCP mode
- p8925 PN interfaces configuration
- p8940[0...239] CBE2x Name of Station
- p8941[0...3] CBE2x IP address
- p8942[0...3] CBE2x Default Gateway
- p8943[0...3] CBE2x Subnet Mask
- p8944 CBE2x DHCP mode
- p8945 CBE2x interfaces configuration



## 10.9 Serial interface with USS protocol

### Specification

Developed by Siemens, the USS® protocol is a proprietary fieldbus which was already being used in a variety of applications before PROFIBUS was established.

The USS® protocol is described in the following document:  
USS® Protocol Specification: Order number E20125-D0001-S302-A1

### Properties

The USS® protocol can only be used as a fieldbus **instead** of PROFIBUS; USS and PROFIBUS cannot run at the same time.

The USS® protocol enables one or more SINAMICS DCMs to be connected to a master station. It is a point-to-point coupling or a bus-type coupling. A maximum of 31 nodes can be connected in the bus configuration (1 master and a maximum of 30 slaves). The bus terminator must be activated on both bus nodes at each end of the bus line.

The USS® protocol enables access to all relevant process data, diagnostic information, and parameters for the SINAMICS DCM.

The USS® protocol is purely a master-slave protocol in which a SINAMICS DCM can only ever be a slave. In this case, a SINAMICS DCM only sends a telegram to the master if it has received a telegram from it. Therefore, SINAMICS DCMs cannot use the USS® protocol to exchange data with one another directly.


### Connecting

Terminal X178, X179

### Function diagrams

The function diagrams for the fieldbus interface are relevant:  
See FP2410, FP2420, FP2440, FP2442, FP2450, FP2452, FP2460, FP2470, FP2472, FP2481, and FP2483.

### Wiring example for a USS bus

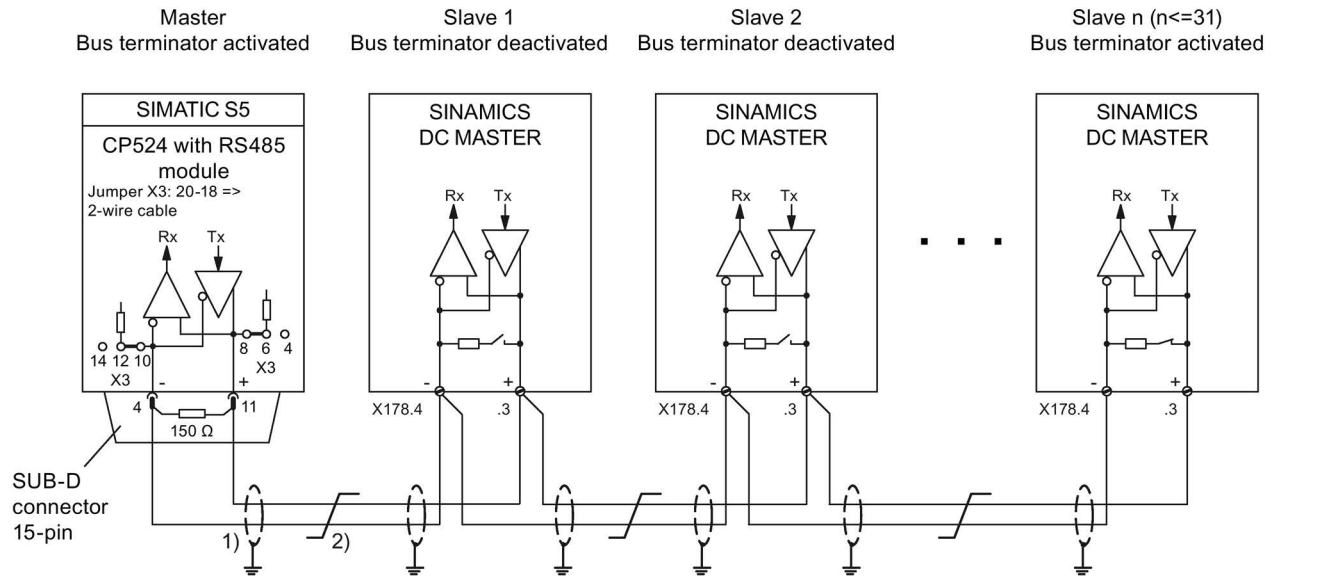

- 1) The shields for the interface cables must be connected directly on the devices (using a clamp, for example) to device or cabinet ground, with a low level of impedance.
- 2) Twisted cable, e.g. LIYCY 2×0.5 mm<sup>2</sup>; with longer cables, an equipotential bonding cable should be used to ensure that the difference in ground potentials between the link partners remains below 7 V.

Figure 10-57 USS bus

## 10.10 Switch on, switch off, enable

### 10.10.1 Switch on/Switch off (ON/OFF1) – Control word bit 0

The "Switch on/Shutdown" (ON/OFF1) function is controlled using the "ON/OFF1 switch-on command" (= ANDing the signal from terminal X177.12 with the signal selected using p0840).

The following operating modes are possible here:

- p50445 = 0: The "ON/OFF1 switch-on command" takes the form of ANDing the signal from terminal X177.12 with the signal selected using p0840 (level-controlled, 0 = shutdown, 1 = switch on).
- p50445 = 1: Edge triggering of "ON/OFF1 switch-on command":  
The switch-on command is saved when a 0 → 1 transition takes place (see function diagram 3130 in the SINAMICS DCM List Manual). The binector selected using p50444 must be in the log. "1" state at this point. The memory is reset when this binector enters the log. "0" state.

**Sequence of events for switching on the drive:**

1. Apply the "Switch on" command (e.g. using the "Switch on/Shutdown" terminal).
2. The system exits operating state o7.
3. The "Line contactor closed" relay (terminal XR1-109 and XR1-110) picks up.
4. The field-current reduction function stops
5. if "Operation enable" is applied:
  - With positive brake-release time (p50087):  
The "Release holding or operational brake" signal (r53210.0 = 0) is output and p50087 is awaited in operating state o1.0.
  - With negative brake-opening time (p50087 negative):  
Go immediately to step 6; brake is still closed (r53210.0 = 1)
6. The ramp-function generator, n controller, and I controller are enabled.
7. Once a negative brake-release time (p50087) has elapsed, the "Release holding or operational brake" (r53210.0 = 0) signal is output.

**Procedure for shutting down the drive:**

1. Apply the "Switch on" command (e.g. using the "Switch on/Shutdown" terminal).
2. Deceleration along the ramp-function generator ramp
3. Wait until  $n < n_{min}$  (p50370, p50371).
4. The "Close holding or operational brake" (r53210.0 = 1) signal is output.
5. The brake-closing time (p50088) is awaited.
6. The ramp-function generator and n controller are disabled.
7. Reduction in armature current
8. The armature firing pulses are disabled.
9. The "Line contactor closed" relay (terminal XR1-109 and XR1-110) drops out.
10. Operating state o7.0 or higher is reached.
11. The wait time for field-current reduction (p50258) elapses.
12. The field is reduced to a parameterizable value (p50257).

**"Switch on/Shutdown" overview**

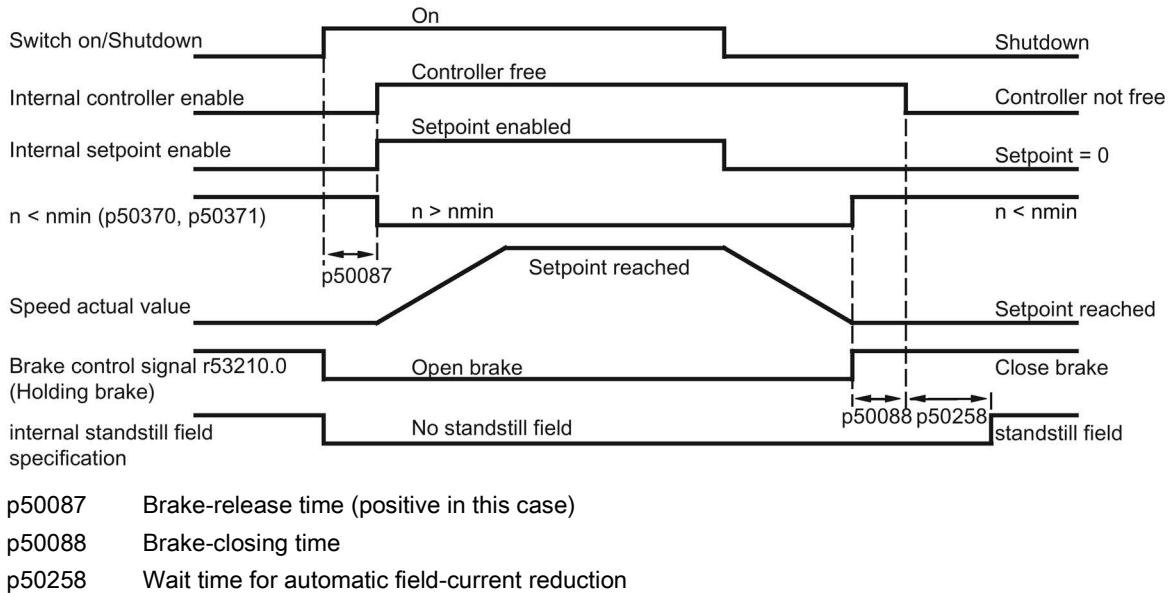


Figure 10-58 Switch on/Shutdown

- An internal interlock becomes active once  $n < n_{min}$  (r50370, r50371) for the first time. This stops the drive from attempting to decelerate again if the motor is rotated by external influences; the  $n < n_{min}$  message then disappears.
- Whether level triggering or edge triggering is selected has an overarching effect on "Switch on", "Switch off", and "Creep".

**Note**

The "Creep" function is described in the "Creep (Page 564)" chapter.

- Selecting edge triggering causes "Switch on" and "Creep" to replace one another, i.e.:
  - A "Switch on" edge at terminal X177.12 cancels a "Creep" function that had previously been triggered.
  - A "Creep" edge at a binector selected using p50440 cancels a "Switch on" function that had previously been triggered.
- With edge triggering, an automatic restart following a brief interruption in the electronic power supply voltage is not possible.
- To ensure that "Shutdown" functions even when rewiring is carried out, current or torque lower limits are specified, or additional setpoints are supplied, certain functions are disabled automatically when "Shutdown" is applied.
  - All torque limits are disabled during braking to  $n < n_{min}$ .
  - Of the current limits, only the system current limit (p50171 and p50172), speed-dependent current limit, and current limit resulting from I<sup>2</sup>t monitoring of the power unit are enabled.

### 10.10.2 OFF2 (disconnection) – Control word bit 1

The OFF2 signal is LOW active (log. "0" state = disconnection).

**Procedure for applying disconnection:**

1. The ramp-function generator, n controller, and Ia controller are disabled.
2. Reduction in armature current
3. The firing pulses are disabled.
4. "Close operational brake" is output (r53210.0 = 1, where p50080 = 2).
5. Operating state o10.0 or higher is reached.
6. The field current is maintained at a fixed point (i.e. there is **no** increase in the field current, even on exiting the field-weakening range).
7. The "Line contactor closed" relay (terminal XR1-109 and XR1-110) drops out.
8. The drive coasts down (or is decelerated by the operational brake).
9. The parameterizable wait time (p50258) elapses.
10. The field is reduced to a parameterizable value (p50257).
11. Once  $n < n_{min}$  (p50370, p50371), the "Close holding brake" signal is output (r53210.0 = 1, where p50080 = 1).

### 10.10.3 OFF3 (quick stop) – Control word bit 2

The OFF3 signal is LOW active (log. "0" state = quick stop).

**Procedure for applying "Quick stop":**

1. The ramp-function generator is disabled.
2. A speed setpoint of zero is applied.
3. Deceleration along the down ramp acc. to p50296, p50297, p50298
4. Wait until  $n < n_{min}$  (p50370, p50371).
5. "Close operational or holding brake" (r53210.0 = 1) is output.
6. Wait for brake-closing time (p50088)
7. The ramp-function generator and speed controller are disabled.
8. Reduction in armature current
9. The armature firing pulses are disabled.
10. The "Line contactor closed" relay (terminal XR1-109 and XR1-110) drops out.
11. Operating state o9.0 or higher is reached.
12. The wait time for field-current reduction (p50258) elapses.
13. The field is reduced to a parameterizable value (p50257).

**Procedure for withdrawing "Quick stop":**

1. Remove "Quick stop" command.
2. Apply the "Shutdown" command (e.g. using the "Switch on/Shutdown" terminal).
3. The system exits operating state o8.

**Quick stop overview**

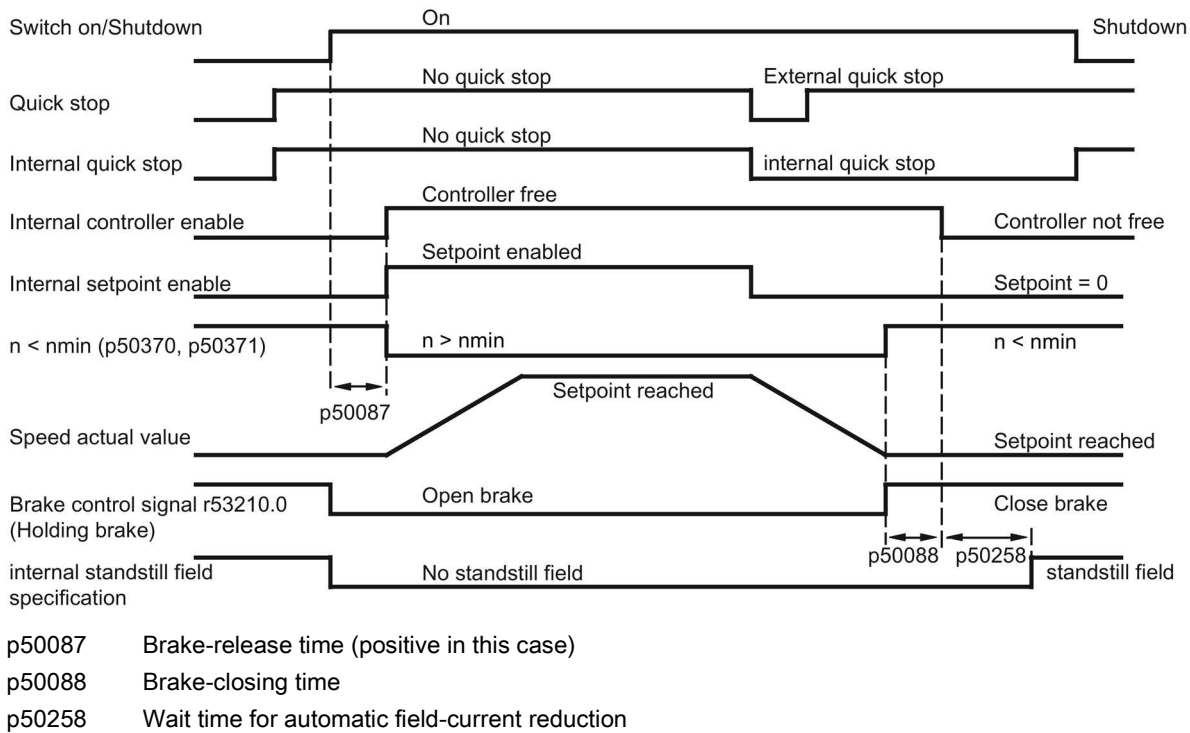


Figure 10-59 OFF3 (quick stop)

- The "Quick stop" command only needs to be present as a short pulse (> 10 ms). It is then saved internally. It is only possible to reset the memory by applying the "Shutdown" command.
- The SINAMICS DC MASTER links all "Quick stop" commands in such a way that the "Quick stop" function is only disabled once all commands are in the "No quick stop" state.
- An internal interlock becomes active once  $n < n_{min}$  (r50370, r50371) for the first time. This stops the drive from attempting to decelerate again if the motor is rotated by external influences; the  $n < n_{min}$  message then disappears.
- To ensure that "fast stopping" functions even when rewiring is carried out, current or torque lower limits are specified, or additional setpoints are supplied, certain functions are disabled automatically when "fast stopping" is applied.
  - All torque limits are disabled while braking to  $n < n_{min}$ .
  - Of the current limits, only the system current limit (p50171 and p50172), speed-dependent current limit, and current limit resulting from I<sup>2</sup>t monitoring of the power unit are enabled.

#### 10.10.4 Operation enable (enable) – Control word bit 3

The enable signal is HIGH active (log. "1" state = enable).

Control word bit 3 and terminal X177.13 (enable) are logically ANDed. See also function diagram 2580.

**Procedure for applying operation enable (if a switch-on command is present):**

1. With positive brake-release time (p50087):  
The "Release holding or operational brake" signal (r53210.0 = 0) is output and p50087 is awaited in operating state o1.0.  
With negative brake-opening time (p50087 negative):  
Go immediately to step 2; brake is still closed (r53210.0 = 1)
2. The ramp-function generator, n controller, and I controller are enabled.
3. Operating state o0 is reached.
4. Once a negative brake-release time (p50087) has elapsed, the "Release holding or operational brake" (r53210.0 = 0) signal is output.

**Procedure for withdrawing operation enable:**

1. The ramp-function generator, n controller, and I controller are disabled.
2. Reduction in armature current
3. The armature firing pulses are disabled.
4. The "Close operational brake" signal is output (r53210.0 = 1, where p50080 = 2).
5. Operating state o1.0 or higher is reached.
6. The drive coasts down (or is decelerated by the operational brake).
7. Once  $n < n_{min}$  (p50370, p50371), the "Close holding brake" signal is output (r53210.0 = 1, where p50080 = 1).

## 10.11 Safety shutdown (E-STOP)

---

**Note**

The E-STOP function is not an EMERGENCY STOP function in the sense of EN 60204-1.

---

The E-STOP function forces the "line contactor closed" relay to drop out, activating the relay contact (terminals XR1-109 and -110) for the main contactor control within approximately 15 ms, independent of the semiconductor components and Control Unit (CUD) functions. If the CUD is operating correctly, applying I = 0 via the controller serves to disconnect the line contactor from the power supply. The drive coasts down once E-STOP has been applied.

The E-STOP function is triggered when the switch between terminals XS1-105 and XS1-106 is opened.

The E-STOP function causes the drive to enter the "Switching on inhibited" operating state. This must be acknowledged by activating the "Shutdown" function, e.g. by opening terminal X177.12.

Procedure for applying E-STOP:

1. The ramp-function generator, n controller, and I controller are disabled.
2. Reduction in armature current
3. a) p51616 = 0: E-STOP acts like OFF2 (firing pulses are disabled as soon as I = 0).  
b) p51616 = 1: E-STOP immediately stops firing pulses from being output (without waiting for I = 0).
4. The "Close operational brake" signal is output (r53210.0 = 1, where p50080 = 2).
5. Operating state o10.0 or higher is reached.
6. The field current is maintained at a fixed point (i.e. there is **no** increase in the field current, even on exiting the field-weakening range).
7. The "Line contactor closed" relay (terminal XR1-109 and XR1-110) drops out.
8. The drive coasts down (or is decelerated by the operational brake).
9. The wait time (to be set at p50258) elapses.
10. The field is reduced to a parameterizable value (p50257).
11. Once  $n < n_{min}$  (p50370, p50371), the "Close holding brake" signal is output (r53210.0 = 1, where p50080 = 1).

**Note**

15 ms after E-STOP has been applied (even if point 7 in this procedure has not yet been reached), the "Line contactor closed" relay (terminal XR1-109 and XR1-110) will always drop out; this is triggered by the hardware.

## 10.12 Setpoint channel

### 10.12.1 Ramp-function generator


Table 10- 65 Definitions

Ramp-up	Acceleration from lower positive to higher positive speeds (e.g. 10% to 90%) or from lower negative to higher negative speeds (e.g. -10% to -90%)
Return flow	Deceleration from higher positive to lower positive speeds (e.g. 90% to 10%) or from higher negative to lower negative speeds (e.g. -90% to -10%)
Transition from negative to positive speeds	E.g. from -10% to +50%: From -10% to 0 = ramp-down and From 0 to +50% = ramp-up, and vice versa



Ramp-up time	The amount of time the ramp-function generator requires, when initial rounding and final rounding = 0 and an input variable jump from 0 to 100% or 0 to -100% is performed, for passing through the 100% range at the ramp-function generator output. For smaller jumps at the input, the rise at the output is performed at the same rate.
Ramp-down time	The amount of time that the ramp-function generator requires, when initial rounding and final rounding = 0 and an input variable jump from 100% to 0 or -100% to 0 is performed, for passing through the 100% range at the ramp-function generator output. For smaller jumps at the input, the rise at the output is performed at the same rate.


**Ramp-function generator mode of operation**

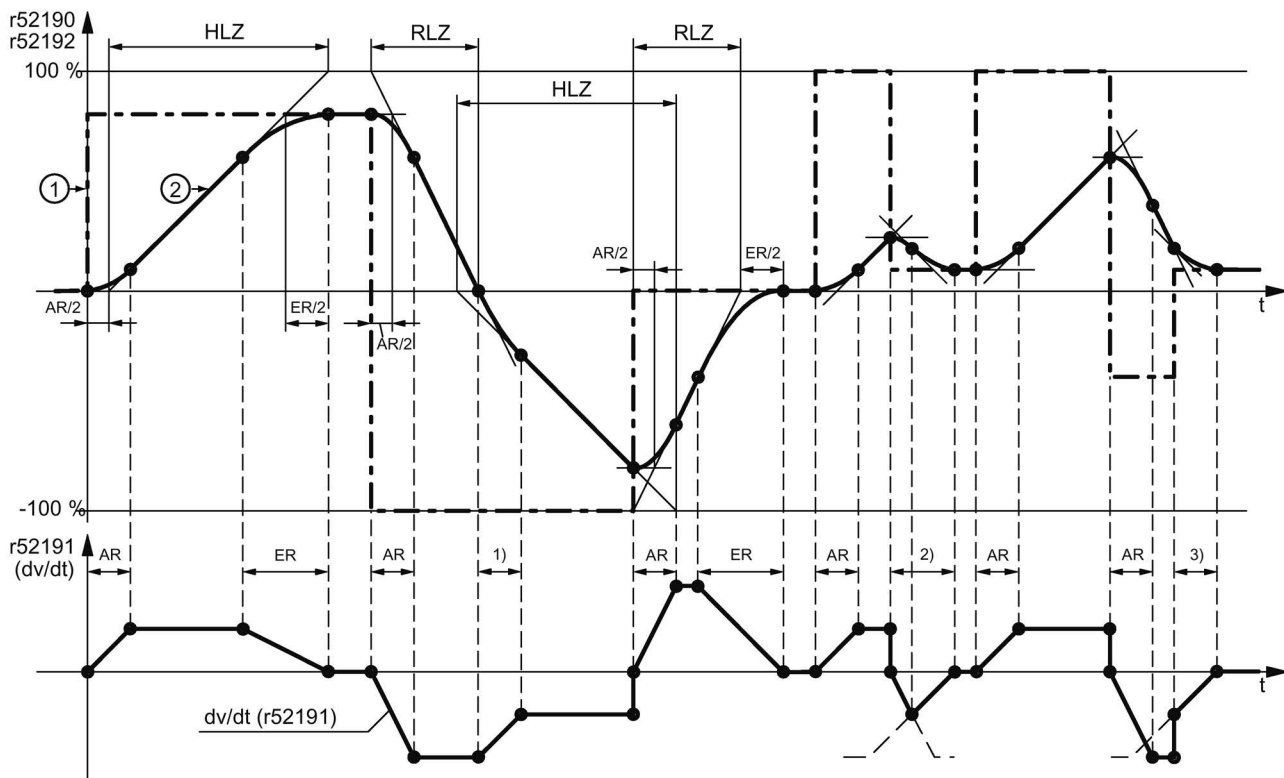

- ① = Ramp-function generator setpoint
- ② = Ramp-function generator output
- HLZ = Rampup time
- RLZ = Ramp-down time
- AR = Initial rounding
- ER = Final rounding
- 1) Transition from ramp-down incline to ramp-up incline
- 2) Initial rounding makes the transition to final rounding even before the maximum ramp-down incline is reached.
- 3) Only the last part of final rounding is performed here due to the ramp-function generator setpoint jump.

Figure 10-60 Ramp-function generator mode of operation

**Operating modes for ramp-function generator rounding**

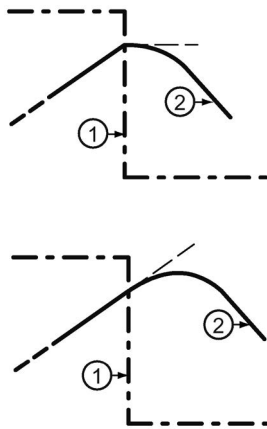

**p50295 = 0:**  
 When a setpoint reversal occurs during ramp-up (or ramp-down), the ramp-up (or ramp-down) process is interrupted and initial rounding for the ramp-down (or ramp-up) process starts immediately. This does not mean any additional increase (or decrease) in the setpoint, But rather a bend in the signal at the ramp-function generator output (i.e. a jump in the acceleration).

**p50295 = 1:**  
 when a setpoint reversal occurs during ramp-up or ramp-down, the ramp-up/ramp-down process slowly crosses over into ramping-down/ramping-up. This results in an additional increase (or decrease) in the setpoint, as well as a bend in the signal at the ramp-function generator output (i.e. there is no jump in the acceleration).

**Control signals**

Table 10- 66 Control signals for the ramp-function generator operating mode

<b>Ramp-function generator enable</b> Control word bit 4, p01140[c]	0 = Ramp-function generator disabled; ramp-function generator output set to 0 1 = Ramp-function generator enabled
<b>Ramp-function generator start</b> Control word bit 5, p01141[c]	1 = Setpoint is switched into the ramp-function generator input 0 = Ramp-function generator is stopped at the current value (ramp-function generator output is switched in as ramp-function generator input)
<b>Setpoint enable</b> Control word bit 6, p01142[c]	1 = Setpoint enabled at ramp-function generator input 0 = Switchover to ramp-function generator setting 1 performed and 0 applied to the input (ramp-function generator output travels to 0)
<b>Set ramp-function generator</b> (p50640[c])	1 = The ramp-function generator output is set to the setting value (selection via p50639).
<b>Ramp-function integrator operation</b> (p50302)	See below and description of p50302 in the parameter list found in the SINAMICS DCM List Manual.
<b>Enable switchover of the ramp-function integrator</b> (p50646)	See below.
<b>Ramp-function generator settings 2 and 3</b>	See below.
<b>Ramp-function generator tracking ON</b> (p50317)	See below and description of p50317 in the parameter list found in the SINAMICS DCM List Manual.
<b>Set ramp-function generator on switching off</b> (p50318)	See description of p50318 in the parameter list found in the SINAMICS DCM List Manual.
<b>Bypass ramp function generator</b>	1 = The ramp-function generator operates with ramp-up time and ramp-down time = 0. The function is then controlled via the binector selected using p50641. It is also possible to select the option of bypassing the ramp-function generator in operating modes JOG, CREEP, and APPLY FIXED SETPOINT.

### Ramp-function generator settings 1, 2, and 3

Selection via the binectors selected using p50637 and p50638.

The ramp-function generator settings that are entered via the binectors selected using p50637 and p50638 have priority over the ramp-function generator setting entered by the ramp-function integrator.

Binector state selected via parameters		Ramp-function generator setting	Active ramp-up time	Active ramp-down time	Active initial rounding	Active final rounding
p50637	p50638					
0	0	1	p50303	p50304	p50305	p50306
1	0	2	p50307	p50308	p50309	p50310
0	1	3	p50311	p50312	p50313	p50314
1	1	Not permitted; fault F60041 (setting not unique) triggered				

### Ramp-function integrator

The ramp-function integrator is activated by setting p50302 to 1, 2, or 3. Once an "ON" command ("Switch on", "Jog", "Creep") has been applied, ramp-function generator setting 1 (p50303 to p50306) is used until the ramp-function generator output reaches the required setpoint for the first time.

Following this, the process is controlled by the "Enable switchover of ramp-function integrator" signal (binector selected using p50646):

- Enable switchover of ramp-function integrator = 1:  
If the ramp-function generator output reaches the required setpoint for the first time after the "ON" command has been applied, the system automatically switches over to the ramp-function generator setting selected according to p50302.
- Enable switchover of ramp-function integrator = 0:  
Once the ramp-function generator output has reached the setpoint, ramp-function generator setting 1 (p50303 to p50306) remains active until "Enable switchover of ramp-function integrator" is switched to 1. The system then switches over to the ramp-function generator setting selected according to p50302.

If the "Enable switchover of ramp-function integrator" signal is withdrawn (→ 0), the system switches back to ramp-function generator setting 1 and, when the signal is applied again (→1), remains at this setting until the ramp-function generator output has reached the setpoint again. Following this, the system switches back over to the ramp-function generator setting selected according to p50302.

When the "Switch off" command is applied, the drive is switched off via ramp-function generator setting 1.

#### Note

Activating "Ramp-function generator setting 2" (p50307 to p50310; selection via p50637) or "Ramp-function generator setting 3" (p50311 to p50314; selection via p50638) has priority over the ramp-function generator setting requested by the "Ramp-function integrator" function.

### Ramp-function-generator tracking

The ramp-function generator output (r52190) is limited to the following values when ramp-function generator tracking is active:

$$(-Mlimit \times 1.25 / Kp + nact) < HLG \text{ output} < (+Mlimit \times 1.25 / Kp + nact)$$

When p50170 = 1 (closed-loop torque control), the following applies:

$$(-IA.limit \times \Phi Motor \times 1.25 / Kp + nact) < HLG \text{ output} < (+IA.limit \times \Phi Motor \times 1.25 / Kp + nact)$$

When p50170 = 0 (closed-loop current control), the following applies:

$$(-IA.limit \times 1.25 / Kp + nact) < HLG \text{ output} < (+IA.limit \times 1.25 / Kp + nact)$$

$\Phi motor$	Scaled motor flux (1 at rated excitation current)
nact	Actual speed value (r52167)
+Mlimit	Smallest positive torque limit (r52143)
-Mlimit	Smallest negative torque limit (r52144)
+IA.limit	Smallest positive current limit (r52131)
-IA.limit	Smallest negative current limit (r52132)
Kp	Active speed controller gain

If, however, the value added to nact would be less than 1%, then +1% or -1% is added.

The "Ramp-function generator tracking" function prevents the ramp-function generator value from straying too far from the actual speed value if the torque or current limit has been reached.

---

#### Note

When ramp-function generator tracking is active, the filtering time of the speed setpoint p50228 should be low (ideally = 0).

---

### Limiting after ramp-function generator

This limiting stage can be used by freely selecting the input signal, independently from the ramp-function generator.

A distinguishing feature of this type of limiting is that lower limiting can also be set to positive values and upper limiting to negative values (see p50300 and p50301). In this case, a limit set using this method acts as a lower limit (lower limiting value) for the output signal of the ramp-function generator, with the sign inverted.

Example:

$$p50632.01 \dots 04 = 1 (= 100.00\%)$$

$$p50300 = 100.00 (\%)$$

$$p50301 = 10.00 (\%)$$

$$p50633.01-04 = 9 (= -100.00\%)$$

results in the value range of r52170 being limited to between +10.00% and +100.00%.

### Acceleration signal dv/dt (r52191)

This signal specifies the change in ramp-function generator output r52190 during the time set in p50542.

### Braking distance (r52047, r52048)

This signal specifies the distance that the drive would travel if, e.g. it would be stopped using an OFF1 command.

This braking distance is calculated under the assumption that at the ramp-function generator input, a speed setpoint of 0 would be input and the speed actual value would go down to 0 with the set ramp-down time and the set rounding-off.

The calculation of the braking distance is only then correct if the ramp-down time and rounding elements do not change during the braking process.

The braking distance is output in the same unit as the encoder position actual value r0482.

This means that one encoder revolution corresponds to a value of  $p0400 \times 2^{p0418}$

The braking distance is available in two different data formats:

- r52047 has the Unsigned32 data type
- r52048 has the FloatingPoint32 data type

## 10.12.2 Jog

See also function diagram 3125 in the SINAMICS DCM Parameter Manual

The JOG function can be applied via the binectors selected using p50435 index .00 to .07, and via control word bit 8 and bit 9 (r0898.8 & r0898.9) (see function diagram for logic operation).

The "Jog" function can only be executed if "Switch off" and "Operation enable" have been applied.

The "Jog" function is applied by one or more of the sources referred to (binectors, control word bits) entering the log. "1" state. During this, each source is assigned a setpoint (to be selected using p50436).

If two or more sources apply the "Jog" function at the same time, then 0 is applied as the jog setpoint.

For each source (binector, control word bit) with which the "Jog" function can be applied, p50437 may be used to determine whether the ramp-function generator is bypassed (binector r53170.11). In this case, the ramp-function generator operates with ramp-up time = 0 and ramp-down time = 0.

#### Procedure for applying jog:

If "Jog" is applied, the system is switched on and the jog setpoint applied via the ramp-function generator. For this procedure, refer to the section titled "Switch on/Switch off (ON/OFF1)".

#### Procedure for withdrawing jog:

Once the "Jog" function has been withdrawn, the procedure begins in the same way as the "Switch off" function, as outlined in the section titled "Switch on/Switch off (ON/OFF1)".

Once  $n < n_{min}$ , the controller is disabled and, following a parameterizable time (p50085)

of 0 to 60 s, the line contactor is opened (operating state o7.0 or higher). While the wait time that can be parameterized using p50085 (max. 60.0 s.) is running, the drive remains in operating state o1.3.

### 10.12.3 Creep

See also function diagram 3130 in the SINAMICS DCM Parameter Manual.

The "Creep" function can be activated in operating state o7 and the "Operation" state while "Operation enable" applies.

"Creep" is applied by means of one or more of the binectors selected using p50440 entering the log. "1" state. During this, each binector is assigned a setpoint (to be selected using p50441). If "Creep" is applied by several binectors, their corresponding setpoints are added together.

For each source (binector) with which the "Creep" function can be applied, p50442 may be used to determine whether the ramp-function generator is bypassed (binector r53170.12). In this case, the ramp-function generator operates with ramp-up time = 0 and ramp-down time = 0.

#### Level/Edge

p50445 = 0: Level-controlled  
Binector selected using p50440= 0: No creep  
Binector selected using p50440= 1: Creep

p50445 = 1: Edge-triggered  
The application of the "Creep" function is saved when the binector makes the 0 → 1 transition. The binector selected using p50444 must be in the log. "1" state at this point. The memory is reset when this binector enters the log. "0" state.

#### Procedure for applying creep:

If "Creep" is applied in operating state o7, the system is switched on and the creep setpoint is applied via the ramp-function generator.

If "Creep" is applied in the "Operation" state, the drive uses the ramp-function generator to travel from the operating speed to the creep setpoint.

#### Procedure for withdrawing creep:

- For "Creep" when the "Switch on" command is not present:  
If all binectors that apply the "Creep" function enter the log. "0" state, the controller is disabled and the line contactor is opened (operating state o7.0 or higher) after  $n < n_{min}$ .
- For "Creep" from the "Operation" state:  
If all binectors that apply the "Creep" function enter the log. "0" state, and the conditions for the "Operation" state are still present, the drive uses the ramp-function generator to travel from the set creep speed to the operating speed.

See also the section titled "Switch on/Switch off (ON/OFF1)" for information on edge triggering, automatic restart, and the effect of current and torque limits when decelerating.

#### **10.12.4 Fixed setpoint**

See also function diagram 3115 in the SINAMICS DCM Parameter Manual.

The "Fixed setpoint" function can be applied via the binectors selected using p50430 index .00 to .07, and via p50680 and p50681 (see function diagram for logic operation).

"Fixed setpoint" is applied by one or more of the sources referred to (binectors) entering the log. "1" state. During this, each source is assigned a setpoint (to be selected using p50431). If "Fixed setpoint" is applied by several sources at the same time, their corresponding setpoints are added together (limited to  $\pm 200\%$ ).

For each source with which "Fixed setpoint" can be applied, p50432 may be used to determine whether the ramp-function generator is bypassed. In this case, the ramp-function generator operates with ramp-up time = 0 and ramp-down time = 0.

##### **Response when "Fixed setpoint" is applied:**

The fixed setpoint is switched in instead of the r52211 setpoint.

##### **Withdrawal of "Fixed setpoint":**

If all possible sources for switching in the fixed setpoint are in the log. "0" state again, r52211 is switched through as a setpoint.

## 10.13 Encoder evaluation

### General information

The SINAMICS DC MASTER can evaluate speed/position encoders.

Two encoders can be evaluated simultaneously. Encoder 1 is connected to connector X177 on the CUD. Encoder 2 is connected to an encoder module SMC10 or an encoder module SMC30, which is connected via DRIVE-CLiQ with the CUD.

Encoder 1 is often referred to as the motor encoder as it is normally attached directly to the motor.

Encoder 2 is often referred to as the load encoder as it is normally attached directly to the load.

Table 10- 67 Supported encoder types

Setting for p0400	Encoder type	Encoder 1 p0400[0]	Encoder 2 p0400[1]
0	No encoder	✓	✓
1001	Resolver 1 speed	x	✓
1002	Resolver 2 speed	x	✓
1003	Resolver 3 speed	x	✓
1004	Resolver 4 speed	x	✓
3001	1024 HTL A/B R	✓	✓
3002	1024 TTL A/B R	✓	✓
3003	2048 HTL A/B R	✓	✓
3005	1024 HTL A/B	✓	✓
3006	1024 TTL A/B	✓	✓
3007	2048 HTL A/B	✓	✓
3008	2048 TTL A/B	✓	✓
3009	1024 HTL A/B unipolar	✓	✓
3011	2048 HTL A/B unipolar	✓	✓
3020	2048 TTL A/B R, with sense	x	✓
3081	SSI, singleturn, 24 V	x	✓
3082	SSI, multiturn 4096, 24 V	x	✓
3088	1024, HTL, A/B, SSI, singleturn	x	✓
3090	4096, HTL, A/B, SSI, singleturn	x	✓
9999	User defined	✓	✓
20000	Encoder from OEM list	x	✓
✓ = Encoder type is supported x = Encoder type is not supported, setting not permitted			

The encoder evaluation determines the current actual speed value and the actual position value for both encoders. (See function diagrams 4704, 4710 and 4711 in the SINAMICS DCM List Manual.)



Furthermore, for both encoders the encoder control word and the encoder status word according to PROFIdrive are available. (See function diagrams 4720, 4730 and 4735 in the SINAMICS DCM List Manual.)

PROFIdrive V4.1 is the PROFIBUS profile for drive technology with a wide range of applications in production and process automation systems.

---

#### Note

PROFIdrive for drive technology is standardized and described in the following document:

- **PROFIdrive – Profile Drive Technology**  
PROFIBUS User Organization e. V.  
Haid-und-Neu-Straße 7, D-76131 Karlsruhe, Germany  
<http://www.profibus.com>
  - IEC 61800-7
- 

### 10.13.1 Actual speed values

The calculation of the actual speed value can be seen in the following function diagrams:

- FP4710 (for encoder 1)
- FP4711 (for encoder 2)

The actual speed values of the encoders are always available as freely interconnected BICO outputs.

- r0061[0]: Actual speed value for encoder 1
- r0061[1] = r3370: Actual speed value for encoder 2

If you want to use an actual speed value from the encoder as an actual-value input for the speed controller, you need to set the actual speed value selection p50083 to 1 (for encoder 1) or to 5 (for encoder 2). See FP6810.

The maximum speed (i.e. the 100% speed) is set via p2000 in both cases.

#### Actual position values

G1_XIST1	Encoder 1 actual position value 1
G1_XIST2	Encoder 1 actual position value 2
Gn_XIST2	Fault code
G2_XIST1	Encoder 2 actual position value 1
G2_XIST2)	Encoder 2 actual position value 2

For description, refer to Chapter "Control and status words for encoders (Page 424)".

### 10.13.2 Control and status words for encoders

An encoder interface is defined in the PROFIBUS Profile for drive technology (PROFIdrive V4.1). This interface defines a control and status word for encoders.

They are available in the following parameters:

- r0480[0] = G1\_STW encoder 1 control word
- r0480[1] = G2\_STW encoder 2 control word
- r0481[0] = G1\_ZSW encoder 1 status word
- r0481[1] = G2\_ZSW encoder 2 status word

The bit assignments of the control and status words for the encoders can be seen in the following function diagrams:

- FP4720 (control word for encoders 1 and 2)
- FP4730 (status word for encoders 1 and 2)

For description, refer to Chapter "Control and status words for encoders (Page 424)".

## 10.14 Speed controller

The speed controller is a PI controller with the following additional properties:

### Start pulse

When starting the speed controller (i.e. when the controller is enabled) the I component can start with a selectable value. This is necessary for suspended/hanging loads in order to prevent the load from briefly sagging.

### Adaptation

P gain and integral action time can be changed as a function of any signal (e.g. from the actual speed value).

### Droop

Droop (which can be switched in) can be implemented by feeding back the I component to the input. As a consequence, the controller does not precisely control to the setpoint, but permits a continuous setpoint-actual value deviation.

This is required, for example, if two drives are mechanically coupled with one another (e.g. for a production machine where drives are coupled through the material web being processed). In this case, the droop prevents that the two drives start to operate against one another, although both operate with closed-loop speed control. In the case that a mechanical connection is interrupted (e.g. if the material web breaks), then the speed of the drive operating with droop only slightly changes.

### Lead/lag element element

The lead/lag element is used to improve the stability of the speed control. If required, it can be inserted in the actual speed value channel.

Remark: The functions shown in function diagram 6810 have the following execution sequence:

- Generation of the speed setpoint (r52174)
- Selection of the actual speed value (r52167)
- PT1 element (r52179)
- Bandstop filter 1 (r52177)
- Bandstop filter 2 (r52178)
- DT1 element (r52169)
- Lead/lag element (r52156)
- Generation of the setpoint/actual-value difference (r52165)

### Reference model

The reference model represents the P-controlled speed control loop and creates an appropriately processed speed setpoint for the I-component. This means that the I-component largely plays no role for setpoint changes, with the consequent improved, overshoot-free response.

The reference model contains a PT2 element and a dead time element to emulate the controlled system. See function charts 6810 and 6815.

Further, it is possible to feed in an external reference model (e.g. generated using DDC function diagrams).

The reference model is set using the following parameters:

p50237 natural frequency  
p50238 damping  
p50239 deadtime  
p50240 activation

The reference model is correctly set when the characteristics of the reference model output (r52154) and the actual speed value (r52167) are virtually identical when the I-component of the speed controller (p50224 = 0) is disabled.

**Example**


The following diagram shows the step response of the speed controller after carrying out the optimization run, if the reference model is not activated.

- r52174      Speed setpoint
- r52167      Actual speed value




The following diagram shows the setting of the reference model.

- r52154      Reference model output
- r52167      Actual speed value

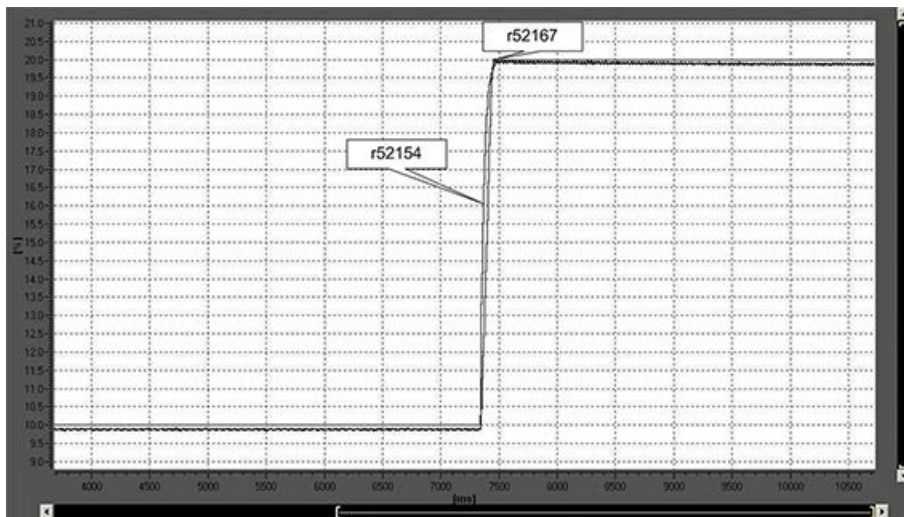

The following diagram shows the step response of the speed controller if the same controller parameters are set as shown previously, however, with the reference model activated.

r52174      Speed setpoint  
r52167      Actual speed value

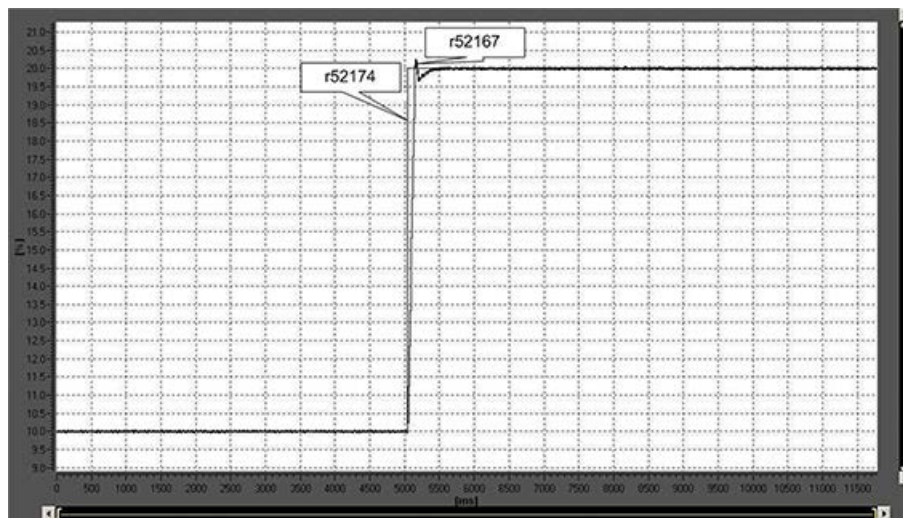

### Note

See Chapter "Commissioning", Section "Manual optimization" for the procedure to manually optimize the speed controller.

### Use of the speed controller for other applications

If the SINAMICS DCM is not used for the speed control of a motor, but rather for the voltage control of a capacitor load, it may be advantageous to support the speed controller working as a voltage controller with a load connection. The "Load connection" function block is available for this purpose. This function block is shown in function diagram 6851. It provides an additional current setpoint that is preferably fed in at p50601[3] (see function diagram 6840).

## 10.15 Adaptation of the armature and field current controller


The current controller (armature current controller and field current controller) of the SINAMICS DCM operate with a controlled system that is very non-linear.

### Types of non-linearity


There are 2 types of non-linearity:

#### 1. Non-linearity of the gating unit

In the armature circuit, there is a significant difference in the controlled system gain (= line-commutated thyristor converter in the B6 bridge connection) between discontinuous and continuous current.

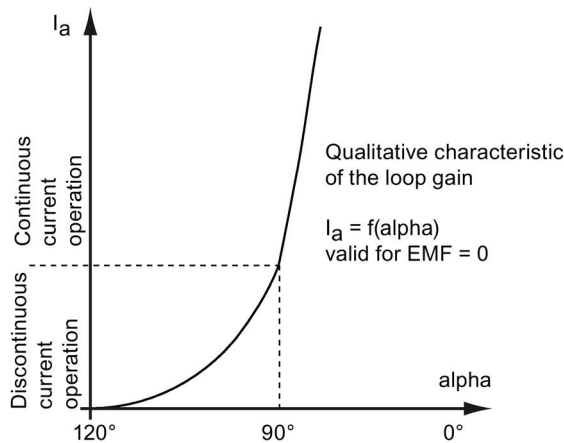


In the field circuit, the system is essentially always in the discontinuous current range, but the control characteristic of the B2Z or B2 bridge manifests a significant degree of non-linearity.

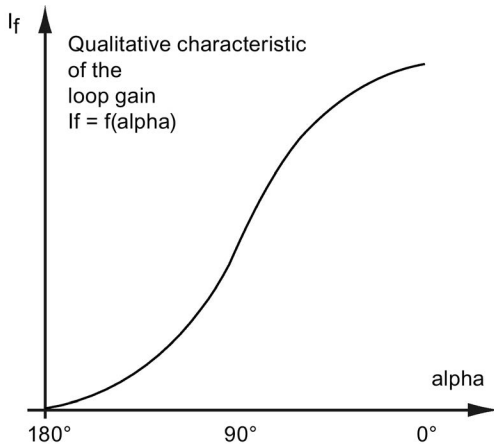

**2. Non-linearity of the load inductance** (= armature circuit or field circuit of the motor):

At higher currents, both the armature winding as well as the field winding – or also when there is a smoothing reactor available in the armature circuit, can go into the magnetic saturation range; as a consequence, they can have a significantly lower inductance than at low currents.

The inductance as a function of the current is modelled according to the following diagram:

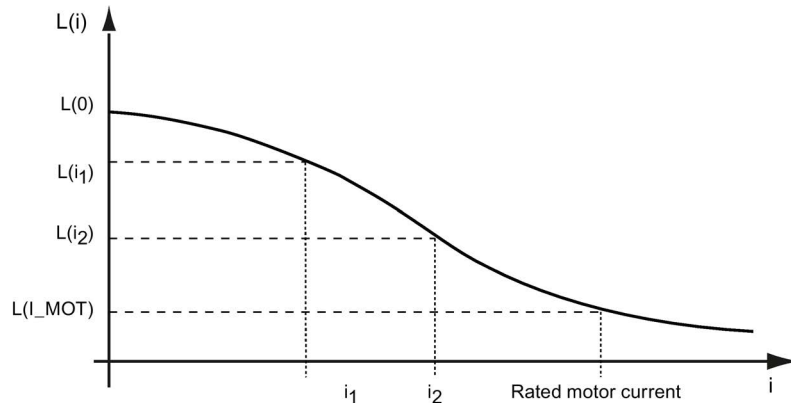

Inductance at a very low current:

$$L(0) = p50111 (L_a) \text{ or } p50116 (L_f)$$

Inductance at the rated motor current:

$$L(I_{Mot}) = p50111 \times p51591 (L_a \times \lambda_a) \text{ or } p50116 \times p51597 (L_f \times \lambda_f)$$

**Effect of the adaptation**

The SINAMICS DCM converter provides the option of adapting the gain of the armature current controller or the field current controller to the existing non-linearities:

**Compensating gating unit non-linearities:**

The controller gain is normally set so that in the range of the largest controlled system gain (i.e. where the armature is in the discontinuous current range or for the field, with a firing angle of 90°) the required control behavior is obtained. For other currents, the current controller becomes appropriately slower. When the current controller adaptation is activated, the current controller gain is increased inversely proportional to the controlled system gain. As a consequence, the controller behavior is approximately the same at any current.

**Compensating non-linear inductances**

The controller gain is normally set so that at a high current, the required control behavior is obtained. At low currents, the current controller becomes appropriately slower. When the current controller adaptation is activated, the current controller gain is increased proportionally to the inductance. As a consequence, the controller behavior is approximately the same at any current.

### Activating the controller adaptation

The current controller adaptation is not activated in the factory setting.

Reason:

When the adaptation is set, this means that the control behavior must be precisely checked at various currents. In many applications, the improved control behavior that can be thus achieved isn't necessary anyway. This is why in these cases it doesn't make any sense to "invest" this time when commissioning the system.

### Setting the armature current controller adaptation

With the armature current controller, it is possible to calculate the adaptation using p50570 from the actual value or from the setpoint of the armature current. The adaptation to non-linear inductances can be activated using p50571, the discontinuous-continuous current adaptation can be activated using p50572. The adaptation factor can be limited using p50573. In order to be able to incorporate the adaptation at the armature current controller, connector output r52350 must be interconnected to connector input p50175 (Kp adaptation). With this intervention, the armature current controller gain is increased or decreased depending on the armature current actual value and/or setpoint (this is selected using p50570). The calculations of the adaptations are now created to change the gain.

### Setting the field current controller adaptation

For the field current controller, it is possible to calculate the adaptation from the actual value or from the setpoint of the field current using p50575. The adaptation to non-linear inductances can be activated using p50576; the adaptation to the non-linearity of the gating unit, can be activated using p50577. The adaptation factor can be limited using p50578. In order to be able to incorporate the adaptation at the field current controller, connector output r52355 must be interconnected to connector input p50267 (Kp adaptation). With this intervention, the field current controller gain is increased or decreased depending on the field current actual value and/or setpoint (this is selected using p50570). The calculations of the adaptations are now created to change the gain.

The corresponding function diagrams show additional details regarding how to activate the gain adaptation and the various setting options:

- FP 6853     Calculating the adaptation factor for the armature current controller gain
- FP 6855     Intervention to adapt the armature current controller gain  
(p50175 = r52350 establishes the intervention)
- FP 6908     Calculating the adaptation factor for the armature current controller gain  
intervention to adapt the armature current controller gain  
(p50267 = r52355 establishes the intervention)



## 10.16 Technology controller

### Features

Simple control functions can be implemented with the technology controller, e.g.:

- Level control
- Temperature control
- Dancer position control
- Pressure control
- Flow control
- Simple closed-loop controls without higher-level controller
- Tension control

The technology controller features:

- Two scalable setpoints
- Scalable output signal
- The output limits can be activated and deactivated via the ramp-function generator.
- The D component can be switched into the control deviation or actual value channel.

### Description

The technology controller is designed as a PID controller, whereby the differentiator can be switched to the control deviation channel or the actual value channel (factory setting). The P, I, and D components can be set separately. A value of 0 deactivates the corresponding component. Setpoints can be specified via two connector inputs. The setpoints can be scaled via parameters (p2255 and p2256). A ramp-function generator in the setpoint channel can be used to set the setpoint ramp-up/ramp-down time via parameters p2257 and p2258. The setpoint and actual value channel each have a smoothing element. The smoothing time can be set via parameters p2261 and p2265.

Pre-control can be integrated via a connector input.

The output can be scaled via parameter p2295 and the control direction reversed. It can be limited via parameters p2291 and p2292 and interconnected as required via a connector output (r2294).

The actual value can be fed in, for example, via an analog input.

If a PID controller has to be used for control reasons, the D component is switched to the setpoint/actual value difference (p2263 = 1) unlike in the factory setting. This is always necessary when the D component is to be effective, even if the reference variable changes. The D component can only be activated when  $p2274 > 0$ .

### Commissioning with STARTER

The "technology controller" function module can be activated via the commissioning wizard or the drive configuration (configure DDS).

You can check the actual configuration in parameter r0108.16.

### Application example: Level control

The objective here is to maintain a constant level in the container.

This is carried out by means of a variable-speed pump in conjunction with a sensor for measuring the level.

The level is determined via an analog input and sent to the technology controller. The level setpoint is defined in a fixed setpoint. The resulting controlled variable is used as the setpoint for the speed controller.

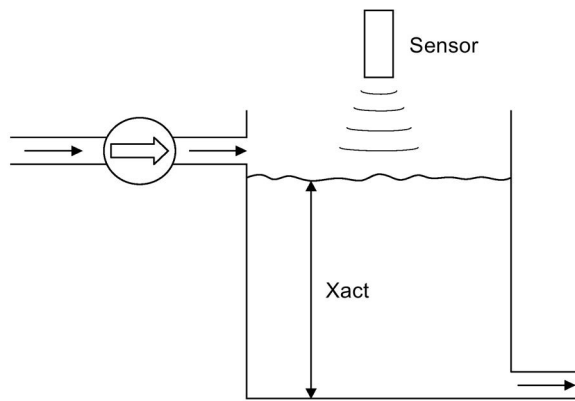


Figure 10-61 Level control: Application

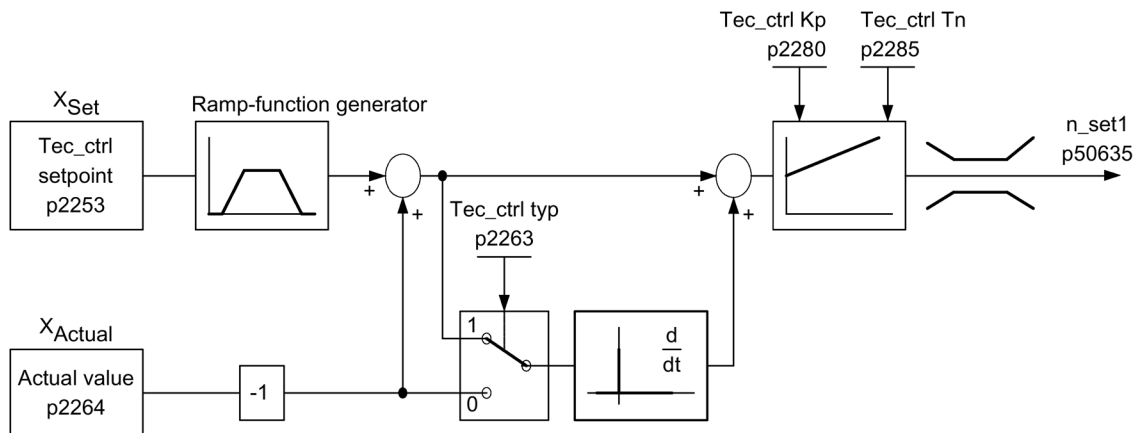


Figure 10-62 Level control: Controller structure

Table 10- 68 Important parameters for the level control

Parameter	Designation	Example
p50625	n_set after the ramp-function generator	p50625= r2294 Tec_ctrl outp_sig
p2200	BI: Technology controller enable	p2200 = 1 Technology controller enabled
p2253	CI: Technology controller setpoint 1	p2253 = r52401 fixed value
p2263	Technology controller type	p2263 = 1 D component in fault signal
p2264	CI: Technology controller actual value (X <sub>ACTUAL</sub> )	p2264 = r52015 analog input AI1 of the CUD
p2280	Technology controller p-gain	p2280 Determine by optimization
p2285	Technology controller integral action time	p2285 Determine by optimization

### Function diagrams (see the SINAMICS DCM List Manual)

- 7958 Closed-loop control (r0108.16 = 1)

### Overview of important parameters (see the SINAMICS DCM List Manual)

- p2200 BI: Technology controller enable
- p2253[0...n] CI: Technology controller setpoint 1
- p2254[0...n] CI: Technology controller setpoint 2
- p2255 Technology controller setpoint 1 scaling
- p2256 Technology controller setpoint 2 scaling
- p2257 Technology controller ramp-up time
- p2258 Technology controller ramp-down time
- p2261 Technology controller setpoint filter time constant
- p2263 Technology controller type
- p2264[0...n] CI: Technology controller actual value
- p2265 Technology controller actual value filter time constant
- p2280 Technology controller proportional gain
- p2285 Technology controller integral action time
- p2289[0...n] CI: Technology controller pre-control signal
- p2295 Technology controller output scaling

## 10.17 Switch-on command for holding or operational brake

see also the SINAMICS DCM List Manual, function diagram 2750

The signal for controlling the brake is available at binector r53210[0]:

r53210[0] = 1 ⇒ close brake

r53210[0] = 0 ⇒ open brake

This binector must be wired to a digital output in order to activate a brake; see function diagrams 2055, 2060, and 2065 in the SINAMICS DCM List Manual.

The following parameters affect the function of the brake-control signal:

p50080 = 0 No brake

p50080 = 1 The brake is a holding brake:

The "Close brake" command is only applied when  $n < n_{min}$  (p50370, p50371).

p50080 = 2 The brake is an operational brake:

The "Close brake" command is applied even if the motor is running.

p50087 Brake-release time:

A positive value prevents the motor from working against a brake that is currently being released.

A negative value causes the motor to work against a brake that is still closed in order to prevent a short-term torque-free state.

p50088 Brake-closing time:

Causes the motor to keep applying torque while the brake is closing

p50319 Delay time for ramp-function generator enable:

Following a controller enable, the setpoint 0 is applied during the time set here.

This time should be set so that the brake has actually been released once it has elapsed. This is mainly necessary when p50087 is set to a negative value.

The figures below illustrate the brake-control timing interval when a level change occurs at the "Switch on/Shutdown" (terminal X177.12) and "Operation enable" (terminal X177.13) inputs.

Where brake control is concerned, the "Jog", "Creep", or "Quick stop" input commands act in the same way as "Switch on/Switch off", and the "Disconnection" or "E-STOP" input commands act in the same way as when the "Operation enable" command is withdrawn.

The "Close brake" command is output during the optimization run for precontrol and current controller (p50051 = 23, 24 and 25).

10.17 Switch-on command for holding or operational brake


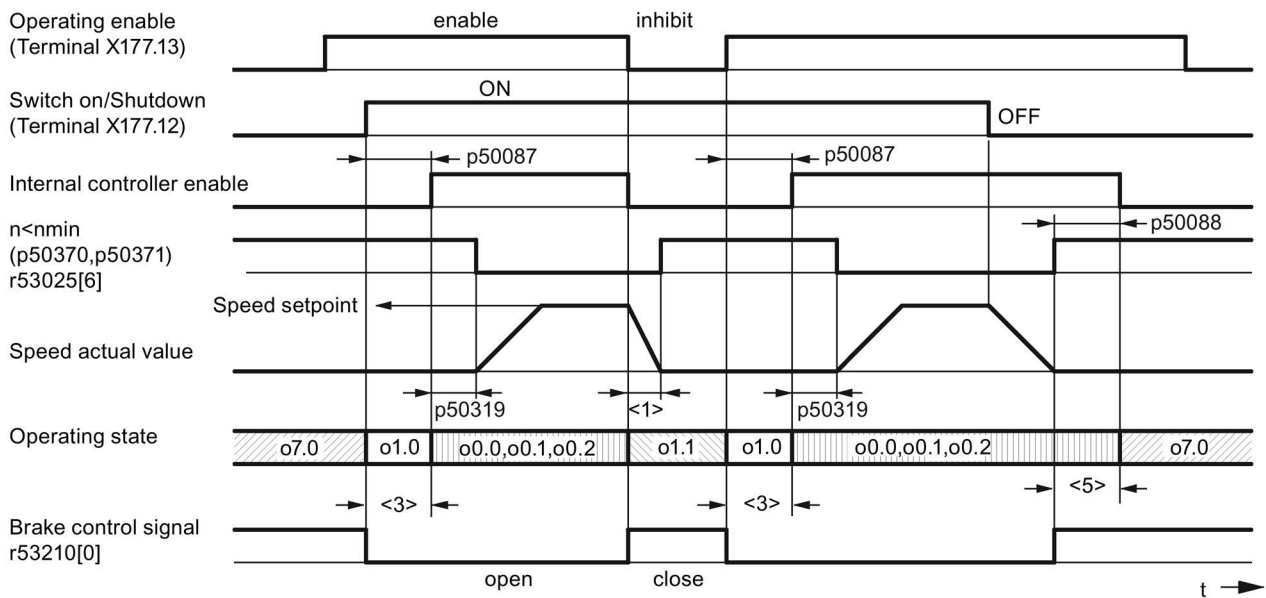


Figure 10-63 Operational brake (p50080 = 2), brake opening time (p50087) positive

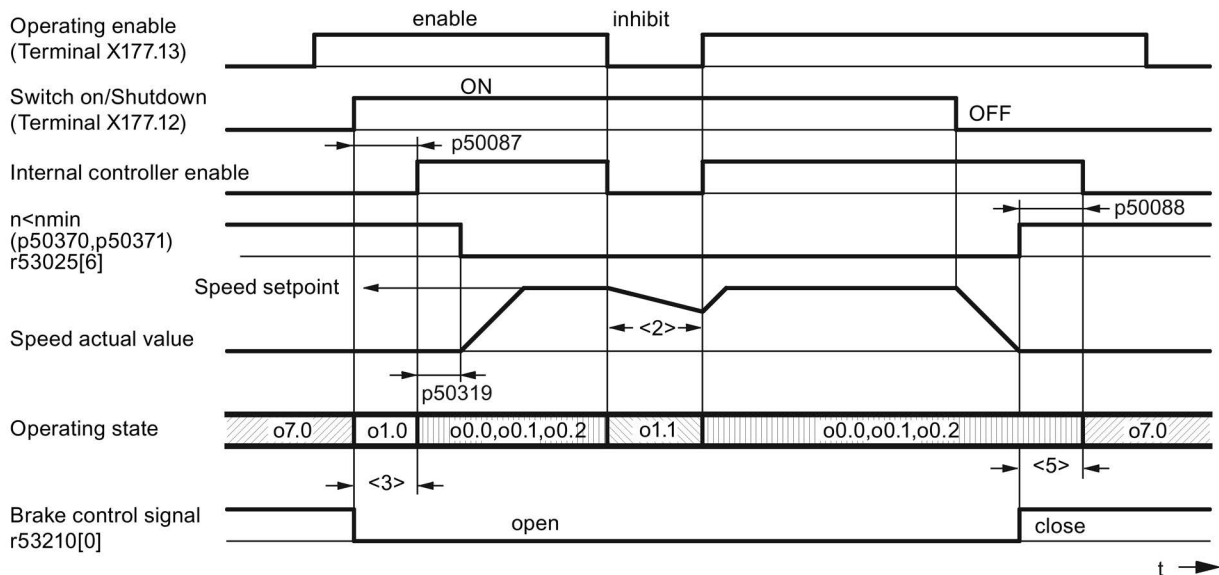

Footnotes for the two figures above

- <1> Mechanical deceleration of drive by means of operational brake
- <2> Drive coasting down; "Close holding brake" first applied when  $n < n_{min}$
- <3> Time for brake to be released before motor applies torque (p50087 positive)
- <5> Time for brake to be closed, during which motor continues to apply torque (p50088)

Figure 10-64 Holding brake (p50080 = 1), brake opening time (p50087) positive

10.18 Switching on auxiliary circuits


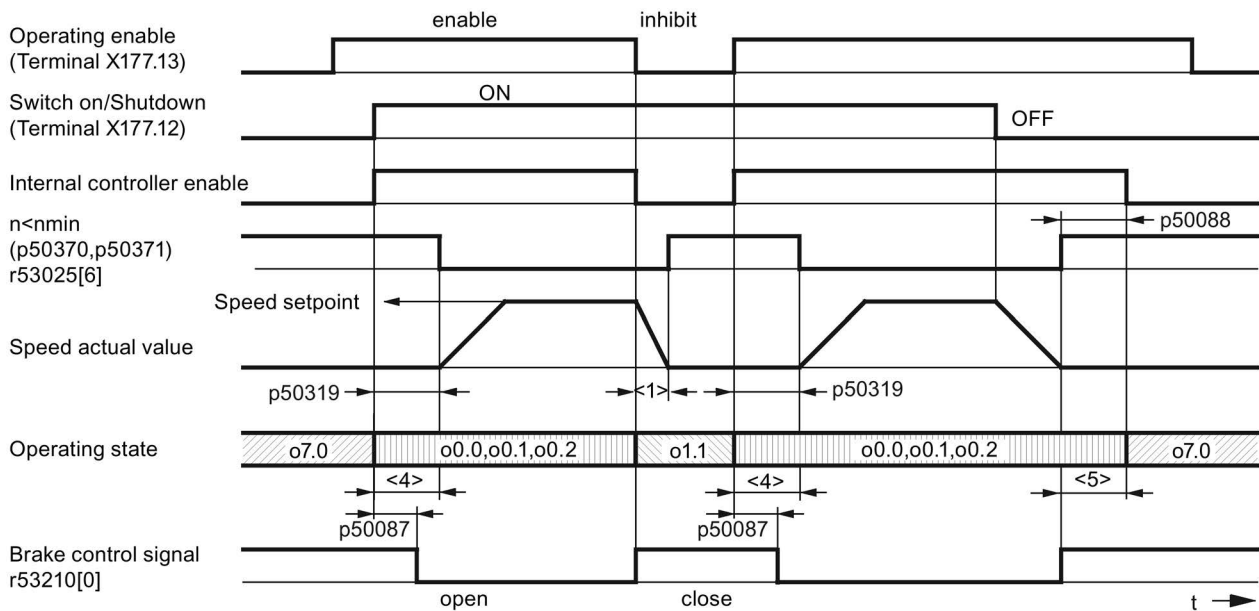


Figure 10-65 Operational brake (p50080 = 2), brake opening time (p50087) negative

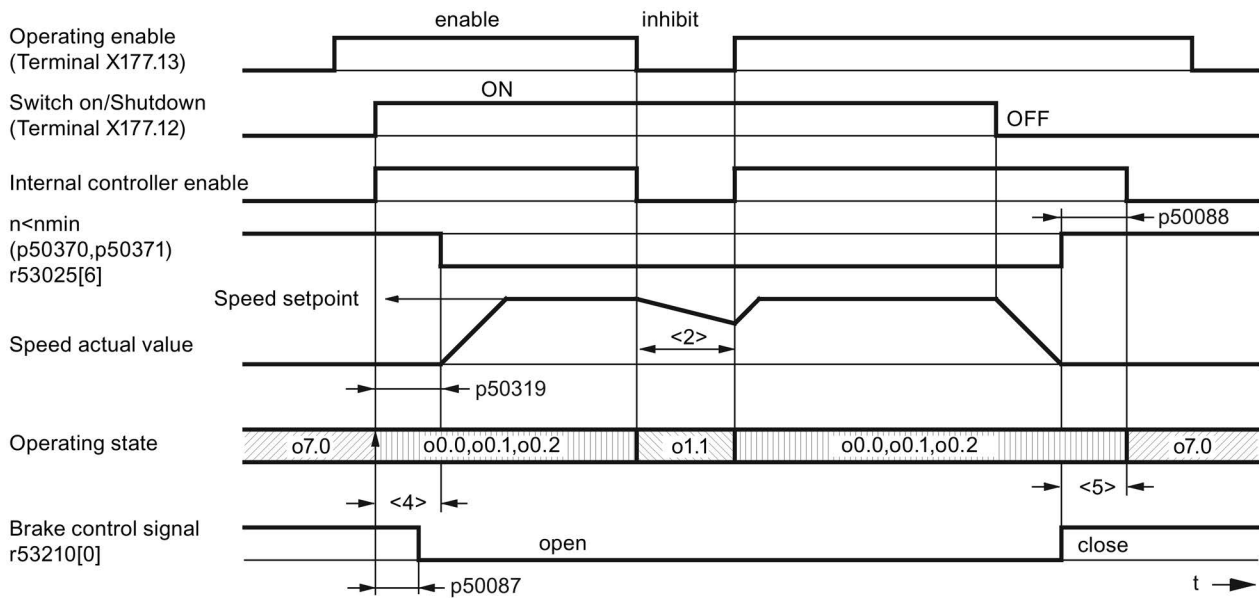

Footnotes for the two figures above

- <1> Mechanical deceleration of drive by means of operational brake
- <2> Drive coasting down; "Close holding brake" first applied when  $n < n_{min}$
- <4> Here, motor works against the brake, which is still closed (p50087 negative)
- <5> Time for brake to be closed, during which motor continues to apply torque (p50088)

Figure 10-66 Holding brake (p50080 = 1), brake opening time (p50087) negative

## 10.18 Switching on auxiliary circuits

This function serves as a switch on command for auxiliaries (e.g. motor fans).

The "Switch on auxiliary circuits" signal is available at binector r53210.2:

r53210[2] = 0 ⇒ auxiliaries OFF

r53210[2] = 1 ⇒ auxiliaries ON

This binector must be wired to a digital output in order to activate the auxiliary circuit; see SINAMICS DCM List Manual, function diagrams 2055, 2060 and 2065.

The "Switch on auxiliaries" goes to 1 at the same time as the "Switch on" command. Following this, the system remains in operating state o6.0 for a parameterizable time (p50093); only once this has elapsed is the line contactor closed.

When the "Switch off" command is applied, the firing pulses are disabled and the line contactor drops out after  $n < n_{min}$ . After a parameterizable time (p50094), the "Switch on auxiliaries" signal goes to 0. If, however, the "Switch on" command is issued again before this time elapses, operating state o6.0 is not retained; instead, the line contactor is immediately closed.

## 10.19 Operating hours counter, unit fan

SINAMICS DCM converters with rated DC current of  $\geq 210$  A, are equipped with fans:

- Units  $< 400$  A: Two internally supplied fans
- Units  $\geq 400$  A: One fan that is connected to the line supply

Parameter r53136 displays which unit fan is used for the particular converter.

### Operating hours counter

Every unit fan has an operating hours counter. The counter states are displayed at parameter r50960[0..4].

r50960[0..3] Operating hours counter for the fans connected at the internal unit connectors XV1 to XV4

r50960[4] For SINAMICS DCM Control Modules, operating hours counter for the fan controlled via r53135[0].

The operating hours counter is incremented, if

- SINAMICS DCM switches-on the corresponding fan AND
- it actually rotates  
i.e. the speed is higher than 5% of the response threshold of the fan monitoring (this does not apply to r50960[4])

The operating hours counters for unit fans that are not available are not incremented.

### Monitoring the fan lifetime

The planned lifetime for each fan is set at p50961[0...4]; the factory setting is 30000 hours.

Alarm A60165 is output 500 hours before the planned lifetime is reached. It is recommended that the corresponding fan is replaced at the next opportunity when the system is not operational (scheduled downtime).

If the lifetime for a fan is set to zero (p50961[0...4] = 0.0 hours), then the fan lifetime monitoring for this fan is disabled.

The corresponding operating hours counter is reset to 0 by setting parameter p50962[0..4] to 1. This should be done each time that a fan is replaced!

See also the SINAMICS DCM List Manual, function diagram 8045.

The instructions on how to replace a fan are provided in Chapter "Replacing the fan (Page 692)".

## 10.20 Thermal overload protection for the DC motor (I<sup>2</sup>t monitoring of the motor)

I<sup>2</sup>t monitoring protects the motor against impermissible loads.

### NOTICE

#### No full motor protection

I<sup>2</sup>t monitoring only provides an approximate representation of the motor's thermal image.

In the factory setting, when switching off the drive, the calculated temperature is saved in a non-volatile fashion; when the drive is switched on again, the saved value is taken into account when continuing to calculate the temperature.

This response can be adapted using p50140.

When p50114 = 0, I<sup>2</sup>t monitoring is disabled.

### Note

- Please observe the manufacturer's specifications if you are using other motor types.
- If you are using DC motors 1G.5/1H.5 as per Catalog DA12, p50113 must be set to 1.00.



## Adaptation

Table 10- 69 Parameter settings for I<sup>2</sup>t monitoring

Parameter		Data
p50114	Thermal time constant	Time constant [s] with which I <sup>2</sup> t monitoring is to operate
p50100	Rated armature current	Determination of permissible continuous current for motor: Permissible continuous current = p50100 × p50113
p50113	Continuous-current factor	
p50140	Motor I <sup>2</sup> t monitoring, response when starting	Sets the response when starting for the motor I <sup>2</sup> t monitoring: 2: Start I <sup>2</sup> t at zero 12: Start I <sup>2</sup> t with the saved value (factory setting)


### Advance-alarm characteristic/Shutdown characteristic

If, for example, the motor load is continuously at approximately 125% of the permissible continuous current for the motor, alarm A60037 responds after a time constant (p50114) has elapsed. If there is no reduction in the load, the drive is shut down when the shutdown characteristic is reached, and error message F60137 is displayed. Advance-alarm/shutdown times for other loads may be taken from the diagram below.

**Alarm and fault initiation from the motor I<sup>2</sup>t monitoring**

The diagrams below show the time after which an alarm or fault is triggered when a new, constant load is suddenly switched in following an extended period of preloading (> 5×T<sub>th</sub>).

T<sub>th</sub> = p50114 (motor thermal time constant)

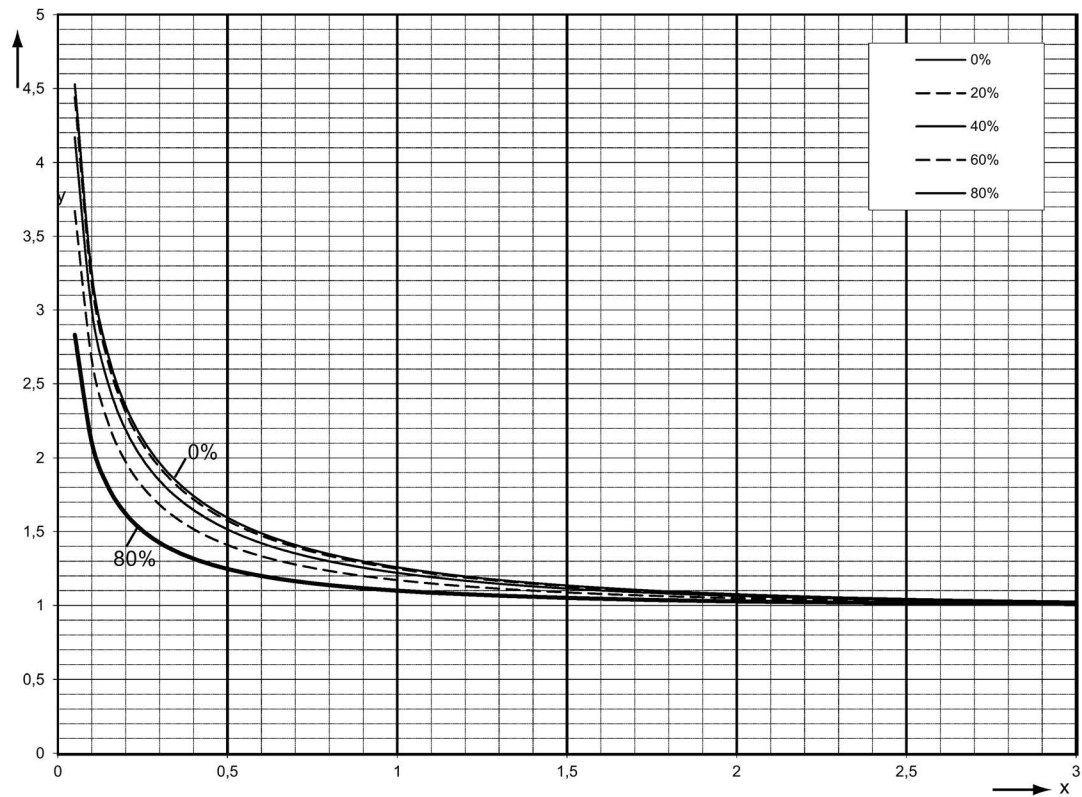


y ... Load current/permissible continuous current (p50100 × p50113)

x ... Time/thermal time constant of motor

Figure 10-67 I<sup>2</sup>t monitoring of the motor: Alarm triggering

10.20 Thermal overload protection for the DC motor (I<sup>2</sup>t monitoring of the motor)

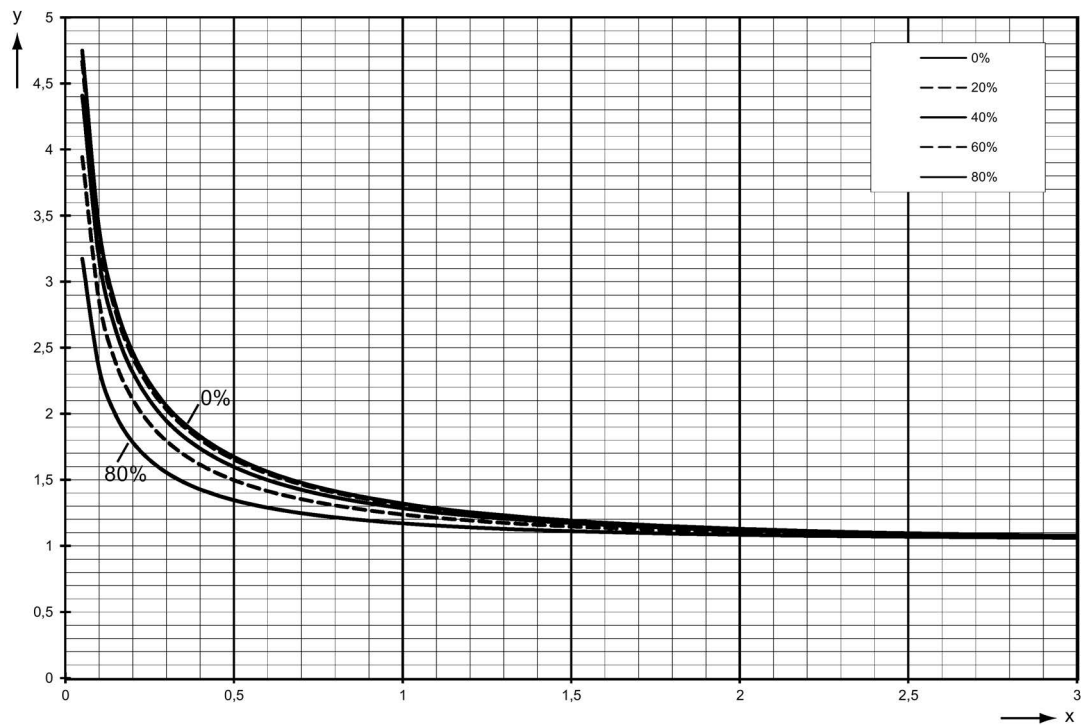

y ... Load current/permissible continuous current (p50100 × p50113)


x ... Time/thermal time constant of motor

Figure 10-68 I<sup>2</sup>t monitoring of the motor: Fault triggering

### Determining the thermal equivalent time constant (p50114)

It should be noted that the thermal equivalent time constant depends on the maximum overcurrent.

Thermal equivalent time constant of DC motors 1G . 5/1H . 5 according to Catalog DA12 T (configuring notes for Catalog DA 12):

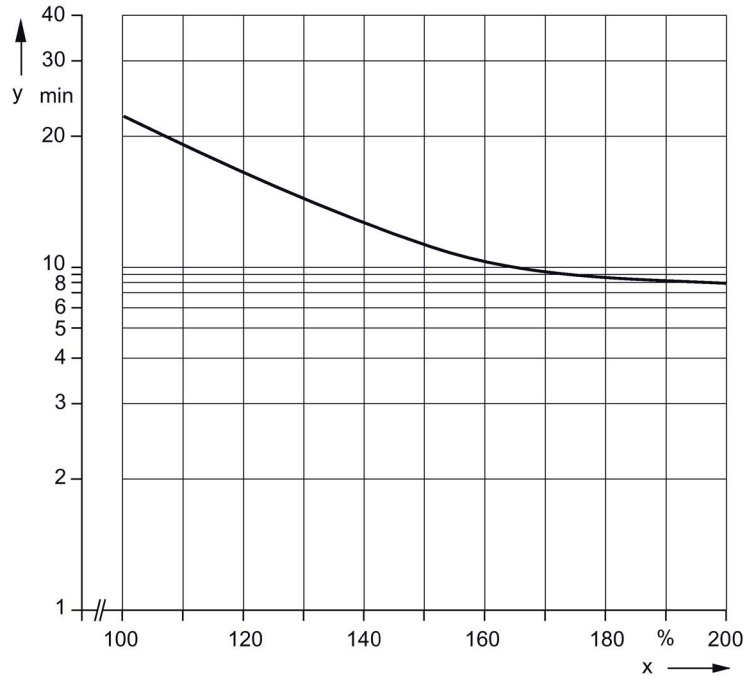

- y ...  $T_{therm}$ , thermal equivalent time constant [min] (p50114)
- x ...  $I/I_N$  [%]  
I = Maximum overcurrent at which the motor is operated  
 $I_N$  = Rated armature current for the motor (p50100)

Figure 10-69 Thermal equivalent time constant

## 10.21 Measuring the motor temperature

SINAMICS DCM provides the possibility of evaluating a temperature sensor integrated in the motor (see the SINAMICS DCM Parameter Manual, function diagram 8030).



### ! WARNING

#### Electric shock in the event of voltage flashovers at the temperature sensor

Voltage flashovers in the signal electronics can occur in motors without safe electrical separation of the temperature sensors.

- Use temperature sensors that comply with the specifications relating to safe electrical separation.

The following measuring sensors can be evaluated.

- **KTY84**

Approx. 350  $\Omega$  up to approx. 2600  $\Omega$  at -40 °C to +300 °C

Positive temperature coefficient, almost a linear characteristic

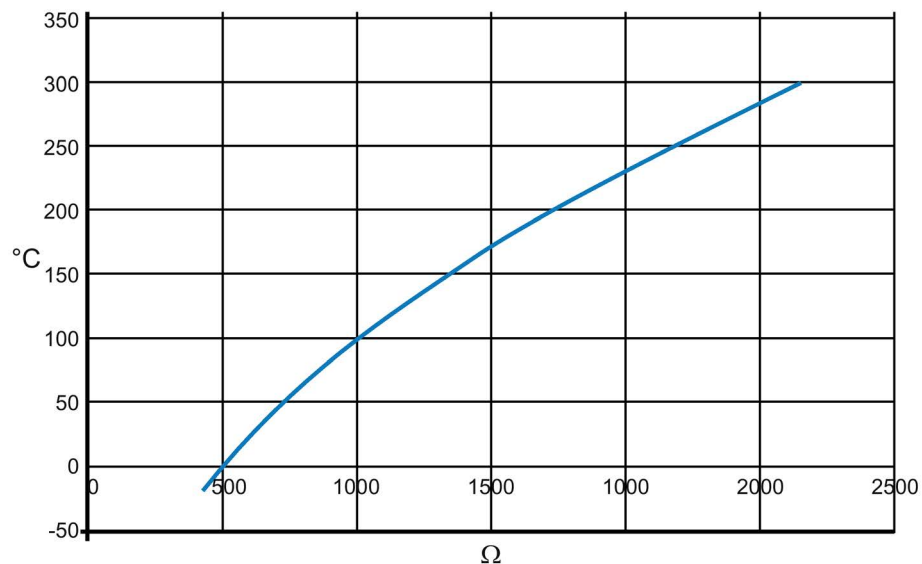


Figure 10-70 Characteristic KTY84

- **PTC thermistor** acc. to DIN 44081 / 44082

600  $\Omega$ , 1200  $\Omega$ , 1330  $\Omega$  or 2660  $\Omega$  response temperature

Positive temperature coefficient, the resistance changes suddenly at the response temperature

Note:

It is not possible to determine the actual temperature, it is only possible to identify as to whether the response temperature has been exceeded or not.

- **PT100**

Approx. 80  $\Omega$  up to approx. 280  $\Omega$  at -40 °C to +500 °C

Positive temperature coefficient, almost a linear characteristic

- **PT1000**  
Approx. 840  $\Omega$  up to approx. 2980  $\Omega$  at -40 °C to +550 °C  
Positive temperature coefficient, almost a linear characteristic
- **NTC thermistor K227/S1/1.8 k $\Omega$ /KER**  
Approx. 200  $\Omega$  at 190 °C to 1.8 k $\Omega$  at 100 °C

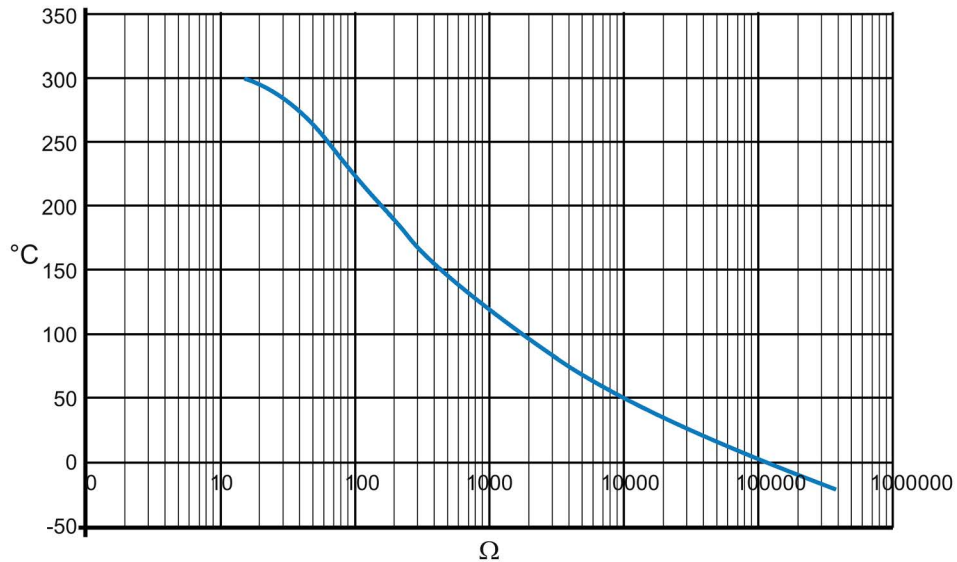


Figure 10-71 Characteristic K227

## 10.22 Speed-dependent current limitation

Speed-dependent current limitation protects the DC motor's commutator and brushes at high speeds.

The settings required for this (p50104 to p50107) must be taken from the motor rating plate.

Additionally, the maximum operating speed of the motor (p50108) must be entered; this must match the actual maximum operating speed.

The actual maximum operating speed is determined as follows:

- Using p2000 in cases where the actual speed value comes from an incremental encoder
- Using p50741 in cases where the actual speed value comes from an analog tachometer
- Using p50115 in the case of operation without a tachometer


Aside from this, speed-dependent current limitation must be activated by setting p50109 to 1.

**NOTICE**

**Excessive stress on the commutator and brushes due to incorrect setting**

Making an incorrect setting for speed-dependent current limitation can lead to excessive stress on the commutator and brushes, which in turn results in a significantly reduced service life for the brushes.

**Setting speed-dependent current limitation for motors with a bend in the commutation characteristic**

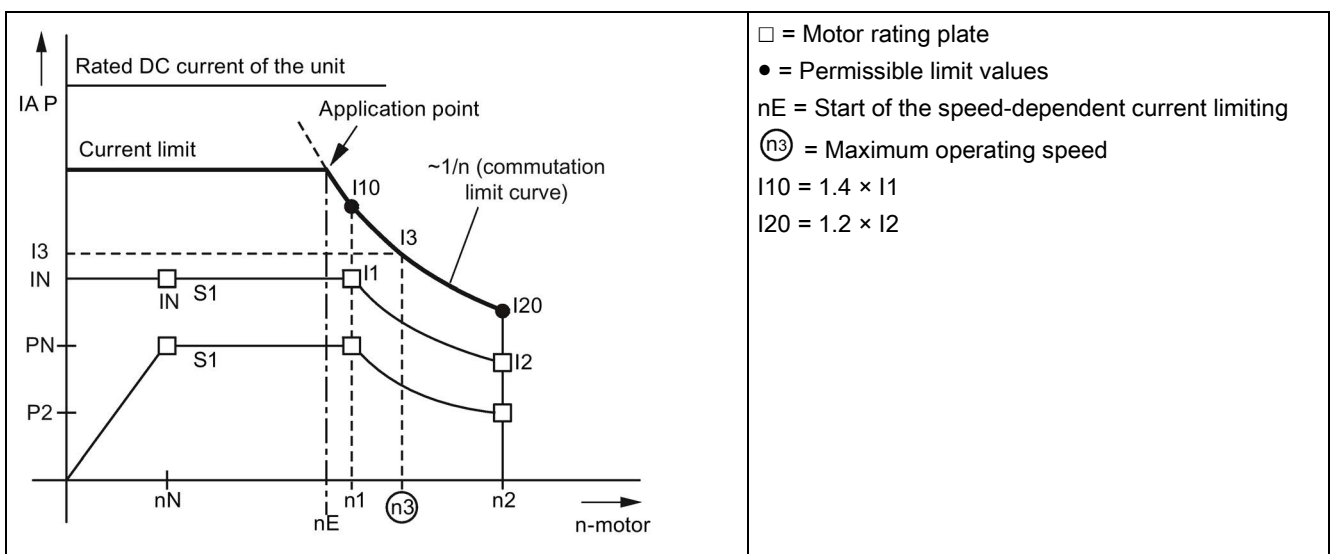

The current limitation curve is determined using n1, I10, n2, and I20.

Parameter:

- p50104 = n1
- p50105 = I1 (unit calculates I10 from this)
- p50106 = n2
- p50107 = I2 (unit calculates I20 from this)
- p50108 = n3 (defines the speed scaling)
- p50109 = 0 ... Speed-dependent current limitation switched off
- p50109 = 1 ... Speed-dependent current limitation switched on

10.22 Speed-dependent current limitation

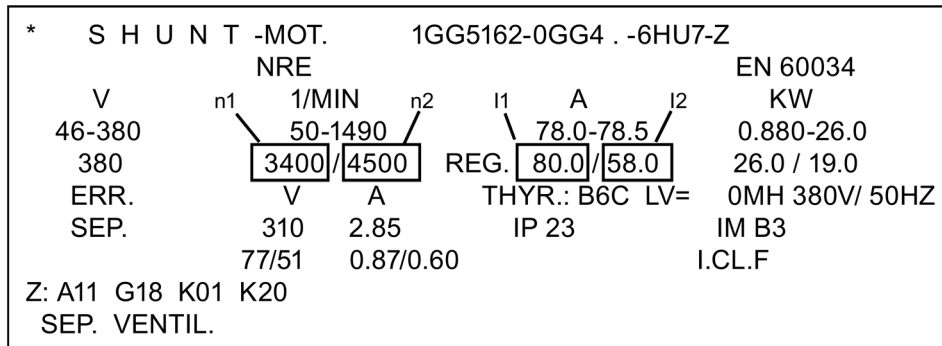


Figure 10-72 Example of a motor rating plate

Setting speed-dependent current limitation for motors without a bend in the commutation characteristic


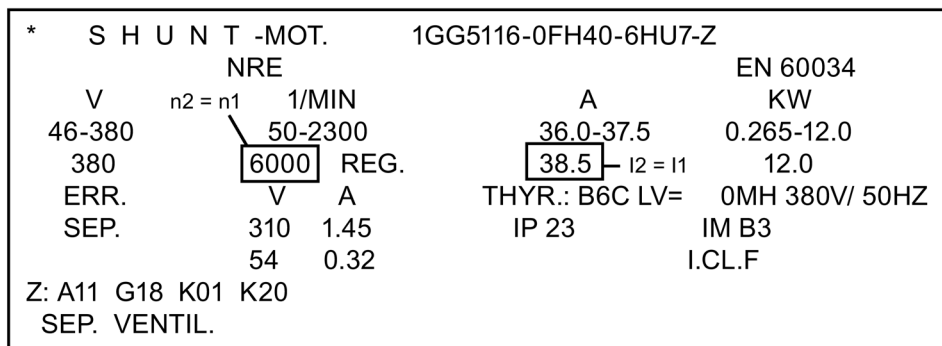


Figure 10-73 Example of a motor rating plate

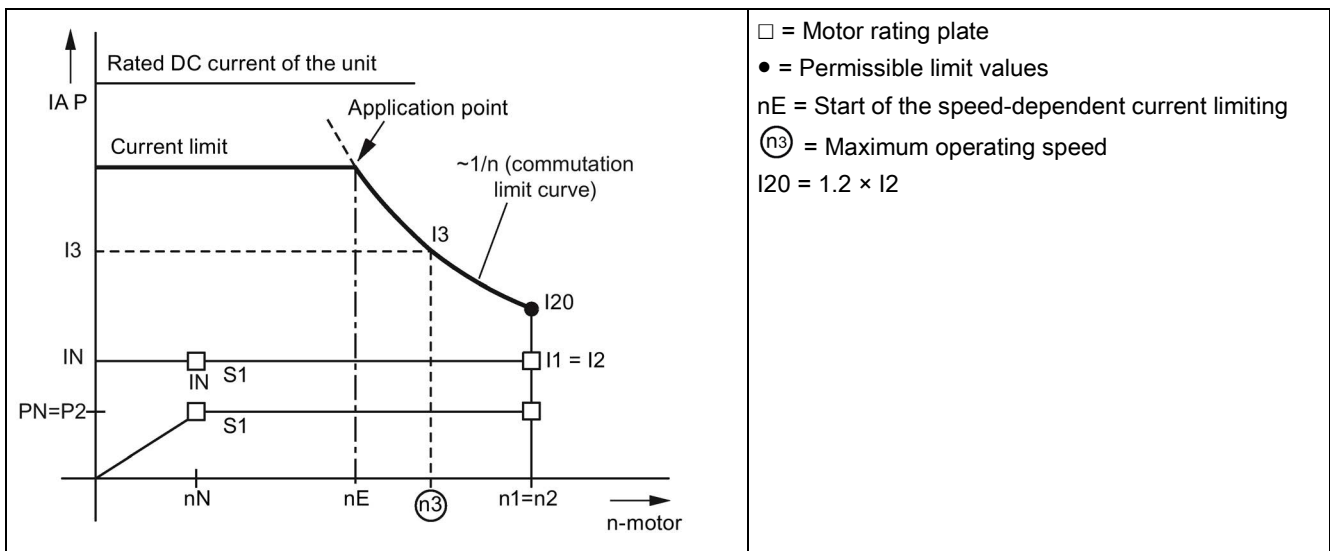

## 10.23 Dynamic overload capability of the power unit

### 10.23.1 Overview of functions

The rated DC current specified on the unit rating plate (= maximum permissible continuous DC current for  $p50077 = 1.00$ ) may be exceeded in operation. The extent to which this value is exceeded and how long this lasts are subject to certain limits, which are explained in more detail in the section that follows.

The absolute upper limit for overload currents is  $1.8 \times$  the rated unit DC current  $\times p50077$  ( $= 1.8 \times r50072[0] \times p50077$ ). The maximum overload duration depends on the overload current's time characteristic as well as on the unit's load history, and differs from power unit to power unit.

Each overload must be preceded by an underload (load phase with load current  $< p50077 \times$  rated unit DC current). Once the maximum permissible overload duration has elapsed, the load current must return to at least  $\leq p50077 \times$  rated unit DC current.

The dynamic overload for the power unit is monitored by a software algorithm ( $I^2t$  monitoring of the power unit).  $I^2t$  monitoring uses the time characteristic for the actual load current value to calculate the time characteristic for the thyristors' temperature rise above the ambient temperature. When the converter unit is switched on, the calculation process starts with the initial values that were determined before the electronic power supply was last shut down. The environmental conditions (ambient temperature, installation altitude) can be taken into account by setting parameter  $p50077$ . In the delivery condition, the ambient temperature is always set to the maximum possible value without derating (i.e.  $45\text{ }^\circ\text{C}$  for self-ventilated units and  $40\text{ }^\circ\text{C}$  for units with forced ventilation).

$I^2t$  monitoring responds when the temperature rise calculated in the thyristors becomes too high. However, it is also possible to set the following alternative responses using parameters:

- $p50075 = 0$ :  $I^2t$  monitoring is disabled. The armature current is limited to  $p50077 \times$  rated unit DC current ( $= p50077 \times r50072[0]$ ).
- $p50075 = 1$ : Alarm A60039 with reduction in armature current setpoint to  $p50077 \times$  rated unit DC current
- $p50075 = 2$ : Fault F80139 with unit shutdown

Parameters  $r52310$  and  $r50014[1]$  show the calculated thyristor temperature rise as a % of the maximum permissible thyristor temperature rise. This maximum temperature rise differs from power unit to power unit, but falls approximately between  $80\text{ }^\circ\text{C}$  and  $90\text{ }^\circ\text{C}$ .

## 10.23.2 Configuring for dynamic overload capability

The following information is available on request from your Siemens office for each SINAMICS DCM converter unit:

- The **maximum overload duration**  $t_{on}$  when starting up with a cold power unit and specified constant overload with overload factor X (i.e. load with X times the device rated DC current \* p50077) (see the small table at the top right)
- The **maximum zero current interval**  $t_{starting\ from}$  (maximum cooling time) until the power unit reaches the thermal state "cold" (see below the small table at the top right)
- **Limiting characteristic fields for determining overload capability** during thermally stabilized, intermittent operation with overload (periodic duty cycles)
  - Tabular representation: Top left
  - Representation as curve with logarithmic y axis: Curve at bottom left
  - Representation as curve with linear y axis: Curve at bottom right

### Note:

The power unit is "cold" when the calculated thyristor temperature rise is less than 5% of its maximum permissible value. This state can be queried using a binary assignable output.

---

### Note

If you start duty cycles with a cold power unit at least partially within the specified duty cycle limits, then the thermally stabilized state is reached without I<sup>2</sup>t monitoring responding.

If I<sup>2</sup>t monitoring is parameterized for a shutdown function (p50075 = 2), you should not come too close to the limiting characteristic when configuring periodic duty cycles that are longer than, slightly shorter than, or equal to 300 s.

In all other cases, however - and particularly when parameterizing I<sup>2</sup>t monitoring for a reduction in the armature current setpoint (p50075 = 1) - you can utilize the maximum overload capability determined by the limiting characteristic to its full extent.

---

### Structure of limiting characteristic fields for intermittent operation with overload:

Each of the limiting characteristic fields relates to a duty cycle during intermittent overload operation with an **overall duration** (time period) of 300 s.

A duty cycle of this type consists of two time intervals:

- The **base load duration** (actual armature current value  $\leq$  p50077 \* rated unit DC current)
- and the **overload duration** (actual armature current value  $\geq$  p50077 \* rated unit DC current).

Each limiting characteristic represents the maximum permissible **overload duration**  $T_p$  in excess of the **maximum base-load current**  $I_g$  for a specific **overload factor** X and a specific device.

For the **remaining duration** of the duty cycle, the **base-load current** determined using the overload factor must not be exceeded.

If no limiting characteristic has been specified for the required overload factor, then it will be subject to the limiting characteristic for the next largest overload factor.

The limiting characteristic fields apply for a duty cycle duration of 300 s.  
For cycle durations < 300 s, the overload duration must be reduced proportionally (cycle duration/300 s).

For cycle durations > 300 s, only the same overload duration as with a cycle duration of 300 s is permitted; the base-load duration is correspondingly longer.

The limiting characteristic fields apply for  $p50077 = 1.00$ . When setting  $p50077$  to  $\leq 1.00$ , i.e. reducing the thermal load, the currents that are actually flowing must be evaluated with the factor  $1/p50077$ :

Overload factor for characteristic X:

$$X = \text{Actual overload current} / (p50077 \times \text{rated unit DC current})$$

Actual maximum base-load current  $I_g$ :

$$I_g = p50077 \times \text{maximum base-load current acc. to characteristic as a \% of the rated unit DC current}$$

### Basic tasks for configuring periodic operation with overload

Designations:

Base load duration<sub>300</sub> = Minimum base load duration for 300 s cycle duration

Overload duration<sub>300</sub> = Maximum overload duration for 300 s cycle duration

### Basic task 1

Known:

Device types, cycle duration, overload factor, overload duration

To be found:

Minimum base load duration and maximum base-load current

To reach solution:

Select the limiting characteristic for the known unit and overload factor

Cycle duration < 300 s:

$$\text{Overload duration}_{300} = (300 \text{ s/cycle duration}) \times \text{overload duration}$$

Cycle duration  $\geq 300$  s:

$$\text{Overload duration}_{300} = \text{overload duration}$$

If: Overload duration<sub>300</sub> > overload duration<sub>300</sub> for base-load current = 0

Then: Required duty cycle cannot be configured

Otherwise: Read the maximum base-load current for overload duration<sub>300</sub> from the limiting characteristic

**Example 1:**

Known

30 A/4Q unit; cycle duration 113.2 s; overload factor = 1.45; overload duration = 20 s

To be found:

Minimum base load duration and maximum base-load current

Solution:

Limiting characteristic for 30 A/4Q unit, overload factor 1.5

overload duration<sub>300</sub> = (300 s/113.2 s) × 20 s = 53 s

base-load duration<sub>300</sub> = 300 s – 53 s = 247 s →

maximum base-load current = approx. 45% of I<sub>N</sub> = 13.5 A

**Basic task 2**

Known:

Device types, cycle duration, overload factor, base-load current

To be found:

Minimum base load duration and maximum overload duration

To find solution:

Select the limiting characteristic for the known unit and the known overload factor.

Read the overload duration<sub>300</sub> for the base-load current from the limiting characteristic.

Cycle duration <300 s:

Max. overload duration = (Cycle duration/300 s) \* Overload duration<sub>300</sub>

Min. base-load duration = Cycle duration – Max. overload duration

Cycle duration ≥300 s:

Max. overload duration = Overload duration<sub>300</sub>

Min. base-load duration = Cycle duration – Max. overload duration

**Example 2:**

Known:

30 A/4Q device; cycle duration 140 s; current overload factor = 1.15;

base-load current = 0.6\*I<sub>N</sub> = 18 A

To be found:

Minimum base load duration and maximum overload duration

Solution:

Limiting characteristic for 30 A/4Q unit, overload factor 1.2

Base-load current = 60% of I<sub>N</sub> → Overload duration<sub>300</sub> = 126.35 s

Max. overload duration = (140 s/300 s) × 126.35 s = approx. 58 s

Min. base-load duration = 140 s - 58 s = 82 s

## 10.24 Sensor for the ambient and/or air intake temperature

For the SINAMICS DC MASTER, a sensor for the ambient and/or air intake temperature is available as option (order code L15, see Chapter "Ordering information for options and accessories (Page 30)"). The sensor is mounted in the cooling air intake of the device.

Please note that when ordering SINAMICS DCM, it is only possible to subsequently retrofit a sensor in the manufacturer's factory.

- The temperature sensor is indicated as being available at r52049[1].
- The measured temperature is available at r52050[1] and at r50013[1] for example for the following applications.
  - For evaluation with "free function blocks" or "DCC charts" or
  - For transfer to a higher-level automation system via fieldbus (PROFIBUS/PROFINET)
- The derating (see Chapter "Derating (Page 75)") is automatically adapted to the measured air intake temperature.

### Commissioning

If option L15 is being used, at p50077 the derating factor for the power reduction as result of increased installation altitude (K2 according to the following table) must be set, and not the derating factor according to the tables in Chapter "Derating (Page 75)".

Installation altitude	Derating factor K2
1000 m	1.0
2000 m	0.9
3000 m	0.8
4000 m	0.7
5000 m	0.6

### Function

- **Calculating the derating factor**  
 Effective derating factor  $K = K1 \times K2$   
 K1 = derating as a result of increased air intake temperature  
 K2 = derating as a result of increased installation altitude (see the previous table)  
 K1 is continually calculated, taking into account the measured air intake temperature (limited to max. 1.0). The derating factor K is determined by multiplying with K2 and used to generate the current limit r52130, see function diagram 8042 in the SINAMICS DCM List Manual.
- **Monitoring the air intake temperature**  
 For self-ventilated (self-cooling, cooling type AN) devices, the following applies:  
 Alarm threshold = 52 °C  
 Fault threshold = 57 °C  
 For force-ventilated (with forced air cooling, type AF) devices, the following applies:  
 Alarm threshold = 47 °C  
 Fault threshold = 52 °C

Reaction:

Measured air intake temperature (r52050[1] or r50013[1])

- Is greater than the alarm threshold → Alarm A60080
- Is higher than the fault threshold → Fault F60067
- Is greater than 115 °C → Fault F60096 with fault value 2 (i.e. the temperature sensor is short-circuited)
- Is less than -25 °C → Fault F60096 with fault value 1 (i.e. the temperature sensor is interrupted)

### Use of the SINAMICS DCM in a SINAMICS DCM Cabinet drive cabinet with option L99

Option L99 provides the same functionality as option L15.

**Units with firmware version 1.4 or higher:**

Alarm A60082 is output if the drive performs an automatic derating as a result of the measured air intake temperature. The response threshold for this alarm can be configured with p50066.

The description for option L99 can be found in the operating instructions for the SINAMICS DCM Cabinet.

---

**Note**

For devices with option L15, p50066 has no effect and A60082 is not available.

---

## 10.25 Calculating the thyristor blocking voltage

The SINAMICS DCM converter offers the possibility of continually determining the voltage available at each individual thyristor of the armature converter. The voltage is used to identify which armature thyristors are presently conducting and which are presently blocked.

This information is available via BICOs (see function diagram 6950).

This information is used for the following functions as input variable:

- Inverter commutation fault detection and initiation of the CCP  
The thyristor that is relinquishing the current must assume the blocking voltage, otherwise, commutation was unsuccessful.
- Torque direction changeover (sequential logic module)  
Before a thyristor of the new torque direction is triggered, all thyristors associated with the old torque direction must be blocked. The condition is evaluated in addition to the Ia=0 message.

The voltage at the armature thyristors is determined from the following measured values:

- Two phase-to-phase line supply voltages (UV, VW)
- Voltage at a thyristor (for 4Q: Anti-parallel thyristor pair) (X13/X26)
- DC voltage (Va)

### Selecting the thyristor blocking voltage calculation using p50166

This parameter is only evaluated once during power up, i.e. a change only takes effect after a restart or power up with saved parameters (p0976 = 11).

The thyristor blocking voltage calculation is only really required in just a few applications and requires approx. 5% processor utilization; this is the reason that it is deactivated in the factory setting.

- p50166 = 0 Thyristor blocking voltage monitoring not active (factory setting)
- = 1 Thyristor blocking voltage monitoring active

Activation is recommended in the following cases:

- If a SIMOREG CCP is connected to the SINAMICS DCM.
- If a motor is not connected to the armature converter, but instead, a very large inductance.

---

#### Note

The thyristor blocking voltage calculation function is available from the following version of the power interface module

- C98043-A7105-L1-8
- C98043-A7105-L4-8
- C98043-A7106-L1-6
- C98043-A7106-L4-7
- C98043-A7107-... (Option L05): All releases
- C98043-A7108-... (Option L05): All releases
- A5E... : All releases

This information is provided on the bar code label on the printed circuit board.

If the thyristor blocking voltage calculation is activated with p50166=1 when the hardware version of the power interface is not suitable, fault message F60058 with fault value r0949[0]=6 appears after the next power-up with the saved parameters.

---

## 10.26 Automatic restart

"Automatic restart" means:

When brief interruptions in the network (such as voltage dips) occur, the SINAMICS DC MASTER does not enter the "FAULT" operating state immediately, but instead blocks the armature firing pulses before automatically re-enabling them once the network returns to normal.

"Brief" refers to a time that is: shorter than the time set at p50086 (= hot restart time)

During the brief pulse inhibit period that is initiated when faults occur in the network, the SINAMICS DC MASTER waits in operating state o4.0 (for power system faults in the armature circuit) or o5.1 (for power system faults in the field circuit).

If the network does not return to normal during the hot restart time, the relevant fault is triggered as soon as it elapses.

The following faults relate to the "Automatic restart" function:

F60004	Armature circuit phase failure (1U1, 1V1, 1W1)
F60005	Field circuit phase failure (3U1, 3W1)
F60006	Undervoltage (armature current or field current)
F60007	Overvoltage (armature current or field current)
F60008	Line frequency too low (armature current or field current)
F60009	Line frequency too high (armature current or field current)

---

### Note

There is no automatic restart when the electronics power supply fails.

---

## 10.27 Operation on a single-phase line supply

SINAMICS DCM converters can also be operated on single-phase line supplies.

Fields of application for this operating mode include:

- Replacement of older single-phase converters employing analog technology
- Plants and systems where there is no 3-phase line supply
- Presenting and demonstrating SINAMICS DCM in seminar hotels and demonstration rooms where generally there is no three-phase line supply

---

### Note

For single-phase operation, dynamic overload of the devices is not possible. The I<sup>2</sup>t monitoring must be deactivated (p50075=0). If the I<sup>2</sup>t monitoring is activated, for single-phase operation, fault 60058 is output with fault value 4.

---



## Connection

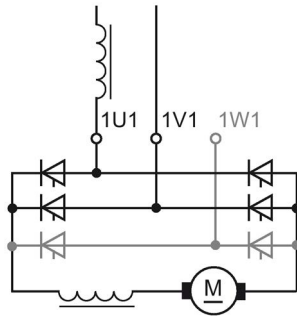


Figure 10-74 Connection to a single-phase line supply

The converter is connected to the line supply (one phase and the neutral conductor, e.g. 230 V or two phase conductors of a three-phase line supply, e.g. 400 V) via terminals 1U1 and 1V1. Connection 1W1 remains free.

It is mandatory that a single-phase line reactor or a transformer with 4%  $u_k$  is provided, which only supplies the DC converter involved.

Commutating reactor and transformer should be selected according to the rated motor current of the armature circuit.

In this B2 circuit, the line current is equal to the DC current in the armature circuit. All of the other line-side drive components should be dimensioned according to this. Further, due to the higher current ripple when compared to six-pulse operation, a smoothing reactor must be provided in the DC circuit. Please contact the motor manufacturer when dimensioning the smoothing reactor.

## Parameterization

Selecting operation on a single-phase line supply with **p51799 = 1**

The high current ripple in this mode causes ripple in the actual speed. For smooth speed control, it is recommended to set the actual speed smoothing to approx. 10 ms (p50200 = 10 ms)

## Derating

When selecting operation on a single-phase line supply, the rated DC current (r50072[1]) is automatically reduced to 67% of the value for 3-phase operation. The reason for this is the uneven distribution of the current in the thyristors in the power unit of the drive converter.

As a consequence, the rated output voltage is also reduced. See also Chapter "Technical data (Page 39)".

## 10.28 Connecting units in parallel and in series

### Topology overview

Several SINAMICS DCM converters can be arranged in various topologies. The following topologies are supported:

- **6-pulse parallel connection**

This topology is used in order to realize converter power ratings that are above the highest available SINAMICS DCM rating.

- **12-pulse parallel connection**

This topology is especially used at higher power ratings to achieve lower line harmonics. In addition, by using this circuit, a lower DC current ripple is obtained when compared to a 6-pulse connection. One or several 6-pulse converters can be connected in parallel to each of the two 12-pulse converters connected in parallel.

- **6-pulse series connection**

This topology is used to achieve a higher no-load DC voltage.

The following versions are available:

- Both converters are operated with the same firing angle.
- Sequence control (one of the two converters is always at a control limit, the other converter controls the armature current)
- Series connection of a controlled converter with an uncontrolled converter (thyristor bridge B6 + diode rectifier)

One or several converters can be connected in parallel to each of the converters connected in series to increase the power rating.

- **12-pulse series connection**

The topology corresponds to a 6-pulse series connection. In addition, a lower DC current ripple is obtained when compared to a 6-pulse connection. One or several converters can be connected in parallel to each of the converters connected in series to increase the power rating.

---

#### Note

- All of the topologies listed here are only permissible in the restricted line frequency range from 20 Hz to 65 Hz.
  - For all of the topologies listed here, only units with the same rated DC current rating may be used.
  - For all of the topologies listed here, only units with the same firmware version may be used.
- 

#### Note

More information about design is given in the associated application notes (see link "Preface (Page 3)").

---

---

## Communication

---

### Note

Before activating the parallel interface (i.e. before setting  $p51800 > 0$ ), a unique station address must be set at  $p51806$  on all SINAMICS DCMs. Otherwise, the parallel interface will not work properly.

Remedy in this case: Switch the electronics power supply off and then on.

---

- In the particular topology, communication between all converters is established via the parallel interface. The CUDs of all converters should be connected with one another.
  - The parallel interface allows a maximum of 16 nodes to communicate.
  - The devices are connected using 8-core shielded patch cables, type UTP CAT5 according to ANSI/EIA/TIA 568, such as those that are used to network PCs. A standard 5 m long cable can be directly purchased from Siemens (article number: 6RY1707-0AA08).  $(n-1)$  cables are required to connect  $n$  devices. The bus termination must be activated at the units connected at the start of the bus and at the end of the bus ( $p51805 = 1$ ).
- 

### Note

A patch cable according to TIA568A (European) or TIA568B (American) can be used. However, both cable ends must be wired according to the same standard (patch cable = 1:1). A crossover cable is **not** suitable.

---

- The parallel interface also enables any BICOs (that can be parameterized by the user) to be exchanged between nodes. See function block diagrams 9352 and 9355. Exchanging data in this way is not required for closed-loop control of the firing pulses or for generating them, and is available for the user for any purpose.  
**Remark:** For a 12-pulse series connection, it is not permissible that the parallel interface is used to transfer BICOs, i.e.  $p51801 = 0$  must be set. Failure to comply with this remark can result in sporadic current peaks.
- For additional details on how devices are connected in parallel, please refer to function diagrams 9350, 9352, and 9355.

## Controller

- For all of the topologies, a SINAMICS DCM is used as the master converter. The other converters are called slave converters.
- The control commands – switch-on/stop, operating enable, quick stop, etc. are fed to the master converter for all topologies.  
At the slave converters, terminals 12 and 13 must be permanently connected to terminal 9. If, in spite of this, a control command is entered at a slave converter, then it has the following consequences:

OFF1	Has no effect, as long as $n < n_{min}$ has not been reached, then the current is reduced to zero at the slave and the slave goes into operating state o7.0 or o7.1
OFF2	The current is reduced to zero at the slave, then the slave goes into operating state o10.1 or o10.2
OFF3	no effect, as long as $n < n_{min}$ has not been reached, then the current is reduced to zero at the slave and the slave goes into operating state o9.1 or 9.2
E-STOP	The current is reduced to zero at the slave, then the slave goes into operating state o10.3
Operating enable	The current is reduced to zero at the slave, then the slave goes into operating state o1.1 or o1.

As long as the master does not receive a switch-on command, the slaves stay in operating state o10.0 (wait for switch-on from the master).

If the master receives a switch-on command, then it automatically transfers this to the slaves. Then, all devices carry out their switch-on sequence, i.e. they attempt to go into operating state o0. However, the master waits in operating state o1.7 until all slaves have reached operating state o0 (exception: n+m operation for a 6-pulse parallel connection)

If a slave leaves operating state o0, then the master outputs fault message F60044 (exception: n+m operation for a 6-pulse parallel connection)

- The speed setpoint and the actual speed value should be entered at the master converter.
- The optimization runs should be started at the master converter. The slave converters must be connected and ready for operation at this point.

## Miscellaneous

---

### Note

For a slave converter the i<sup>2</sup>t monitoring of the motor should be deactivated (p50114 = 0), because for a non-symmetrical current, this would then respond at the slave.


---

## 10.28.1 6-pulse parallel connection

### Topology

#### Basic topology

The topology of a 6-pulse parallel connection, comprising a master converter and two slave converters is shown in the following diagram.

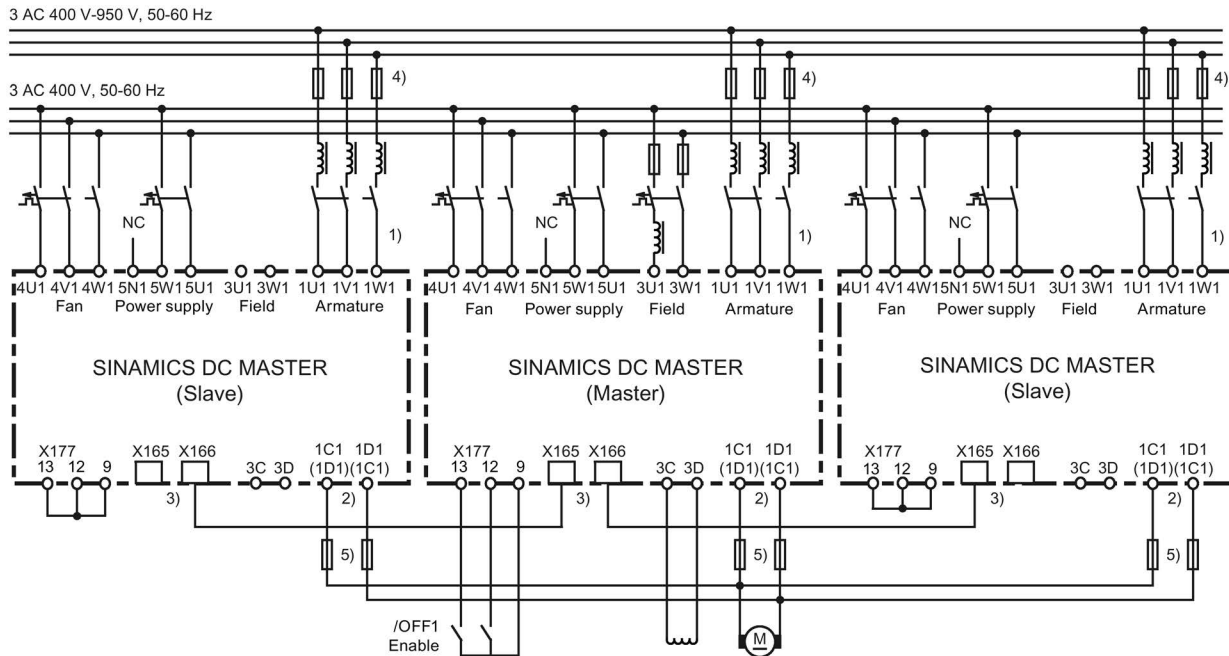

- 1) The same phase sequence is required between 1U1/1V1/1W1.
- 2) The same phase sequence is required between 1C1/1D1.
- 3) The devices are connected using (8-pin) shielded patch cables of type UTP CAT5 in acc. with ANSI/EIA/TIA 568, such as those that are used in PC network technology.  
A standard, 5 m cable can be obtained directly from Siemens (article number: 6RY1707-0AA08).  
(n-1) cables are required for connecting n devices in parallel.  
The bus terminator must be activated for each device positioned at the start or end of the bus (p51805 = 1).
- 4) These fuses may only be used with units up to 850 A.
- 5) Only with devices up to 850 A during 4Q operation.

Figure 10-75 Connecting the devices in parallel

- Up to six devices can be connected in parallel.
- When connecting several devices in parallel, the master device should be positioned centrally due to the signal runtimes. Maximum cable length of the parallel-connection interface cable between master and slave devices at each bus end: 15 m.
- Separate line reactors of the same type are required for each device for current splitting purposes. The difference in reactor tolerances determines the current splitting. For operation without derating (current reduction), a tolerance of 5% or less is recommended.

**Extended topology**

The topology of a 6-pulse parallel connection, comprising a master converter, one substitute master, two slave converters, as well as an independent converter is shown in the following diagram.

The converters SINAMICS DCM 1, DCM 2, DCM 3 and DCM 4 are operated in the n+m operating mode. The SINAMICS DCM 5 converter is, regarding its power unit, independent of the others. It only exchanges BICOs with them via the parallel interface.

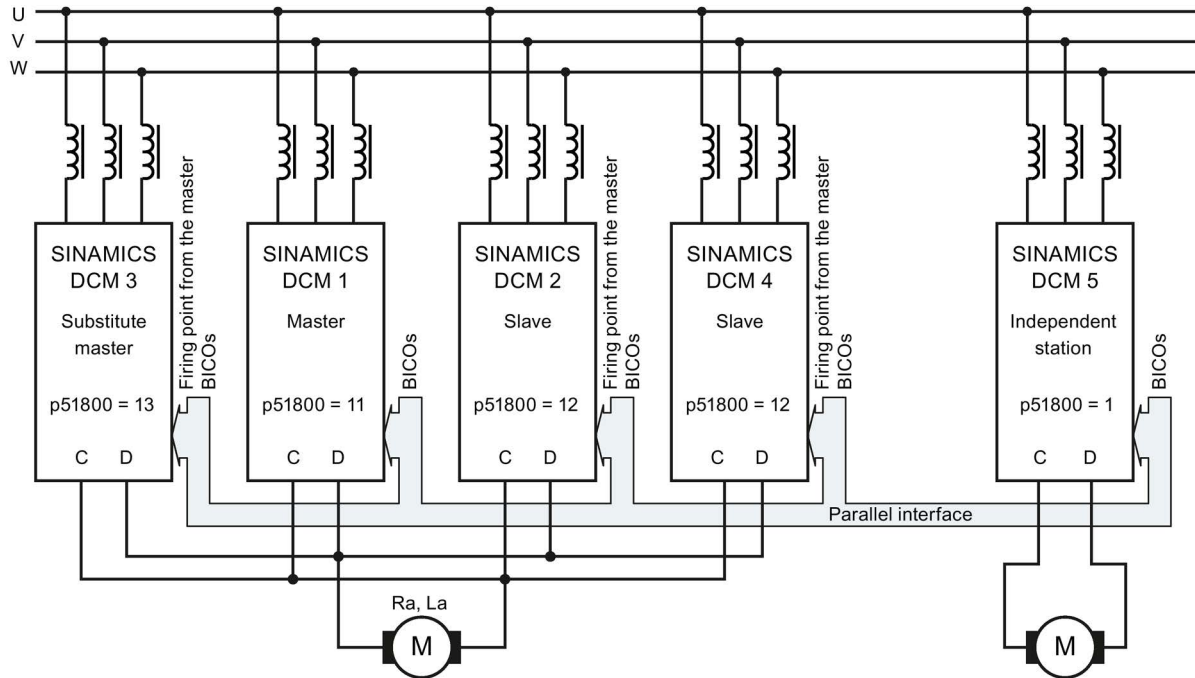


Figure 10-76 6-pulse parallel connection, extended topology

**Operating modes of the 6-pulse parallel connection**

There are two operating modes:

- Standard mode
- n+m operation (also known as redundancy mode or redundant operation)

**Standard mode**

A SINAMICS DCM is defined as the master. This device carries out the closed-loop speed control, the closed-loop armature-current control, the line synchronization tasks and determines the firing points. The firing points and the thyristor pair to be fired are transferred to the slave devices; all the slaves then fire the thyristor pairs at these points.

## n+m mode

n+m converters are connected in parallel. When up to m converters fail (e.g. a fuse ruptures in the power unit, a fault message occurs), operation is maintained without any interruption.

For n+m operation, a SINAMICS DCM is defined as master. Additional SINAMICS DCM are defined as substitute masters. As with the standard mode, the device defined as the master carries out the closed-loop speed control, the closed-loop armature current control, the line synchronization tasks and determines the firing points.

If a slave fails (due to a fuse blowing in the power unit or a fault being output, for example), operation continues with the remaining converters. The SINAMICS DCMs that are still in proper working order continue to operate uninterrupted.

If a master fails (due to a fuse blowing in the power unit or a fault being output, for example) a substitute master automatically becomes the master and the remaining devices continue to operate uninterrupted. If several SINAMICS DCMs are parameterized as substitute masters, the substitute master with the lowest bus address (p51806) that is ready for operation takes over.

Parameter r53311.0 indicates whether the SINAMICS DCM is currently operating as master (see FP9350).

During configuration, it is important to note that the power produced by n devices alone (rather than n+m devices) must also be sufficient for the application in question.

When operating the SINAMICS DCM together with a SIMOREG DC-MASTER Converter Commutation Protector (CCP), n+m operation must be deactivated.

### Optimization runs:

n+m operation must be deactivated before starting the optimization runs. P51803 must be set = 0 at the master and at the substitute master units.

Otherwise, during the optimization runs, monitoring functions can inadvertently respond (e.g. for p51803 = 2, fault message F60105 with fault value 1 can be output).

### Versions of the n+m operating mode:

#### 1. n+m mode only in the armature circuit

In this operating mode, when the master fails, only the armature firing pulses and the upstream closed-loop control (setpoint channel, speed control, armature-current control) are transferred to the substitute master; however, not the field firing pulses and the upstream control (EMF control, field current control).

The main application for the operating mode is to supply large inductances (e.g. field windings of synchronous generators) with the SINAMICS DCM armature converter.

#### Activation:

At the master and substitute master devices, set p51803=1.

## 2. n+m mode in the armature circuit and in the field circuit

In this operating mode, when the master fails the following values are forwarded to the substitute master:

- the armature firing pulses and the upstream control (setpoint channel, speed control, armature current control)
- the field firing pulses and the upstream control (EMF control, field current control)

### Activation:

On the master and substitute master devices, set p51803 = 2.

### Connection:

Outputs 3C and 3D (field DC voltage output) of the master and all substitute masters must be connected to the motor field winding in parallel.

### Remarks on n+n mode:

- When commissioning, after carrying out the optimization (by starting optimization runs, for example), all parameters set by the optimization runs must be transferred to all substitute masters according to Chapter "6-pulse parallel connection (Page 603)".
- Since the field supplies are connected in parallel, part of the overall motor-field current flows through the freewheeling arm of the respective field power units with disabled field firing pulses. For detecting the total motor field current (displayed at parameter r50035), in the actual master, the free-wheeling current detected by the "partner" device is therefore automatically added.  
Therefore, for this operating mode, there must be an intact parallel connection as well as an intact electronic power supply of the master and the substitute master – these are prerequisites.  
If this operating mode is also to be used after the electronic power supply of the master or the substitute master fails, then the total motor field actual current value must be externally sensed. The value must be supplied to the master and substitute master using p50612.
- Generally speaking, the master function is only transferred from the active master to the substitute master via telegram and an intact parallel interface. Even if the master's electronic power supply fails, the master still has enough time to transmit a telegram for the purpose of transferring the master function.
- As soon as the parallel connection is interrupted (by disconnecting the parallel connecting cable), it can no longer be guaranteed that the master/slave assignment will be correct. The electronic power supply must be switched off and back on again at all devices!

---

### Note

The control commands – switch-on/stop, operating enable, quick stop, etc. – must also be entered at all of the substitute master devices.

The speed setpoint and the actual speed value must be entered at all substitute master devices.

If the thermal overload protection of the DC motor (I<sup>2</sup>t motor monitoring) is used, as explained in Chapter "Thermal overload protection for the DC motor (I<sup>2</sup>t monitoring of the motor) (Page 582)", the following should be observed:

After a device fails, the calculated motor temperature of this device deviates from the devices still operational. In this particular case, thermal overload protection as described in Chapter "Thermal overload protection for the DC motor (I<sup>2</sup>t monitoring of the motor) (Page 582)" no longer applies.

---



## Parameter assignment

Table 10- 70 6-pulse parallel connection, standard mode

Parameter		Master	Slave or parallel units
p51799	Operating principle	0	The same as at the master
p51800	Position in the topology	11 (Master)	12 (Slave)
p51801	Number of send data	Any	Any
p51802	Minimum number of nodes	Number of SINAMICS DCM units in this topology	Number of SINAMICS DCM units in this topology
p51803	n+m mode	0	0
p51804[...]	Transmit data	Any	Any
p51805	Bus terminator	0 or 1 <sup>1)</sup>	0 or 1 <sup>1)</sup>
p51806	Station address	Unique address	Unique address
p51807	Telegram failure time	0.1 s	0.1 s
p50082	Field operating mode	≠ 0	0 (no field)
p50076[...]	Reduction in rated unit DC current	-	The same as at the master
p50078[...]	Rated value for supply voltage	-	The same as at the master
p50100	Rated motor current	Rated motor current/number of SINAMICS DCM	The same as at the master
p50110	Armature resistance Ra <sup>2)</sup>	Actual armature resistance × number of SINAMICS DCM	The same as at the master
p50111	Armature inductance La <sup>2)</sup>	Actual armature inductance × number of SINAMICS DCM	The same as at the master
p50114	Motor thermal time constant	Motor thermal time constant in s	The same as at the master
p50140	Motor I <sup>2</sup> t monitoring, response when starting	Application-specific	The same as at the master
p51591	La reduction factor <sup>2)</sup>	-	The same as at the master
p50357	Threshold for interrupted tachometer	Application-specific	100% (tachometer interruption monitoring not active)

1) = 1 at the two outermost units (= at the physical ends of the bus line)  
= 0 on all of the other units

2) The optimization run for current controller and precontrol (p50051 = 23 or 25) sets the correct values for these parameters.

Table 10- 71 6-pulse parallel connection n+m operation

Parameter		Master	Substitute master	Slave
p51799	Operating principle	0	The same as at the master	The same as at the master
p51800	Position in the topology	11 (Master)	13 (Substitute master)	12 (Slave)
p51801	Number of send data	Any	Any	Any
p51802	Minimum number of nodes	n	The same as at the master	The same as at the master
p51812	Total number of nodes	n+m	The same as at the master	The same as at the master
p51803	n+m mode	1 (only armature) 2 (armature + field)	The same as at the master	0
p51804[.]	Transmit data	Any	Any	Any
p51805	Bus terminator	0 or 1 <sup>1)</sup>	0 or 1 <sup>1)</sup>	0 or 1 <sup>1)</sup>
p51806	Station address	Unique address	Unique address	Unique address
p51807	Telegram failure time	0.1 s	0.1 s	0.1 s
p50082	Field operating mode	≠ 0	0 (if only armature) ≠ 0 (if armature + field)	0 (no field)
p50076[.]	Reduction in rated unit DC current	-	The same as at the master	The same as at the master
p50078[.]	Rated value for supply voltage	-	The same as at the master	The same as at the master
p50100	Rated motor current	Rated motor current/number of SINAMICS DCM	The same as at the master	The same as at the master
p50110	Armature resistance Ra <sup>2)</sup>	Actual armature resistance × number of SINAMICS DCM	The same as at the master	The same as at the master
p50111	Armature inductance La <sup>2)</sup>	Actual armature inductance × number of SINAMICS DCM	The same as at the master	The same as at the master
p50114	Motor thermal time constant	Motor thermal time constant in s	The same as at the master	The same as at the master
p50140	Motor I <sup>2</sup> t monitoring, response when starting	Application-specific	The same as at the master	The same as at the master
p50115 to p50139	Field characteristic	-	The same as at the master (only if n+ m operation for armature + field)	The same as at the master
p51591	La reduction factor <sup>2)</sup>	-	The same as at the master	The same as at the master
p50357	Threshold for interrupted tachometer	Application-specific	The same as at the master	100% (tachometer interruption monitoring not active)

1) = 1 at the two outermost units (= at the physical ends of the bus line)  
= 0 on all of the other units

2) The optimization run for current controller and precontrol (p50051 = 23 or 25) sets the correct values for these parameters.

## 10.28.2 12-pulse parallel connection

### Note

#### 12-pulse applications

The circuit diagrams in this chapter are block diagrams.

You can find detailed information on interconnecting, dimensioning and parameterizing in the application document "12-pulse applications".

Support is also available through our Technical Support organization (for contact address, see "Preface (Page 3)").

### Topology

The following diagram shows the topology of a 12-pulse parallel connection.

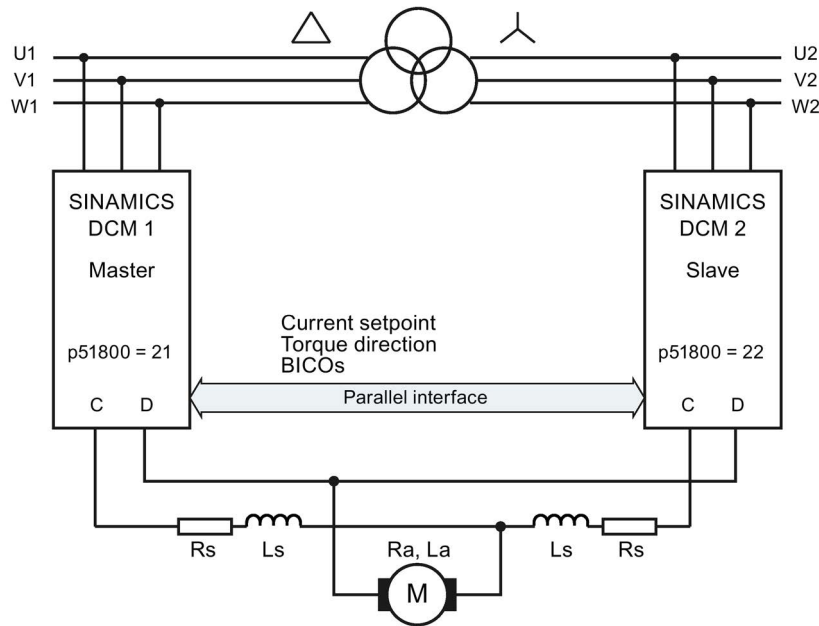


Figure 10-77 12-pulse parallel connection (1), block diagram

The following diagram shows the topology of a 12-pulse parallel connection, where an additional 6-pulse converter is connected in parallel to each of the two 12-pulse converters connected in parallel.

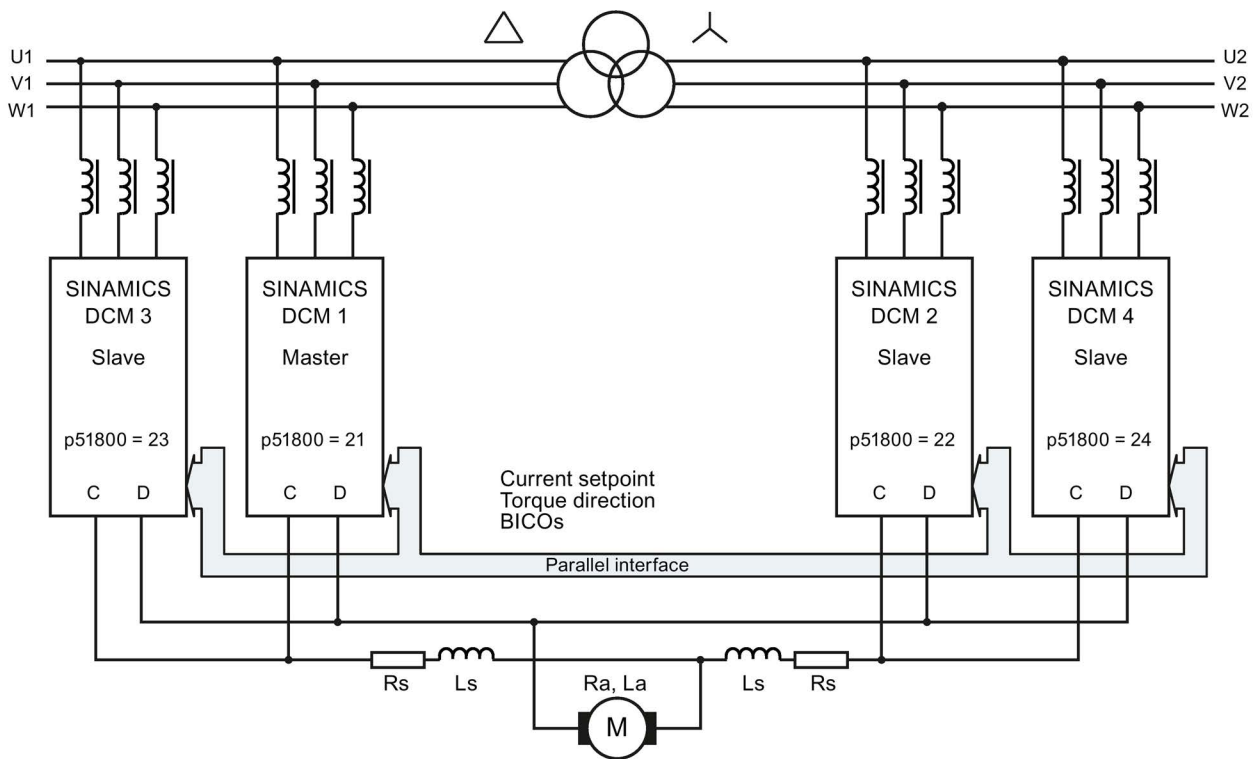


Figure 10-78 12-pulse parallel connection (2), block diagram

**Note**

If additional converters are connected in parallel to the master converter, then exactly the same number of converters must also be connected in parallel with the slave converter.

### 10.28.3 6-pulse series connection

#### Topology

The following diagram shows the topology of a 6-pulse series connection of two SINAMICS DCM.

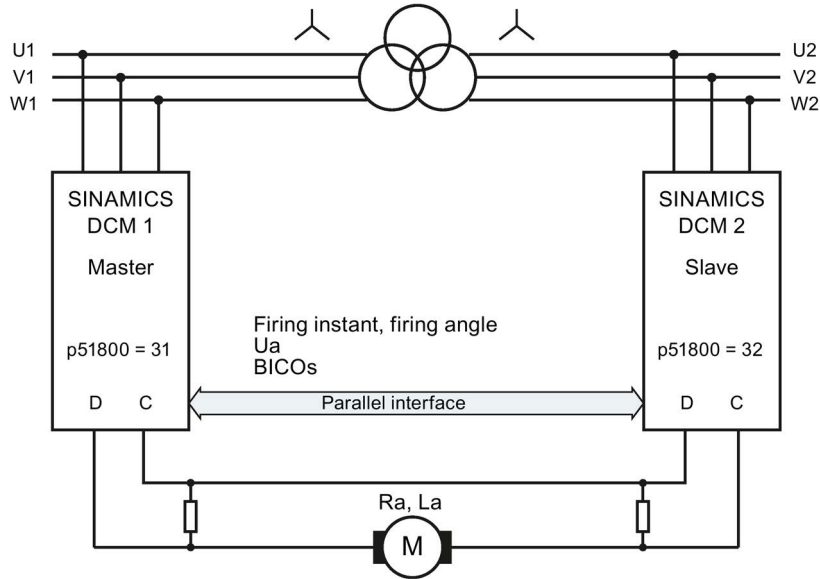


Figure 10-79 6-pulse series connection (1)

The following diagram shows the topology of a 6-pulse series connection, where additional converters are connected in parallel to each of the two 6-pulse converters connected in series.

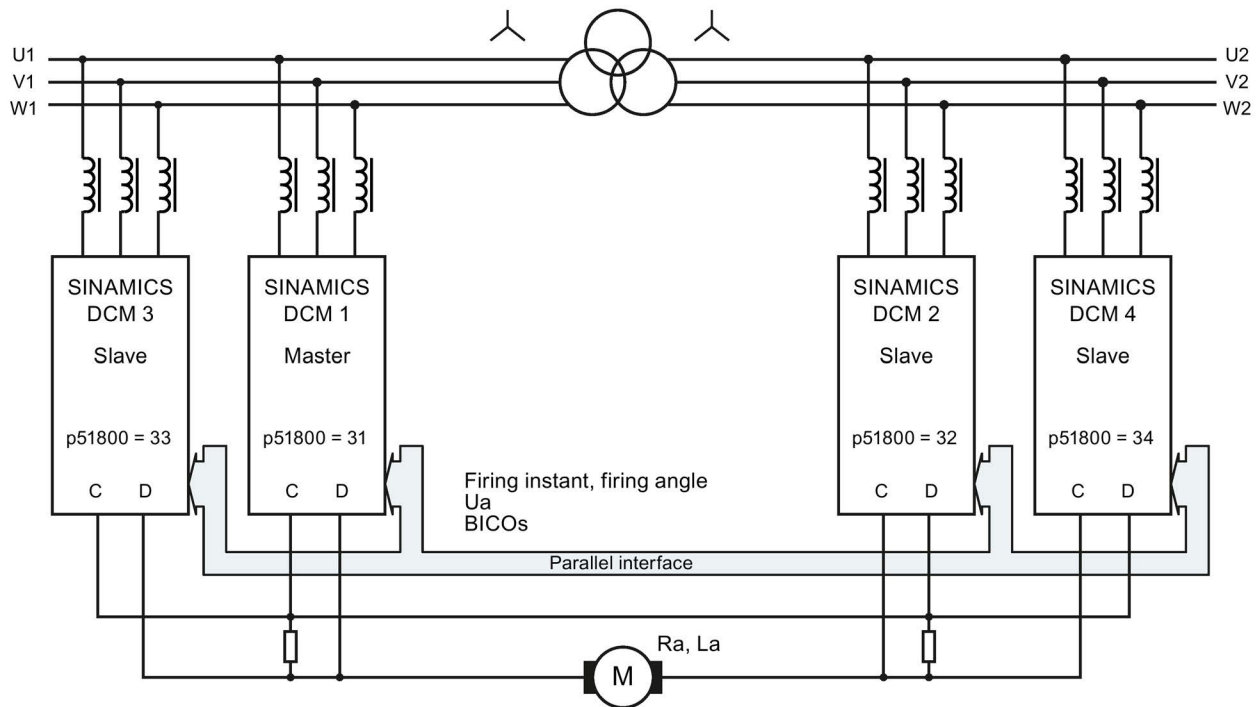


Figure 10-80 6-pulse series connection (2)

The instructions for dimensioning the balancing resistors can be found in an FAQ (for the link, see the Preface).

## Operating modes

There are 2 operating modes:

- Operation with the same firing pulses (p51799 = 0 or p51799 = 31):**  
 Both partial converters are fired at precisely the same point. The master calculates the firing point and this is transferred to the slave via the parallel interface. Synchronization to the line supply is exclusively performed by the master. The slave must be connected to the line supply with the same phase sequence as the master.
- Operation with sequence control (p51799 = 32):**  
 Both partial converters synchronize to the line supply and generate their own firing points. The firing angle for the master and the firing angle for the slave are calculated by the master and the firing angle and the torque direction for the slave are transferred to the slave via the parallel interface. The firing angle for the master and slave are generated so that the reactive power load of the line supply is as low as possible. This is the case if one of the two partial converters is at a control limit and the other carries-out the closed-loop control. This type of closed-loop control is only possible for continuous current. Operation with the same firing points is automatically selected in the discontinuous (pulsating) current range.

---

### Note

The phase sequence at the master and the slave must be the same.

---

## Parameter assignment

The following parameters should be specifically set for operation with this converter topology:

Table 10- 72 Parameter assignment, 6-pulse series connection

Parameter		Master	Slave or parallel units
p51799	Operating principle	0, 31 or 32	The same as at the master
p51800	Position in the topology	31 (Master)	32 (slave) 33 (parallel to the master) 34 (parallel to the slave)
p51801	Number of send data	Any	Any
p51802	Minimum number of nodes	Number of SINAMICS DCM units in this topology	Number of SINAMICS DCM units in this topology
p51803	n+m mode	0	0
p51804[...]	Transmit data	Any	Any
p51805	Bus terminator	0 or 1 <sup>1)</sup>	0 or 1 <sup>1)</sup>
p51806	Station address	Unique address	Unique address
p51807	Telegram failure time	0.1 s	0.1 s
p50082	Field operating mode	≠ 0	0 (no field)
p50076[...]	Reduction in rated unit DC current	-	The same as at the master
p50078[...]	Rated value for supply voltage	-	The same as at the master
p50100	Rated motor current	-	The same as at the master
p50110	Armature resistance Ra <sup>2)</sup>	-	The same as at the master
p50111	Armature inductance La <sup>2)</sup>	-	The same as at the master
p50114	Motor thermal time constant	Motor thermal time constant in s	The same as at the master
p50140	Motor I <sup>2</sup> t monitoring, response when starting	Application-specific	The same as at the master
p51591	La reduction factor <sup>2)</sup>	-	The same as at the master

1) = 1 at the two outermost units (= at the physical ends of the bus line)  
= 0 on all of the other units

2) The optimization run for current controller and precontrol (p50051 = 23 or 25) sets the correct values for these parameters.

### 10.28.4 6-pulse series connection: controlled converter + uncontrolled converter

#### Topology

The following diagram shows the topology of a 6-pulse series connection of a SINAMICS DCM 2-quadrant unit and a diode rectifier (thyristor bridge B6 + diode rectifier).

#### Note

The AC input voltage of the controlled converter should be between 10% and 15% higher than that of the uncontrolled converter, so that the current can be reliably reduced down to 0.

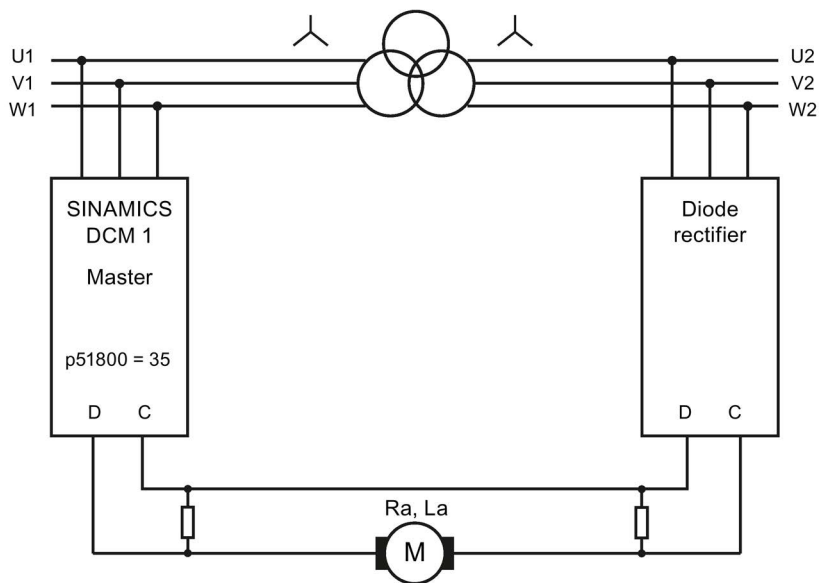


Figure 10-81 6-pulse series connection: controlled + uncontrolled rectifier

The instructions for dimensioning the balancing resistors can be found in an FAQ (for the link, see the Preface).



## Parameter assignment

The following parameters should be specifically set for operation with this converter topology:

Table 10- 73 Parameter assignment, 6-pulse series connection

Parameter		Master	Units connected in parallel with the master
p51798	Voltage at an uncontrolled rectifier	Actual voltage as a percentage of the voltage at the master (standard: 85%)	The same as at the master
p51799	Operating principle	0	0
p51800	Position in the topology	35 (Master for diode rectifier)	33
p51802	Minimum number of nodes	Number of SINAMICS DCM units in this topology	Number of SINAMICS DCM units in this topology
p51807	Telegram failure time	0.0 s 0.1 s if units connected in parallel are available	0.1 s
p50082	Field operating mode	≠ 0	0 (no field)
p50076[...]	Reduction in rated unit DC current	-	The same as at the master
p50078[...]	Rated value for supply voltage	-	The same as at the master
p50100	Rated motor current	Rated motor current/number of SINAMICS DCM	The same as at the master
p50110	Armature resistance Ra <sup>2)</sup>	Actual armature resistance × number of SINAMICS DCM	The same as at the master
p50111	Armature inductance La <sup>2)</sup>	Actual armature inductance × number of SINAMICS DCM	The same as at the master
p51591	La reduction factor <sup>2)</sup>	-	The same as at the master

<sup>2)</sup> The optimization run for current controller and precontrol (p50051 = 23 or 25) sets the correct values for these parameters.

### 10.28.5 12-pulse series connection

**Note**

**12-pulse applications**

The circuit diagrams in this chapter are block diagrams.

You can find detailed information on interconnecting, dimensioning and parameterizing in the application document "12-pulse applications".

Support is also available through our Technical Support organization (for contact address, see "Preface (Page 3)").

**Topology**

The following diagram shows the topology of a 12-pulse series connection of two SINAMICS DCM.

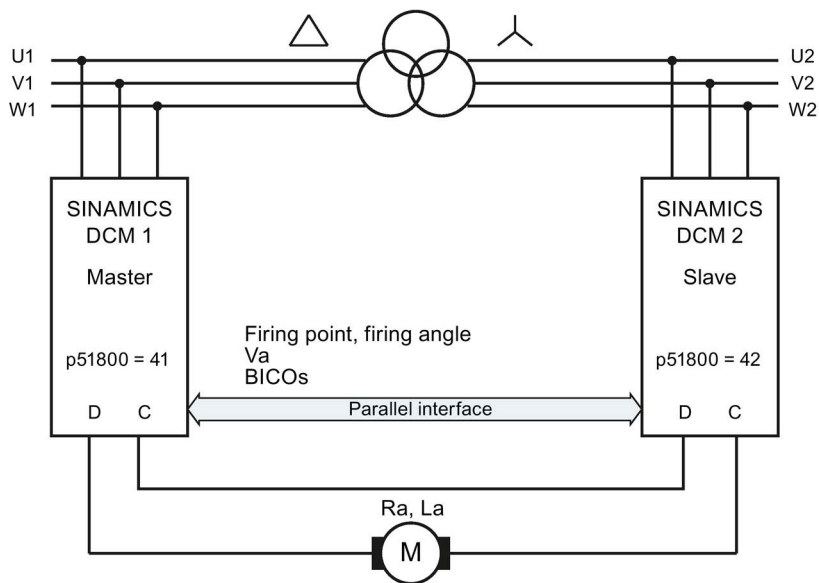


Figure 10-82 12-pulse series connection (1), block diagram

The following diagram shows the topology of a 12-pulse series connection, where additional converters are connected in parallel to each of the two 12-pulse converters connected in series.

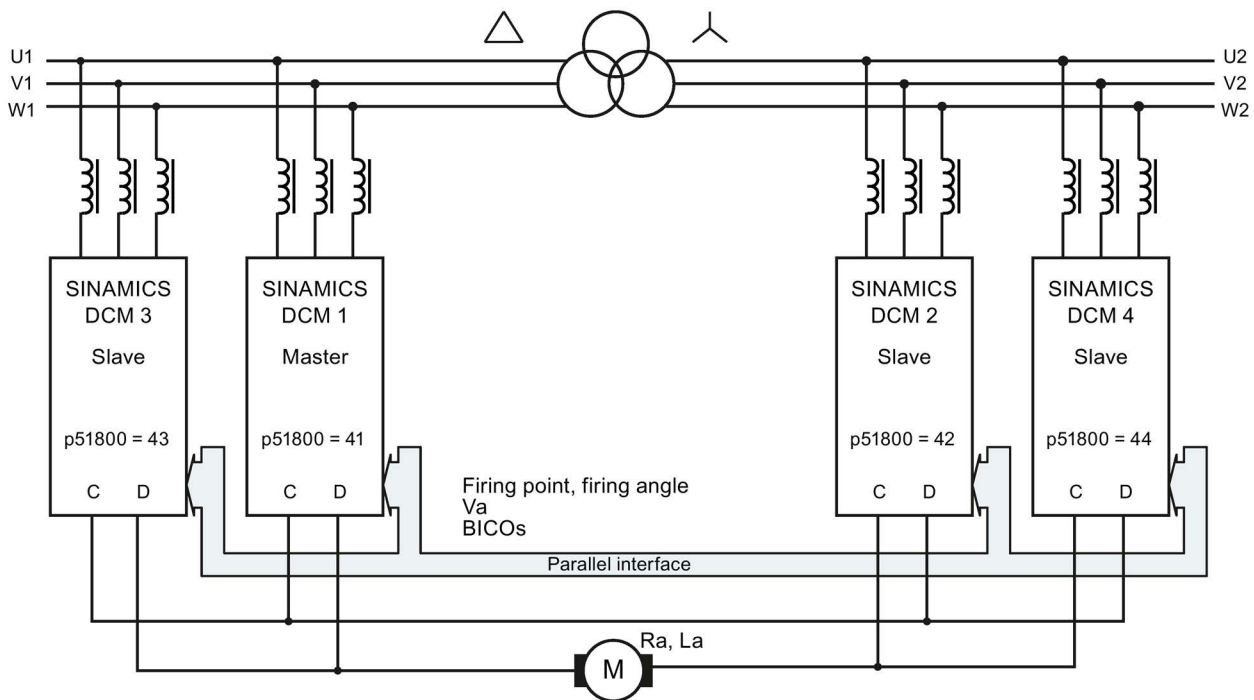


Figure 10-83 12-pulse series connection (2), block diagram

## Operating modes

There are two operating modes:

- **Operation with the same firing times (p51799 = 41):**  
 Both partial converters are fired at precisely the same instant. The master calculates the firing point and this is transferred to the slave via the parallel interface. Synchronization to the line supply is exclusively performed by the master. The slave must be connected to the line supply with the same phase sequence as the master.
- **Operation with sequence control (p51799 = 42):**  
 Both partial converters synchronize to the line supply and generate their own firing points. The firing angle for the master and the firing angle for the slave are calculated by the master and the firing angle and the torque direction for the slave are transferred to the slave via the parallel interface. The firing angle for the master and slave are generated so that the reactive power load of the line supply is as low as possible. This is the case if one of the two partial converters is at a control limit and the other carries-out the closed-loop control. This type of closed-loop control is only possible for continuous current. Operation with the same firing points is automatically selected in the discontinuous (pulsating) current range.

## Remark

The current ripple is significantly higher when the two partial converters operate with sequence control than when they operate with the same firing times. In this case, the current ripple approximately corresponds to that for 6-pulse operation. Especially in older motors, under certain circumstances this ripple can cause problems (for example, during commutation).

Therefore, a conscious decision must be made:

- Low ripple, but no reduction of the reactive power:  
→ Operation with the same firing times (p51799 = 41)
- Low reactive power, but no reduction of the ripple:  
→ Operation with sequence control (p51799 = 42)

---

### Note

#### Connecting the slave converter to the 12-pulse transformer

The power unit of the slave converter must be connected to the 12-pulse transformer so that its phases lag the phases of the line supply at the master by 30°. The phase sequence must be the same.

---

## 10.28.6 12-pulse series connection: controlled converter + uncontrolled converter

---

### Note

#### 12-pulse applications

The circuit diagrams in this chapter are block diagrams.

You can find detailed information on interconnecting, dimensioning and parameterizing in the application document "12-pulse applications".

Support is also available through our Technical Support organization (for contact address, see "Preface (Page 3)").

---

## Topology

The following diagram shows the topology of a 12-pulse series connection of a SINAMICS DCM 2-quadrant unit and a diode rectifier (thyristor bridge B6 + diode rectifier).

---

### Note

The AC input voltage of the controlled converter should be between 10% and 15% higher than that of the uncontrolled converter, so that the current can be reliably reduced down to 0.

---

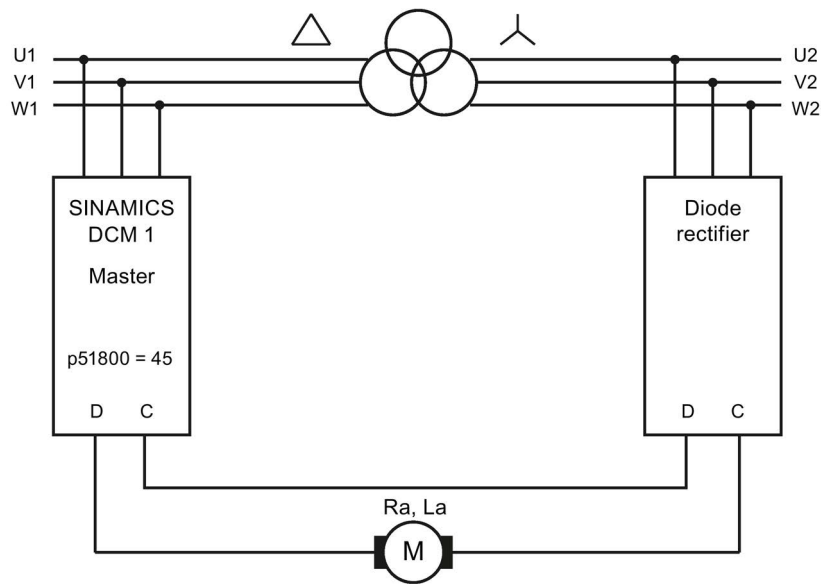


Figure 10-84 12-pulse series connection: Controlled + uncontrolled rectifier, block diagram

### 10.28.7 Switchover of the power unit topology - option S50

Ordering information for option S50, see Chapter "Type spectrum, ordering information (Page 25)"

---

**Note**

SINAMICS DCM can only be retrofitted with option S50 in the manufacturers factory.

---

**Note**

You can find detailed information on interconnecting, dimensioning and parameterizing in the application document "12-pulse applications". Support is also available through our Technical Support organization (for contact address, see "Preface (Page 3)").

---

In certain applications, it is necessary to switch between a 12-pulse parallel connection and a 12-pulse series connection during operation using a control command.

External contactors must be used to switch over the power unit topology. Option S50 provides the required firmware functionality.

#### Requirements for using this functionality

- All SINAMICS DCMs involved must be equipped with option S50.
- It is not permissible that the "n+m" mode is used.
- The function of the "parallel switching master" must remain on the same SINAMICS DCM in both power unit topologies.

## 10.29 Field reversal

see also the SINAMICS DCM List Manual, function diagram 6920

When using a two-quadrant unit (with only one armature current flow direction) by reversing the current in the excitation winding of the DC motor (field reversal) operation in additional quadrants of the speed-torque characteristic is possible (direction of rotation reversal and braking).

Two contactors are required in the field circuit to reverse the field voltage.

The functions "Direction of rotation reversal using field reversal" and "Braking using field reversal" control connector outputs r53195[0] (close field contactor 1) and r53195[1] (close field contactor 2), which are then used to control the two field contactors.

A protection circuit is required in the field circuit.

r53195[0]	= 0	No contactor control
	= 1	Control for a contactor to switch-in the positive field direction
r53195[1]	= 0	No contactor control
	= 1	Control for a contactor to switch-in the negative field direction

### 10.29.1 Direction of rotation reversal using field reversal

The function "Direction of rotation reversal using field reversal" is controlled using the signal source (binector) selected at binector input p50580 and this has a switch-type function. It defines the field direction and therefore also the direction of rotation for a positive speed setpoint.

Binector = 0	A positive field direction is selected. "Close field contactor 1" (r53195.0) = 1, "Close field contactor 2" (r53195.1) = 0
Binector = 1	A negative field direction is selected. "Close field contactor 1" (r53195.0) = 0, "Close field contactor 2" (r53195.1) = 1

Changing the logical level of the binector controlling the function "Direction of rotation reversal using field reversal " brakes the drive and accelerates it in the opposite direction of rotation.

Field reversal is completely executed. Level changes at the connector input have no effect while the field is being reversed.

---

#### Note

Only positive speed setpoints make sense.

---

### Control sequence when specifying "Direction of rotation using field reversal"

1. Drive rotates in direction of rotation 1 or 2 (or is at a standstill)
2. Specify "Direction of rotation reversal using field reversal" by changing the logical state of the binector selected using p50580
3. Field reversal is executed  
Precondition: No braking was initiated using the button function "Braking using field reversal"
  - Wait until armature current  $I_A = 0$  , then armature pulse inhibit (the drive then remains in operating state  $\geq o1.4$ )
  - Inhibit field firing pulses ( $r52268=0$  also initiates this)
  - Wait until  $I_{field}$  ( $r52265$ ) <  $I_{field\ min}$  ( $p50394$ )
  - Wait time according to p50092[00] (0.0 to 10.0 s, factory setting 3.0 s)
  - Open current field contactor ( $r53195.0 = 0$  or  $r53195.1 = 0$ )
  - Wait time according to p50092[01] (0.0 to 10.0 s, factory setting 0.2 s)
  - Control new field contactor ( $r53195.0 = 1$  or  $r53195.1 = 1$ )
  - Reverse the speed actual value (with the exception, for p50083 = 3 ... EMF as speed actual value)
  - Wait time according to p50092[02] (0.0 to 10.0 s, factory setting 0.1 s)
  - Enable field firing pulses
  - Wait until  $I_{field}$  ( $r52265$ ) >  $I_{field\ set}$  ( $r52268$ )\* $p50398$
  - Wait time according to p50092[03] (0.0 to 10.0 s, factory setting 3.0 s)
  - Enable armature firing pulses (operating state o1.4 can be exited)
4. Drive brakes and then rotates in direction of rotation 1 or 2 (or is at a standstill)

---

#### Note

In the case of an internal speed actual value reversal as a result of field reversal, p50083 is supplied with inverted signal values (exception: p50083 = 3, see the SINAMICS DCM List Manual, function diagram 6810).

When using the ramp-function generator it is recommended to parameterize p50228 = 0 (no speed controller setpoint filtering). If this is not done, then initial braking can occur at the current limit as a result of the speed actual value reversal and setting the ramp-function generator output to the (reversed) speed actual value or to the value according to p50639 in operating state o1.4.

---

## 10.29.2 Braking using field reversal

The function "Braking using field reversal" is controlled using the signal source (binector) set at binector input p50581 and this has a button-type function.

Binector = 1 (for  $\geq 30$  ms) in operating state  $\leq 05$  (line contactor closed) causes the drive to brake to  $n < n_{\min}$ .

After this, the original field direction is selected.

The motor can accelerate in the original direction of rotation after the braking command has been withdrawn (binector = 0) and acknowledged using "Stop" and "Switch-on".

### Control sequence when specifying "Braking using field reversal"

1. Drive rotates with direction of rotation 1 or 2
2. Specify "Braking using field reversal" using log. 1 (for  $\geq 30$  ms) selected at binector using p50581
3. Field reversal is executed.  
 Preconditions: Line contactor is closed (for operating state  $\leq 05$ ) and the drive is not already braking.  
 Braking is identified by the negative internal actual speed (whereby, this is obtained in the negative field direction by reversing the real actual speed):
  - Wait until armature current  $I_A = 0$ , then armature pulse inhibit (the drive then remains in operating state  $\geq 01.4$ )
  - Inhibit field firing pulses ( $r52268 = 0$  also initiates this)
  - Wait until  $I_{\text{field}} (r52265) < I_{\text{field min}} (p50394)$
  - Wait time according to p50092[00] (0.0 to 10.0 s, factory setting 3.0 s)
  - Open current field contactor ( $r53195.0 = 0$  or  $r53195.1 = 0$ )
  - Wait time according to p50092[01] (0.0 to 10.0 s, factory setting 0.2 s)
  - Control new field contactor ( $r53195.1 = 1$  or  $r53195.1 = 1$ )
  - Reverse the speed actual value (with the exception, for p50083 = 3 ... EMF as speed actual value)
  - Wait time according to p50092[02] (0.0 to 10.0 s, factory setting 0.1 s)
  - Enable field firing pulses
  - Wait until  $I_{\text{field}} (r52265) > I_{\text{field set}} (r52268) \times p50398$
  - Wait time according to p50092[03] (0.0 to 10.0 s, factory setting 3.0 s)
  - Enable armature firing pulses (operating state  $01.4$  can be exited)
4. Sequence when braking the drive:
  - $n_{\text{set}} = 0$  internally entered at the ramp-function generator input, the drive brakes
  - Wait until  $n < n_{\min} (p50370)$
  - Wait until armature current  $I_A = 0$ , then armature pulse inhibit (drive goes into operating state  $07.2$ )
  - Wait until the braking command has been withdrawn by logical 0, on the binector selected with p50581  
 (as long as level = 1 is present, the drive is kept in operating state  $07.2$ )



5. Sequence to change over to the original field direction

Precondition: The present field direction does not match the field direction requested using the function "Direction of rotation reversal using field reversal"

- Wait until armature current  $I_A = 0$  , then armature pulse inhibit (the drive then remains in operating state  $\geq o1.4$ )
- Inhibit field firing pulses ( $r52268=0$  also initiates this)
- Wait until  $I_{field}$  ( $r52265$ )  $< I_{field\ min}$  ( $p50394$ )
- Wait time according to  $p50092[00]$  (0.0 to 10.0 s, factory setting 3.0 s)
- Open current field contactor ( $r53195.0 = 0$  or  $r53195.1 = 0$ )
- Wait time according to  $p50092[01]$  (0.0 to 10.0 s, factory setting 0.2 s)
- Control new field contactor ( $r53195.0 = 1$  or  $r53195.1 = 1$ )
- Reverse the speed actual value (with the exception, for  $p50083 = 3$  ... EMF as speed actual value)
- Wait time according to  $p50092[02]$  (0.0 to 10.0 s, factory setting 0.1 s)
- Enable field firing pulses
- Wait until  $I_{field}$  ( $r52265$ )  $> I_{field\ set}$  ( $r52268 \times p50398$ )
- Wait time according to  $p50092[04]$  (0.0 to 10.0 s, factory setting 3.0 s)
- Armature firing pulses are again possible

6. The drive is in operating state o7.2

Acceleration is possible in the original direction of rotation when acknowledging using an external "Stop" and "Switch-on"

Please also read the note at the end of the chapter "Direction of rotation reversal using field reversal".

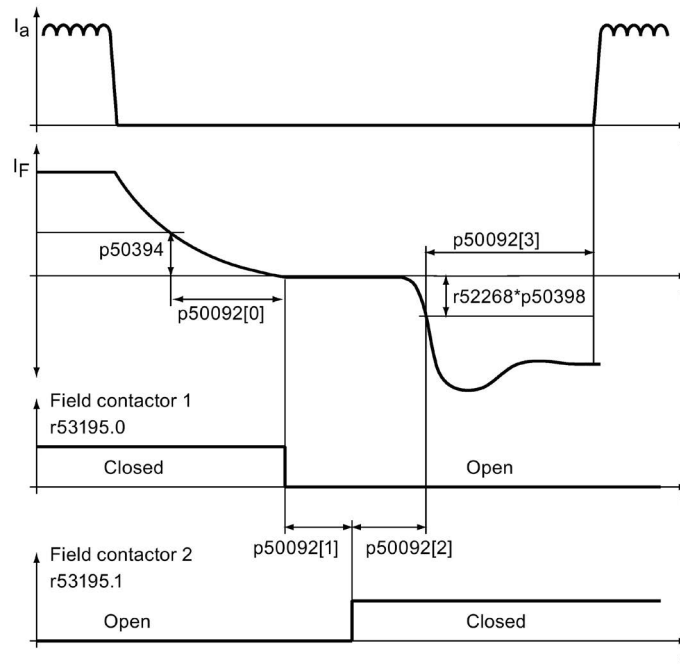


Figure 10-85 Wait times for field reversal (parameter p50092)

## 10.30 Serial interface with peer-to-peer protocol

### General information

The peer-to-peer interface enables BICO interconnections across several SINAMICS DCMs, as well as allowing the peer-to-peer interface to establish signal connections between converters in the SINAMICS DC MASTER range (order number = 6RA80...) and converters in other ranges, such as SIMOREG DC-MASTER (order number = 6RA70...) and SIMOREG K (order number = 6RA24...).

### Properties

A "peer-to-peer connection" refers to "a connection between partners with equal status". Unlike the classic master-slave bus systems (such as PROFIBUS or USS), peer-to-peer connections enable the same converter to act as both a master (setpoint source) and a slave (setpoint recipient).

Signals can be transferred via the peer-to-peer connection from one converter to another in fully digital format.

- **Velocity setpoints** for creating a setpoint cascade, e.g. in paper making machines, film manufacturing machines, and wire drawing machines, as well as fiber stretching plants
- **Torque setpoints** for load distribution control systems on drives that are coupled either mechanically or by means of the material, e.g. horizontal-shaft drives on a printing machine or S-roll drives
- **Acceleration setpoints (dv/dt)** for acceleration precontrol in multi-motor drives
- **Control commands**

The peer-to-peer interface uses the RS485 interface at connector X177 (terminals 37, 38, 39, and 40).

### Function diagrams

Function diagram FP9300 shows the settings and BICO interconnection options for the "peer-to-peer connection".

### Diagnostics

Parameter r50799 contains information about the distribution of error-free telegrams and telegrams with errors over time, as well as the type of any communications errors that occur.

## Topologies

The peer-to-peer interface supports two topologies:

- Point-to-point connection (see the series connection example further down)
  - 4-wire connection between two converters
  - Data transmission in both directions
- Bus connection (see the bus connection example further down)
  - 2-wire connection between multiple converters
  - Data transmission in one direction only
  - The active sender is selected by means of the "Send enable" signal selected using p50817. The send enable may only be at the "High" level for one converter in each case. Converters whose send enable is at the "Low" level switch their sender to high resistance.

## Parameterization


Table 10- 74 Parameterizing the peer-to-peer interface

Function	Parameter
Peer-to-peer protocol selection	p50790 = 5
PZD number	p50791 = 1 to 5 words
Baud rate	p50793 = 1 to 13, corresponding to between 300 and 187,500 baud
Bus terminator	p50795 = 0: Bus terminator OFF p50795 = 1: Bus terminator ON
Error statistics	r50799[1]: Displays receive errors on the peer-to-peer interface

### 10.30.1 Examples of peer-to-peer connections

#### Series connection

Each drive receives its own individual setpoint from the previous drive (classic setpoint cascade).

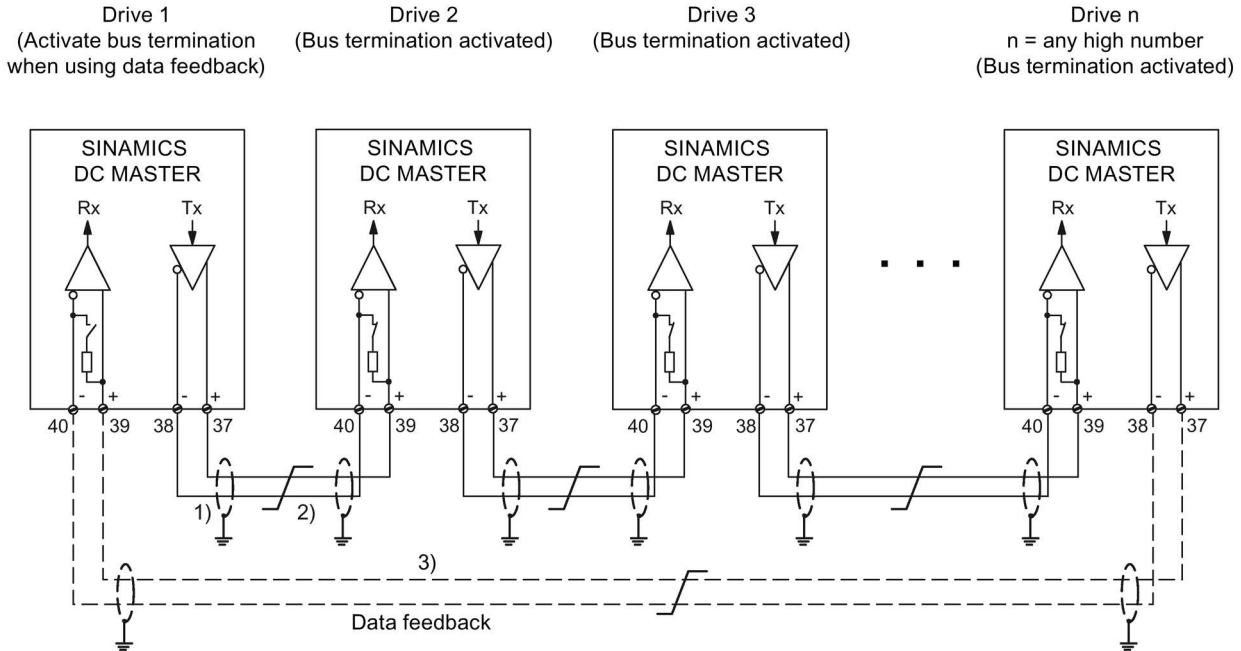


- 1) The shields for the interface cables must be connected directly on the devices (using a clamp, for example) to device or cabinet ground, with a low level of impedance.
- 2) Twisted cable, e.g. LIYCY 2×0.5 mm<sup>2</sup>; with longer cables, an equipotential bonding cable should be used to ensure that the difference in ground potentials between the link partners remains below 7 V.
- 3) Optional data feedback, which drive 1 can use to monitor the functionality of the entire peer chain.

Figure 10-86 "Series connection" peer connection type

### Parallel connection

Up to 31 drives receive the same setpoints from drive 1.

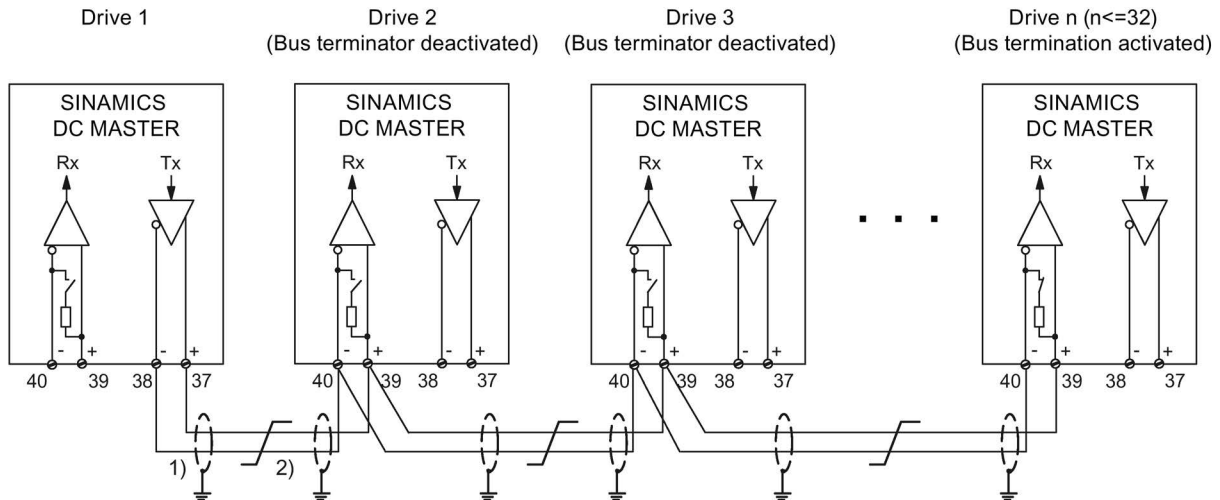


- 1) The shields for the interface cables must be connected directly on the devices (using a clamp, for example) to device or cabinet ground, with a low level of impedance.
- 2) Twisted cable, e.g. LIYCY 2×0.5 mm<sup>2</sup>; with longer cables, an equipotential bonding cable should be used to ensure that the difference in ground potentials between the link partners remains below 7 V.

Figure 10-87 "Parallel connection" peer connection type

10.31 Expanding the SINAMICS DCM to include a second CUD

Bus connection

Up to 31 drives receive the same setpoints from a drive. The drive that sends the setpoints must be selected by setting "Enable send" to 1. For all other drives, "Enable send" must be set to 0.

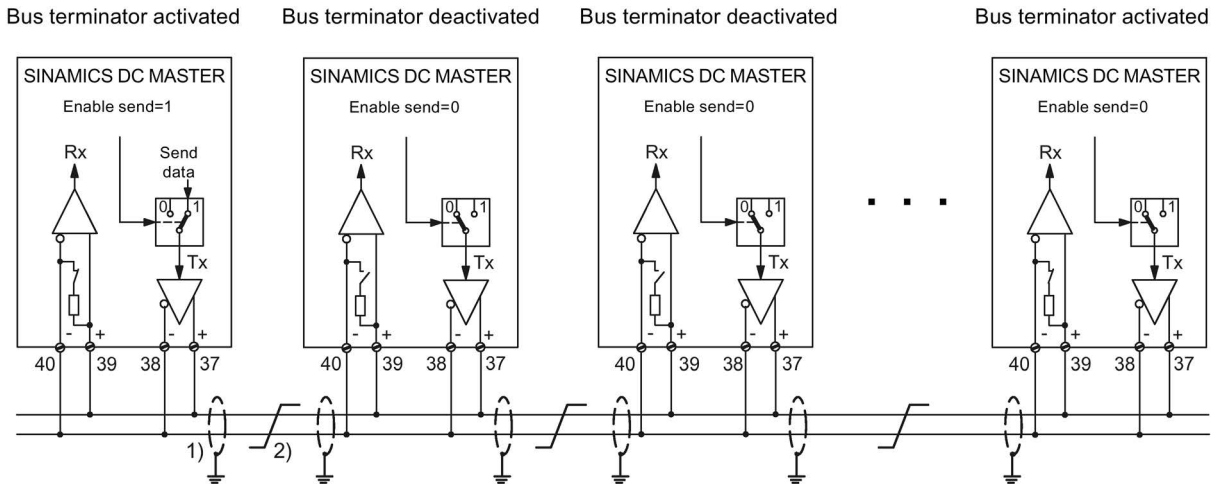

- 1) The shields for the interface cables must be connected directly on the devices (using a clamp, for example) to device or cabinet ground, with a low level of impedance.
- 2) Twisted cable, e.g. LIYCY 2×0.5 mm<sup>2</sup>; with longer cables, an equipotential bonding cable should be used to ensure that the difference in ground potentials between the link partners remains below 7 V.

Figure 10-88 "Bus connection" peer connection type

## 10.31 Expanding the SINAMICS DCM to include a second CUD

General information

As an option, the SINAMICS DC MASTER can be equipped with a second CUD by inserting it in the right-hand slot. This option is only available in conjunction with option G00 (Advanced CUD in left-hand slot). See also Chapter "Ordering information for options and accessories".

For the installation of the second CUD, see Chapter "Installing a second CUD (Page 89)" and "Replacing the CUD (Page 700)".

**NOTICE**

**Installation or removal only in a no-voltage state.**

Installing or removing a module is only permitted when the SINAMICS DC MASTER is in the voltage-free state.

## Properties

The right-hand CUD is used for system-specific extension of the SINAMICS DC MASTER functions.

It enables the following function extensions:

- Doubling the number of hardware inputs and outputs for applications requiring more analog inputs, analog outputs, digital inputs, or digital outputs
- Additional computing capacity for free function blocks and, above all, for application-specific function diagrams generated using DCC

### Connection between the left-hand and right-hand CUD:

This involves using the parallel-connection interface.

16 BICO connections can be established in each direction. Function diagrams FP9350, FP9352, and FP9355 show the settings and BICO interconnection options for the parallel-connection interface.

The hardware connection for the two CUDs is established inside the unit; there is no need for an external connection using connector X165 or X166. It is also possible to use the parallel-connection interface for controlling a power unit-side configuration in which several SINAMICS DC MASTER units are connected in parallel.

## Parameter assignment

The parameters for the right-hand CUD are assigned using the AOP30 or the STARTER commissioning tool. The Basic Operator Panel BOP20 cannot be used for this purpose.

- Assigning parameters for the right-hand CUD using the AOP30:  
The AOP30 must be connected to connector X178 (RS485 interface) or X179 (RS232 interface) on the right-hand CUD.
- Assigning parameters for the right-hand CUD using STARTER:  
STARTER views the right-hand CUD as a separate PROFIBUS node. Either the unique bus address must be set using the AOP30, or STARTER must first be connected as the sole bus node in order to set the unique bus address.

The second CUD must be parameterized as an "independent node" for the parallel-connection interface, meaning that it participates in BICO exchange between multiple CUDs.

Table 10- 75 Assigning parameters in cases where several SINAMICS DC MASTER units are not connected in parallel at the power unit side

Left-hand CUD		Right-hand CUD	
p51800 = 1	Independent node	p51800 = 1	Independent node
p51801	Number of words to be sent	p51801	Number of words to be sent
p51802 = 2	Minimum number of stations	p51802 = 2	Minimum number of stations
p51803 = 0	"n+m mode" not active	p51803 = 0	"n+m mode" not active
p51804[.]	Establish required BICO connections	p51804[.]	Establish required BICO connections
p51805 = 1	Bus terminator	p51805 = 1	Bus terminator
p51806 =	Unique station address	p51806 =	Unique station address

10.31 Expanding the SINAMICS DCM to include a second CUD

Table 10- 76 Assigning parameters in cases where several SINAMICS DC MASTER units are connected in parallel at the power unit side

Left-hand CUD		Right-hand CUD	
p51800	Required as with parallel connection of power units	p51800 = 1	Independent node
p51801	Number of words to be sent	p51801	Number of words to be sent
p51802	Required as with parallel connection of power units	p51802	Required as with parallel connection of power units
p51803	Required as with parallel connection of power units	p51803 = 0	"n+m mode" not active
p51804[.]	Establish required BICO connections	p51804[.]	Establish required BICO connections
p51805	Required as with parallel connection of power units	p51805 = 0	No bus terminator
p51806 =	Unique station address	p51806 =	Unique station address

Normally, on the CUD on the right-hand slot the closed-loop drive control (setpoint processing, ramp-function generator, closed-loop speed control, armature-current control, closed-loop EMF control, closed-loop field-current control) is not required.

For that reason it makes sense to deactivate the closed-loop drive control (with p50899[0..6] = 0, see also function diagram 1721) in order to gain more CPU time for free function blocks and, especially, for application-specific function diagrams created with DCC.



## 10.32 Terminal Module Cabinet TMC (option G63)

The Terminal Module Cabinet (TMC) enables the simple connection of the CUD standard signals (X177) via spring-loaded terminals in an easily accessible area of the control cabinet.

See Chapter "Ordering information for options and accessories (Page 30)" for ordering data.

The dimensions needed in the control cabinet are approx. 230 mm x 45 mm.



Figure 10-89 Terminal Module Cabinet

The CUD is equipped with a "Cabinet Board".

During installation, connectors X1 and X2 on the Cabinet Board must be connected to connectors X1 and X2 on the TMC with the supplied cables (3 m). The cables must be laid in a cable duct.

For terminal assignment, see Chapter "Assignment of terminals and connectors (Page 168)".

## 10.33 Runtime (operating hours counter)

### Total system runtime

The total system runtime is displayed in r2114 (Control Unit).

- Index 0 = system runtime in ms.  
After reaching 86400000 ms (24 h), the value is reset.
- Index 1 = system runtime in days.  
The counter value is saved when the power is switched off. After the drive unit is powered up, the counter continues to run with the most recently saved value.

---

**Note**

Errors and alarms are stamped with this system runtime.

If a connected AOP30 is parameterized as the time-of-day master (see Chapter "Assigning parameters to make AOP30 time-of-day master (Page 402)"), faults and alarms are provided with a real-time stamp.

---

### Relative system runtime

The relative system runtime since the last POWER ON is displayed in p0969 (Control Unit) in ms. The counter runs over after 49 days.

## 10.34 Diagnostics

### 10.34.1 Diagnostic memory

To provide support for troubleshooting and remedying problems, the SINAMICS DC MASTER records various types of data in a diagnostics file. Siemens specialists can use the contents of this file to glean more in-depth information about the cause of inexplicable faults or other problems such as blown fuses or defective thyristors.

When contacting Siemens with queries related to problems of this type, it is, therefore, advisable that you both read out this file and e-mail a copy of it to the Siemens experts.

With parallel or series connection, the diagnostics files of **all** devices must always be read out and sent to the Siemens experts.

Proceed as follows to read out the diagnostics file:

1. Insert the memory card in the drive.
2. Set p50832 = 1:  
this copies the diagnostics file to the CompactFlash Card. A process which takes approximately 2 minutes. Copying is complete when p50832 takes on the value 0 again.
3. The diagnostics file is called **DiagStor.spd**, is approx. 600 KB in size, and can be found in the **\USER\SINAMICS\DATA\LOG** directory on the memory card.

For more details on the diagnostic memory, please refer to function diagram FP8052.

### 10.34.2 Trend recorder function

The SINAMICS DC MASTER enables data from 4 channels to be recorded over an extended period, with a large memory depth. A file on the CompactFlash Card takes on the role of a long-term storage facility. The signals to be recorded are updated periodically and written cyclically to the file.

The file contains a line-by-line account of the operating hour and values for the 4 channels, in the form of an ASCII string, and can be evaluated and visualized using standard PC tools (such as Notepad or Excel).

Recording must be started manually (by setting p51705 = 0/1/2). With a recording period of 1 second, the file grows by approximately 100 kB per hour.

When starting via p51705 = 1, recording is automatically stopped after the number of entries set in p51706 – and p51705 is set to 0.

When starting via p51705 = 2, the oldest entries are overwritten after the number of entries set in p51706. Recording must be stopped manually (with p51705 = 0).

The file is called **Track.csv** and can be found in the **\USER\SINAMICS\DATALOG** directory on the CompactFlash Card.

For more details on the trend recorder function, please refer to function diagram FP8050.

### 10.34.3 Thyristor diagnostics

SINAMICS DCM can perform a self-test of its own power unit. As a consequence, defective thyristors and other faults can be detected in the power unit.

#### Note 1

Thyristor diagnostics cannot be used when SINAMICS DCMs are connected in series.

#### Note 2

In parallel connections of SINAMICS DCMs (6-pulse or 12-pulse), the thyristor diagnostics must only be selected on the master. The thyristor diagnostics are then performed first on the master and then automatically in succession on all slaves. If a faulty thyristor is detected on a SINAMICS DCM, the appropriate fault message is issued on this SINAMICS DCM and not on the master on which the thyristor diagnostics was started.

#### Note 3

If a thyristor is fused, in 6-pulse parallel connection it is not possible to identify in which of the parallel devices the defective thyristor is located. The corresponding fault message occurs on the master.

### Selecting thyristor diagnostics

Thyristor diagnostics are performed during the switch-on procedure. Parameter p50830 can be used to select for which switch-on procedures thyristor diagnostics is performed.

- p50830 = 0 never
- = 1 at the first ON after switching-on the electronics
- = 2 at each ON
- = 3 at the next ON (p50830 is then reset to 0)

### Thyristor diagnostics sequence

At each switch-on procedure, starting from operating state o7 the drive goes into state o0. During thyristor diagnostics, it remains in operating state o3 (see parameter r50000). Thyristor diagnostics takes approx. 30 s.

Thyristor diagnostics comprises two parts:

#### 1. Checking the thyristor for its blocking capability

All thyristors are individually fired and it is not permissible for current to flow. If it does, this indicates that a thyristor is fused or it triggers with forward breakover or a ground fault has occurred, i.e. terminal 1C or 1D is connected to ground.

#### NOTICE

##### Ground leakage circuit breaker

In IT systems (i.e. in systems with an ungrounded neutral point of the supply transformer), the thyristor diagnostics cannot detect a single-pole ground fault.

For these types of line supply, it is recommended that a ground fault monitor is used.

#### WARNING

##### Electric shock or electric arc during operation with ground fault

The type and location of the fault cannot be established just from a ground fault error message. In the event of continued operation, serious aftereffects all the way to electric arcs are possible. This can result in death, serious injury or material damage.

- If a ground fault occurs during operation, the system must be switched off immediately. Then identify and eliminate the source of the ground fault.
- The plant operating company is responsible for the consequences for further operation after a ground fault has been detected. Carry out a risk analysis.

## 2. Checking that the thyristors can be triggered

All of the thyristors are triggered in pairs and in this case, a current must flow (as a minimum, 5% of r50072[1]). Otherwise, a thyristor cannot be triggered. This can also be caused by a fault in the firing pulse generation.

### NOTICE

#### Possible rotation of the motor shaft.

The low current that flows during this test can cause the motor shaft to briefly rotate for motors that are very easy to move and are not loaded, as in this operating state, the full field is already present.

Faults that are detected result in fault message F60061. The fault value provides information as to which thyristor was detected to be defective and what the possible cause of the fault could be.

## 10.34.4 Description of the LEDs on the CUD

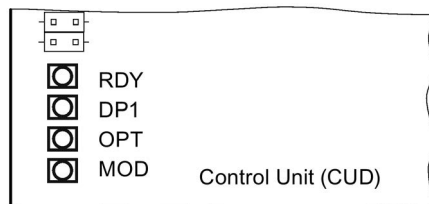


Figure 10-90 Layout of the LEDs

The individual states during ramp-up are indicated by means of the LEDs on the CUD.

- The duration of the individual states varies.
- If an error occurs, the ramp-up procedure is aborted and the cause of the error is indicated via the LEDs.

**Remedy:** Insert the appropriate memory card with the correct firmware and parameterization.

- At the end of a successful ramp-up, all the LEDs are switched off briefly.
- After the ramp-up, the LEDs are controlled via the loaded firmware.

The description of the LEDs after ramp-up applies.

### Note

The LEDs can only be seen when the front cover of the SINAMICS DC MASTER is opened.

**CUD - Response of LEDs during a firmware update**

Table 10- 77 Firmware update

LED				Meaning
RDY	DP1	OPT	MOD	
Red	Off	Off	Off	Firmware update in progress.
Red 2 Hz	Red	Off	Off	Firmware on the memory card is incomplete or defective.
				The firmware update failed. The CRC of the programmed firmware is incorrect.
Red 0.5 Hz	Red 0.5 Hz	Off	Off	The firmware has been successfully completed. The electronic power supply must be switched off and back on again.
Red 2 Hz	Red 2 Hz	Off	Off	The firmware on the memory card does not belong to SINAMICS DCM.
				The firmware version and hardware version of the CUD are not compatible. For information on the hardware/firmware compatibility, see Chapter "Upgrading the device firmware (Page 687)".
Orange 0.5 Hz	x	x	Off	DRIVE-CLiQ component is being updated.
Orange 2 Hz	x	x	Off	DRIVE-CLiQ component has been updated.

**CUD - Response of LEDs during ramp-up (following POWER ON)**

Table 10- 78 Ramp-up

LED				State	Remark
RDY	DP1	OPT	MOD		
Red	Red	Off	Off	BIOS loaded	-
Red 2 Hz	Red	Off	Off	BIOS error	-
Red 2 Hz	Red 2 Hz	Off	Off	File error	Memory card not present or flash file system faulty
Red	Orange flashing	Off	Off	Firmware loading	DP1 flashing without specific flashing frequency
Red	Off	Off	Off	Firmware loaded	-
Off	Red	Off	Off	No CRC error	Firmware checked
Red 0.5 Hz	Red 0.5 Hz	Off	Off	CRC error	Firmware checked, CRC error
Orange	Off	Off	Off	Drive initialization	-

## Response of the LEDs after ramp-up

Table 10- 79 CUD - Description of the LEDs after ramp-up

LED	Color	State	Description, cause	Remedy
RDY (READY)	-	Off	Electronic power supply is missing or outside permissible tolerance range.	Check power supply
	Green	Continuous light	The component is ready for operation. No errors are present.	-
		Flashing light 0.5 Hz	Commissioning/reset	-
		Flashing light 2 Hz	Writing to memory card or internal flash memory <b>Notice!</b> The electronic power supply for the SINAMICS DC MASTER must not be switched off during this write process. Switching off the electronic power supply can lead to the loss of the parameter assignments. Also refer to Chapter "Operation", Section "Memory card functions".	-
	Red	Flashing light 2 Hz	General errors	Check parameterization/ configuration
	Orange	Flashing light 0.5 Hz	Updating the firmware of the connected DRIVE-CLiQ components	-
		Flashing light 2 Hz	DRIVE-CLiQ component firmware update complete. Wait for POWER ON for the respective components.	Carry out POWER ON for the respective components
Green/ orange or Red/ orange	Flashing light 1 Hz	Component detection via LED is activated (p0124[0]). <b>Note:</b> Both options depend on the LED state when component detection is activated via p0124[0] = 1.	-	
DP1 PROFIdrive cyclic operation	-	Off	Cyclic communication has not (yet) taken place. <b>Note:</b> The PROFIdrive is ready to communicate when the CUD is ready for operation (see LED RDY).	-
	Green	Continuous light	Cyclic communication is taking place.	-
		Flashing light 0.5 Hz	Bus fault (dataEx, no operate) Full cyclic communication is not yet taking place. Possible cause: The controller is not transferring any setpoints.	-
	Red	Continuous light	USS: No activity on bus	
		Flashing light 0.5 Hz	USS: Activity on bus; no PZD received	
			Bus fault (no dataEx)(config fault)	-
		Flashing light 2 Hz	Bus fault (no more dataEx)	-
Bus fault (search baud rate)				
	No link established	-		

10.34 Diagnostics

LED	Color	State	Description, cause	Remedy
OPT (OPTION)	-	Off	Electronic power supply is missing or outside permissible tolerance range, Component not ready for operation, Option Board not installed, No associated drive object has been created	Check power supply and/or component
	Green	Continuous light	Option Board is ready for operation.	-
		Flashing light 0.5 Hz	Depends on the Option Board used	-
	Red	Flashing light 2 Hz	At least one fault is present in this component. Option board not ready (e.g. after switching on)	Remedy and acknowledge fault
RDY and DP1	Red	Flashing light 2 Hz	Bus fault – communication has been interrupted	Correct fault
RDY and OPT	Orange	Flashing light 0.5 Hz	The firmware of the connected CBE20 Communication Board Ethernet is being updated	-
MOD	-	Off	Reserved	-

**10.34.5 Diagnostics via STARTER**

The diagnostic functions support commissioning and service personnel during commissioning, troubleshooting, diagnostics and service activities.

**Requirement**

- Online operation of the STARTER commissioning tool.

**Diagnostic functions**

The following diagnostic functions are available in the STARTER commissioning tool:

- Specification of signals with the ramp-function generator
- Signal recording with the trace function
- Analysis of the control response with the measuring function



### 10.34.5.1 Function generator

The function generator is part of the STARTER commissioning tool.

The function generator can be used, for example, to perform the following tasks:

- Measuring and optimizing control loops.
- Comparing the dynamic response of coupled drives.
- Specifying a simple traversing profile without a traversing program.

The function generator can be used to generate various waveforms.

In the "Connector output" operating mode (r4818), the output signal can be injected into the control loop via the BICO interconnection.

#### Properties

- The following freely parameterizable waveforms can be set:
  - Square-wave
  - Staircase
  - Triangular
  - Sinusoidal
  - PRBS (pseudo random binary signal, white noise)
- An offset is possible for each signal. The power-up to the offset can be parameterized. The signal generation starts after the power-up to the offset.
- Limitation of the output signal to the minimum and maximum value can be set.

#### Further waveforms

Additional waveforms can be generated.

Example:

The "triangular" waveform can be parameterized with "Upper limit" to produce a triangle with no peak.

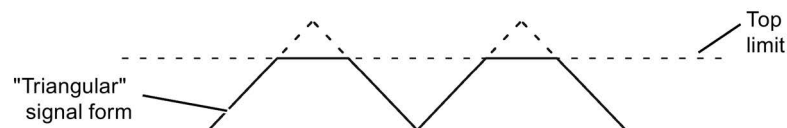


Figure 10-91 "Triangular" without peak waveform

## Parameterizing and operating the function generator

You operate and parameterize the function generator via STARTER.

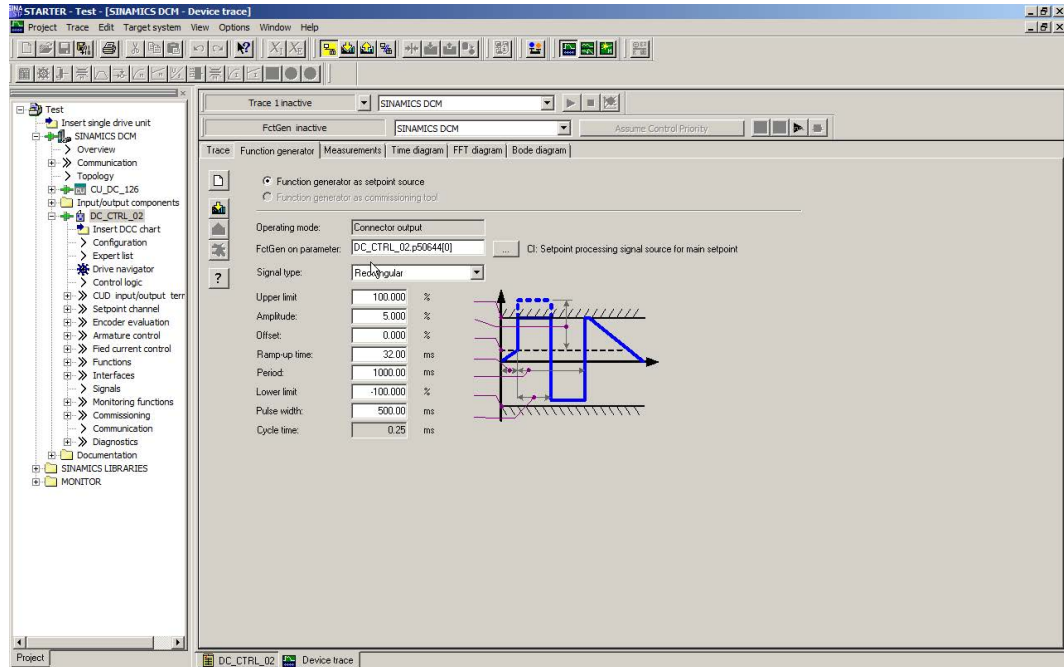


Figure 10-92 Function generator

### Note

Please refer to the online help for more information about parameterization and operation.

### Note

The "Function generator as commissioning tool" button must not be selected!

If this button is still selected, then the message "Error occurred while parameterizing" is output on STARTER when "Loading the parameterization to the drive" as well as alarm A02007 on the SINAMICS DCM (Function generator: Drive not SERVO/VECTOR).

## Starting/stopping the function generator

### WARNING



#### Hazardous axis movement

With the corresponding ramp-function generator parameter settings (e.g. offset), the motor can "drift" and travel to its end stop.


The motion of the drive is not monitored with the function generator activated.

- Observe the general safety instructions.


#### Starting the function generator:

1. Load the function generator.
  - Click the  symbol.
  - or
  - In the project navigator, double-click "Drives" > "Drive\_xy" > "Commissioning" > "Function generator".
2. Select "Function generator as setpoint source".
3. Select the BICO input.
4. Set the waveform, for example, "Square-wave".
5. Click the "Assume control priority!" button.
6. For "Sign of life monitoring", click the "Accept" button (the control priority button then changes to yellow).
7. Click the  "Drive on" symbol.
8. Start the function generator by clicking the triangle next to the red zero ("Start FctGen" button).
9. Read the "Caution" note and confirm with "Yes".  
The drive starts and runs through the set trace function.  
Trace recordings are now possible.

#### Stopping the function generator:

1. Click the "Stop FctGen" button.
- or
2. Click the  "Drive off" icon to stop the drive.

## Parameterization

The "Function generator" parameterization screen is selected with the  symbol in the toolbar of the STARTER commissioning tool.

### 10.34.5.2 Trace function

#### Single trace

You can use the trace function to record measured values over a defined period, depending on trigger conditions. Alternatively, the measured values can also be recorded using immediate recording.

In the STARTER commissioning tool you can parameterize the trace function by using the "Trace" parameterizing screen form.

#### Calling the "Trace" parameterizing screen form

In the STARTER commissioning tool, click the  symbol (device trace-function generator).

The "Trace" parameterizing screen form is then displayed.

Example:

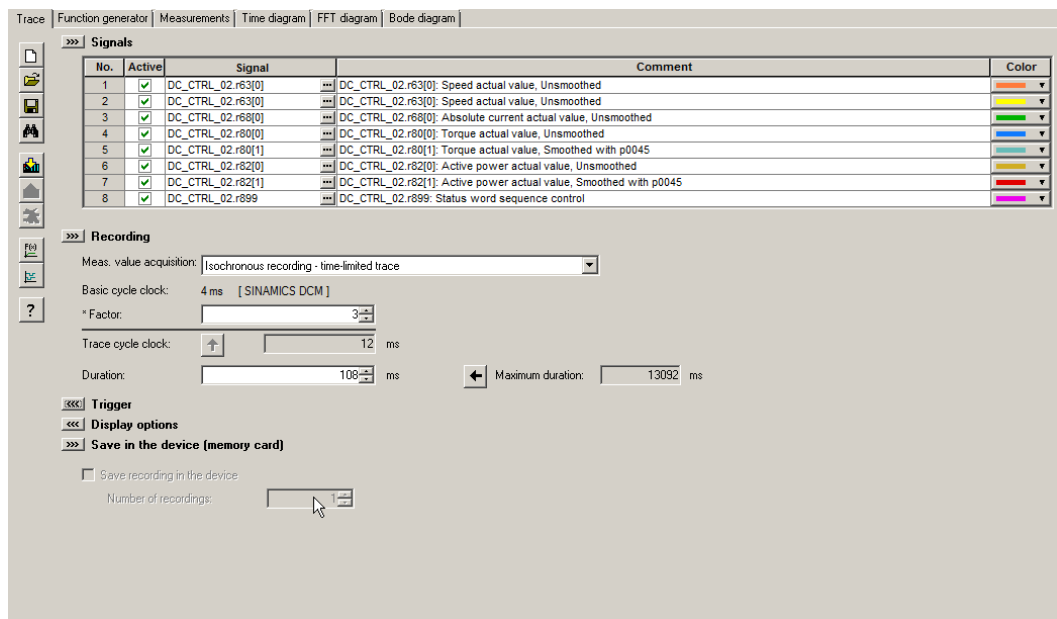


Figure 10-93 Trace function

#### Parameterizing and operating the trace function

#### Note

Detailed information on how to parameterize and operate the trace function is available in the STARTER online help in Chapter "Trace, measuring functions and automatic controller setting".

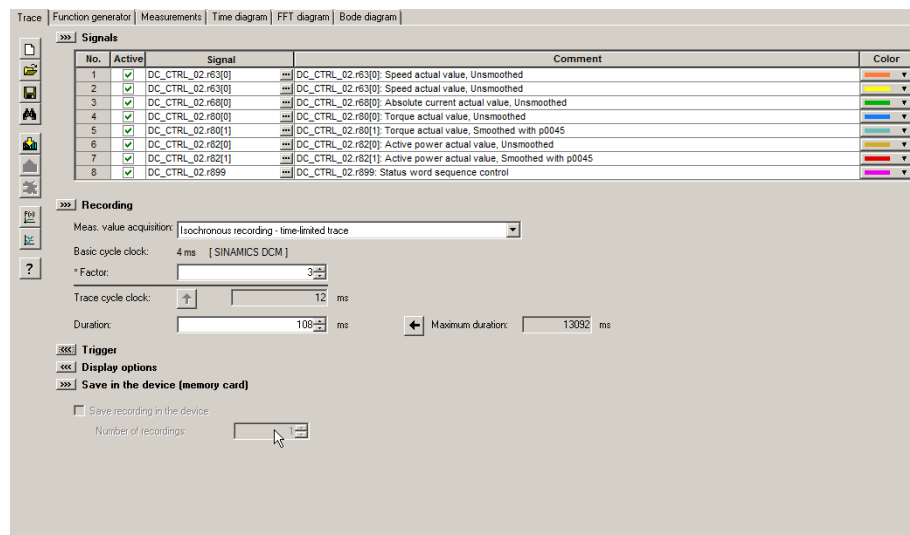


Figure 10-94 Trace function

The device cycle time display flashes 3 times at around 1 Hz when the time slice is changed from  $< 4$  ms to  $\geq 4$  ms (see description at "Properties"). The display also flashes in the inverse direction from  $\geq 4$  ms to  $< 4$  ms.

### Properties

- Two independent traces
- Up to eight recording channels for each trace
  - When more than four channels per single trace are used, the trace's device clock cycle is switched automatically from 0.250 ms to 4 ms. As a consequence, the performance of the SINAMICS DCM is not influenced too strongly by the trace function.
- Single trace:
  - Device clock cycles of the SINAMICS DCM trace
    - Up to four channels: 0.250 ms
    - $\geq$  five channels: 4 ms
  - The specified trace cycles can be increased.
- Endless trace:
  - The parameter data is written to the memory until this is full. Further parameter data is then lost.
  - A ring buffer can be selected in order to avoid this. When the ring buffer is activated, then the STARTER commissioning tool automatically starts again from the beginning to write to the trace memory after the last trace parameter was saved.
  - Device cycle of the SINAMICS DCM trace for an endless trace:
    - Up to four channels: 2 ms
    - $\geq$  five channels: 4 ms
- Triggering
  - Without triggering (recording immediately after start)
  - Triggering on signal with edge or on level
- STARTER commissioning tool
  - Automatic or adjustable scaling of the display axes
  - Signal measurement via cursor
- Adjustable trace cycle: Integer multiples of the basic sampling time

## Multiple trace

A multiple trace consists of single, completed, consecutive traces. Using multiple tracing on a card, it is possible to cyclically record (a specific number) traces with the same trace configuration (number of channels, sample depth, recording cycle,..), and to save these traces persistently on the drive memory card.

The "Endless trace", "Single trace" and "Multiple trace" functions cannot be used simultaneously. With a correspondingly incorrect configuration, alarm "A02097" is output. However, a multiple trace with a cycle of 1 is nothing more than a single trace with saved measurement results.

<b>NOTICE</b>
<b>Shorter service life of memory cards as a result of multiple traces.</b>
The service life of the cards can be shortened by the multiple traces because the memory media is subject to wear as a result of the write access operations from a technical point of view.

---

### Note

The performance of the complete system can be negatively influenced by a continuous multiple trace.

---

### Requirement

A multiple trace is only possible if the memory card is plugged in and not blocked. In this case, alarm "A02098 MTrace: Cannot be saved" is output with alarm value "1".


### Activating a multiple trace

---

### Note

The multiple trace can be activated or set separately for each trace recorder.

---

1. In STARTER, click the  symbol (device trace-function generator).

The "Trace" parameterizing screen form is then displayed.

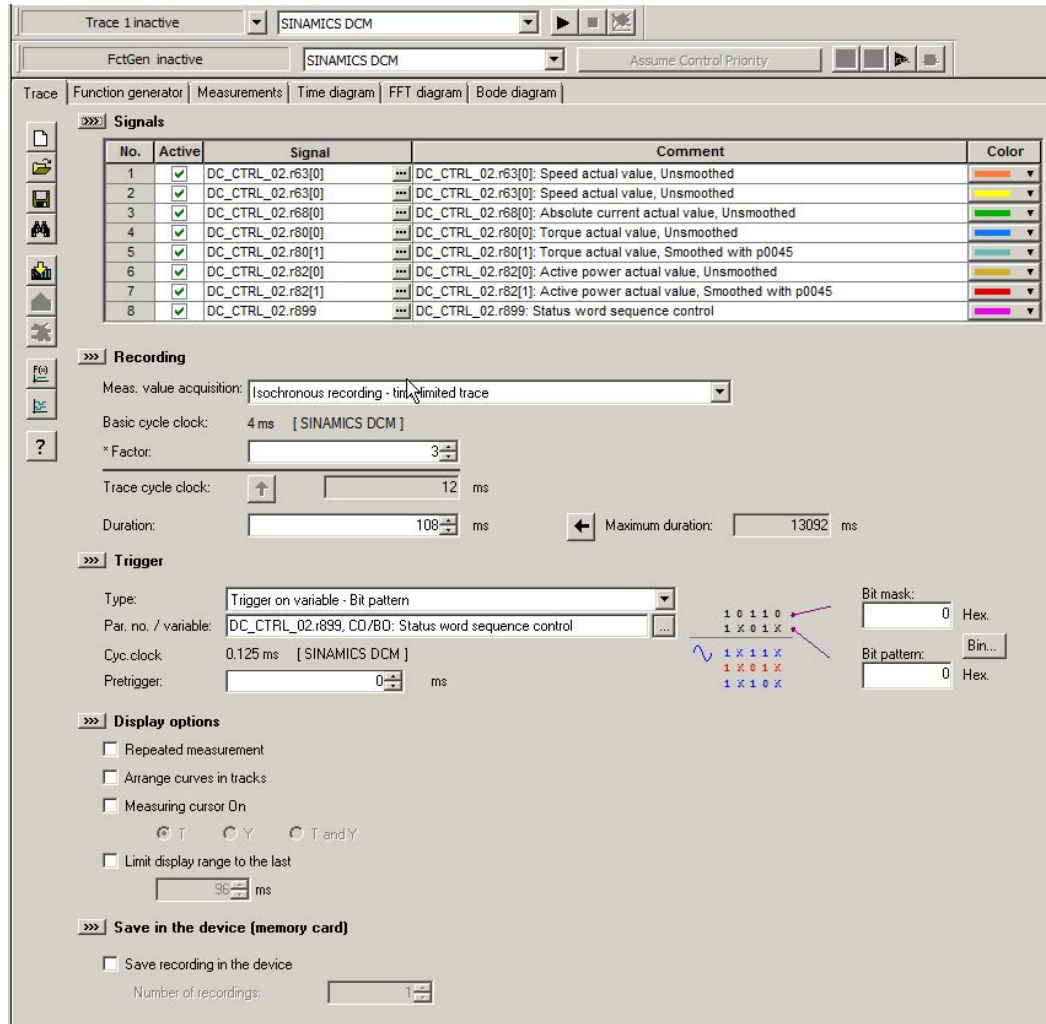


Figure 10-95 Multiple trace in STARTER

2. Activate the "Save recording in the device" checkbox.
3. Enter the number of cycles in the "Number of recordings" field.

**Note**

Detailed information on how to parameterize and operate the trace function is available in the STARTER online help in Chapter "Trace, measuring functions and automatic controller setting".

4. Make the required trace settings and save the settings.

**Sequence of a multiple trace**

1. A multiple trace is started just like a conventional single trace using the STARTER "Trace" screen form.
2. The multiple trace component saves the measurement result after the trigger condition has occurred and the trace data has been completely recorded.
3. The single trace that has actually been completed is now automatically restarted from the multiple trace component. In this case, the same trace configuration (trigger condition, recording cycle, etc. ) is used as before. The trace buffer of the previous single trace is emptied in the process.

**Trace status**

The status of the multiple trace is displayed in the screen form (red frame):

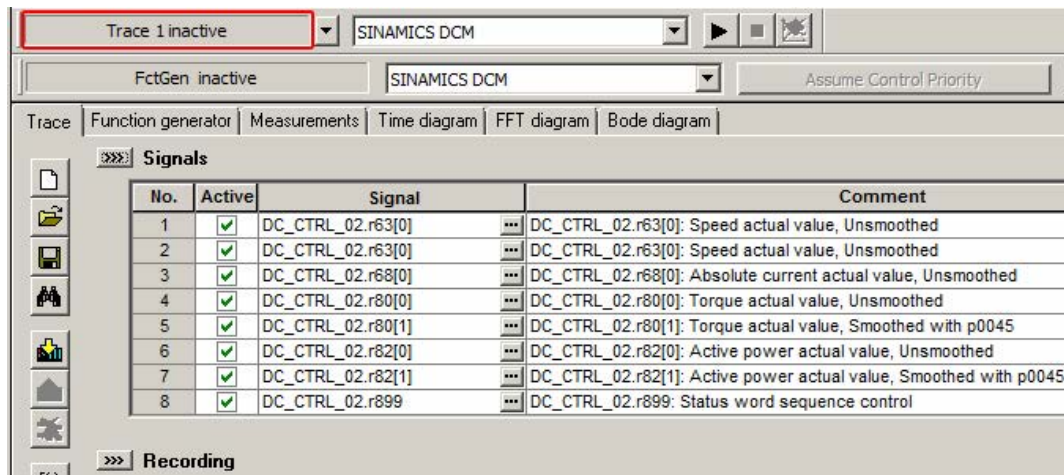



Figure 10-96 Trace status in STARTER

**Startup trace**

A startup trace basically consists of a conventional single trace with all of its configuration options (number of channels, sampling depth, recording cycle, etc.). With the appropriate configuration, a startup trace is automatically active after a drive restarts.



### Configuring the startup trace

1. In STARTER, click the  symbol (device trace-function generator).

The "Trace" parameterizing screen form is then displayed.

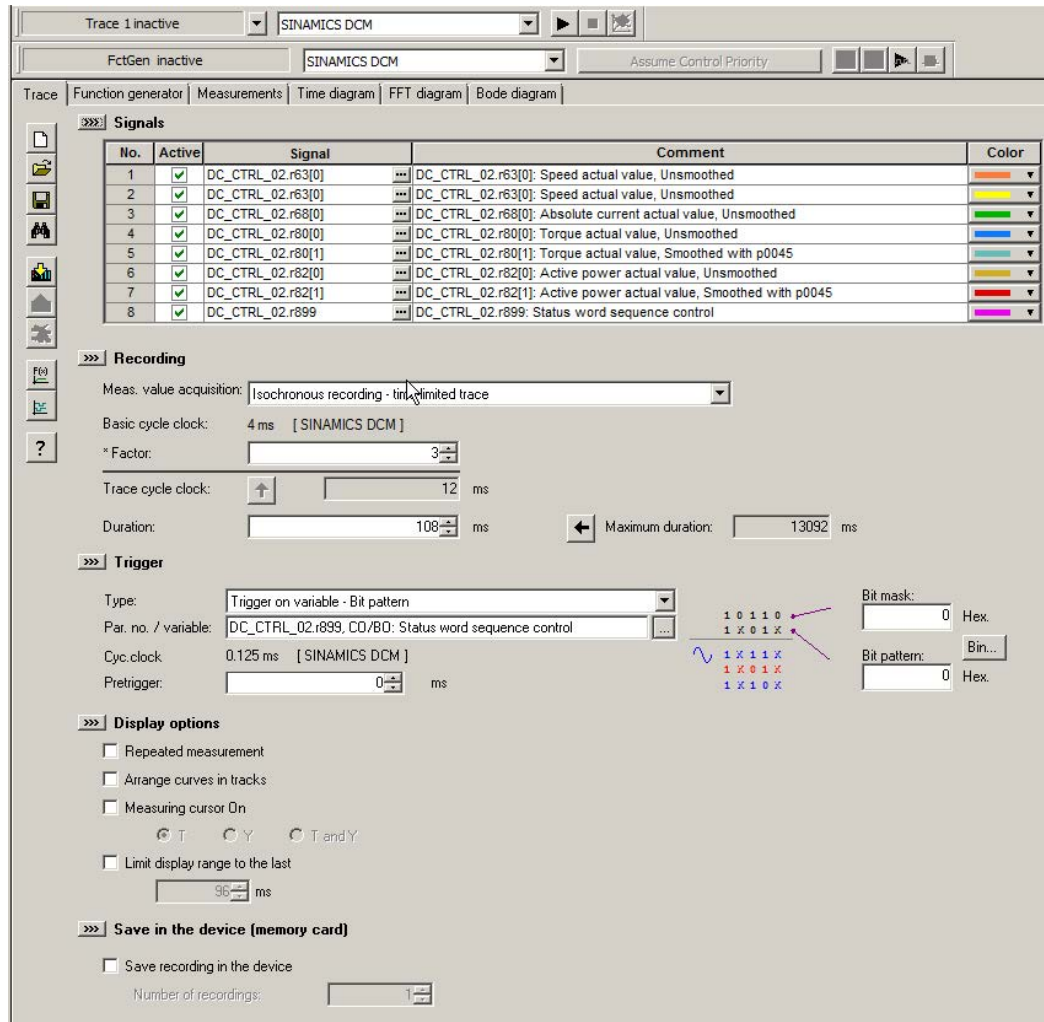


Figure 10-97 Startup trace in STARTER

2. Activate the "Save recording in the device" checkbox.
3. Enter a number  $\geq 1$  in the "Number of recordings" field.

### Note

Detailed information on how to parameterize and operate the trace function is available in the STARTER online help in Chapter "Trace, measuring functions and automatic controller setting".

4. Make the required trace settings and save the settings.

- 5. Start the trace.

This is followed by the prompt whether the parameterization in the device should be saved.

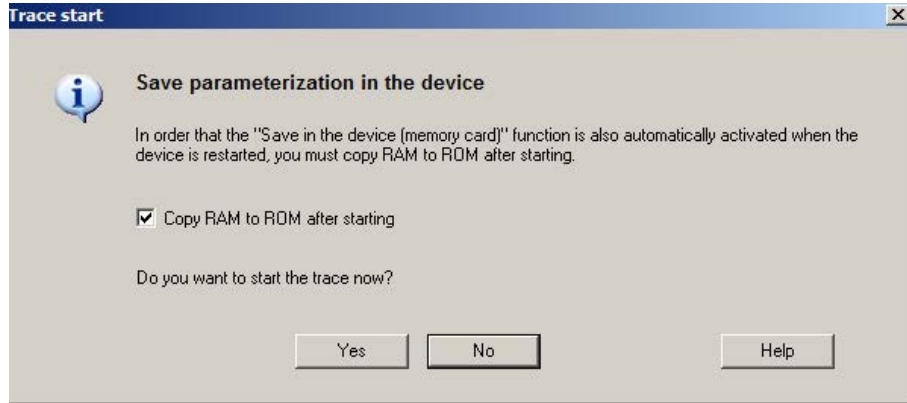


Figure 10-98 Trace save prompt in STARTER

- 6. Activate the "Copy RAM to ROM after starting" option.
- 7. Click "Yes" to start the trace.

After the restart (POWER ON) of the SINAMICS DCM, the trace is started automatically (without a user action). After satisfying the trigger condition, the measurement is saved on the memory card in the USER\SINAMICS\DATA\LOG directory as ACX file. The trace is then restarted automatically. As many files are created as set at "Number of recordings". The oldest file is overwritten.

In order to view the measurements later with STARTER, the memory card must be removed from the SINAMICS DCM and inserted into the PC. The files can then be opened with the STARTER trace.

### Overview of important alarms and faults (see SINAMICS DCM List Manual)

- A02097 MTrace: Multiple trace cannot be activated
- A02098 MTrace: Cannot be saved

## 10.34.6 Faults and alarms

### 10.34.6.1 General information

#### Description

The errors and states detected by the individual components of the drive unit are indicated by messages.

The messages are categorized into faults and alarms.

**Note**

The individual faults and alarms are described in the section titled "Faults and alarms" in the SINAMICS DCM List Manual. Here you can also find a section titled "Function diagrams" → "Faults and alarms", which contains function diagrams for the fault buffer, alarm buffer, fault trigger, and fault configuration.

---

**Properties of faults and alarms**

- Faults
  - Are identified by Fxxxx
  - Can lead to a fault reaction
  - Must be acknowledged once the cause has been remedied
  - Status via Control Unit and LED RDY
  - Status via PROFIdrive status signal ZSW1.3 (fault active).
  - Entry in the fault buffer
- Alarms
  - Are identified by Axxxx
  - Have no further effect on the drive unit
  - The alarms are automatically reset once the cause has been remedied. No acknowledgment is required.
  - Status via PROFIdrive status signal ZSW1.7 (alarm active).
  - Entry in the alarm buffer
- General properties of faults and alarms
  - Can be configured (e.g. change fault to alarm, fault reaction)
  - Triggering on selected messages possible
  - Initiation of messages possible via an external signal
  - Contains the component number for identifying the SINAMICS component involved
  - Contains diagnostic information on the message involved

### Acknowledging faults

The list of faults and alarms specifies how each fault is acknowledged after the cause has been remedied.

1. Acknowledgment of faults with "POWER ON"
  - Switch the drive unit on/off (POWER ON).
2. Acknowledgment of faults with "IMMEDIATE"
  - Via PROFIBUS control signal  
STW1.7 (reset fault memory): 0/1 edge  
Set STW1.0 (ON/OFF1) = "0" and "1"
  - Via external input signal  
Binector input and interconnection with digital input  
p2103 = "Requested signal source"  
p2104 = "Requested signal source"  
p2105 = "Requested signal source"  
Across all of the drive objects (DO) of a Control Unit  
p2102 = "Requested signal source"
3. Acknowledgment of faults with "PULSE INHIBIT"
  - The fault can only be acknowledged with a pulse inhibit (r0899.11 = 0).
  - The same options are available for acknowledging as described under acknowledgment with IMMEDIATE.

---

#### Note

The drive cannot resume operation until all active faults have been acknowledged.

---

### 10.34.6.2 Buffer for faults and alarms

**Note**

A fault buffer and alarm buffer are provided for each drive. The drive and device-specific messages are entered in these buffers.

The contents of the fault buffer are saved to the non-volatile memory when the Control Unit is powered down, i.e. the fault buffer history is still available when the unit is powered up again.

**Note**

The entry in the fault/alarm buffer is made after a delay. For this reason, the fault/alarm buffer should not be read until a change in the buffer is also recognized (r0944, r2121) after "Fault active"/"Alarm active" is output.

#### Fault buffer

Faults which occur are entered in the fault buffer as follows:

	Fault code	Fault value	Fault time "received"	Fault time "rectified"	Fault Drive object triggering	Component number Fault	Diagnostic attribute Fault	
Current fault	Fault 1	r0945[0]	r0949[0] [I32] r2133[0][Float]	r0948[0] [ms] r2130[0][d]	r2109[0] [ms] r2136[0][d]	r3115[0]	r3120[0]	r3122[0]
	Fault 2	r0945[1]	r0949[1] [I32] r2133[1][Float]	r0948[1] [ms] r2130[1][d]	r2109[1] [ms] r2136[1][d]	r3115[1]	r3120[1]	r3122[1]
	⋮							
	Fault 8	r0945[7]	r0949[7] [I32] r2133[7][Float]	r0948[7] [ms] r2130[7][d]	r2109[7] [ms] r2136[7][d]	r3115[7]<1>	r3120[7]<1>	r3122[7]<1>
1st acknowledged fault	Fault 1	r0945[8]	r0949[8] [I32] r2133[8][Float]	r0948[8] [ms] r2130[8][d]	r2109[8] [ms] r2136[8][d]	r3115[8]	r3120[8]	r3122[8]
	Fault 2	r0945[9]	r0949[9] [I32] r2133[9][Float]	r0948[9] [ms] r2130[9][d]	r2109[9] [ms] r2136[9][d]	r3115[9]	r3120[9]	r3122[9]
	⋮							
	Fault 8	r0945[15]	r0949[15] [I32] r2133[15][Float]	r0948[15] [ms] r2130[15][d]	r2109[15] [ms] r2136[15][d]	r3115[15]	r3120[15]	r3122[15]
7th acknowledged fault [oldest]	Fault 1	r0945[56]	r0949[56] [I32] r2133[56][Float]	r0948[56] [ms] r2130[56][d]	r2109[56] [ms] r2136[56][d]	r3115[56]	r3120[56]	r3122[56]
	Fault 2	r0945[57]	r0949[57] [I32] r2133[57][Float]	r0948[57] [ms] r2130[57][d]	r2109[57] [ms] r2136[57][d]	r3115[57]	r3120[57]	r3122[57]
	⋮							
	Fault 8	r0945[63]	r0949[63] [I32] r2133[63][Float]	r0948[63] [ms] r2130[63][d]	r2109[63] [ms] r2136[63][d]	r3115[63]	r3120[63]	r3122[63]

<1> This fault is overwritten when "newer" faults occur

Figure 10-99 Structure of the fault buffer

**Properties of the fault buffer:**

- A new fault incident encompasses one or more faults and is entered in "Current fault incident".
- The entries appear in the buffer according to the time at which they occurred.
- If a new fault incident occurs, the fault buffer is reorganized. The history is recorded in "Acknowledged fault incident" 1 to 7.
- If the cause of at least one fault in "Current fault incident" is remedied and acknowledged, the fault buffer is reorganized. Faults that have not been remedied remain in "Current fault incident".
- If "Current fault incident" contains 8 faults and a new fault occurs, the fault in the parameters in index 7 is overwritten by the new fault.
- r0944 is incremented each time the fault buffer changes.
- A fault value (r0949) can be output for a fault. The fault value is used to diagnose the fault more accurately; please refer to the fault description for details of the meaning.

**Clearing the fault buffer:**

- The fault buffer is reset as follows: p0952 = 0

### Alarm buffer, alarm history

The alarm buffer comprises the alarm code, the alarm value, and the alarm time (received, resolved). The alarm history occupies the last indices ([8...63]) of the parameter.

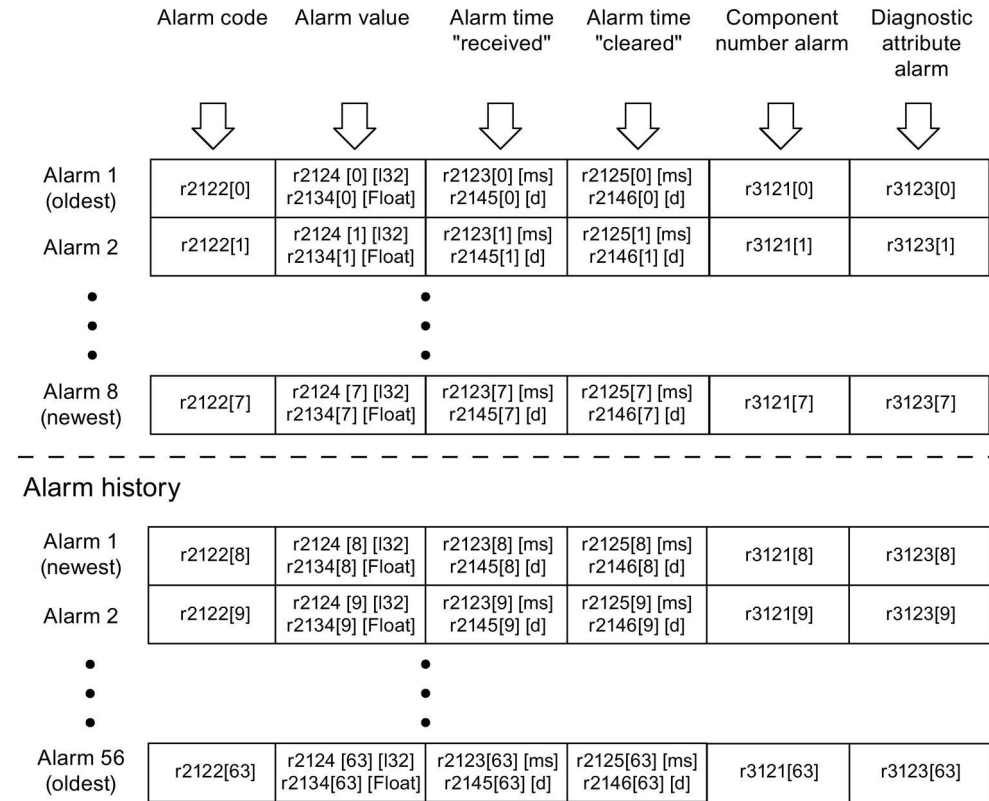


Figure 10-100 Structure of alarm buffer

Alarms that occur are entered in the alarm buffer as follows:

A maximum of 64 alarms are displayed in the alarm buffer:

- Index 0 ... 6: The first 7 alarms are displayed.
- Index 7: The most recent alarm is displayed.

A maximum of 56 alarms are displayed in the alarm history:

- Index 8: The most recent alarm is displayed.
- Index 9 ... 63: The first 55 alarms are displayed.

**Properties of the alarm buffer/alarm history:**

- The alarms in the alarm buffer are arranged from 7 to 0 according to the time that they occurred. In the alarm history, this is from 8 to 63.
- If 8 alarms have been entered in the alarm buffer, and a new alarm is received, the alarms that have been resolved are transferred to the alarm history.
- r2121 is incremented each time the alarm buffer changes.
- An alarm value (r2124) can be output for an alarm. The alarm value is used to diagnose the alarm more accurately; please refer to the alarm description for details of the meaning.

**Clearing the alarm buffer, index [0...7]:**

- The alarm buffer index [0...7] is reset as follows: p2111 = 0

**10.34.6.3 Configuring messages**

The properties of the faults and alarms in the drive system are permanently defined.

The following configuration settings can be made for some of the messages within a permanently defined framework for the drive system:

**Change message type (example)**

Select message	Set message type
p2118[5] = 1001	p2119[5] = 1: Fault (F)
	= 2: Alarm (A)
	= 3: No message (N)

**Change fault response (example)**

Select message	Set fault response
p2100[3] = 1002	p2101[3] = 0: None
	= 1: OFF1
	= 2: OFF2
	= 3: OFF3

**Change acknowledgment (example)**

Select message	Set acknowledgment
p2126[4] = 1003	p2127[4] = 1: POWER ON
	= 2: IMMEDIATE
	= 3: PULSE INHIBIT



---

**Note**

Only those messages which are listed in the indexed parameters can be changed as desired. All other messages retain their factory settings or are reset to the factory settings.

Examples:

- In the case of messages listed via p2128[0...19], the message type can be changed. The factory setting is set for all other messages.
  - The fault response of fault F12345 has been changed via p2100[n]. The factory settings are to be restored.
    - p2100[n] = 0
- 

**Delay of the fault response**

The fault response can be delayed by a parameterized time for all faults.

p51780 delay time (0.000 s ... 60.000 s), factory setting = 0.000 s

See also function diagram 2651.

The two CO/BOs r2139.3 (Fault active) and r3114.10 (Fault present) can be used by a higher-level controller in order to detect the time when a fault occurs (Fault present) and the time when a fault takes effect (Fault active).

**Triggering on messages (example)**

Select message	Trigger signal
p2128[0] = 1001	BO: r2129.0
or	
p2128[1] = 1002	BO: r2129.1

---

**Note**

The value from CO: r2129 can be used as a group trigger.

CO: r2129 = 0 No selected message has been output.

CO: r2129 > 0 Group trigger.

At least one selected message has been output.

The individual binector outputs BO: r2129 should be investigated.

---

**Triggering messages externally**

If the appropriate binector input is interconnected with an input signal, fault 1, 2, or 3 or alarm 1, 2, or 3 can be triggered via an external input signal.

Once an external fault 1 to 3 has been triggered on the Control Unit drive object, this fault is also present on all associated drive objects. If one of these external faults is triggered on a different drive object, it is only present on that particular drive object.

Bl: p2106	→ External fault 1	→ F07860(A)
Bl: p2107	→ External fault 2	→ F07861(A)
Bl: p2108	→ External fault 3	→ F07862(A)
Bl: p2112	→ External alarm 1	→ A07850(F)
Bl: p2116	→ External alarm 2	→ A07851(F)
Bl: p2117	→ External alarm 3	→ A07852(F)

**Note**

An external fault or alarm is triggered by a 1/0 signal.

An external fault and alarm do not usually mean that an internal drive message has been generated. The cause of an external fault and warning should, therefore, be remedied outside the drive unit.

**10.34.6.4 Parameters and function diagrams for faults and alarms**

**Function diagrams (see the SINAMICS DCM List Manual)**

- 1710 Overview diagram – Monitoring functions, faults, alarms
- 8060 Faults and alarms – Fault buffer
- 8065 Faults and alarms – Alarm buffer
- 8070 Faults and alarms – Fault/alarm trigger word r2129
- 8075 Faults and alarms – Fault/alarm configuration

**Overview of important parameters (refer to the SINAMICS DCM List Manual)**

- r0944 Counter for fault buffer changes
- ...
- p0952 Fault incident counter
- p2100[0...19] Fault code for fault reaction selection
- ...
- r2139 Status word for faults
- r3120[0...63] Component number fault
- r3121[0...63] Component number alarm
- r3122[0...63] Diagnostics attribute fault
- r3123[0...63] Diagnostics attribute alarm

### 10.34.6.5 Forwarding faults and alarms

#### Forwarding faults and alarms of the CU

When faults or alarms are triggered on the drive object of the CU, it is always assumed that central functions of the drive unit are involved. For this reason, these faults and alarms are not only signaled on the drive object of the CU, but are also forwarded to all other drive objects. The fault reaction affects the drive object of the CU and all other drive objects. This behavior also applies to the faults set in a DCC chart on the CU with the aid of DCB STM.

A fault that was set on the drive object of the CU must be acknowledged on all drive objects to which this fault was forwarded. In this way, the fault is then automatically acknowledged on the drive object of the CU. Alternatively, all faults of all drive objects can also be acknowledged on the CU.

If a set alarm is reset on the drive object of the CU, this alarm also disappears automatically on the other drive objects to which this alarm was forwarded.

#### Forwarding faults and alarms as a result of BICO interconnections


If two or more drive objects are connected via BICO interconnections, then faults and alarms from CU, TM31, TM15, TM17, and TM15DIDO drive objects are forwarded to DC\_CTRL-type drive objects. Faults are not forwarded within these two groups of drive object types.

This behavior also applies to the faults set in a DCC chart on the previously named drive object types with the aid of DCB STM.

## 10.35 CPU time load with SINAMICS DCM

The CPU time load of the SINAMICS DCM can be read out at r9976[1]. Principally, the following rules apply:

1. The cyclic DC closed-loop control of the SINAMICS DCM generates a base load of approx. 70% (can be read on r9976[1]).
2. The use of peripherals (AOP30, Starter, TM15, TM31, TM150, SMC10, SCM30, CBE20,...), certain settings in the closed-loop control and/or use of the free function blocks along with the DCC technology option increases this base load. The additional CPU time load as a result of the main components is summarized in the following table.
3. The CPU time load must not exceed a utilization of 100% at r9976[1].

 <b>WARNING</b>
<p><b>Exceeding the CPU time load</b></p> <p>At a CPU time load of &gt;100% on r9976[1], the correct functioning of the drive is no longer ensured.</p> <ul style="list-style-type: none"> <li>• Ensure that the CPU time load remains below 100%.</li> </ul>

**Note**

When the time load of the CUD is too high (r9976[1] >100%), fault F60099 (in extreme cases F01205) is output (time slice overflow). In such a case, the drive needs to be switched off and then back on again (POWER OFF / POWER ON).

The CPU time load must be taken into consideration when configuring and commissioning the SINAMICS DCM.

Table 10- 80 Additional CPU time load as a result of optional components

Component	Additional CPU time load
AOP30 via PPI	+4%
1 TM31	+4%
2 TM31	+5%
3 TM31	+6%
1 TM15	+1%
2 TM15	+1.5%
3 TM15	+2%
1 TM150	+1%
2 TM150	+1.5%
3 TM150	+2%
1 SMC10, SMC30	+2%
1 CBE20	+1%
Internal encoder (p50083 = 2)	+2%
Parallel interface	+4%
Peer-to-peer	+4%
Calculating the thyristor blocking voltage	+4.5%
Is supported by the CCP	+3.5%
Memory card inserted	+1%
Technology controller	+1.5%
Free function blocks	Depending on the number of free function blocks being used and their runtime groups, see Chapter "Free function blocks (Page 661)"
DCC	Depending on the number of DCC blocks being used and their runtime groups, see Chapter "Drive Control Chart (DCC) (Page 663)"

**Note**

The additional CPU time load listed above for TM15, TM31 and TM150 apply for a sampling time of 4 ms (p4099 = 4000). Setting faster sampling rates in the TM modules increases the CPU time load in the SINAMICS DCM to values considerably higher than those stated previously.

**Note**

The stated computing rules are to be understood as support during configuring and commissioning. The theoretical CPU time load computed from these rules can deviate from the CPU time load actually measured on the r9976[1] by several percentage points.

### 10.35.1 Maximum configuration

The following configuration can be operated as the maximum on one CUD.

Table 10- 81 Maximum configuration with SINAMICS DCM

Number	Component	Note
3	TM15, TM31, TM150	Connection of any combination of TM15, TM31 and TM150 modules on DRIVE-CLiQ. The connection of other TM modules (TM17, TM41,..) and of more than 3 TM modules is not permissible.  Sampling in 4 ms cycle (p4099=4000). Faster sampling increases the CPU time load, and precludes operation of this maximum configuration
1	SMC10, SMC30	The connection of others (SMC20,..) and of more than 1 external encoder module is not permissible.
1	CBE20	The connection of other OMI modules (CBE10) is not permissible.
1	Pulse encoder evaluation	p0400 > 0
1	AOP30	
1	STARTER	Online
1	Parallel interface	Active
1	Peer-to-peer	Active

**Note**

The capacity of the SINAMICS DCM can be expanded by equipping the SINAMICS DCM with a 2nd CUD (right-hand mounting slot). See Chapter "Expanding the SINAMICS DCM to include a second CUD (Page 628)".

### 10.35.2 Computation examples

**Example 1:**

Project A is a single drive in a control cabinet. An AOP30 is located in the control cabinet door. The motor has a pulse encoder, which is connected through the pulse encoder input X177.41-48

Base load	70%
AOP30	+4%
Internal encoder	+2%
<b>Calculated CPU time load =</b>	<b>76%</b>

Approx. 24% remain free for use by the free function blocks and/or DCC blocks.

**Example 2:**

Project B is a single drive connected to an S7 via PROFINET. 3 TM31 modules are used for terminal expansion. The sampling rates of the TM modules (p4099) are set to 4000 ms. In addition, a configured DCC application in the drive is running, which comprises 50 blocks and runs in the 6 ms time slice.

Base load	70%
CBE20	+1%
3 × TM31 with p4099[1,2,3] = 500	+6%
DCC application: 50 blocks @ 1 ms	+5%
<b>Calculated CPU time load =</b>	<b>82%</b>

The CUD is 82% utilized.

---

**Note**

The available CPU time can be expanded by equipping the SINAMICS DCM with a 2nd CUD (right-hand mounting slot). See Chapter "Expanding the SINAMICS DCM to include a second CUD (Page 628)".

---

## 10.36 Free function blocks

A logic operation, which connects several states (e.g. access control, plant status) to a control signal (e.g. ON command), is required for controlling the drive system in a wide variety of applications.

Along with logic operations, a number of arithmetical operations and storing elements are becoming increasingly important in drive systems. This functionality is available as a "Free function blocks" function module (FBLOCKS) on the drive object type of the SINAMICS DCM.

### General remarks

- Exact information on the scope of the blocks, about parameter assignment and about commissioning the free function blocks is available in the "SINAMICS" Free function blocks" manual. This chapter describes the special features of the free function blocks with SINAMICS DCM.
- This additional functionality increases the CPU time load. That means the maximum possible configuration with a Control Unit may be restricted.
- The free function blocks are restricted in their scope to 52 blocks per drive object (DO). Furthermore, the unassigned function blocks as compared to DCC cause significantly higher CPU time load. If that does not suffice, the application can be implemented with the DCC technology option. See Chapter "Drive Control Chart (DCC) (Page 663)".
- In the SINAMICS DCM, simultaneous use of the free function blocks and the DCC technology option are feasible.
- With the SINAMICS DCM, parameters that specify scaled variables have the unit "Percent". With free function blocks, parameters that specify scaled variables have no dimension. When setting parameter values, the unit of the parameter must **always** be taken into account. The unit is specified in the List Manual and is displayed in STARTER and on the AOP30.

#### Remark:

The relationship between percent variables and dimensionless variables is 100% corresponds to 1.00.

The conversion is performed according to the formula:  $Y=X/100\%$ .

X..percent variable

Y..dimensionless variable

Example: The fixed value r52401 is used as the input value of the limit monitor (p20266 = 52401). p50401 and r52401 both have the unit "%". If the value "50%" is specified at p50401, the value "50%" appears at r52401. The value "50%" (= 0.5) is therefore effective as the input signal X of the limit monitor. If a mean interval value of 50% is to be set, then p20267 = 0.5 must be set because parameter p20267 is dimensionless and the relationship 50% = 0.5 applies.

### CPU time load through free function blocks with the SINAMICS DCM

Processing free function blocks requires considerable computation time. If little CPU time remains, you have to check whether all the activated function modules are required and whether all the function blocks used need to be computed within the same sampling time.

The CPU time load can be reduced by either deactivating function modules or assigning used function blocks to a runtime group with a longer sampling time.

Table 10- 82 CPU time load through free function blocks with the SINAMICS DCM

Time slice	Number of free function blocks	CPU time load
16 ms	52	+30%
8 ms	23	+30%
5 ms	12	+30%
4 ms	6	+30%
2 ms	3	+30%

### Notes regarding the CPU time

- The actual CPU time load of the CUD can be read out on r9976. Please refer to the Chapter "CPU time load with SINAMICS DCM (Page 657)" for more information about the CPU load on the SINAMICS DCM.
- To make your own calculations, the illustrated CPU time loads can be taken to be "linear". This means that:
  - half as many blocks in the same time slice generate half as much CPU time load, etc.
  - the same number of blocks in time slices half as fast generate half as much CPU time load, etc.
- Each individual free function block can be assigned to a runtime group via parameter (e.g. p20032). Ten runtime groups are available. Every runtime group can be assigned a time slice using p20000.
  - The time slices that can be selected with p20000 = 1 to 1096 are calculated asynchronously to the closed-loop control functions.
  - The time slice that can be selected with p20000 = 9003 is that time slice, in which the setpoint channel (function diagrams 3105 to 3155) is calculated. One of the free function blocks assigned to this time slice is immediately calculated before the functions of the setpoint channel.



## 10.37 Drive Control Chart (DCC)

For complex applications that cannot be implemented with the free function blocks, the DCC technology option is available. With DCC, a function diagram can be graphically created, which comprises elementary function blocks that are connected with each other, and which can then be loaded into the SINAMICS DC MASTER.

The following steps are required to implement an executable DCC control with the SINAMICS DCM:

1. Installation of STARTER and a DCC license on the PC
2. Loading the DCC technology option on to the memory (ROM) in the drive unit.
3. Configure a DCC diagram on the PC (DCC editor)
4. Compile the DCC diagram on the PC and load it into the drive

### Notes

- Detailed information on the function blocks is contained in the "SINAMICS SIMOTION Function Manual DCC Block Description" as well as in the "SINAMICS SIMOTION Programming Manual DCC Editor". This chapter describes the special features of the DCC technology option with SINAMICS DCM.
- Simultaneous use of the free function blocks and the DCC technology option are feasible.
- This additional functionality through DCC increases the CPU time load. That means the maximum possible configuration with a Control Unit may be restricted.
- Before you load a STARTER project with DCC chart into the drive, you must load the DCC technology option into the memory of the drive unit (see the following Chapter). If you attempt to load a DCC chart into the drive, although the DCC technology option is not available in the drive, then the drive signals a fault.  
To eliminate this fault, you have the following options:

1. Now install the DCC technology option as described in the following Chapter. Then, carry out a POWER OFF / ON. Now load the STARTER project together with the DCC chart into the drive.
2. Delete the DCC chart from the STARTER project and load the project into the drive without DCC chart.
3. Restore the factory settings
4. Carry out a POWER OFF / ON.

### 10.37.1 Loading the DCC technology option into the drive unit memory

Loading the DCC technology option into the drive unit is usually performed with STARTER and with the SINAMICS DCM takes about 7 min. During this process, the entire DCB library with a scope of approx. 2 MB data is transferred to the drive.

To accelerate this process, the SINAMICS DCM supports an alternative option for transferring the DCB library to the drive. With this method, the process is shortened to less than 5 min:

- **Step 1**  
In STARTER, open a project that includes a SINAMICS DCM drive with at least one DCC chart. In the shortcut menu (right mouse button), select "Load into file system" (only possible in the offline mode).

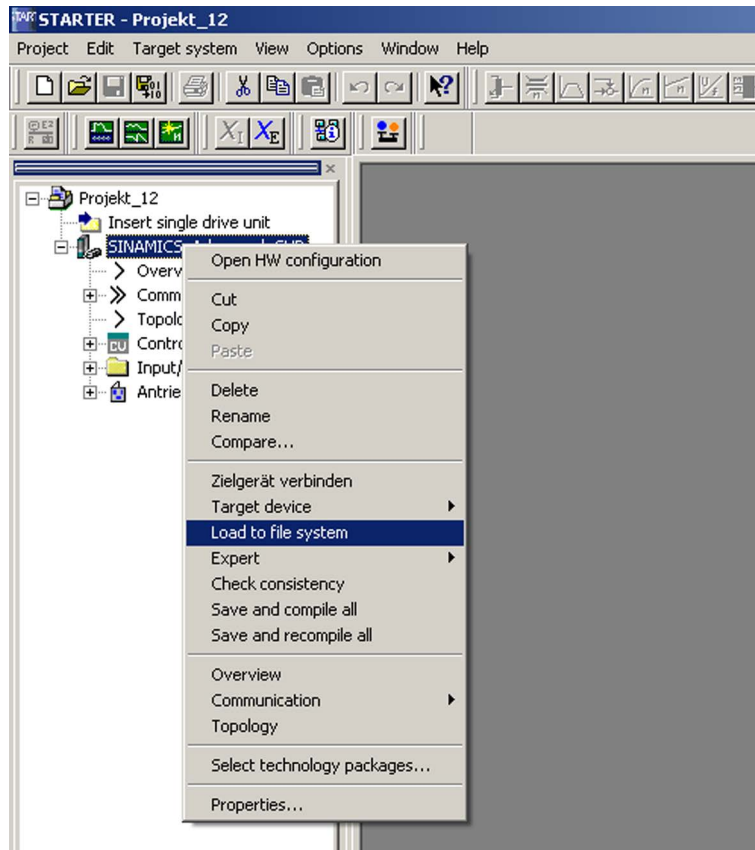


Figure 10-101 Loading into the file system

- **Step 2**  
A dialog, "Load into file system", opens. Choose "Select target" and select an empty folder on a local hard drive.

- **Step 3**  
After a folder has been selected, STARTER copies the DCB library into this local folder. 2 folders named "OEM" and "USER" are created.
- **Step 4**  
Copy the OEM folder to an empty memory card.

---

**Note**

The memory card supplied from Siemens as option S01 or S02 includes, when supplied, a dump of the internal device firmware. These files are only required to update firmware.

These files can be deleted for all other applications of the memory card. Copy the files into a local folder of your PG/PC and delete the files on the memory card, before you use the card for the functions described in this chapter.

---

- **Step 5**  
Insert the CompactFlash Card into the switched-off drive and switch on (POWER ON). The DCB library is copied into the non-volatile memory (ROM) in the drive during power-up. The process is complete as soon as the power-up has ended (operating state 7.0 reached).
- **Step 6**  
Switch device off/on (POWER OFF / POWER ON). After the new power-up, the DCC is ready.
- Repeat **steps 5 and 6** on additional SINAMICS DCM drives.

---

**Note**

If DCC is installed in the drive, the power-up time increases by approx. 10 s.

---

---

**Note**

This procedure does **not** transfer the STARTER parameter assignments into the unit. In order to transfer the parameter assignments from STARTER into the drive, the "Load into the target system" function must be run in STARTER.

---

### 10.37.2 CPU time load through DCC

Calculating the DCC blocks requires CPU time. If the CPU time becomes meager, you have to check whether all the activated blocks are required and whether all the function blocks used need to be computed within the same sampling time.

The CPU time load can be reduced by either deactivating blocks or assigning used blocks to a runtime group with a longer sampling time.

A list of all of the DCC blocks available for SINAMICS DCM and the required computation times are listed in Appendix B.

Table 10- 83 CPU time load DCC blocks left-hand CUD

Time slice	Number of blocks <sup>1)</sup>	CPU time load
1 ms	50	+30%
2 ms	100	+30%
4 ms	200	+30%
6 ms	300	+30%
8 ms	400	+30%
16 ms	800	+30%

<sup>1)</sup> This information applies to a left-hand CUD without additional options. These options increase the basic load of the CUD and reduce the available CPU time for the DCC blocks. Please refer to the "CPU time load with the SINAMICS DCM" chapter for more information about the CPU load.

In this information, an average complexity of the blocks being used is assumed. If only highly complex or very simple blocks are computed, the stated limit shifts accordingly.

#### Notes

- The actual CPU time load of the CUD can be read out in r9976. Please refer to the "CPU time load with SINAMICS DCM (Page 657)" chapter for more information about the CPU load on the SINAMICS DCM.
- To make your own calculations, the previously illustrated CPU time loads can be taken to be "linear". This means that:
  - half as many blocks in the same time slice generate half as much CPU time load, etc.
  - the same number of blocks in time slices half as fast generate half as much CPU time load, etc.

#### Examples

1. In the 1 ms time slice, 50 blocks generate about 30% additional CPU time load. For that reason, 50 blocks in the 2 ms time slice generate about  $30\% \times 0.5 = 15\%$  additional CPU time load.
2. In the 7 ms time slice,  $(300 + 400) / 2 = 350$  blocks generate about 30% additional CPU time load. That means 250 blocks generate  $250 / 350 \times 30\% = 21.5\%$  additional CPU time load.

### 10.37.3 Memory load through DCC

Along with the CPU time load, the memory load of the processor must also be considered when designing a closed-loop control with the DCC technology option. A higher number of configured DCC blocks and @parameters also more highly loads the internal memory (ROM) of the CUD.

For using DCC, on the SINAMICS DCM, as compared with the maximum possible configurations documented in the "Maximum configuration" chapter, depending on the size of the diagram, one must omit optional components. The number of blocks and the @parameters are decisive.

For one CUD without additional options, the following rules apply.

Table 10- 84 Maximum number of DCC blocks and @parameters

Drive object	Number of DCC blocks and @parameters
CU_DC	800
DC_CTRL	600

#### Note

The specified maximum numbers for blocks and @parameters always apply for the entire drive unit and should be regarded as guide values. The CUD is completely utilized with 800 DCC blocks and @parameters on the DO CU\_DC or 600 DCC blocks and @parameters on the DO DC\_CTRL. Conserving @parameters has little effect on the quantity structure of the blocks; the specified maximum numbers for the blocks should therefore not be exceeded.

On the DO DC\_CTRL, due to the large number of drive parameters, fewer DCC blocks can be computed than on the DO CU\_DC.

In addition, the memory is loaded by optional components as follows:

Table 10- 85 Additional memory load through optional components

Component	Additional memory load (expressed in DCC blocks)
AOP30	- 200 blocks
TM31	- 150 blocks
TM15	- 150 blocks
TM150	- 150 blocks
SMC10, SMC30	- 25 blocks
CBE20	- 25 blocks

The final limits are determined by the total memory available on the CUD. If the previously-mentioned recommended maximum limits are exceeded, this can result in errors during upload or download (e.g. fault F1105: CU memory insufficient) and the drive can no longer be switched on; POWER OFF/ON must be performed on the drive unit.

**Sample calculation:**

The SINAMICS DM is equipped with one AOP30 and two TM31 modules. The DCC diagram is to be computed on the DO DC\_CTRL.

→  $600 - 200 - 2 \times 150 = 100$  DCC blocks can be computed on the DO DC\_CTRL.

**Notes:**

- If there is insufficient memory on the CUD for the configuration of the desired DCC diagram, the scope of the blocks needs to be reduced or the SINAMICS DCM needs to be equipped with a 2nd CUD inserted in the right-hand slot.
- The computation rules stated previously also apply to the CUD on the right-hand slot.
- In most cases, the CPU time load of the CUD becomes the limiting factor when designing the DCC application and not the memory load.

### 10.37.4 Backing up the DCC diagrams


A DCC project comprises two parts.

1. Information about the type, time slices and interconnection of the DCB blocks
2. Information about the layout and graphics in the DCC charts


When downloading the DCC chart to the drive (download to the target system), only the information about the type, time slices and interconnection of the DCB blocks (Point 1) are downloaded to the drive.

The DCC charts can also be saved in the target device by selecting the option "Store additional data on the target device". This is recommended if the DCC charts will also be opened by another PG.

A further prompt appears after selecting the "Download to Target System" window. The DCC charts are also saved when both checkboxes are activated.

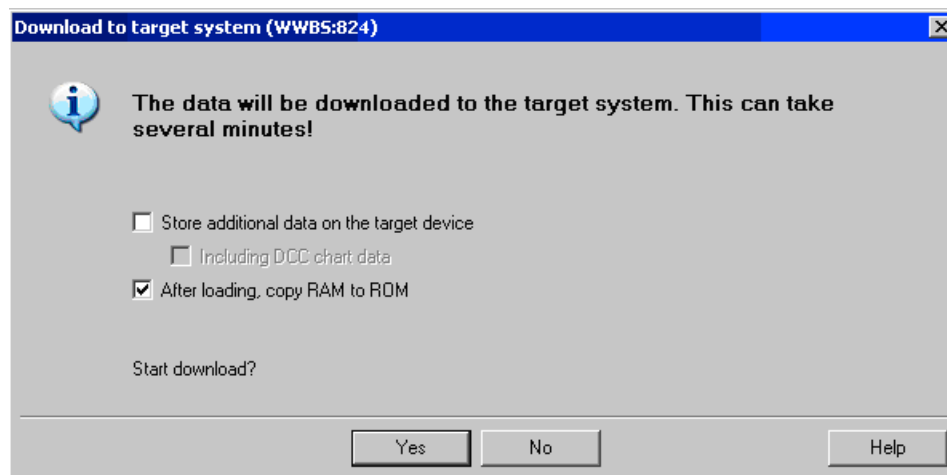

The following prompt appears when selecting "Load to PG" later:

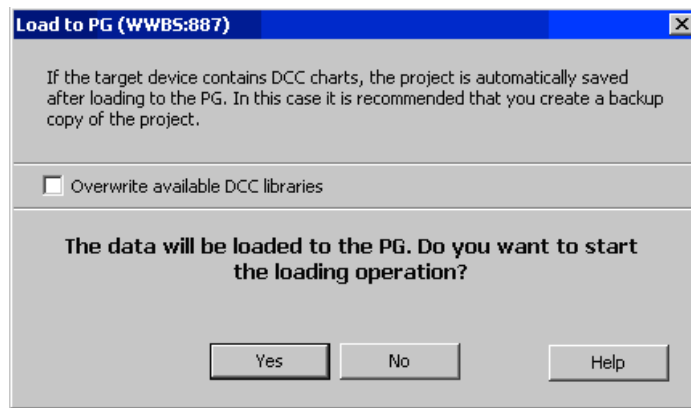

If the checkbox is activated, the DCC charts in the project are overwritten by those in the target device.

The information about layout and graphics in the DCC charts (Point 2) is still available in the STARTER project.

## 10.38 Write and know-how protection

In order to protect your own projects against changes, unauthorized viewing or copying, the "Write protection" and "Know-how protection" (KHP) functions are available.

Protection	Validity	Objective	Effect
Write protection	Online	Protection of the parameterization against inadvertent changes by the user.	p-parameters can be read, but cannot be written.
Know-how protection	Online	Protection of intellectual property, especially the know-how of the machine manufacturers, against unauthorized use or reproduction of their products.	p-parameters can neither be read nor written.

### 10.38.1 Write protection

Write protection prevents settings from being inadvertently changed. No password is required for write protection.

#### Setting up and activating write protection

1. Connect the Control Unit to the programming device.
2. Call STARTER.
3. Download your project.

4. Establish a connection to the target device.
5. Select the required drive unit in the project navigator of your STARTER project.
6. Call the shortcut menu "Write protection drive unit > Activate".

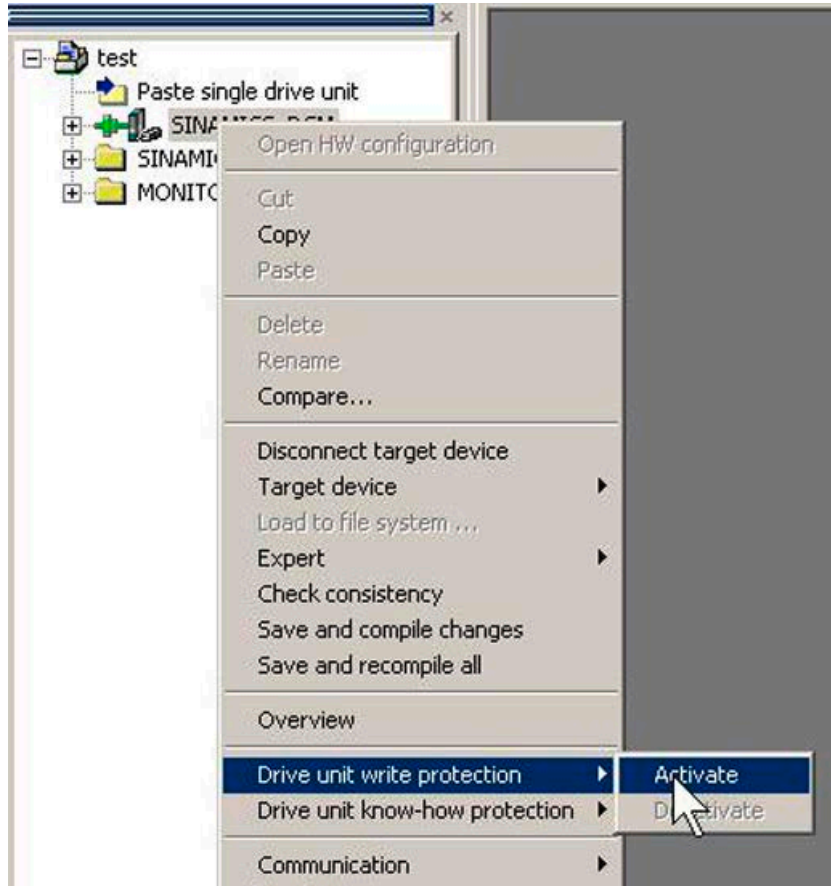


Figure 10-102 Activating write protection

Write protection is now activated. In the expert list you can recognize that write protection is active by the fact that the entry fields of all adjustable parameters are shown with gray shading.

In order to permanently transfer your setting, after changing write protection, you must carry out the "RAM to ROM" data save operation.

---

**Note**

**Know-how protection with active write protection**

If write protection is active, the know-how protection setting cannot be changed.

---

**Note**

**Access via fieldbus**

Per default, in spite of write protection, parameters can be changed via fieldbuses with acyclic access. If write protection should also be active for access operations via fieldbuses, then in the expert list, you must set p7762 to 1.

---



### **Deactivating write protection**

1. Connect the Control Unit to the programming device.
2. Call STARTER.
3. Download your project.
4. Establish a connection to the target device.
5. Select the required drive unit in the project navigator of your STARTER project.
6. Call the shortcut menu "Write protection drive unit > Deactivate".

The hatching in the expert list disappears after deactivation. The parameters can be set again.

### **Parameters without write protection**

Certain parameters are excluded from the write protection in order not to restrict the functionality and operability of the drives. The list of these parameters can be found in the SINAMICS DCM List Manual in Chapter "Parameters for write protection and know-how protection", Section "Parameters with WRITE\_NO\_LOCK".

The "Restore factory settings" function can also be used when write protection is activated.

## **10.38.2 Know-how protection**

The "Know-how protection" function prevents, for example, confidential company know-how for configuration and parameter assignment from being read by unauthorized persons.

The know-how protection requires a password. The password must comprise at least 1 and a maximum of 30 characters.

---

#### **Note**

##### **Password security**

You are responsible for the security of your password. Whenever possible, use a password with sufficient length (min. eight characters); use upper- and lower-case letters and special characters.

---

The know-how protection is a pure online function. Therefore, establish a direct connection to the Control Unit before setting the password.

### Characteristics when know-how protection is activated

- Except for a small number of system parameters and the parameters specified in an exception list, all other parameters are locked. In the expert list, the value of these parameters cannot be read or changed.
- In the expert list of STARTER, the text "Know-how protected" is displayed for the locked parameters instead of the parameter values.
- Know-how protected parameters of the expert list can be hidden in the "Online value of the Control Unit" drop-down list via the entry "Without know-how protection".
- The values of display parameters remain visible.
- The contents of screen forms are not displayed when know-how protection is active.
- Know-how protection can be combined with copy protection.

### Functions locked using know-how protection

The following listed functions are inhibited when know-how protection is active:

- Download
- Trace function
- Function generator
- Deleting the alarm history
- Creating acceptance documentation

### Functions that can only be partly executed with know-how protection

The following listed functions can only be partly executed when know-how protection is active:

- Displaying the topology (actual topology only)
- Upload (restricted scope; see Chapter "OEM exception list (Page 674)")

### Functions that can be executed for know-how protection

The following listed functions can still be executed despite of the fact that know-how protection is activated:

- Restoring factory settings
- Acknowledging alarms
- Displaying alarms and warnings
- Displaying the alarm history
- Reading out the diagnostic buffer
- Switching over to the control panel (fetch the master control, all the buttons and setting parameters)
- Displaying created acceptance documentation

### Parameters that can be changed when know-how protection is active

In spite of active know-how protection, certain parameters can be changed and read. The list of these parameters can be found in the SINAMICS DCM List Manual in Chapter "Parameters for write protection and know-how protection", Section "Parameters with KHP\_WRITE\_NO\_LOCK".

### Parameters that can be read when know-how protection is active

In spite of know-how protection being active, additional parameters can be read, but are locked against changes. The list of these parameters can be found in the SINAMICS DCM List Manual in Chapter "Parameters for write protection and know-how protection", in Section "Parameters with KHP\_ACTIVE\_READ".

---

#### Note

##### Password check for know-how protection

Please note that if the Windows language settings are changed, after activating know-how protection, errors can occur when subsequently checking the password. If you use language-specific special characters, you must ensure that the same language setting is active on the computer for subsequent entry of the password.

---

#### Note

##### Data security of the memory card

After setting up and activating the know-how protection, for encrypted data backup on the memory card, previously backed up, non-encrypted data of the SINAMICS firmware will be deleted. This is the standard deletion procedure, in which only the entries on the memory card are deleted. The data itself is still available and can be reconstructed.

To ensure know-how protection, we recommend the use of a new empty memory card. If you cannot obtain a new memory card in the short term, you should delete all safety-related data on the current memory card.

To completely delete your previous data on the memory card, you must reliably delete this data using a suitable PC tool before activating know-how protection. The data is located on the memory card in the "\\USER\SINAMICS\DATA" directory.

---

#### Note

##### Diagnostics under know-how protection

If service or diagnostics is to be performed when know-how protection is active, then Siemens can only provide support in collaboration with the OEM partner.

---

### 10.38.2.1 Copy protection

#### Features of the activated copy protection

Copy protection prevents project settings from being copied and transferred to other Control Units.

Additional features include:

- Copy protection can only be activated in conjunction with the know-how protection (see Chapter "Activating know-how protection (Page 675)").
- When copy protection is activated, the memory card and Control Unit are connected with one another and only function together.
- The copy protection prevents the use of each memory card with copied data of one Control Unit in another Control Unit.
- With the exception of the DCC library, the copy-protected data on the memory card cannot be read or copied. If a copied memory card is used, a copy protection error is displayed and a pulse inhibit set.

### 10.38.2.2 Configuring know-how protection

#### Requirements

Before activating know-how protection, the following conditions must be met:

- The drive unit has been fully commissioned.  
(Configuration, download into the drive unit, complete commissioning. You have then carried out an upload in order to upload the parameters calculated by the drive into the STARTER project.)
- The OEM exception list has been created (see below).
- To guarantee know-how protection, you must ensure that the project does not remain at the end user as a file.

#### Creating the OEM exception list

Before activating the know-how protection, enter the parameters in this exception list that are to remain readable and writable despite the know-how protection. The exception list can only be created via the expert list. The exception list has no influence on the input screen forms in STARTER.

Factory setting for the exception list:

- p7763 = 1 (exception list contains precisely one parameter)
- p7764[0] = 7766 (parameter number for entering the password)

**Procedure**

1. Use parameter p7763 to define the required number of parameters for the exception list.  
You can enter a maximum of 500 parameters in the exception list.
2. Execute the "Load to PG" function.  
Parameter p7764 is adapted in the expert list according to the setting in p7763. Indices are inserted or deleted depending on the setting.
3. In parameter p7764[0...n], assign the individual indices of p7763 to the required parameter numbers.
4. Transfer the changes to the Control Unit so that they can become effective.

---

**Note****Parameters of the exception list are not checked**

The Control Unit does not check which parameters you include or delete in the exception list.

---

**Absolute know-how protection**

By removing parameter p7766 from the exception list of p7764[0] = 0, you prevent any access at all to the data of the Control Unit and your project settings. It is then impossible to read or change the protected data. The know-how protection and the copy protection can no longer be canceled or deactivated.

**Activating know-how protection**

1. Connect the Control Unit to the programming device.
2. Call STARTER.
3. Open your project.
4. Establish a connection to the target device.
5. Select the required drive unit in the project navigator of your STARTER project.

6. In the shortcut menu, select "Drive unit know-how protection > Activate".

The "Activate Know-how Protection for Drive Object" dialog box opens.

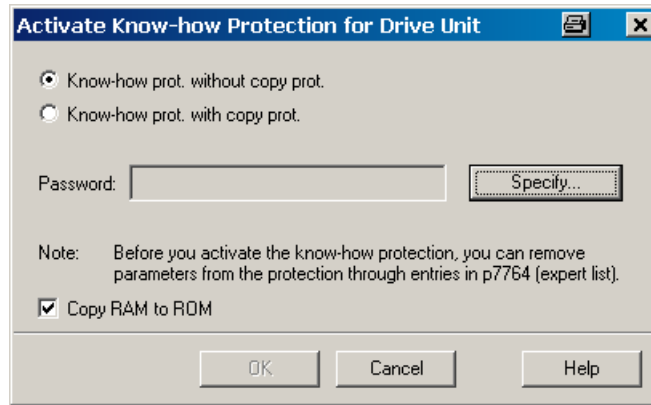


Figure 10-103 Activating

The "Know-how protection without copy protection" option is active by default.

7. If you want to activate the copy protection in addition to know-how protection, click the "Know-how protection with copy protection" option.
8. Click "Specify".

The "Know-how Protection for Drive Object – Specify Password" dialog box opens.

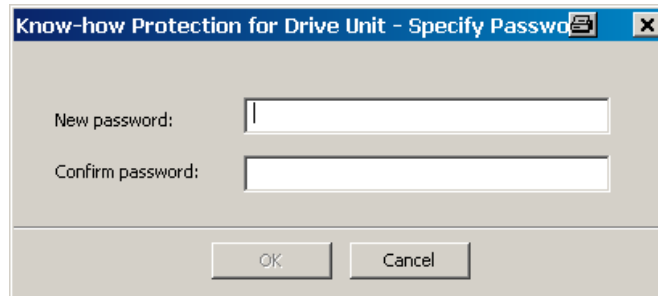


Figure 10-104 Setting the password

9. In the "New password" field, enter the password (1 to 30 characters). Pay attention to upper- and lower-case.
10. Enter it again in the "Confirm password" field and click "OK" to confirm the entry.

The dialog box is closed and the password is shown in encrypted form in the "Activate Know-how Protection for Drive Object" dialog box.

The "Copy RAM to ROM" option is active by default and ensures that the know-how protection is permanently stored in the Control Unit. If you only want to activate the know-how protection temporarily, you can deactivate this option.

11. Then click "OK".

Know-how protection is now activated. The text "Know-how protected" is in all protected parameters of the expert list instead of the content.

## Deactivating know-how protection

1. Connect the Control Unit to the programming device.
2. Call STARTER.
3. Open your project.
4. Establish a connection to the target device.
5. Select the required drive unit in the project navigator of your STARTER project.
6. In the shortcut menu, select "Drive unit know-how protection > Deactivate"

The "Deactivate Know-how Protection for Drive Unit" dialog box opens.

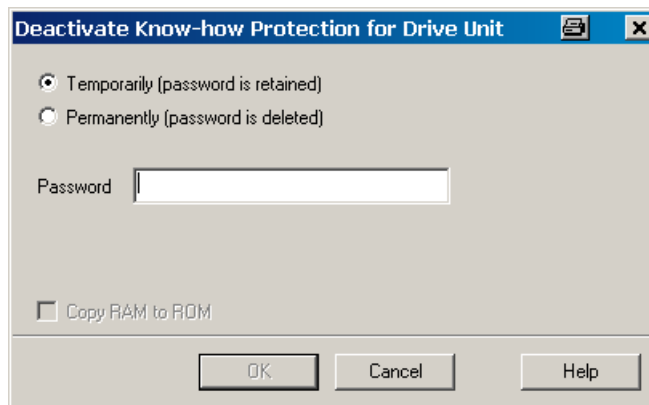


Figure 10-105 Deactivating

7. Select whether you want to deactivate the know-how protection "Temporarily" or "Permanently" by clicking the corresponding checkbox.
  - "Temporarily" deactivating: Know-how protection is active again after switching off and switching on.
  - "Permanently" deactivating: Know-how protection remains deactivated even after switching off and switching on again.

If you select "Permanently", you can also carry out a data backup on the Control Unit with "Copy RAM to ROM". The checkbox with the same name is active in this case and is automatically activated. If you deactivate this checkbox, you must perform a manual "RAM to ROM" data backup later if the know-how protection remains deactivated after switching off and on.

8. Enter your password, and click "OK".

Know-how protection is now deactivated. The values of all parameters are displayed again in the expert list.

## Changing the password

A password can only be changed when know-how protection is activated.

To change the password for the know-how protection, proceed as follows:

1. Connect the Control Unit to the programming device.
2. Call STARTER.
3. Open your project.
4. Select the required drive unit in the project navigator of your STARTER project.
5. Call the shortcut menu "Drive unit know-how protection > Change password".

The "Change Password" dialog box opens.

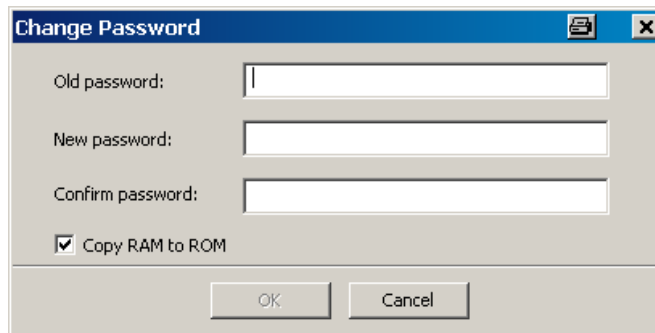


Figure 10-106 Changing the password

6. Enter your old password in the uppermost text box.
7. Enter your new password in the following text box and repeat it in the lowest text box.

The "Copy RAM to ROM" option is active by default and ensures that the new password for the know-how protection is permanently stored in the Control Unit. If you only want to change the password temporarily, you can deactivate this option.

8. Click "OK" to close the dialog box.

Once the password has been changed successfully, you will receive a confirmation.

### 10.38.2.3 Loading know-how protected data to the file system

Data with know-how protection can be directly loaded or saved to the file system from the drive unit. The activated know-how protection ensures that the data cannot be forwarded to unauthorized third parties.

The following applications are conceivable at the end user:

- Adaptations of encrypted SINAMICS data are required.
- The memory card is defective.
- The Control Unit of the drive is defective.



In these cases, the OEM can create a new encrypted subproject (for a drive object) via STARTER. The serial number of a new memory card or a new Control Unit is saved in this encrypted data record in advance.

### Application example: Control Unit is defective

#### Scenario:

The Control Unit of an end user is defective. The machine manufacturer (OEM) has the end user's STARTER project files of the machine.

#### Sequence:

1. The end user sends the OEM the serial numbers of the new Control Unit (r7758) and the new memory card (r7843), and specifies the machine in which the Control Unit is installed.
2. The OEM loads the STARTER project data of the end user.
3. The OEM performs the STARTER function "Load to file system" (see Chapter "Save data to the file system (Page 678)").
  - The OEM specifies whether the data is to be stored zipped or unzipped.
  - The OEM makes the required know-how protection settings.
  - The OEM enters the serial numbers of the memory card and the new Control Unit.
4. The OEM sends the stored data to the end user (e.g. by e-mail).
5. The end user copies the "User" directory to the new memory card and inserts it into the new Control Unit.
6. The end user switches on the drive.

When powering up, the Control Unit checks the new serial numbers and deletes the values p7759 and p7769 if they match.

After it has powered-up without any errors, the Control Unit is ready for operation. The know-how protection is active.

If the serial numbers do not match, then fault F13100 is output.

If required, the end user must re-enter the changed parameters from the OEM exception lists.

### Calling the "Load to File System" dialog box

1. Call STARTER.
2. Open the required project.
3. Select the required drive unit in the project navigator of your STARTER project.

4. Call the "Load to file system" function.

The "Load to File System" dialog box opens.

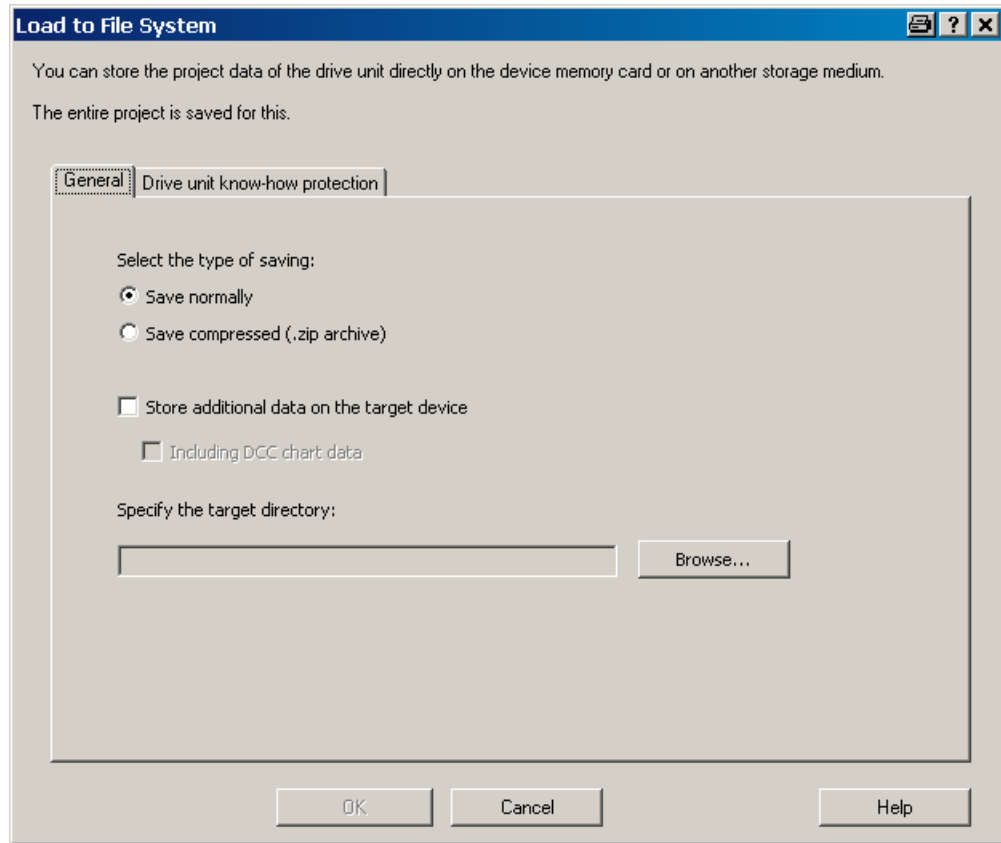


Figure 10-107 Load to file system (default setting)

### Specifying the general memory data

The "General" tab is displayed automatically when the dialog is called. The "Save normally" option is activated by default.

1. If you want to save the data in compressed form, click the "Save compressed (.zip archive)" option button.

The "Store additional data on the target device" option is deactivated in the default setting.

2. If you want to store additional data, such as program sources, on the target device, activate this option.

Optionally you can also activate "Including DCC chart data". Graphical chart data can then also be stored.

3. Then enter the path for the storage directory in the appropriate input field, or click "Browse" and select the directory in your file system.

## Configuring know-how protection

Make the settings for the know-how protection on the "Drive unit know-how protection" tab.

1. Click the "Drive unit know-how protection" tab.


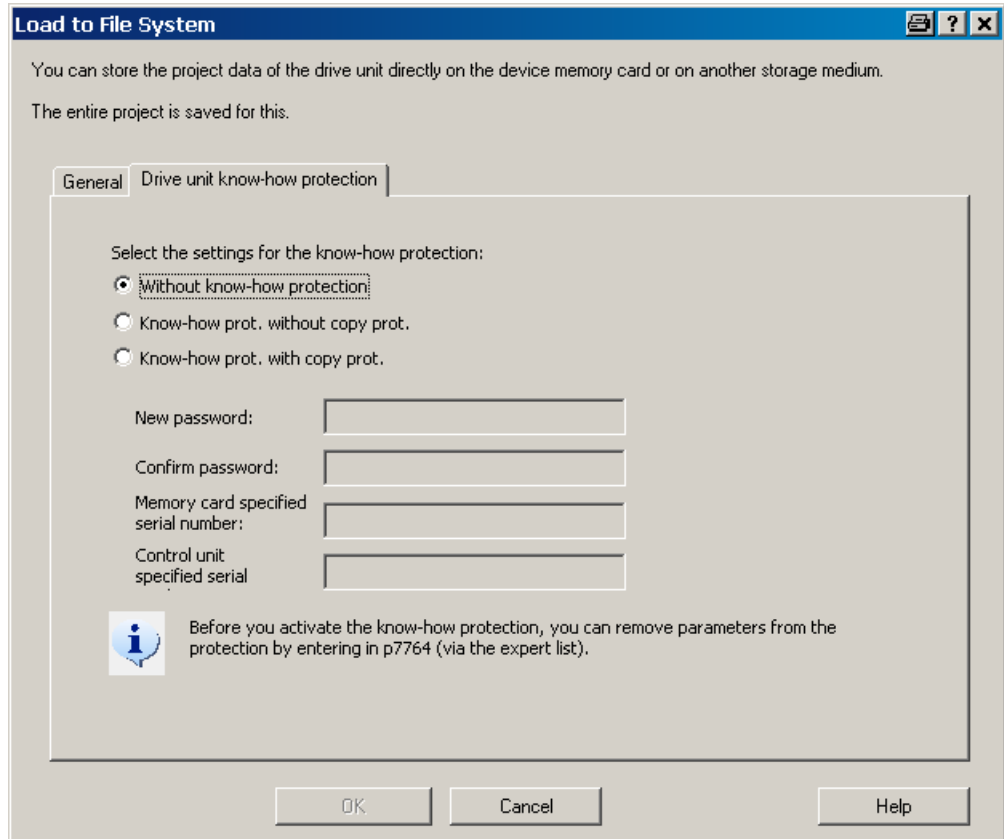


Figure 10-108 Load to file system know-how protection

By default, the "Without know-how protection" option is active. If you really want to store the data without protection (not recommended), you can exit the dialog box with "OK" or "Cancel" at this point.

2. If you want to save with protection, activate the "Know-how protection without copy protection" or "Know-how protection with copy protection" option.

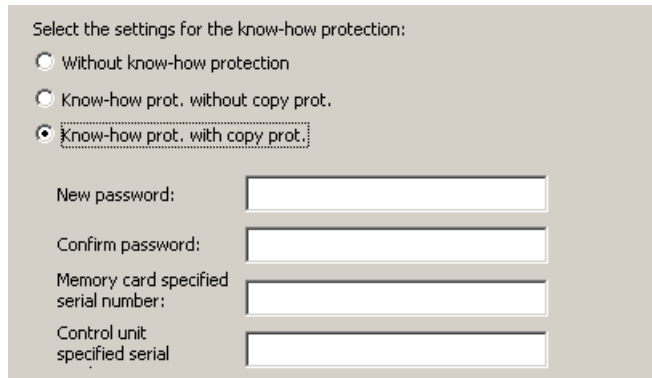

The screenshot shows a dialog box titled "Select the settings for the know-how protection:". It contains three radio button options: "Without know-how protection", "Know-how prot. without copy prot.", and "Know-how prot. with copy prot.". The third option is selected. Below the radio buttons are four input fields: "New password:", "Confirm password:", "Memory card specified serial number:", and "Control unit specified serial".

Figure 10-109 Activating load to file system know-how protection

The input fields are then active. Without copy protection, only the input fields for password input are active. With copy protection, the two input fields for the serial number are also active. Generally, the entries in the input fields are shown in encrypted form.

3. Enter the required password in the "New password" field and enter it again in the "Confirm password" field.
4. Enter the serial number of the new memory card for which the data is intended.  
If you have selected the "Know-how protection with copy protection" option, the input of the Control Unit serial number is also obligatory.
5. In this case, also enter the serial number of the Control Unit in the appropriate input field.
6. Click "OK" to confirm the settings you made.

## Result

The data of the subproject is stored in the required encryption in your file system. With the aid of this encrypted data, an end user can install a new memory card or Control Unit for the drive unit.

### 10.38.3 Overview of important parameters

#### Overview of important parameters (see SINAMICS DCM List Manual)

- r7758[0...19] KHP Control Unit serial number
- p7759[0...19] KHP Control Unit reference serial number
- r7760 Write protection / know-how protection status
- p7761 Write protection
- p7762 Write protection multi-master fieldbus system access behavior
- p7763 KHP OEM exception list number of indices for p7764
- p7764[0...n] KHP OEM exception list
- p7765 KHP memory card copy protection
- p7766[0...29] KHP password input
- p7767[0...29] KHP password new
- p7768[0...29] KHP password confirmation
- p7769[0...20] KHP memory card reference serial number
- r7843[0...20] Memory card serial number



 **WARNING**

**Not observing fundamental safety instructions and residual risks**

The non-observance of the fundamental safety instructions and residual risks stated in Chapter 1 can result in accidents with severe injuries or death.

- Adhere to the fundamental safety instructions.
- When assessing the risk, take into account remaining risks.



 **DANGER**

**Electric shock due to the residual charge of the TSE capacitors**

Because of the TSE capacitors, a hazardous voltage is present for up to 5 minutes after the power supply has been switched off.

Contact with live parts can result in death or serious injury.

- Only open the device after five minutes have elapsed.

The converter unit must be provided with extensive protection measures against contamination in order to prevent voltage flashovers and, therefore, destruction. Dust and foreign bodies, which are brought in by the cooling-air flow in particular, must be thoroughly removed at certain intervals; this depends on the rate of accumulation of dirt, but should be carried out at least every 12 months. The unit must be blown out with dry compressed air at a maximum of 1 bar, or cleaned using a vacuum cleaner.

The screw connections (also the protective conductor connections) must be retightened each time that maintenance work is carried out on the SINAMICS DCM.

Please note the following when working with converter units featuring increased air cooling:

- The bearings for the fans are designed for an operating period of 30000 hours. The fans must be replaced in good time to ensure the continued availability of the thyristor sets.

## 11.1 Upgrading firmware releases

This chapter describes how you can upgrade a drive – including STARTER project – from one firmware version to a higher firmware version (e.g. V1.1 to V1.2).

### Basic information

The following steps are necessary:

- Upgrading the device firmware
  - Step 1: Backup the configuration
  - Step 2: Firmware update of the drive (incl. I/O)
  - Step 3: Update the STARTER project
  - Step 4: Load into the target system, RAM to ROM
- Upgrade the DCC technology option (optional)
  - Step 5: Update the DCC technology option (DCBLIB) and the DCC charts
  - Step 6: Load into the target system, RAM to ROM

---

### Note

A memory card is required for the firmware update (see Chapter "Ordering information for options and accessories (Page 30)").

---

When updating the firmware, always proceed as follows:

1. Firmware update of the drive
  - Insert the memory, then switch the electronic power supply OFF and ON again. The device firmware is now installed.
  - Switch the electronic power supply OFF and ON again. The device firmware just installed now powers up.  
If neither a CBE20 nor DRIVE-CLiQ components are available, the drive is ready for operation.  
However, if a CBE20 or DRIVE-CLiQ components or both are available, the firmware of these components is updated during the power-up of the device firmware. At the end of the power-up of the device firmware, the DRIVE-CLiQ components indicate that a restart is required through flashing red LEDs. Alarm A1006 also appears. Switch the electronic power supply OFF and ON again a third time.
  - If only a CBE20 is connected, there is no indication after the second OFF and ON that the CBE20 also requires a restart so that the CBE20 firmware installed in the previous step is also started. However, a third OFF and ON of the electronic power supply is also required in this case.
2. Update the STARTER project
3. Load the converted STARTER project to the drive (load to the target device)



Do not proceed as follows:

1. Firmware update of the drive
2. Create a NEW STARTER project
3. Load into the PG

In this case, under certain circumstances, STARTER cannot assign the project to the correct drive version. If the STARTER project is not available, generate a new project with the old device version (load into the PG before the firmware update) and then proceed as normal.

### 11.1.1 Upgrading the device firmware

#### Note

##### Hardware/firmware compatibility

The hardware version of the Control Unit (CUD) must be taken into account when updating the device firmware. See the table below.

The hardware version can be read from the label on the right-hand side of the CUD.

CUD (print on label)	Executable firmware versions
C98043-A7100-L1-... C98043-A7100-L2-... C98043-A7100-L100-... C98043-A7100-L200-...	1.1, 1.2, 1.3
C98043-A7100-L3-... C98043-A7100-L4-... C98043-A7100-L103-... C98043-A7100-L204-...	All versions
A5E...	All versions

#### Step 1: Backup the configuration

The drive parameter assignment is not lost while updating the firmware. Nevertheless, before starting the firmware update, back up the drive configuration:

- Backup the parameter assignment on a memory card (see Chapter "Functions of the memory card") and/or
- Backup the parameter assignment in a STARTER project (see Chapter "Commissioning with the STARTER commissioning tool (Page 287)")

## Step 2: Firmware update of the drive

### Notes:

Only those memory cards that Siemens has prepared for these systems are accepted. If the memory card is formatted, then this must always be realized with the FAT16 setting. Download the current firmware version: See preface

### Procedure:

1. Unzip the \*.zip file to an empty memory card
2. Insert the card in the drive, which has been switched-off, and switch the device on again. A firmware update is being performed. The update has been completed if the RDY-LED and the DP1-LED flash at 0.5 Hz (the update takes about 12 min).
3. Carry out a POWER OFF. Remove the memory card from the drive.

### NOTICE

#### Removing the memory card before POWER ON

If the memory card is not removed from the drive before the POWER ON, the parameterization in the drive is copied to the memory card during power-up, or a parameterization already on the card copied to the drive.

For a detailed description of this function, see Chapter "Memory card functions (Page 359)", Section "Copying parameter data sets from non-volatile memory to the memory card".

4. Carry out a POWER ON. The new firmware is now active.

If a memory card is already in the drive, the following mechanism described in Chapter "Memory card functions (Page 359)", Section "Copying parameter data sets from non-volatile memory to the memory card" takes effect.

- The connected TM modules and/or SMC10 or SMC30 carry out a firmware update when powered up for the first time. After the firmware update of these components, it is necessary to carry out a POWER OFF / POWER ON for these components. The memory card no longer needs to be inserted for this step.
- An optionally connected AOP30 indicates that new AOP firmware is available. Confirm the prompt after the update with "OK".

### Note

As a result of the device firmware update, DCC charts in the device are not automatically upgraded to the new DCC version. This is also not absolutely necessary. See also Step 5 (next chapter).

**Note**

The electronic power supply must not be interrupted during the firmware update, otherwise the update will need to be restarted.

---

**Note**

To safely remove the memory card, see Chapter "Memory card functions (Page 359)".

---

**Step 3: Update the STARTER project**

Install the SSP that matches the new firmware version (e.g. SSP SINAMICS DCP V1.2).

SSPs for different versions of the same drive can be simultaneously installed in STARTER.

Open the existing STARTER project (that refers to an old device version). Right-click the device in the project navigator and select "Target device" → "Device version...". Select the new device version and confirm with "Change version". The project is converted to the new device version.

---

**Note**

STARTER does not support a "downgrade" of the firmware version (e.g. V1.2 to V1.1).

---

**Step 4: Load into the target system, RAM to ROM**

Load the project into the drive (load into the target system) and permanently save the parameter assignment (carry out RAM to ROM).

### 11.1.2 Upgrading the DCC technology option

#### Step 5: Update the DCC technology option (DCBLIB) and the DCC charts

It is not absolutely necessary to upgrade the DCC library. Only upgrade the DCC library if you wish to use functions that the old DCC library does not support.

It is only possible to upgrade the DCC library via the associated STARTER project. While upgrading, it is not permissible that there is a DCC chart in the drive.

After you have upgraded the unit firmware according to the previous chapter, update the DCC technology option as follows:

- Establish a connection to the drive using STARTER.
- Delete the parameter assignment and DCC charts in the drive, by setting p0976 to 200. After deleting, the parameterization including the DCC charts only exist in STARTER.
- After the system was reset via p0967 = 200, re-establish a connection to the drive via STARTER.
- Import the new DCC library (see Chapter "Drive Control Chart (DCC) (Page 663)")

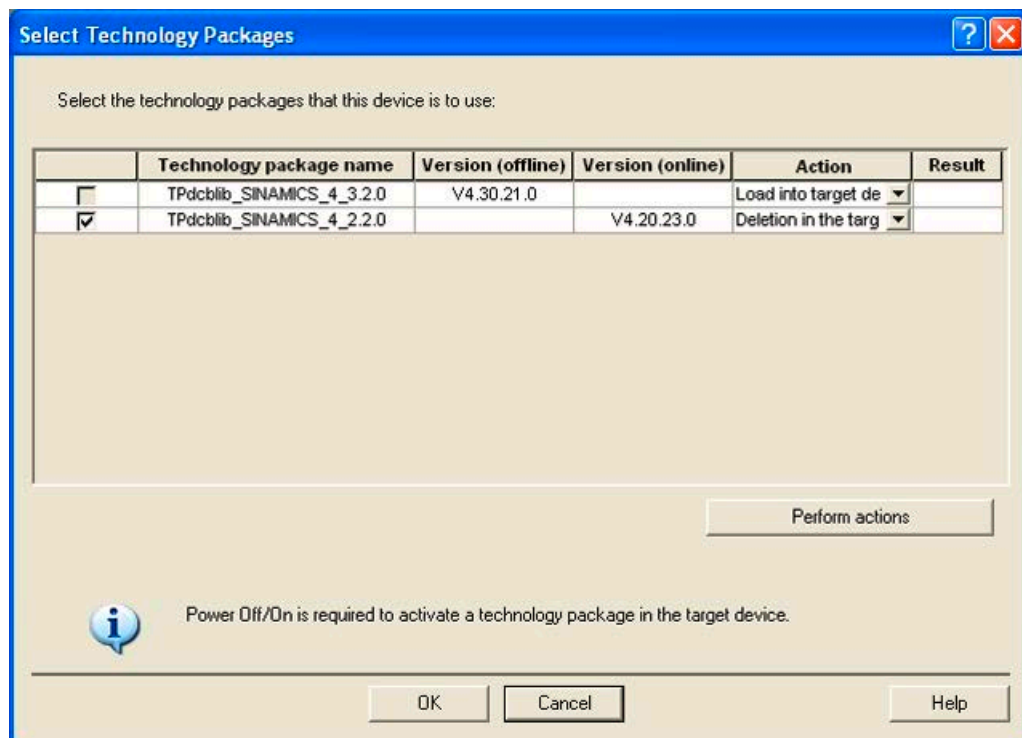


Figure 11-1 Selecting technology packages

- Carry out a POWER OFF / POWER ON to activate the new DCC library.

- Convert the existing DCC Charts
  - Open the DCC editor by double clicking on the DCC chart
  - In the DCC editor, in the menu, selection "Options" → "Block types..."
  - Answer the question "Do you wish to update the block types in the DCC editor" with "OK".

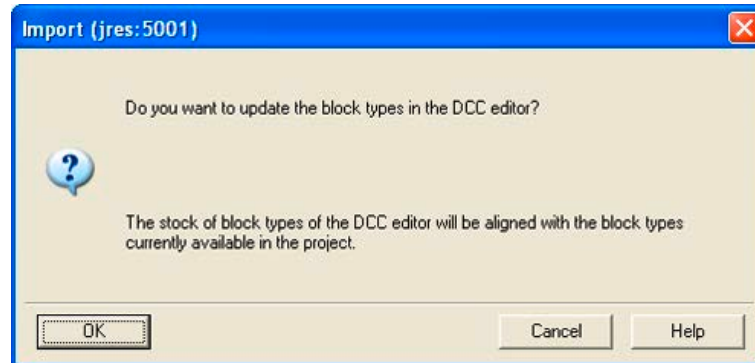


Figure 11-2 Importing the DCC library (1)

- Shift the DCC library, which appears in the left-hand window, to the right with ">>"

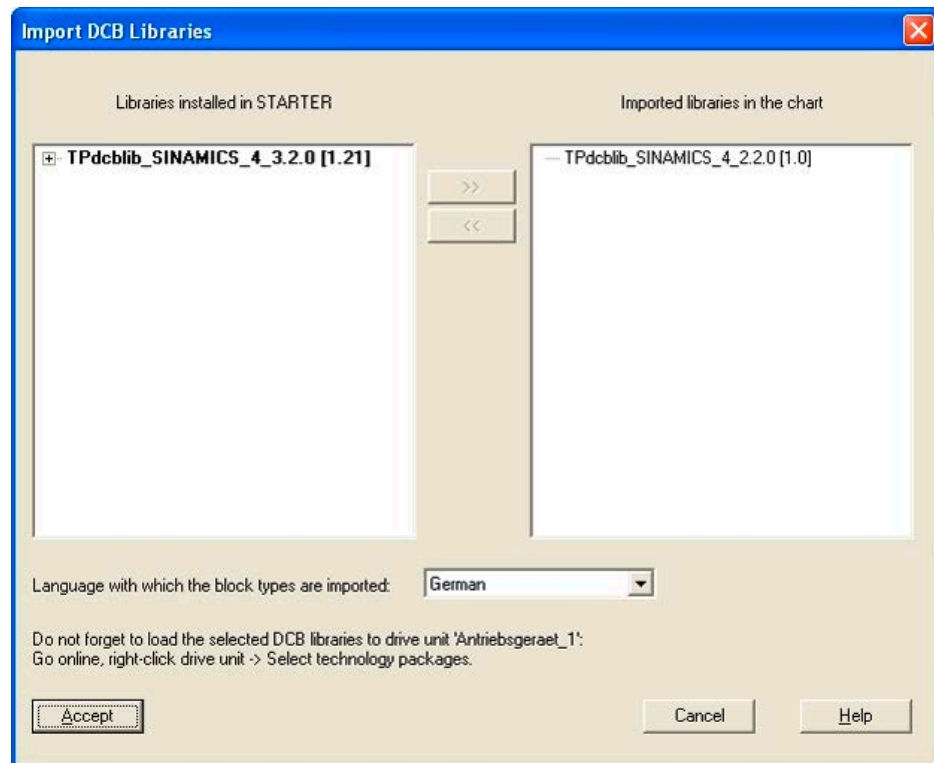


Figure 11-3 Importing the DCC library (2)

- Select "Accept"
- The chart is compiled into the new version
- Perform these steps for all DCC charts which are in the drive.

### Step 6: Load into the target system, RAM to ROM

Load the project into the drive (load into the target system) to upgrade the charts in the drive to the new version and permanently save the parameter assignment (carry out RAM to ROM).

## 11.2 Replacing components

---

### Note

Only authorized Siemens personnel are permitted to repair the power unit.

Exception: Fuses may also be changed by the customer.

---


### 11.2.1 Replacing the fan

<b>NOTICE</b>
<b>Device overheating in the case of incorrect phase sequence</b> An incorrect phase sequence (counter-clockwise phase sequence = fan rotates the wrong way) may create a risk of the device overheating. <ul style="list-style-type: none"><li>• Check the correct direction of rotation of the fan following fan replacement.</li><li>• If the fan rotor rotates in a counter-clockwise direction (to the left) when viewed from above, then the direction of rotation is correct.</li></ul>



The recommendation to replace the fan is displayed in the form of alarm A60165, refer to Chapter "Operating hours counter, unit fan (Page 581)".


## Replacing fans in 210 to 280 A devices

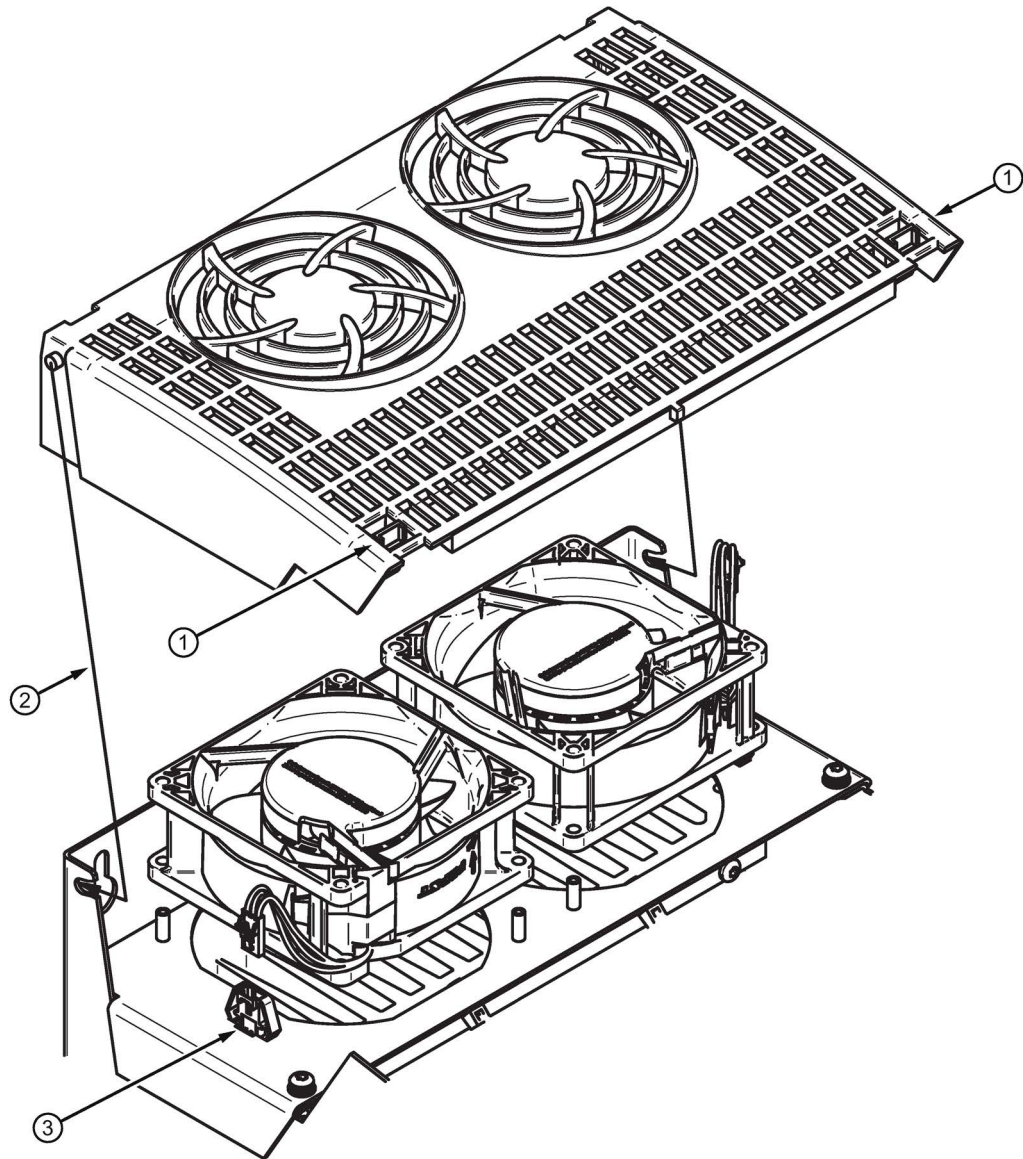

1. Release the fan cover at the top left and right ①
2. Swivel the fan cover through approximately 30°, and withdraw it to the front ②
3. Remove the fan connector ③
4. Replace the fans
5. When installing a new fan ensure that it is in the correct mounting position:  
The air must be blown upwards (see the arrow on the fan enclosure)
6. Reinsert the fan connector and attach the fan cover

Figure 11-4 Replacing fans in 210 - 280 A devices

### Replacing fans in 400 to 850 A devices

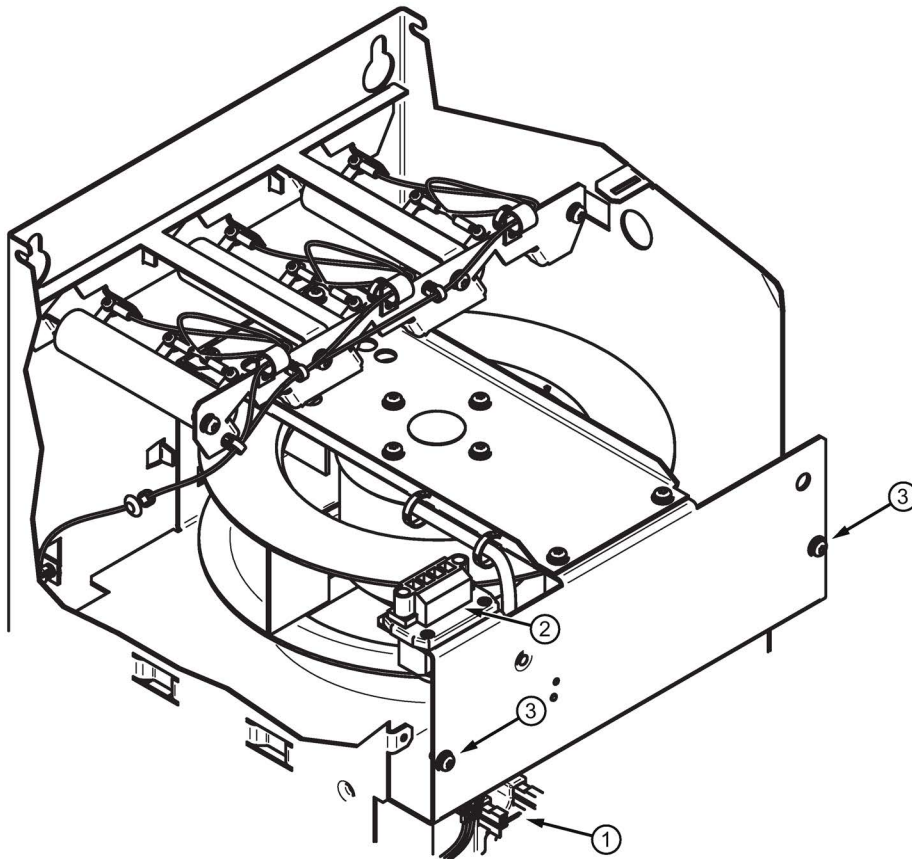


1. Remove the front cover of the SINAMICS DC MASTER
2. Withdraw the connector for the fan sensor ①
3. Withdraw the connector for the fan power supply ②
4. Loosen the screws ③ (tool: Torx T20 screwdriver)
5. Withdraw the fan module towards the front
6. Insert the new fan module and tighten the fastening screws (tightening torque 1.5 Nm), reinsert the connector and reattach the front cover

Figure 11-5 Replacing fans in 400 - 850 A devices




## Replacing fans in 1200 A devices

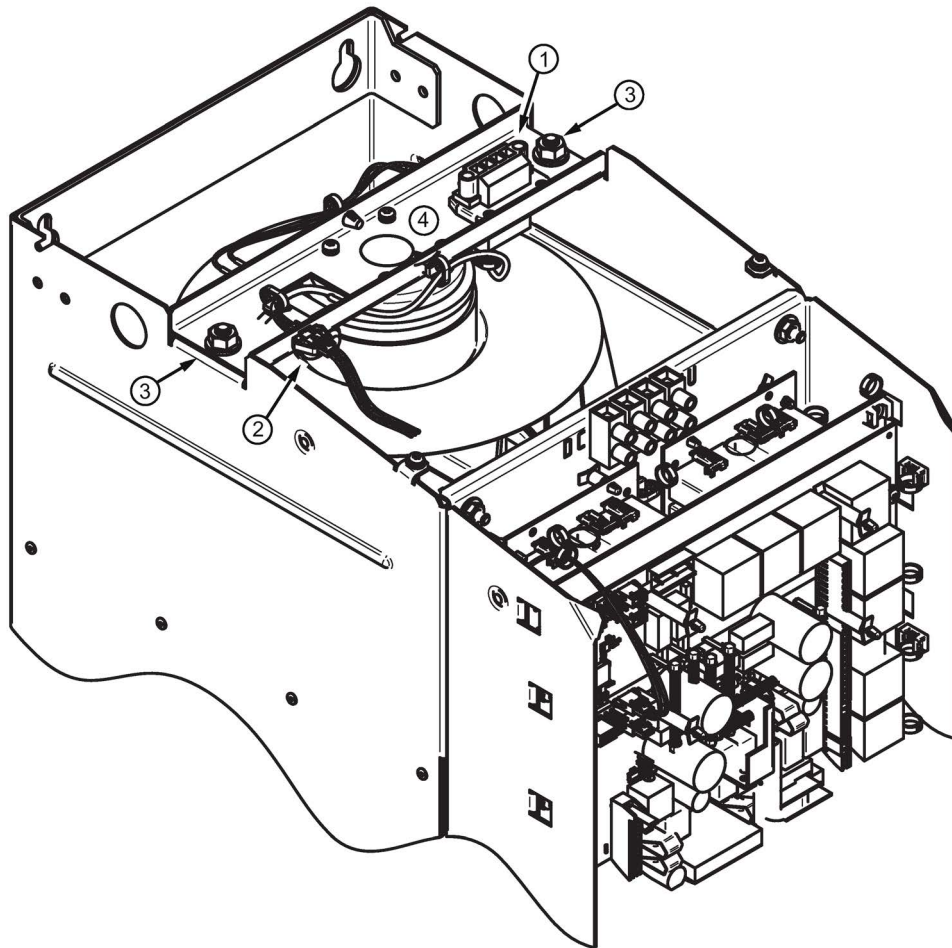

1. Remove the front cover of the SINAMICS DC MASTER
2. Withdraw the fan connector ① and the fan monitoring ②
3. Release the nuts ③
4. Remove the fan including the fan support strut
5. Install the new fan in the reverse sequence, tightening torque for the nuts ③ = 15 Nm


Figure 11-6 Replacing fans in 1200 A devices

### Replacing fans in 1500 to 3000 A devices

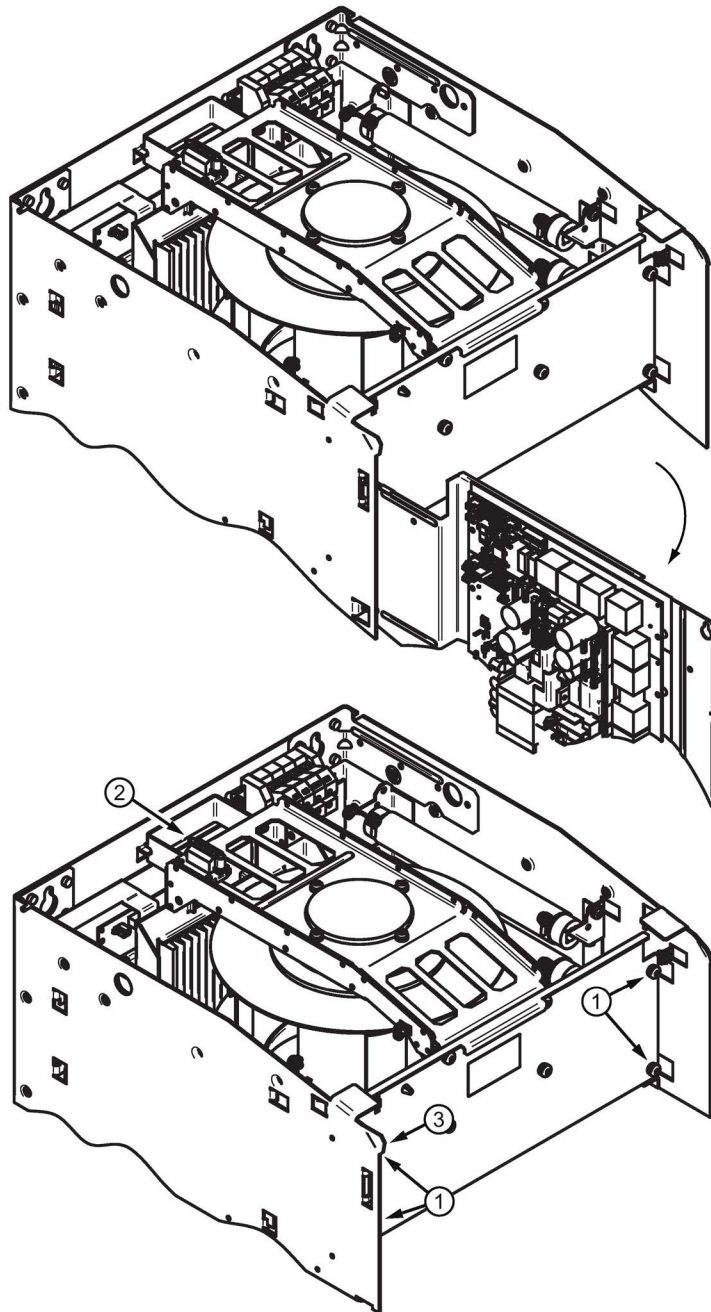

1. At the device, remove the front panel and the upper cover
2. Release the support plate for the electronics and swing it out to the side
3. Release the fastening screws for the fan module ①
4. Withdraw the fan connector ② and the fan monitoring (3-pole) ③

Figure 11-7 Replacing fans in 1500 - 3000 A devices (1)

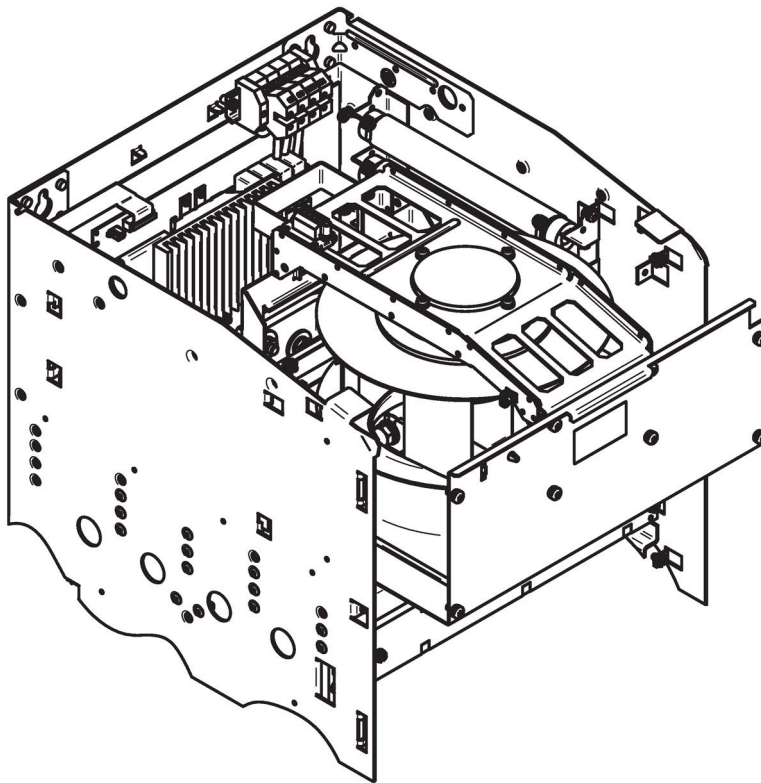

1. Withdraw the fan module towards the front
2. Insert the new fan module and tighten the fastening screws, tightening torque = 6 Nm
3. Reinsert the plug connectors
4. Swivel back the support plate for the electronics and screw into place; tightening torque = 3 Nm
5. Re-attach the front plate and the top cover

Figure 11-8 Replacing fans in 1500 - 3000 A devices (2)

### 11.2.2 Replacing fuses

**NOTICE**

**Device failure after fuse trips**

When a fuse trips, the neighboring arm fuses may also be damaged. Not replacing all fuses at the same time can cause the device to fail.

- After a fuse trips, always replace all arm fuses at the same time. Always use fuses of the same type.
  - For units > 850 A, as described here, these are the fuses installed in the unit.
  - For units ≤ 850 A, these are the externally installed fuses.

#### Replacing fuses for 900 A to 1200 A units

The fuses are accessible from the front after removing the front cover and swiveling the support plate for the electronics out of the way. The fuses are fixed with 2 hex screws each ① (width across flats 16). Tightening torque 25 Nm.

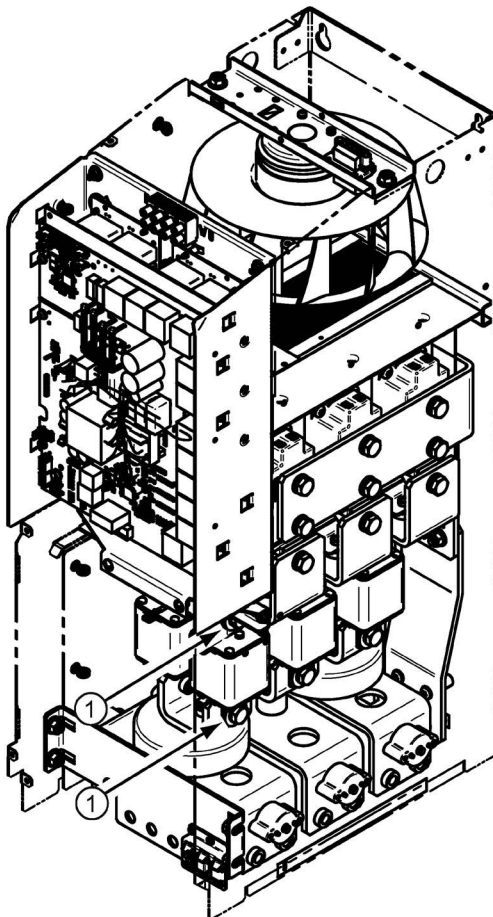


Figure 11-9 Fuse replacement devices 900 A to 1200 A

## Replacing fuses for 1500 A to 3000 A units

The fuses are accessible after removing the front cover and withdrawing the fan module (see the previous chapter). Each fuse is fixed with 2 hex screws. Tightening torque 25 Nm.

### NOTICE

#### Damage to the device due to improper fuse installation

Incorrect installation of the fuses can cause damage to the device.

- When installing the fuses, observe the following instructions:
  - Install the fuses with the same alignment as the fuses to be replaced. The rupture indicator of the fuses in the left-hand and right-hand series must point towards the center of the unit.
  - The fixing screws have different lengths. Use the screws at the same position.

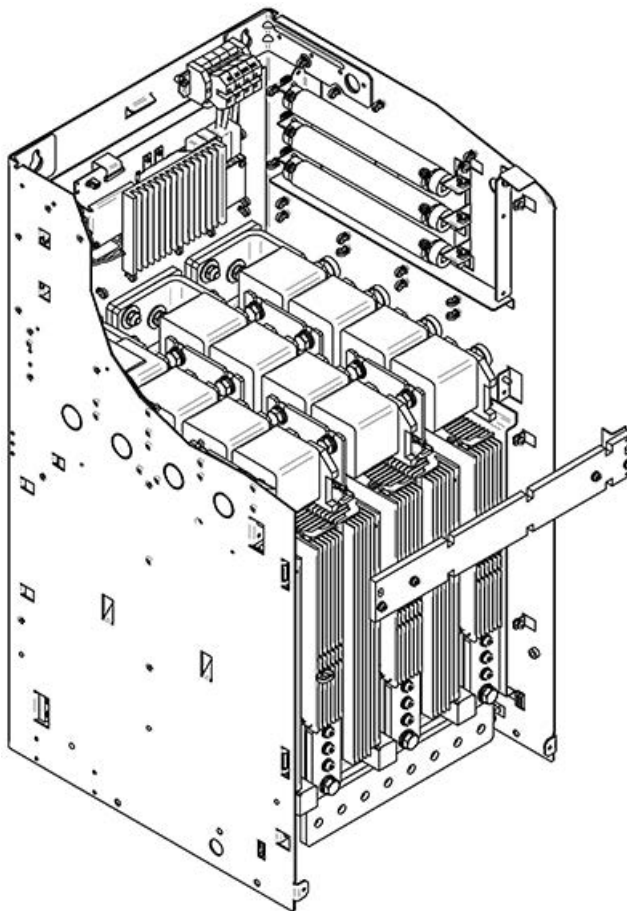


Figure 11-10 Fuse replacement for devices 1500 A to 3000 A

### 11.2.3 Replacing the CUD

---

**Note**

The information regarding electrostatic sensitive devices must be carefully observed. See Chapter "ESD-sensitive components (Page 22)".

---

**Note**

**Use the supplied protective cover**

The module is equipped on both sides with highly sensitive components that can be damaged if installed incorrectly.

It is therefore essential that you use the supplied mounting aid (protective cover) when installing or removing the CUD.

---

**Required tools**

Torx screwdrivers TX10 (CUD) and TX20/TX30 (front cover).

#### Removing the existing CUD

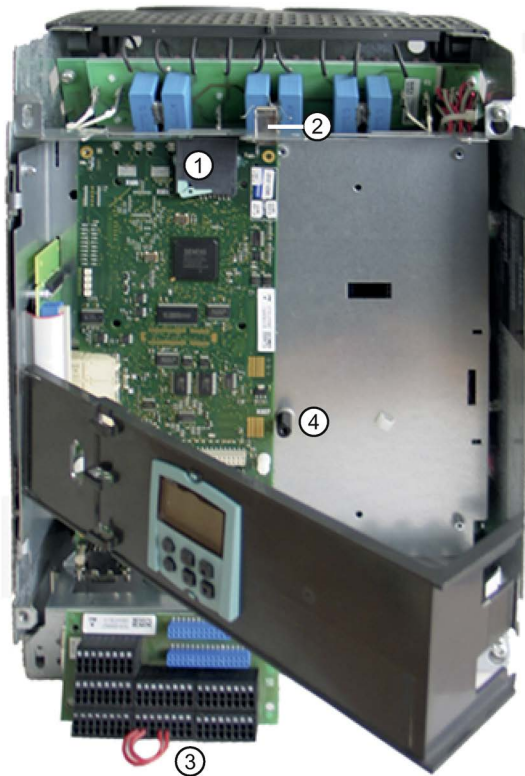


Figure 11-11 CUD replacement 1

1. Remove the memory card ①.
2. Remove the shield clamp ②.
3. Remove the Connector Board ③. The connection wires remain in the terminals.
4. If a CBE20 is present: Unplug the PROFINET cable.
5. Disconnect all plug-in connections on the CUD.
6. Remove the support element ④ (only present in standard CUD).
7. Loosen the fixing screws of the CUD.
8. Insert the supplied mounting aid.
9. Withdraw the CUD carefully.

After removing the screws and before pulling out the CUD, the module must be raised slightly and the supplied mounting aid (protective cover) inserted between the CUD and the assembly bolts in order to prevent any damage to the CUD to be replaced.

There are sensitive components on the rear of the CUD that may be torn off or damaged by coming into contact with the assembly bolts when pulling the CUD out without the mounting aid.

### Installing the CUD

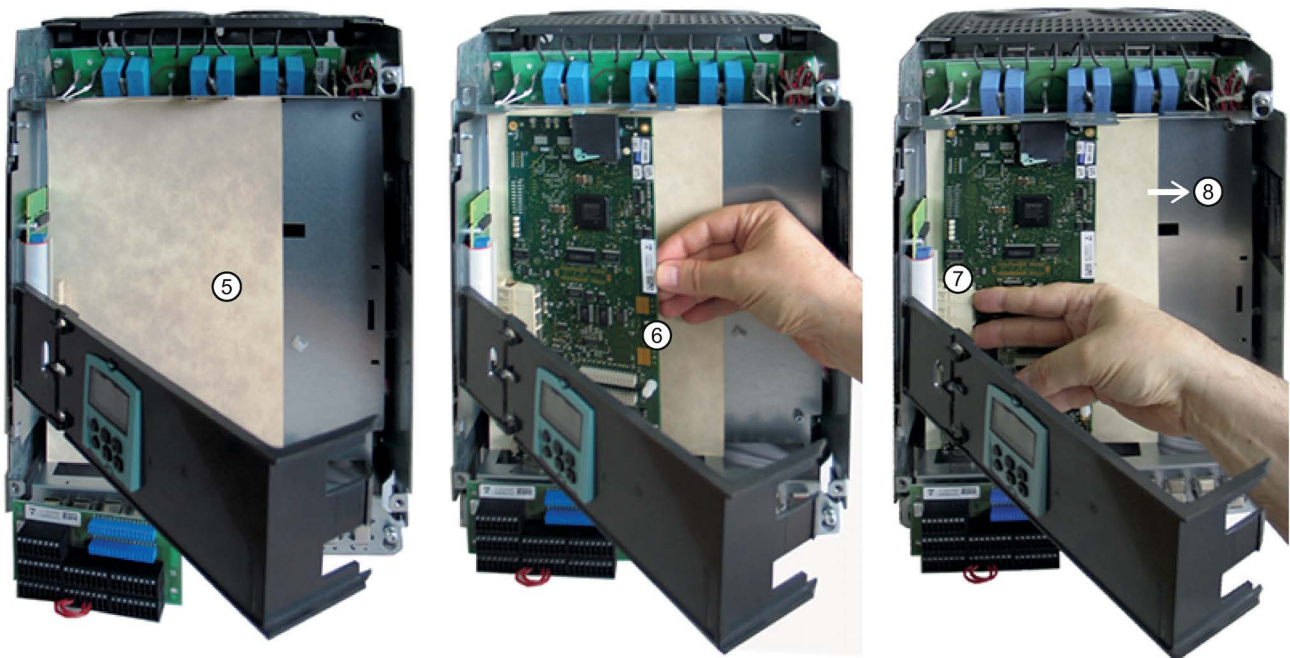


Figure 11-12 CUD replacement 2

11.3 Replacing the back-up battery in the AOP30 operator panel

- Insert the protective cover ⑤ so that the mounting sockets below it are covered.
- Hold the new CUD at an angle of 10° to 15° at the connector and parallel to the side wall ⑥.
- Press the CUD onto the terminal strip ⑦.
- Pull out the mounting aid ⑧.
- Screw the CUD tight and attach all the components again that were removed from the old CUD. Reconnect the connections.

**Replacement/installation of a CUD in the right slot**

A CUD is installed in the right slot in the same way as in the left slot.

For simple handling, it is recommended that you swing out the electronics plate slightly.

Make sure that the mounting sockets are covered by the mounting aid.

**11.3 Replacing the back-up battery in the AOP30 operator panel**

Table 11- 1 Technical specifications of the backup battery

Type	CR2032 3 V lithium battery
Manufacturer	Maxell, Sony, Panasonic
Nominal capacity	220 mAh
Self-discharge at 20 °C	1%/year
Service life (in backup mode)	> 1 year at 70 °C; >1.5 years at 20 °C
Service life (during operation)	> 2 years

**Replacement**

1. Disconnect the SINAMICS DCM from the power supply
2. Open the cabinet.
3. Disconnect the 24 V DC power supply and communications line on the operator panel.
4. Open the cover of the battery compartment.
5. Remove the old battery.
6. Insert the new battery.
7. Close the cover of the battery compartment.
8. Reconnect the 24 V DC power supply and communications line.
9. Close the cabinet.



---

**Note**

The battery must be replaced within one minute to ensure that no AOP settings are lost.

---



Figure 11-13 Replacing the backup battery for the cabinet operator panel

---

**Note**

The battery must be disposed of in accordance with the manufacturer guidelines and applicable country-specific laws and directives.

---



## Applications

### 12.1 Using SINAMICS DCM in shipbuilding

When using SINAMICS DCM in shipbuilding, the following points must be observed:

- Radio interference suppression filters must be used in the armature circuit and in the field circuit (see Chapter "Connecting (Page 91)")
- For EMC-compliant installation, see Chapter "Connecting (Page 91)".
- Use coated modules (option M08), see Chapter "Ordering information for options and accessories (Page 30)".

### 12.2 Connecting an incremental encoder

---

#### Note

Because the physical transmission media is more robust, the bipolar connection should always be used. The unipolar connection should only be used if the encoder type does not output push-pull signals.


---

#### Note

The technical data of the incremental encoder inputs (X177.41 to 48) and further information on how to connect an incremental encoder are given in Chapter "Connecting (Page 91)".

---

#### HTL encoder, bipolar, with zero signal

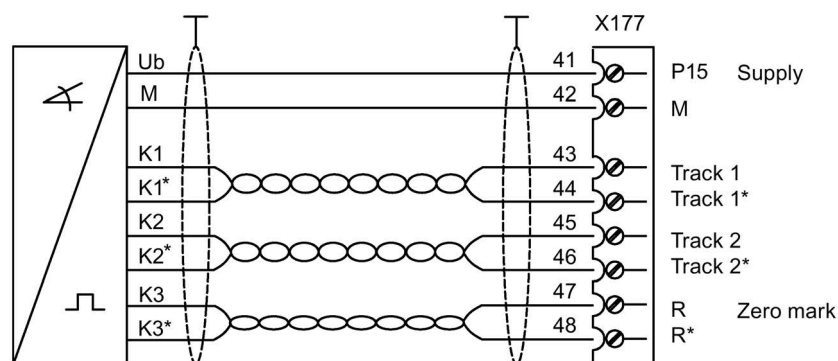

Improved protection against induced interference is achieved by twisting the signal lines in pairs.

Figure 12-1 Bipolar incremental encoder

HTL encoder, unipolar, with zero signal

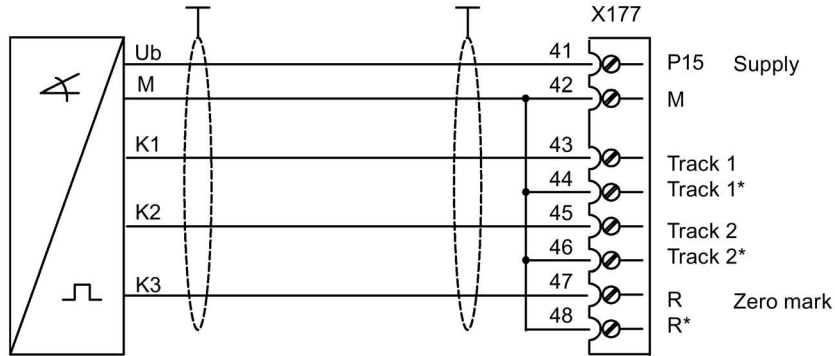


Figure 12-2 Unipolar incremental encoder

### 12.3 Use of the SINAMICS DCM in galvanizing and dip-painting plants

2Q devices are used when using the SINAMICS DCM in galvanizing, dip-painting or similar plants.

2Q devices have a thyristor bridge in B6 circuit. In this power unit topology, the output voltage of the SINAMICS DCM is partly negative for firing angles between 60° and 120°. In order to ensure that no negative voltages are present at the load, i.e. at the galvanizing and paint tanks, an external freewheeling diode is usually installed on the DC side for these applications. This is not part of the SINAMICS DCM, but rather is installed in the control cabinet.

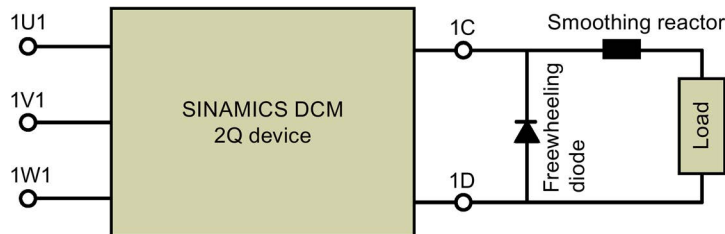


Figure 12-3 SINAMICS DCM, 2Q device with external freewheeling diode

Make sure that in this case, the current actual value sensing in the converter only measures part of the load current, i.e. the current through the converter, **not** the freewheeling current.

This means that the SINAMICS DCM cannot control the load current.

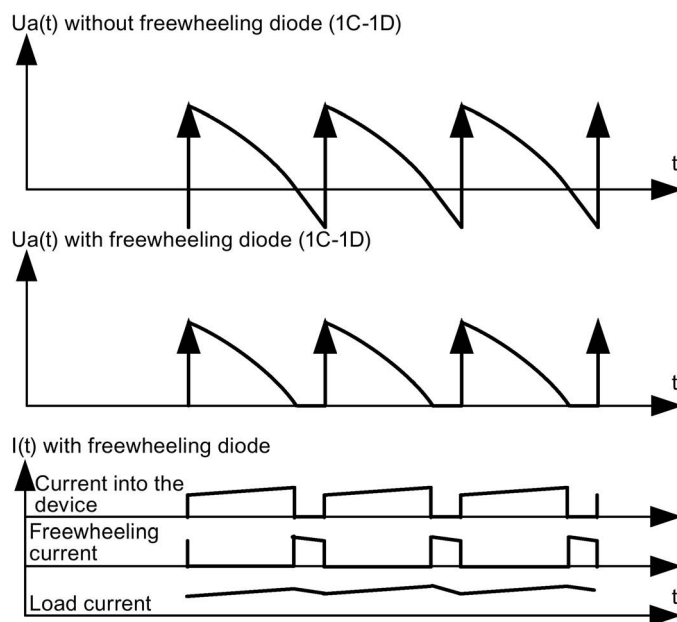


Figure 12-4 Voltage and current curves

In order to be able to control the load current, it is recommended that an external actual current sensing circuit be used for these applications. Whereby, the entire load current (including the freewheeling current) is measured via an external shunt. The shunt voltage must be increased via an external shunt converter and then led to the SINAMICS DCM via an analog input. See function diagram 6850, column 2.

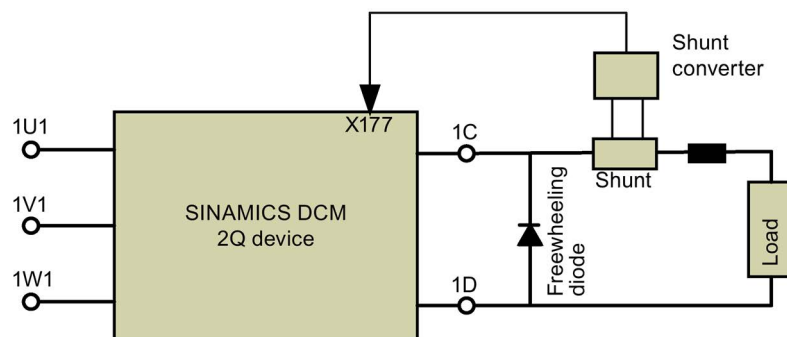


Figure 12-5 SINAMICS DCM with external current actual value sensing

### Parameter

- p51852 Selection of external current actual value sensing  
 p51853 Scaling of external current actual value sensing

## 12.4 Using SINAMICS DCM as thyristor controller in heating applications

Under certain preconditions, the SINAMICS DCM can be used as three-phase AC power controller for heating applications.

This means that in some cases SIVOLT A three-phase AC power controllers can be replaced by SINAMICS DCM converters.

You can download an application document from the Internet: Manuals

(<https://support.industry.siemens.com/cs/ww/en/ps/13298/man>)

## Functional safety

### 13.1 Functional safety: Deactivated – Activated

#### STO circuit deactivated

Jumper in terminal X200/1:2 (STO to P24): STO circuit is deactivated.

Here, the STO input is deactivated and the STO is therefore deselected. Converter operation is possible independent of the signal states at the STO input.

- The converter is supplied in this state. The terminals 105 and 106 are jumpered in the delivery state (no emergency stop).
- Applications where STO is not used.

#### STO circuit activated

Jumper in terminal X200 must be removed: STO circuit is activated.

Safety relay can be connected.

### 13.2 General technical specifications of the DCM (6RA80)

Table 13- 1 SINAMICS DCM

<b>Functional safety</b>	
MTTF <sub>D</sub> according to ISO 13849-1	500 years
Diagnostics coverage (DC) according to ISO 13849-1/IEC 61508	99%
Maximum operating altitude above MSL	4000 m <sup>1)</sup>
T1 value for proof test interval or service duration according to ISO 13849-1/IEC 61508	20 years
Response time when activating STO	Maximum 250 ms

<sup>1)</sup> For installation altitude > 2000 m, select a suitable safety relay and coupling relay (contactor relay).

Table 13-2 Application

<b>Functional safety</b>	
Safety integrity level (SIL) according to IEC 61508	SIL 3 Depending on the application and diagnostic test interval
Performance Level (PL) according to EN ISO 13849-1	PL e Depending on the application and diagnostic test interval
Category according to EN ISO 13849-1	Cat. 4 Depending on the application and diagnostic test interval
PFH <sub>D</sub> with high demand rate according to IEC 61508	70 x 10 <sup>-9</sup> /h Depending on the application and diagnostic test interval
Maximum installation altitude above sea level <sup>1)</sup>	2000 m

1) For installation altitude > 2000 m, select a suitable safety relay.

The general environmental conditions and technical data can be found in the SINAMICS DCM DC converters / SINAMICS DCM Control Modules.

### 13.3 Standards

EN ISO 13849-1:2016	Safety of Machinery; Safety-Related Parts of Control Systems – Part 1: General principles for design
EN ISO 13849-2:2013	Safety of Machinery; Safety-Related Parts of Control Systems – Part 2: Validation
EN 61800-5-2:2017	Adjustable-speed electrical power drive systems – Part 5-2: Safety requirements – Functional safety
EN 62061:2015	Safety of machinery – Functional safety of safety-related electrical, electronic and programmable electronic control systems
EN 61508-2:2016	Functional safety of electrical/electronic/programmable electronic safety-related systems – Part 2: Requirements placed on safety-related electrical/electronic/programmable electronic systems
EN 61511-1:2017	Functional safety – Safety instrumented systems for the process industry sector – Part 1: General, terminology, requirements relating to systems, software and hardware



## 13.4 Fundamental safety technology principles





### 13.4.1 Standard stop functions

#### 13.4.1.1 Emergency Off and Emergency Stop

"Emergency Off" and "Emergency Stop" are commands that minimize different risks in the machine or plant.

The STO function is suitable for achieving an Emergency Stop but not an Emergency Off.

You can review the details about the definitions in EN 60204-1.
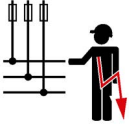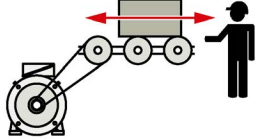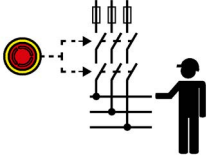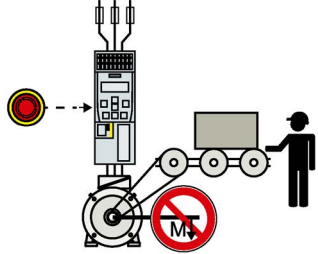
<p>Risk:</p>	<p>Risk of electric shock:</p> 	<p>Risk of unexpected motion:</p> 
<p>Measure to minimize risk:</p>	<p><b>Safe switch off</b> Switching off the electric power supply for the installation, either completely or partially.</p>	<p><b>Safely stop and safely prevent restarting</b> Stopping or preventing the dangerous movement</p>
<p>Command:</p>	<p><b>Emergency Off</b></p>	<p><b>Emergency Stop</b></p>
<p>Solution:</p>	<p>Switch off the power supply:</p> 	<p>Select STO:</p>  <p>It is permissible that you switch off the inverter power supply as well. However, switching off the voltage is not required as a risk-reduction measure:</p>

### 13.4.2 Standard safety functions according to EN 61800-5-2

#### 13.4.2.1 Safe Torque Off (STO)

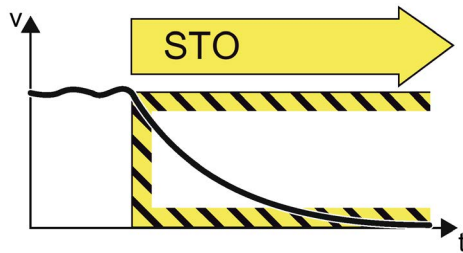


Figure 13-1 Safe Torque Off (STO)

Safe Torque Off is a safety subfunction that immediately ensures that torque or force-generating energy is not fed to the motor. This function corresponds to stop Category 0 according to EN 60204-1.

The Safe Torque Off (STO) function is used to safely disconnect the torque-generating energy feed to the motor; this is achieved in the power unit by preventing (through two channels), alternating voltage to be output to the motor.

The switch-on inhibit, which prevents automatic restart after deactivating STO, must be implemented by the upstream external monitoring and control system (e.g. 3SK1), according to the requirements of EN 60204-1, Chapter 9.2.5.

#### Typical applications

Applications include all machines and systems with moving axes (e.g. conveyor technology, fans). STO allows personnel to safely work with a protective door open; a classic emergency stop with electromechanical disconnection is not required. The inverter remains connected to the line and can be fully diagnosed.

#### 13.4.2.2 Safe Stop 1 (SS1-t, time controlled)

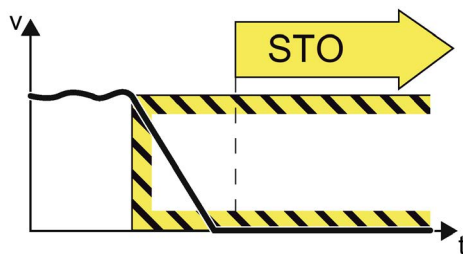


Figure 13-2 Safe Stop 1 (SS1-t, time controlled)

Safe Stop 1 (time controlled) causes the motor to be braked (this function is integrated in the drive) - and after a specified time interval, the Safe Torque Off function is initiated. This function corresponds to Stop Category 1 according to EN 60204-1.

The Safe Stop 1 function (SS1-t) function means that the motor is stopped and then the torque-generating energy is shut down (STO). When SS1-t is activated, the inverter brakes the motor along a braking ramp. This happens via the braking function integrated in the drive along the OFF3 ramp.

SS1-t corresponds to the SS1-t function according to EN 61800-5-2.

#### Typical applications

SS1-t can be used wherever the load torque cannot stop the motor in a sufficiently short time as a result of friction – or where there is a safety risk if the drive coasts down (STO).

### 13.4.3 Safety functions of the SINAMICS DC MASTER

#### Technical fundamentals and data

The SINAMICS DCM is equipped from function version 04 with a safety-related switch-off signal path for STO. An additional license is not required for this function.

In connection with an external safety relay (e.g. 3SK1) and with a redundant switch-off signal path via armature line contactor, a Safe Torque Off (STO) or Safe Stop 1 (SS1) safety function SIL 3/PL e Cat. 4-capable application is achieved according to EN 62061 or ISO 13849-1.

The STO safety function comprises three safety element functions:

#### 1. Detect

Performed externally, e.g. by emergency stop button or other sensors

#### 2. Evaluate

Performed externally, e.g. by a 3SK1 safety relay

- Evaluation and diagnostics of the input / sensor circuits
- Logical interconnection of input signals as well as diagnostics and parameterization
- Controlling the switch-off signal paths
- Diagnostics of the switch-off signal paths via their feedback circuits

#### 3. React

Performed by two separate channels with different technologies:

- Switch-off signal path channel 1 through the armature line contactor
- Switch-off signal path channel 2 through the STO switch-off signal path of the DCM

The structure from the two switch-off signal paths incl. their diagnostic paths fulfill a SIL 3 or PL e Cat. 3 / 4-capable STO shutdown.

## 13.5 Application examples

---

### Note

#### Response time of the STO function

The STO safety function in the DC master is designed for a 250 ms response time.

The external redundant switch-off signal path via the contactor/circuit breaker must also be designed for a 250 ms response time.

---

In six application examples (see the following figures), the safety functions STO and SS1 are shown for applications with a safety relay and a contact block (line contactor and circuit breaker) to safely shut down the armature circuit (first channel):

- STO application with line contactor
- STO application with circuit breaker
- SS1 application with line contactor
- SS1 application with circuit breaker
- SS1 application with line contactor and F-PLC
- SS1 application with circuit breaker and F-PLC

### Description of the applications

The SINAMICS DCM is activated and evaluated in all four application examples each with a 2-channel EMERGENCY STOP trigger mechanism (e.g. EMERGENCY STOP button, safety door switch, etc.) via an additional **3SK1121 safety relay** (green block).

- STO application:  
3SK1121-2AB40 safety relay
- SS1 application:  
Safety relay 3SK1121-2CB42 (with the option to set a delay time for quick stop)

Via the corresponding terminals of the safety relay, the **STO input** and the **feedback circuit RM1 / RM2** of **SINAMICS DCM** (red block, SAFETY circuit, second channel) are wired via the contacts of the contact blocks (blue block, line contactor or circuit breaker, first channel).

- For applications with line contactor, the feedback circuit is routed via **contacts A1 and A2** of the **line contactor KA1**.
- For applications with circuit breaker, the feedback circuit is routed via the undervoltage coil **U<** of the **circuit breaker 3WL**.

In addition, **E-STOP** (terminals 106, 109, 110) and the 24V input **P24** (terminal X177.9) of the Power Interface are guided in **SINAMICS DCM** via the safety relay.


 

In the case of SS1 applications, the **quick stop function OFF 3** (undelayed contact block, terminal X177.15 DI/DO 4) of **SINAMICS DCM** is guided via the safety relay.

**Note**


In the case of SS1 applications, the OFF 3 ramp of the SINAMICS DCM and the setting of the delay time on the safety relay, must be manually set to the process and adjusted and coordinated with one another when commissioning the system.

**Principle**

Legend for **SINAMICS DCM** applications:

Q <sub>A[n]</sub>	Armature contactor
Q <sub>F[n]</sub>	Field contactor
K <sub>AH[n]</sub>	Safety-related interface relay to control the armature contactor
K <sub>FH1</sub>	Safety-related interface relay to control the field contactor
DI/DO 4	Programmable digital input 4, X177.15 (to select OFF3 = fast stop)
K <sub>FH1</sub> K <sub>AH1</sub> K <sub>AH[n]</sub>	Phoenix Contact, PSR-SPP-24DC/FSP/1X1/1X2 - 2981981
STO	Activation/deactivation STO on SINAMICS DCM
RM1 / RM 2, 106, 109, 110	Connection for feedback circuits and safety relay on SINAMICS DCM
P24	24 V supply via X177.9
M24	24 V ground via X177.23
PE	Protective conductor connection
L, N	Maximum supply voltage, 250 V <sub>AC</sub>
U<	Undervoltage release 3WL circuit breaker
	Positively-driven contacts = combination of NO and NC contacts is designed so that they can never be simultaneously closed
	Mirror contact = auxiliary NC contact that cannot be closed simultaneously with a main NO contact.
	Switch position = black

STO application with line contactor

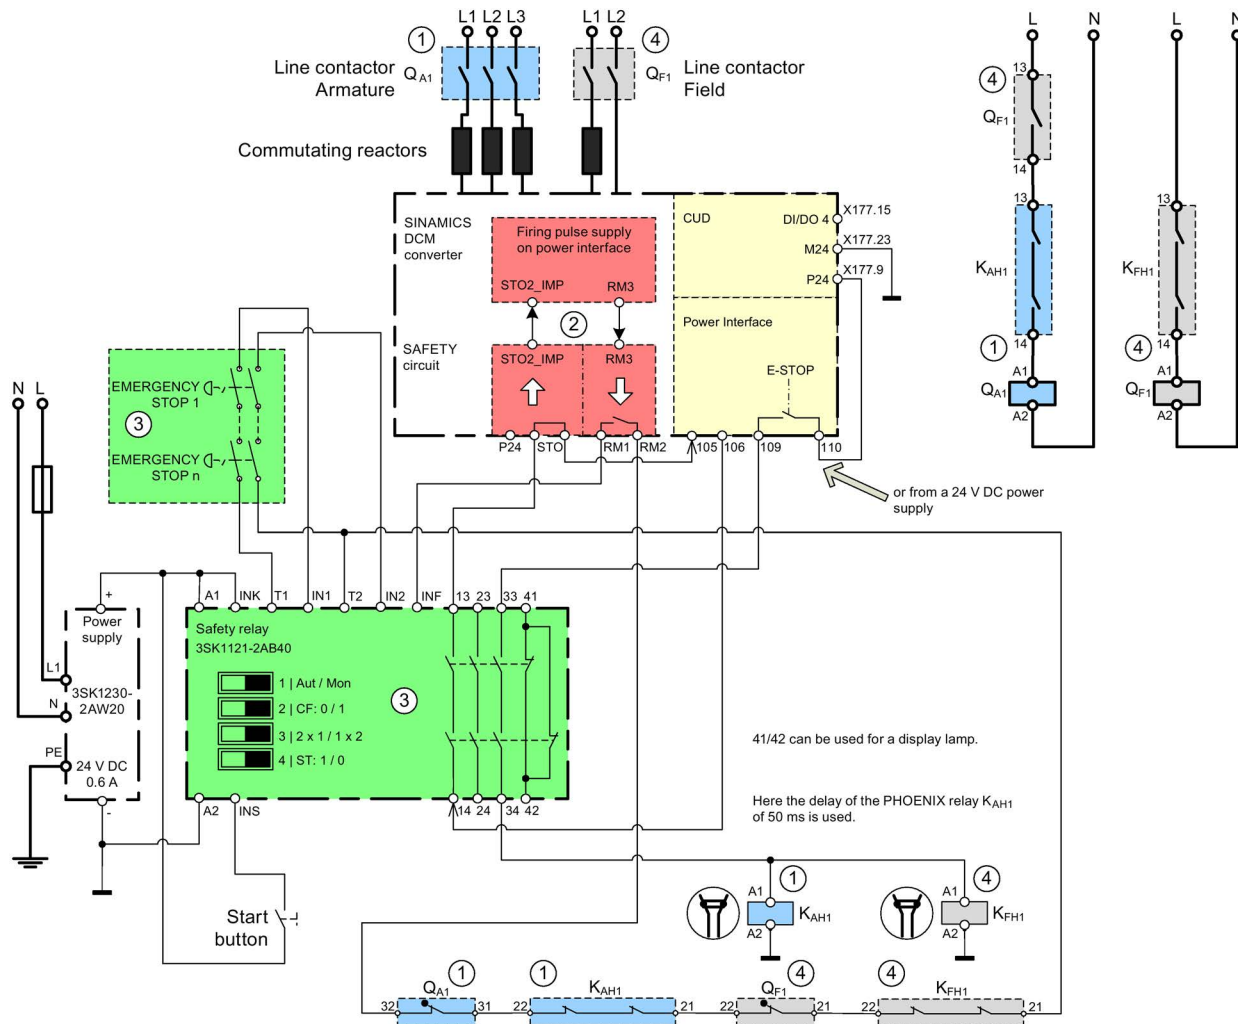

- ① First channel (blue): Line contactor armature + armature auxiliary contactor
- ② Second channel (red): Firing pulse circuit, SAFETY circuit
- ③ Safety components (green)
- ④ Contact blocks for field excitation (gray): Line contactor field + field auxiliary contactor (also as the field contactor is usually controlled as well)

Figure 13-3 STO application with line contactor

### STO application with circuit breaker


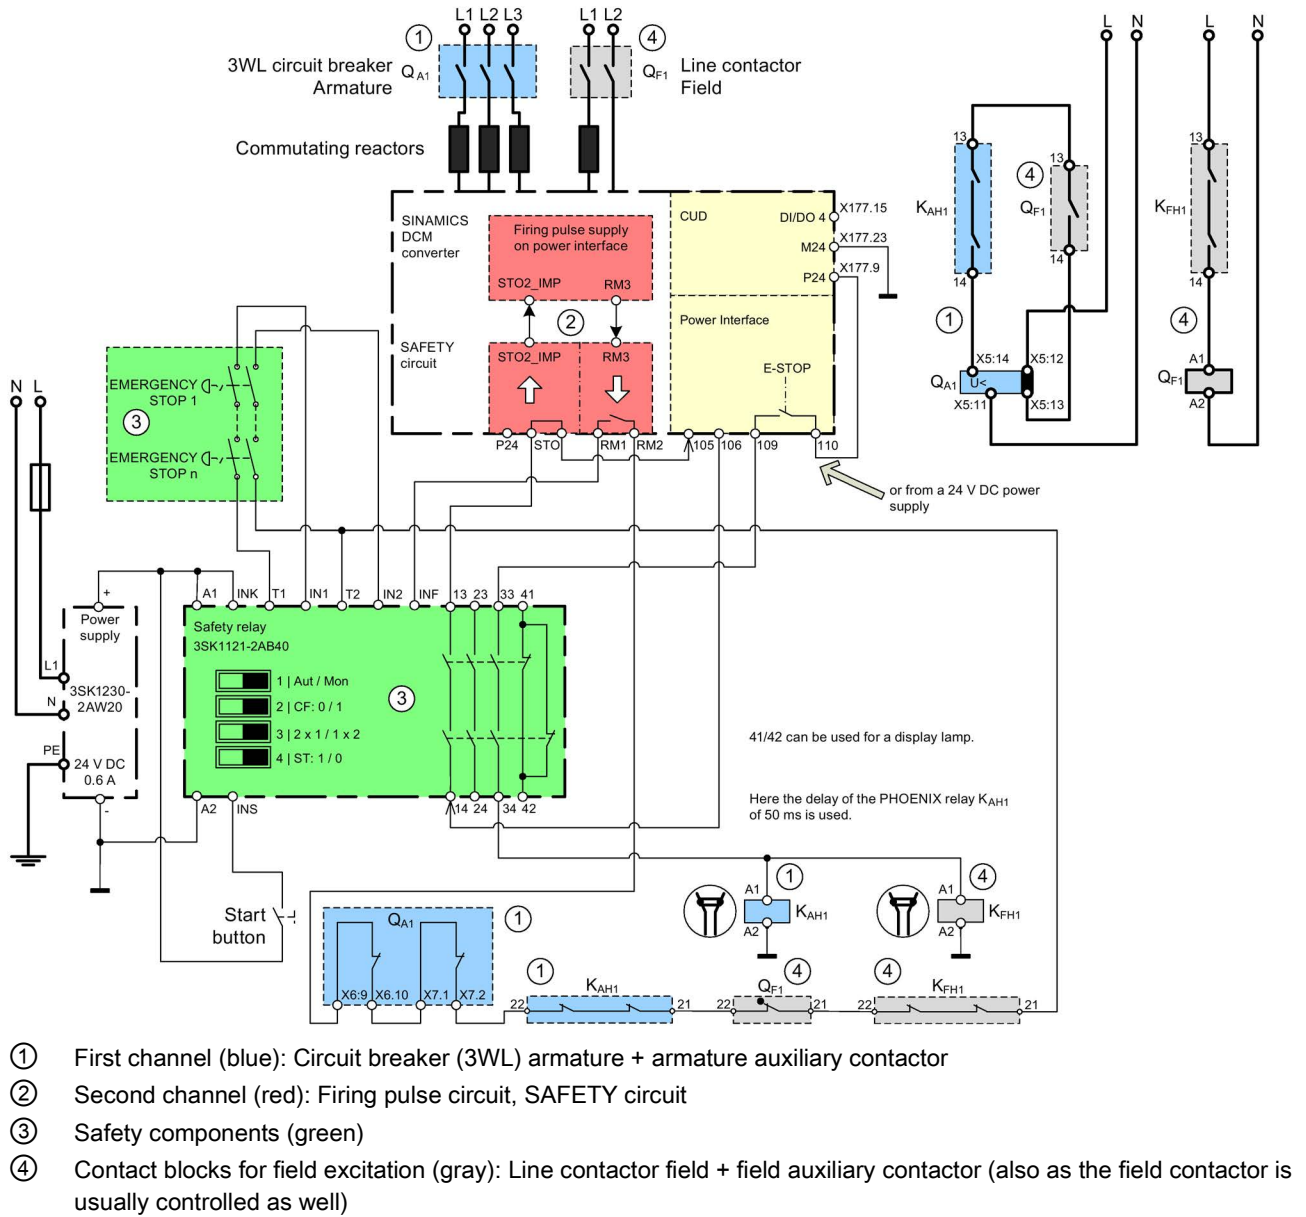


Figure 13-4 STO application with circuit breaker

SS1 application with line contactor

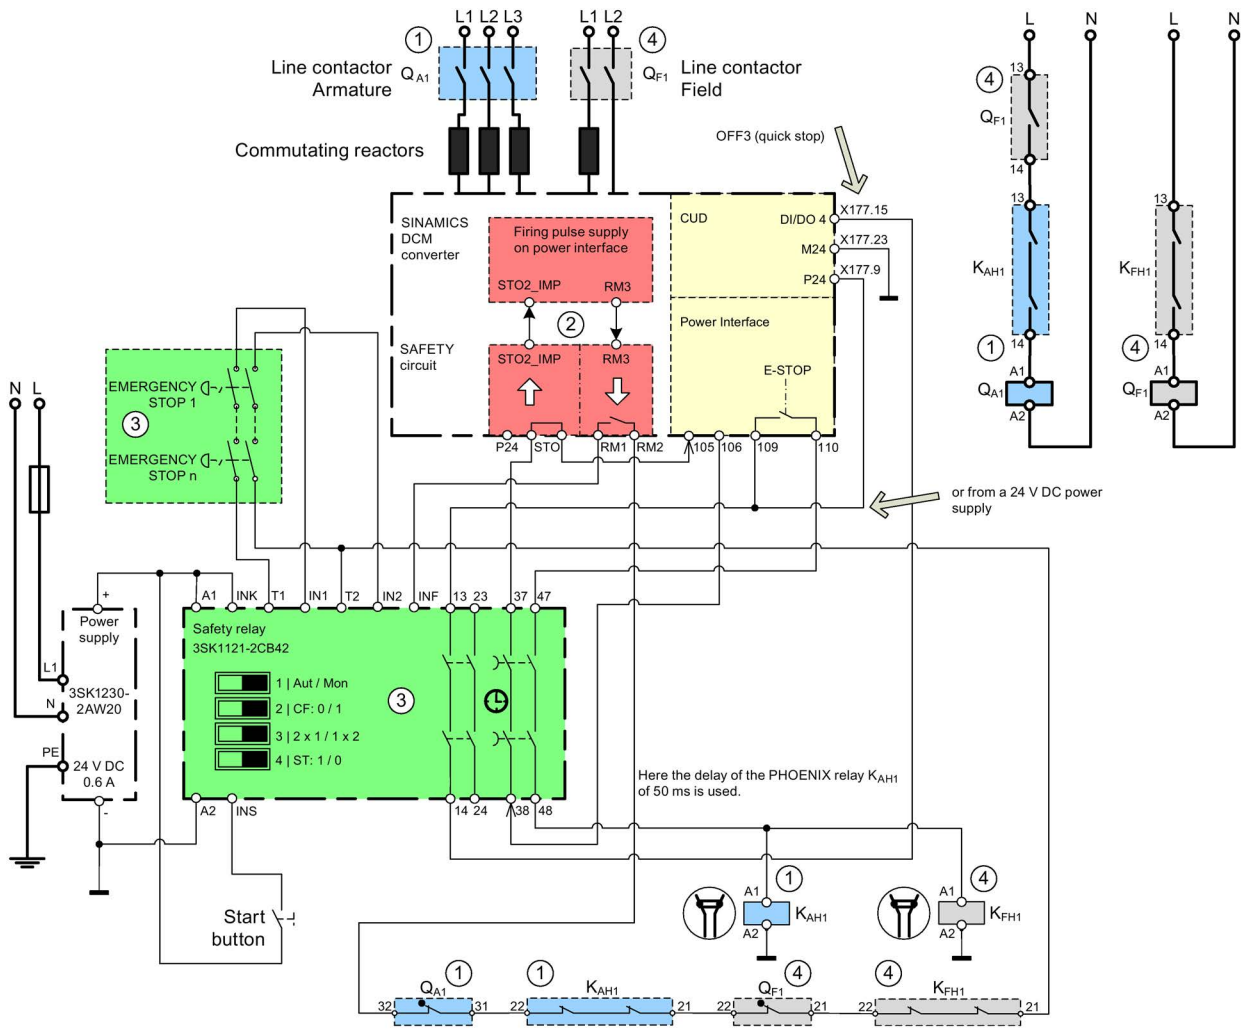

- ① First channel (blue): Line contactor armature + armature auxiliary contactor
- ② Second channel (red): Firing pulse circuit, SAFETY circuit
- ③ Safety components (green)
- ④ Contact blocks for field excitation (gray): Line contactor field + field auxiliary contactor (also as the field contactor is usually controlled as well)

Figure 13-5 SS1 application with line contactor



### SS1 application with circuit breaker


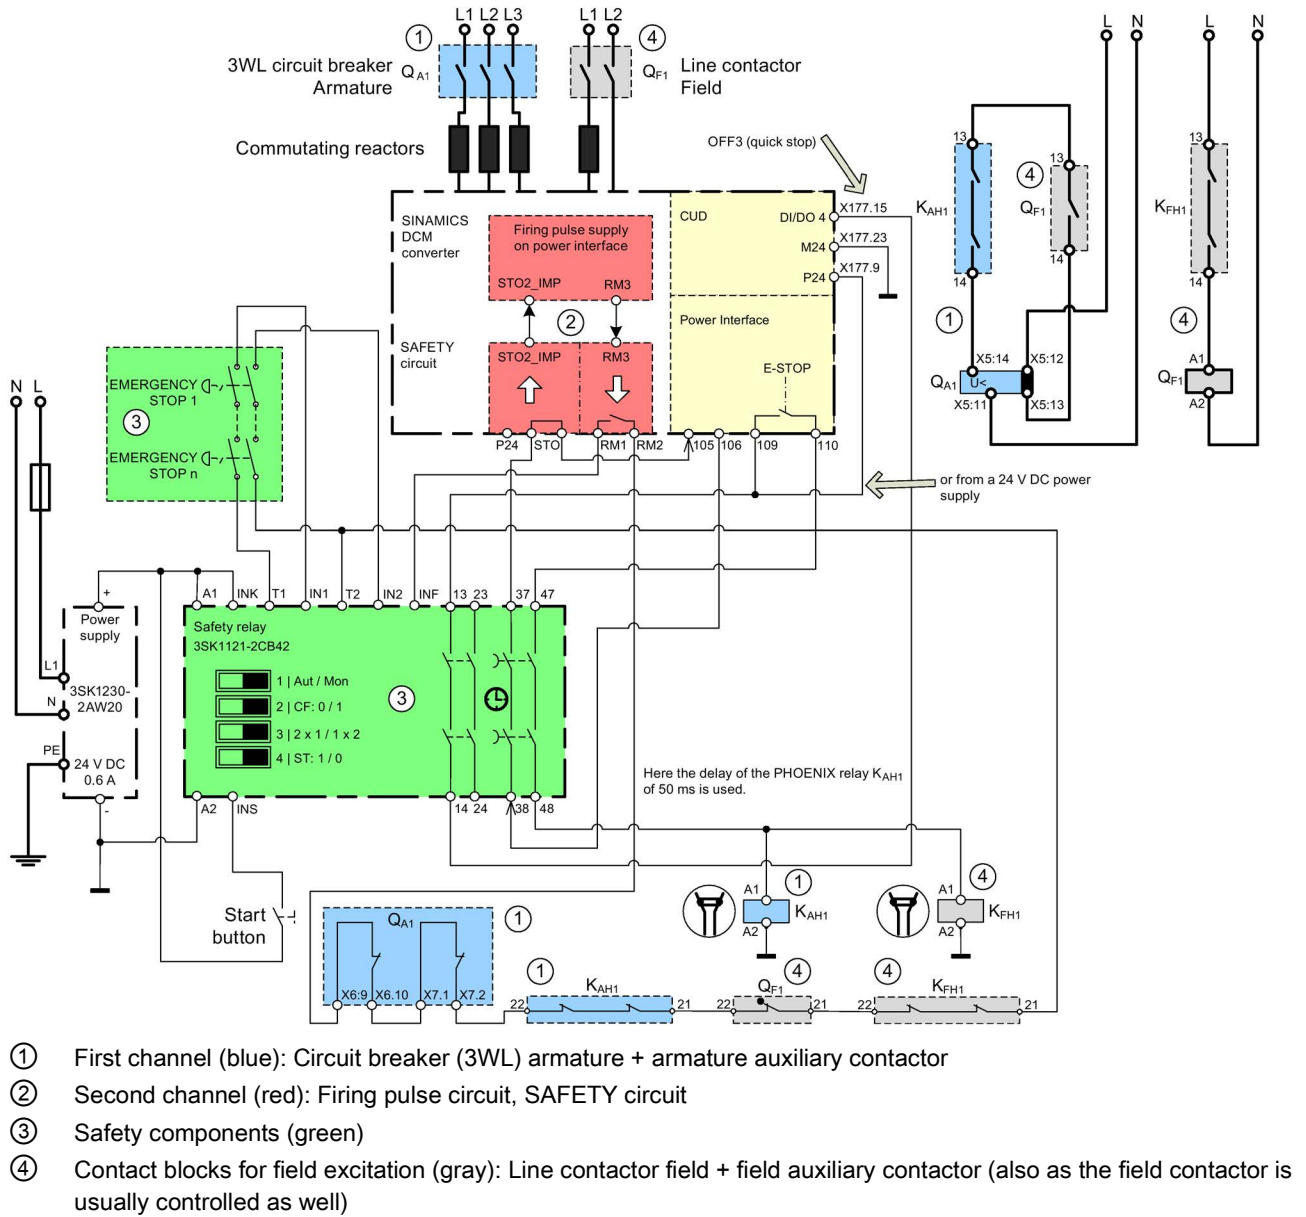


Figure 13-6 SS1 application with circuit breaker


SS1 application with line contactor and F-PLC

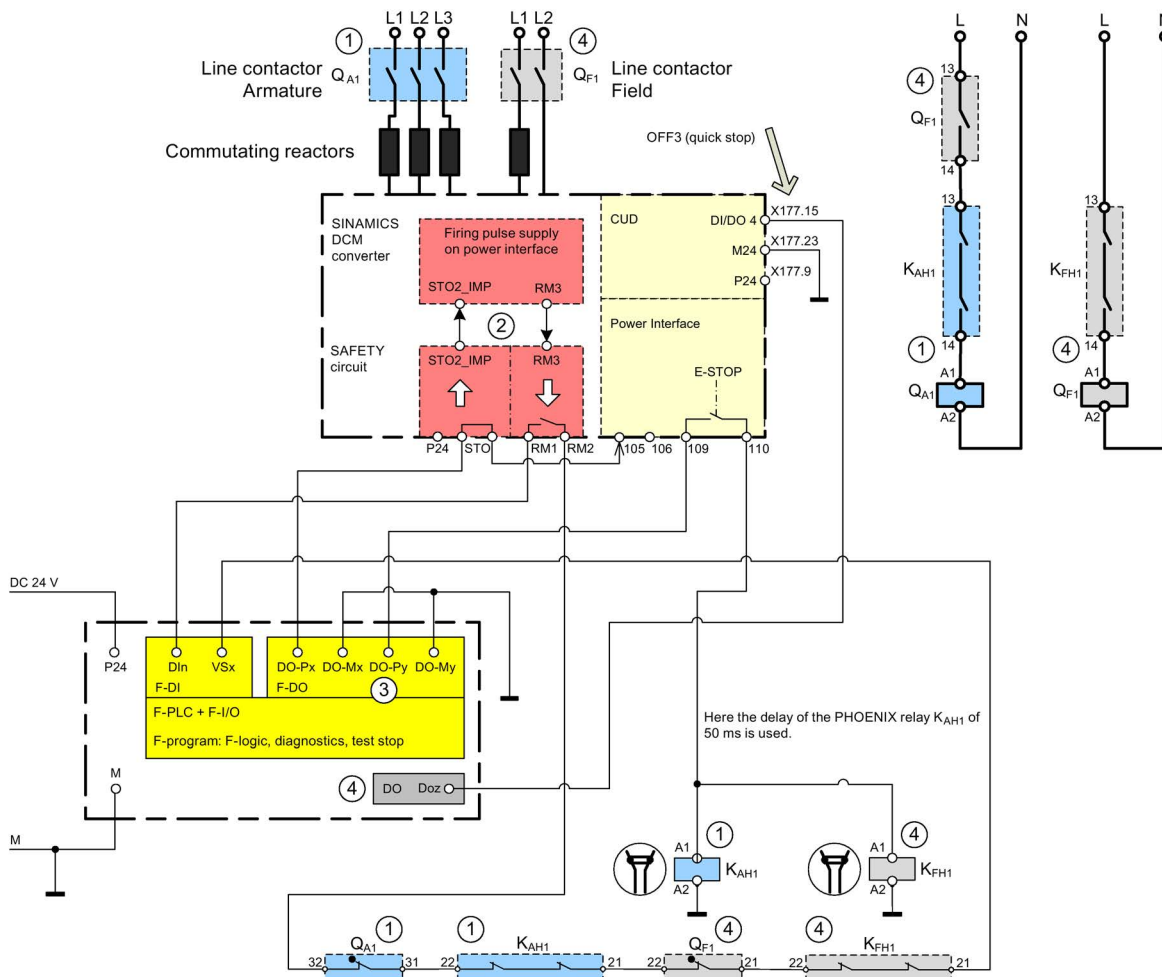

- ① First channel (blue): Line contactor armature + armature auxiliary contactor
- ② Second channel (red): Firing pulse circuit, SAFETY circuit
- ③ Safety components (yellow)
- ④ Contact blocks for field excitation (gray): Line contactor field + field auxiliary contactor (also as the field contactor is usually controlled as well)

Figure 13-7 SS1 application with line contactor and F-PLC

### SS1 application with circuit breaker and F-PLC

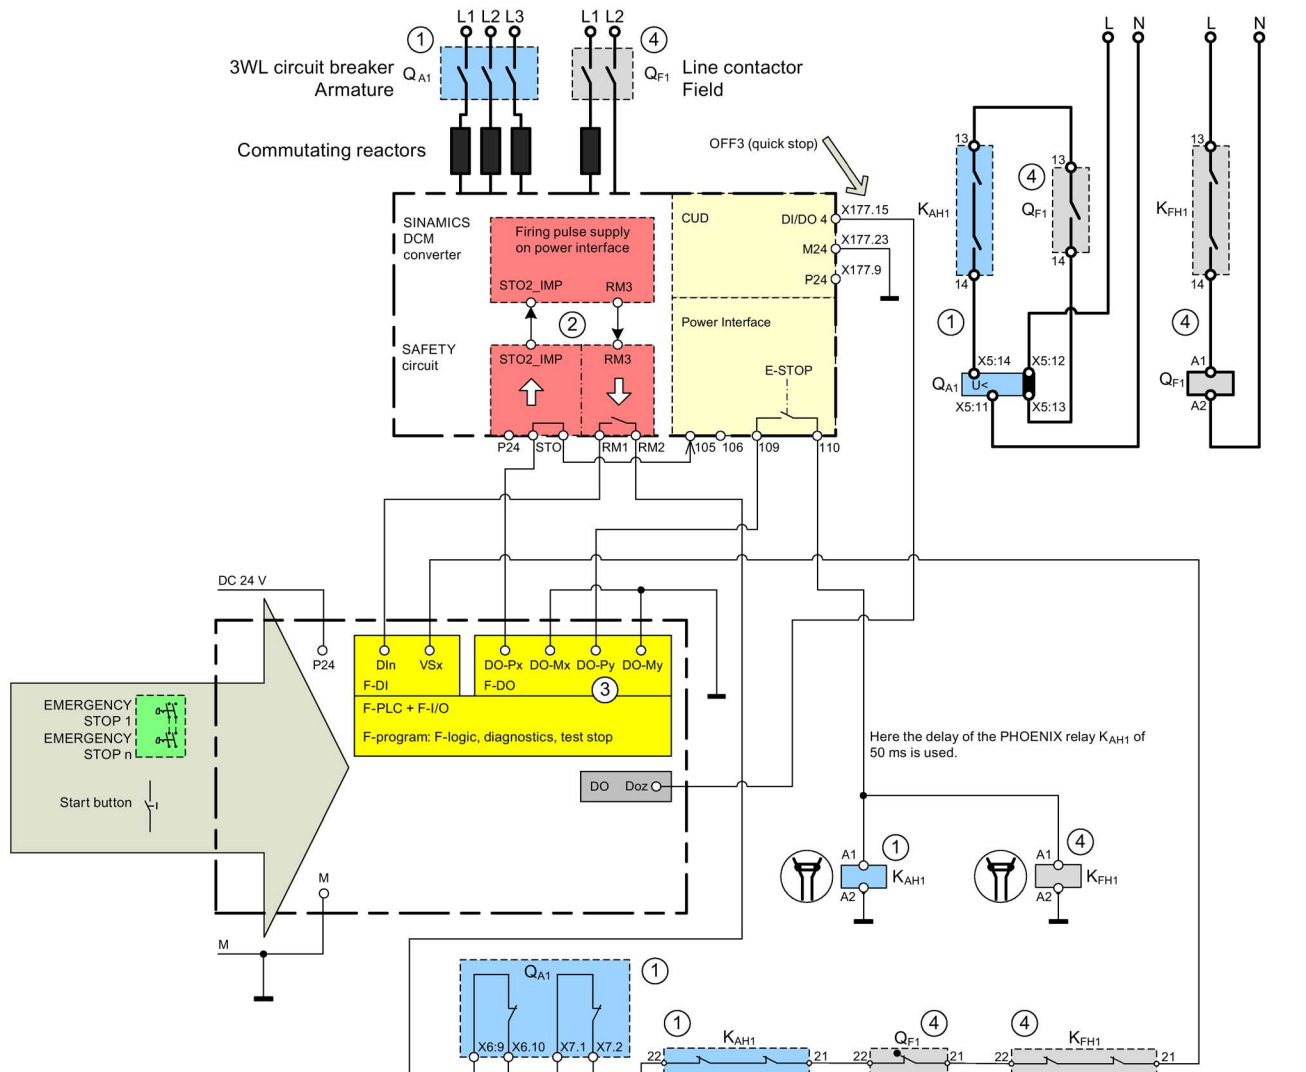

- ① First channel (blue): Circuit breaker (3WL) armature + armature auxiliary contactor
- ② Second channel (red): Firing pulse circuit, SAFETY circuit
- ③ Safety components (yellow)
- ④ Contact blocks for field excitation (gray): Line contactor field + field auxiliary contactor (also as the field contactor is usually controlled as well)

Figure 13-8 SS1 application with circuit breaker and F-PLC

## 13.6 Validating/checking the safety functions

Carefully check/test the safety functions after commissioning the system for the first time, after carrying out any repairs and after each change to the machine/system, in particular the feedback circuits.

These tests must be performed by qualified personnel who, on account of their technical qualifications and knowledge of the safety functions, are in a position to perform the acceptance test in the correct manner.

<b>NOTICE</b>
<b>Components in the external feedback circuits</b>
In external feedback circuits of the DCM, no additional components and / or functions may be installed which are not part of the safety functions.

## 13.7 Diagnostics test

In order to ensure that the function of the switch-off signal paths comply with the requirements laid down in the applicable standards, regulations and guidelines, these must be tested at regular intervals (diagnostics test interval, "Diagnostic test" in accordance with IEC 61800-5-2). As a consequence, faults are detected in an acceptable time. The intervals depend on the safety function and the desired/required SIL / PL, Cat.

The user must ensure that this test of the switch-off signal paths (test stop: activating and deactivating an STO) is performed at regular intervals.

The external safety relay (e.g. 3SK11...), can, based on the feedback signals of the SINAMICS DCM DC converter, detect possible faults/errors in the switch-off signal paths, and trigger an STO in both channels. An error is thus detected and the system can be repaired.

## 13.8 Relationship between the test stop interval and SIL or PL and Cat.

The hardware, the hardware structure and, where applicable, the software (when using parameterizable or programmable external safety components), must correspond to the required SIL / PL and Cat.

Also see the application examples in the previous sections of this document.

Test intervals required:

- SIL 2/PL d, Cat. 3: Test stop at least once per year
- SIL 3 / PL e, Cat. 3: As a minimum, a test stop every 3 months
- SIL 3 / PL e, Cat. 4: Test stop at least once per day

## 13.9 Circuit breakers and power contactors

<b>6RA8013_XXXXX_OAA0</b>	Value	Designation	Manufacturer	Article number
Rated DC current [A] (DC)	15	-	-	-
Rated supply voltage armature [V]	400 480	-	-	-
Contactor armature circuit	-	Main contactor designed for AC1, 40 A	Siemens	3RT2023-2AL20
Contactor field circuit	-	Field contactor designed for AC1	Siemens	3RT2015-2AP01

<b>6RA8018_XXXXX_OAA0</b>	Value	Designation	Manufacturer	Article number
Rated DC current [A] (DC)	30	-	-	-
Rated armature supply voltage [V]	400 480	-	-	-
Contactor armature circuit	-	Main contactor designed for AC1, 40 A	Siemens	3RT2023-2AL20
Contactor field circuit	-	Field contactor designed for AC1	Siemens	3RT2015-2AP01

<b>6RA8025_XXXXX_OAA0</b>	Value	Designation	Manufacturer	Article number
Rated DC current [A] (DC)	60	-	-	-
Rated armature supply voltage [V]	400 480 575	-	-	-
Contactor armature circuit	-	Main contactor designed for AC1, 50 A	Siemens	3RT1035-3AL20
Contactor field circuit	-	Field contactor designed for AC1	Siemens	3RT2015-2AP01

<b>6RA8028_XXXXX_OAA0</b>	Value	Designation	Manufacturer	Article number
Rated DC current [A] (DC)	90	-	-	-
Rated armature supply voltage [V]	400 480	-	-	-
Contactor armature circuit	-	Main contactor designed for AC1, 100 A	Siemens	3RT1044-3AL20
Contactor field circuit	-	Field contactor designed for AC1	Siemens	3RT2015-2AP01

<b>6RA8031_XXXXX_OAA0</b>	Value	Designation	Manufacturer	Article number
Rated DC current [A] (DC)	125	-	-	-
Rated armature supply voltage [V]	400 480 575	-	-	-
Contactor armature circuit	-	Main contactor designed for AC1, 120 A	Siemens	3RT1446-1AL20
Contactor field circuit	-	Field contactor designed for AC1	Siemens	3RT2015-2AP01

13.9 Circuit breakers and power contactors

<b>6RA8075_XXXXX_0AA0</b>	Value	Designation	Manufacturer	Article number
Rated DC current [A] (DC)	210	-	-	-
Rated armature supply voltage [V]	400 480 575	-	-	-
Contactors armature circuit	-	Main contactor AC1, 275 A	Siemens	3RT1456-6AP36
Contactors field circuit	-	Field contactor designed for AC1	Siemens	3RT2015-2AP01

<b>6RA8078_XXXXX_0AA0</b>	Value	Designation	Manufacturer	Article number
Rated DC current [A] (DC)	280	-	-	-
Rated armature supply voltage [V]	400 480	-	-	-
Contactors armature circuit	-	Main contactor AC1, 275 A	Siemens	3RT1456-6AP36
Contactors field circuit	-	Field contactor designed for AC1	Siemens	3RT2015-2AP01

<b>6RA8081_XXXXX_0AA0</b>	Value	Designation	Manufacturer	Article number
Rated DC current [A] (DC)	400	-	-	-
Rated armature supply voltage [V]	400 575	-	-	-
Contactors armature circuit	-	Main contactor AC1, 400 A	Siemens	3RT1466-6AP36
Contactors field circuit	-	Field contactor designed for AC1 Field contactor designed for AC1	Siemens Siemens	3RT2023-2AL20 3RT2023-2AL24

<b>6RA8082_XXXXX_0AA0</b>	Value	Designation	Manufacturer	Article number
Rated DC current [A] (DC)	450	-	-	-
Rated armature supply voltage [V]	480	-	-	-
Contactors armature circuit	-	Main contactor AC1, 400 A	Siemens	3RT1466-6AP36
Contactors field circuit	-	Field contactor designed for AC1 Field contactor designed for AC1	Siemens Siemens	3RT2023-2AL20 3RT2023-2AL24

<b>6RA8085_XXXXX_0AA0</b>	Value	Designation	Manufacturer	Article number
Rated DC current [A] (DC)	600	-	-	-
Rated armature supply voltage [V]	400 480 575	-	-	-
Contactors armature circuit	-	Main contactor AC1, 690 A	Siemens	3RT1476-6AP36
Contactors field circuit	-	Field contactor designed for AC1 Field contactor designed for AC1	Siemens Siemens	3RT2023-2AL20 3RT2023-2AL24

<b>6RA8086_XXXXX_OAA0</b>	Value	Designation	Manu- facturer	Article number
Rated DC current [A] (DC)	720 760	-	-	-
Rated armature supply voltage [V]	690	-	-	-
Contactor armature circuit	-	Main contactor AC1, 800 A	ABB	AF750-30-22
Contactor field circuit	-	Field contactor designed for AC1 Field contactor designed for AC1	Siemens Siemens	3RT2023-2AL20 3RT2023-2AL24

<b>6RA8087_XXXXX_OAA0</b>	Value	Designation	Manu- facturer	Article number
Rated DC current [A] (DC)	800 850	-	-	-
Rated armature supply voltage [V]	400 480 575	-	-	-
Contactor armature circuit	-	Main contactor AC1, 800 A	ABB	AF750-30-22
Contactor field circuit	-	Field contactor designed for AC1 Field contactor designed for AC1	Siemens Siemens	3RT2023-2AL20 3RT2023-2AL24

<b>6RA8088_XXXXX_OAA0</b>	Value	Designation	Manu- facturer	Article number
Rated DC current [A] (DC)	950	-	-	-
Rated armature supply voltage [V]	830	-	-	-
3WL circuit breaker armature circuit	-	3WL1 circuit breaker 1000 A 1000 V with LI trigger ETU15B	Siemens	3WL1210-4BB33-4AS2-Z Z=A05+C22
Contactor field circuit	-	Field contactor designed for AC1 Field contactor designed for AC1	Siemens Siemens	3RT2023-2AL20 3RT2023-2AL24

<b>6RA8090_XXXXX_OAA0</b>	Value	Designation	Manu- facturer	Article number
Rated DC current [A] (DC)	1000 1100	-	-	-
Rated armature supply voltage [V]	575 690	-	-	-
3WL circuit breaker armature circuit	-	3WL1 circuit breaker 1000 A 690 V with LI trigger ETU15B	Siemens	3WL1210-3BB33-4AS2-Z Z=C22
Contactor field circuit	-	Field contactor designed for AC1 Field contactor designed for AC1	Siemens Siemens	3RT2023-2AL20 3RT2023-2AL24

13.9 Circuit breakers and power contactors

6RA8091_XXXXX_0AA0	Value	Designation	Manufacturer	Article number
Rated DC current [A] (DC)	1200	-	-	-
Rated armature supply voltage [V]	400 480	-	-	-
3WL circuit breaker armature circuit	-	3WL1 circuit breaker 1000 A 690 V with LI trigger ETU15B	Siemens	3WL1210-3BB33-4AS2-Z Z=C22
Contactor field circuit	-	Field contactor designed for AC1 Field contactor designed for AC1	Siemens Siemens	3RT2023-2AL20 3RT2023-2AL24

6RA8093_XXXXX_0AA0	Value	Designation	Manufacturer	Article number
Rated DC current [A] (DC)	1500	-	-	-
Rated armature supply voltage [V]	690 830	-	-	-
3WL circuit breaker armature circuit	-	3WL1 circuit breaker 1250 A 690 V with LI trigger ETU15B 3WL1 circuit breaker 1250 A 1000 V with LI trigger ETU15B	Siemens Siemens	3WL1212-3BB33-4AS2-Z Z=C22 3WL1212-4BB33-4AS2-Z Z=A05+C22
Contactor field circuit	-	Field contactor designed for AC1 Field contactor designed for AC1	Siemens Siemens	3RT1034-3AL20 3RT1044-3AL20

6RA8093_XXXXX_0AA0	Value	Designation	Manufacturer	Article number
Rated DC current [A] (DC)	1600	-	-	-
Rated armature supply voltage [V]	400 575	-	-	-
3WL circuit breaker armature circuit	-	3WL1 circuit breaker 1600 A 690 V with LI trigger ETU15B	Siemens	3WL1216-3BB33-4AS2-Z Z=C22
Contactor field circuit	-	Field contactor designed for AC1 Field contactor designed for AC1	Siemens Siemens	3RT1034-3AL20 3RT1044-3AL20

6RA8095_XXXXX_0AA0	Value	Designation	Manufacturer	Article number
Rated DC current [A] (DC)	2000	-	-	-
Rated armature supply voltage [V]	400 575 690 830	-	-	-
3WL circuit breaker armature circuit	-	3WL1 circuit breaker 2000 A 690 V with LI trigger ETU15B 3WL1 circuit breaker 2000 A 1000 V with LI trigger ETU15B	Siemens Siemens	3WL1220-3BB33-4AS2-Z Z=C22 3WL1220-4BB33-4AS2-Z Z=A05+C22
Contactor field circuit	-	Field contactor designed for AC1 Field contactor designed for AC1	Siemens Siemens	3RT1034-3AL20 3RT1044-3AL20



<b>6RA8096_XXXXX_OAA0</b>	Value	Designation	Manu- facturer	Article number
Rated DC current [A] (DC)	2200	-	-	-
Rated armature supply voltage [V]	575 690 950	-	-	-
3WL circuit breaker armature circuit	-	3WL1 circuit breaker 2000 A 690 V with LI trigger ETU15B 3WL1 circuit breaker 2000 A 1000 V with LI trigger ETU15B	Siemens Siemens	3WL1220-3BB33-4AS2-Z Z=C22 3WL1220-4BB33-4AS2-Z Z=A05+C22
Contactor field circuit	-	Field contactor designed for AC1 Field contactor designed for AC1	Siemens Siemens	3RT1034-3AL20 3RT1044-3AL20

<b>6RA8097_XXXXX_OAA0</b>	Value	Designation	Manu- facturer	Article number
Rated DC current [A] (DC)	2600 2800	-	-	-
Rated armature supply voltage [V]	575 690	-	-	-
3WL circuit breaker armature circuit	-	3WL1 circuit breaker 2500 A 690 V with LI trigger ETU15B	Siemens	3WL1225-3BB33-4AS2-Z Z=C22
Contactor field circuit	-	Field contactor designed for AC1 Field contactor designed for AC1	Siemens Siemens	3RT1034-3AL20 3RT1044-3AL20

<b>6RA8098_XXXXX_OAA0</b>	Value	Designation	Manu- facturer	Article number
Rated DC current [A] (DC)	3000	-	-	-
Rated armature supply voltage [V]	400	-	-	-
3WL circuit breaker armature circuit	-	3WL1 circuit breaker 2500 A 690 V with LI trigger ETU15B	Siemens	3WL1225-3BB33-4AS2-Z Z=C22
Contactor field circuit	-	Field contactor designed for AC1 Field contactor designed for AC1	Siemens Siemens	3RT1034-3AL20 3RT1044-3AL20

## 13.10 Recommended safety relays

Number	Devices	Manufacturer, order number	Details
1	EMERGENCY STOP button	Siemens 3SB3000-1HA20	EMERGENCY STOP mushroom pushbutton, positive latching, rotate to release
		Siemens 3SB3403-0D	Contact block with 2 contacts, 2NO, spring-loaded connection, for front panel mounting
		Siemens 3SB3921-0AX	Protective collar for EMERGENCY STOP mushroom pushbutton, with block, yellow
1	Power supply for 3SK1	Siemens 3SK1230-2AW20	Power supply for 3SK1 ( <a href="https://mall.industry.siemens.com/mall/en/Catalog/Product/3SK1230-2AW20">https://mall.industry.siemens.com/mall/en/Catalog/Product/3SK1230-2AW20</a> ) SIRIUS safety relay - power supply for 3SK1 advanced series Us = 115 - 230 V AC/DC spring-loaded connection
1	Safety relay Basic device advanced	Siemens 3SK1121-2CB41 3SK1121-2CB42 3SK1121-2CB44	Safety relay basic unit Advanced (for SS1) ( <a href="https://mall.industry.siemens.com/mall/en/Catalog/Product/3SK1121-2CB42">https://mall.industry.siemens.com/mall/en/Catalog/Product/3SK1121-2CB42</a> ) SIRIUS safety relay, basic device advanced, with time delay 0.5-30 s, 4 relay enable circuits (2 NO contacts without delay, 2 NO contacts, with delay) Us = 24 V DC, spring-loaded connection
2	Coupling relay for SIL3	Phoenix Contact PSR-SPP-24DC/FS P/1X1/1X2 - 2981981	Coupling relay for SIL3 ( <a href="https://www.phoenixcontact.com/en/produkte/2981981">https://www.phoenixcontact.com/en/produkte/2981981</a> ) Coupling relay for SIL 3 high and low demand applications, coupled with digital output signals to the I/O, 1 enable current path, 1 feedback signal current path, 1 digital signaling output, safe-state-off applications, test pulse filter, PSR-TBUS connection, pluggable spring-loaded terminal
1	Safety relay Basic device advanced	Siemens 3SK1121-2AB40	Safety relay basic unit Advanced (for STO) ( <a href="https://mall.industry.siemens.com/mall/en/Catalog/Product/3SK1121-2AB40">https://mall.industry.siemens.com/mall/en/Catalog/Product/3SK1121-2AB40</a> ) SIRIUS safety relay basic device advanced range, relay enable circuits, 3 NO contact + relay signaling circuit, 1 NC contact Us = 24 V DC, spring-loaded connection

## Appendix A

### A.1 Certifications and standards

#### Certifications

##### Development, production, sales:

ISO 9001:2008	Quality management
ISO 14001:2004	Environmental management

##### Devices:

UL, cULus		File No. E203250 <sup>1)</sup>
EAC		
Germanischer Lloyd	Shipbuilding <sup>2)</sup>	11787-10HH
Lloyd's Register	Shipbuilding <sup>2)</sup>	No. 06/20053
American Bureau of Shipping	Shipbuilding <sup>2)</sup>	06-HG196689-1-PDA
Det Norske Veritas	Shipbuilding <sup>2)</sup>	No. E-10357 (DC Converters) No. E-10358 (Control Module)

##### Communication:

PROFIBUS slave (DP-V0, DP-V1, PROFIdrive 3.1.2)  
PROFINET IO devices (V 2.2.4, PROFIdrive 4.1)

- 1) UL online certifications directory:  
<http://database.ul.com/cgi-bin/XYV/template/LISEXT/1FRAME/index.htm>
- 2) In order to maintain the limit values decisive for certification for marine applications, the prerequisites as listed in chapter "Using SINAMICS DCM in shipbuilding (Page 705)" must be observed.

**Korean Certification (KC)**

Type of Equipment	User's Guide
A급 기기 (업무용 방송통신기자재)  Class A Equipment (Industrial Broadcasting & Communication Equipment)	이 기기는 업무용(A급) 전자파적합기기로서 판매자 또는 사용자는 이 점을 주의하시기 바라며, 가정외의 지역에서 사용하는 것을 목적으로 합니다.  This equipment is <b>Industrial (Class A) electromagnetic wave suitability equipment</b> and seller or user should take notice of it, and this equipment is to be used in the places except for home.

The EMC limit values to be complied with for Korea correspond to the limit values of the EMC product standard for variable-speed electric drives EN 61800-3, category C2 or limit value class A1 according to EN 55011.

With suitable additional measures, the limit values according to category C2 or according to limit value class A1 are maintained.

To do this, an additional radio interference suppression filter (EMC filter) must be used and the converters must be installed in the control cabinet in compliance with EMC rules.

The appropriate radio interference suppression filters (for the field and armature circuits) for the SINAMICS DC MASTER are listed in Catalog D23.1.

Additional notes are provided there as well as technical data and constraints regarding the use of radio interference suppression filters:

- The use in grounded line supplies
- The mandatory use of a commutating reactor

Detailed information about the basics of EMC and EMC-compliant design of drives can be found in the Chapter "Connecting (Page 91)".

**Basic standards**

EN 50178	Electronic equipment for use in power installations
EN 50274	Low-voltage switchgear and controlgear assemblies: Protection against electric shock – Protection against unintentional direct contact with hazardous live parts
EN 60146-1-1	Semiconductor converters; General requirements and line-commutated converters; specification of basic requirements
EN 61800-1	Adjustable speed electrical power drive systems – General requirements - Rating specifications for low voltage adjustable speed DC power drive systems
EN 61800-3	Adjustable speed electrical power drive systems – Part 3: EMC product standard including specific test methods
EN 61800-5-1	Adjustable speed electrical power drive systems – Part 5-1: Safety requirements – Electrical, thermal, and energy
EN 60204-1	Safety of machinery – Electrical equipment of machines – Part 1: General requirements
UBC 97	Uniform Building Code

**Reference standards**

SN 29500-1	Component failure rates: Anticipated values, general
SN 36350-1	Environmentally compatible products, Part 1: Product design guidelines
SN 27095	Inspection and testing of switchgear and control equipment for marine engineering
ISO 3740	Determination of sound power levels of noise sources: Guidelines for the use of basic standards

**Country-specific standards**

NEMA	National Electrical Manufacturers Association
UL 508 C	Power Conversion Equipment
UL 840	Insulation Coordination Including Clearances and Creepage Distances for Electrical Equipment
UL 94	Tests for Flammability of Plastic Materials for Parts in Devices and Appliances

## A.2 List of abbreviations

### Note

The following list of abbreviations includes all abbreviations and their meanings used in the entire SINAMICS user documentation.

Abbreviation	Meaning, German	Meaning, English
<b>A</b>		
A...	Warnung	Alarm
AC	Wechselstrom	Alternating Current
ADC	Analog-Digital-Konverter	Analog Digital Converter
AI	Analogeingang	Analog input
AIM	Active Interface Module	Active Interface Module
ALM	Active Line Module	Active Line Module
AO	Analogausgang	Analog output
AOP	Advanced Operator Panel	Advanced Operator Panel
APC	Advanced Positioning Control	Advanced Positioning Control
AR	Wiedereinschaltautomatik	Automatic Restart
ASC	Ankerkurzschluss	Armature short-circuit
ASCII	Amerikanische Code-Norm für den Informationsaustausch	American Standard Code for Information Interchange
ASM	Asynchronmotor	Induction motor
<b>B</b>		
BERO	Firmenname für einen Näherungsschalter	Trade name for a type of proximity switch
BI	Binektoreingang	Binector input
BIA	Berufsgenossenschaftliches Institut für Arbeitssicherheit	German Institute for Occupational Safety
BICO	Binektor-Konnektor-Technologie	Binector Connector Technology
BLM	Basic Line Module	Basic Line Module
BOP	Basic Operator Panel	Basic Operator Panel
<b>C</b>		
C	Kapazität	Capacitance
C...	Safety-Meldung	Safety message
CAN	Seriellles Bussystem	Control Area Network
CBC	Kommunikationsbaugruppe CAN	Communication Board CAN
CD	Compact Disc	Compact Disc
CDS	Befehlsdatensatz	Command Data Set
CF	CompactFlash	CompactFlash
CI	Konnektoreingang	Connector Input
CNC	Computerunterstützte numerische Steuerung	Computer Numerical Control
CO	Konnektorausgang	Connector Output

Abbreviation	Meaning, German	Meaning, English
CO/BO	Konnektor-/Binektorausgang	Connector Output / Binector Output
COB ID	CAN Object-Identification	CAN Object-Identification
COM	Mittelkontakt eines Wechselkontaktes	Common contact of a changeover relay
CP	Kommunikationsprozessor	Communication Processor
CPU	Zentrale Recheneinheit	Central Processing Unit
CRC	Checksummenprüfung	Cyclic Redundancy Check
CSM	Control Supply Module	Control Supply Module
CU	Control Unit	Control Unit
<b>D</b>		
DAC	Digital-Analog-Konverter	Digital Analog Converter
DC	Gleichstrom	Direct Current
DCB	Drive Control Block	Drive Control Block
DCC	Drive Control Chart	Drive Control Chart
DCN	Gleichstrom negativ	Direct Current Negative
DCP	Gleichstrom positiv	Direct Current Positive
DDS	Antriebsdatensatz	Drive Data Set
DI	Digitaleingang	Digital Input
DI/DO	Digitaleingang/-ausgang bidirektional	Bidirectional Digital Input/Output
DMC	DRIVE-CLiQ Module Cabinet (Hub)	DRIVE-CLiQ Module Cabinet (Hub)
DO	Digitalausgang	Digital Output
DO	Antriebsobjekt	Drive Object
DP	Dezentrale Peripherie	Decentralized Peripherals
DPRAM	Speicher mit beidseitigem Zugriff	Dual-Port Random Access Memory
DRAM	Dynamischer Speicher	Dynamic Random Access Memory
DRIVE-CLiQ	Drive Component Link with IQ	Drive Component Link with IQ
DSC	Dynamic Servo Control	Dynamic Servo Control
<b>E</b>		
EASC	Externer Ankerkurzschluss	External Armature Short-Circuit
ECD	Ersatzschaltbild	Equivalent Circuit Diagram
EDS	Geberdatensatz	Encoder Data Set
ELP	Erdschlussüberwachung	Earth Leakage Protection
EMC	Elektromagnetische Verträglichkeit	Electromagnetic Compatibility
EMF	Elektromagnetische Kraft	Electromagnetic Force
EN	Europäische Norm	European standard
EnDat	Geber-Schnittstelle	Encoder Data Interface
EP	Impulsfreigabe	Enable Pulses
EPOS	Einfachpositionierer	Basic positioner
ES	Engineering System	Engineering System
ESD	Elektrostatisch gefährdete Baugruppen	Electrostatic Sensitive Devices
ESR	Erweitertes Stillsetzen und Rückziehen	Extended Stop and Retract

Abbreviation	Meaning, German	Meaning, English
<b>F</b>		
F...	Störung	Fault
FAQ	Häufig gestellte Fragen	Frequently Asked Questions
FBL	Freie Funktionsblöcke	Free Blocks
FCC	Function Control Chart	Function Control Chart
FCC	Flussstromregelung	Flux Current Control
F-DI	Fehlersicherer Digitaleingang	Fail-safe Digital Input
F-DO	Fehlersicherer Digitalausgang	Fail-safe Digital Output
FEM	Fremderregter Synchronmotor	Separately excited synchronous motor
FEPROM	Schreib- und Lesespeicher nichtflüchtig	Flash EPROM
FG	Funktionsgenerator	Function Generator
FI	Fehlerstrom-Schutzschalter	Earth Leakage Circuit-Breaker (ELCB)
FP	Funktionsplan	Function diagram
FPGA	Field Programmable Gate Array	Field Programmable Gate Array
FW	Firmware	Firmware
<b>G</b>		
GB	Gigabyte	Gigabyte
GC	Global-Control-Telegramm (Broadcast-Telegramm)	Global Control Telegram (Broadcast Telegram)
GSD	Gerätstammdatei: beschreibt die Merkmale eines PROFIBUS-Slaves	Device master file: describes the features of a PROFIBUS slave
GSV	Gate Supply Voltage	Gate Supply Voltage
GUID	Globally Unique Identifier	Globally Unique Identifier
<b>H</b>		
HF	Hochfrequenz	High Frequency
HFD	Hochfrequenzdrossel	High frequency reactor
HMI	Mensch-Maschine-Schnittstelle	Human Machine Interface
HTL	Logik mit hoher Störschwelle	High-Threshold Logic
HW	Hardware	Hardware
<b>I</b>		
i. V.	Under development: This property is currently not available	In preparation: this feature is currently not available
I/O	Eingang/Ausgang	Input/Output
IASC	Interner Ankerkurzschluss	Internal Armature Short-Circuit
IBN	Inbetriebnahme	Commissioning
ID	Identifizierung	Identifier
IEC	Internationale Norm in der Elektrotechnik	International Electrotechnical Commission
IF	Interface	Interface
IGBT	Bipolartransistor mit isolierter Steuerelektrode	Insulated Gate Bipolar Transistor
IL	Impulslöschung	Pulse suppression
IPO	Interpolator cycle	Interpolator clock
IT	Non-grounded three-phase line supply	Insulated three-phase supply network
IVP	Interner Spannungsschutz	Internal Voltage Protection



Abbreviation	Meaning, German	Meaning, English
<b>J</b>		
JOG	Tippen	Jogging
<b>K</b>		
KDV	Kreuzweiser Datenvergleich	Data cross-checking
KIP	Kinetische Pufferung	Kinetic buffering
Kp	Proportionalverstärkung	Proportional gain
KTY	Spezieller Temperatursensor	Special temperature sensor
<b>L</b>		
L	Induktivität	Inductance
LED	Leuchtdiode	Light Emitting Diode
LIN	Linearmotor	Linear motor
LR	Lageregler	Position controller
LSB	Niederwertiges Bit	Least Significant Bit
LSS	Netzschalter	Line Side Switch
LU	Längeneinheit	Length Unit
LWL	Lichtwellenleiter	Fiber-optic cable
<b>M</b>		
M	Mass	Reference potential, zero potential
MB	Megabyte	Megabyte
MCC	Motion Control Chart	Motion Control Chart
MDS	Motordatensatz	Motor Data Set
MLFB	Maschinenlesbare Fabrikatebezeichnung	Machine-readable product designation
MMC	Mensch-Maschine-Kommunikation	Man-Machine Communication
MSB	Höchstwertiges Bit	Most Significant Bit
MSC	Motorstromrichter	Motor power converter
MSCY_C1	Zyklische Kommunikation zwischen Master (Klasse 1) und Slave	Master Slave Cycle Class 1
MT	Messtaster	Measuring input
<b>N</b>		
N. C.	Nicht angeschlossen	Not Connected
N...	Keine Meldung oder Interne Meldung	No Report
NAMUR	Normenarbeitsgemeinschaft für Mess- und Regeltechnik in der chemischen Industrie	Standardization association for instrumentation and control in the chemical industry
NC	Öffner	Normally Closed (contact)
NC	Numerische Steuerung	Numerical Control
NEMA	Normengremium in USA (United States of America)	National Electrical Manufacturers Association
NM	Nullmarke	Zero mark
NO	Schließer	Normally Open (contact)
NSR	Netzstromrichter	Line power converter
<b>O</b>		
OA	Open Architecture	Open Architecture
OC	Betriebsbedingung	Operating condition

Abbreviation	Meaning, German	Meaning, English
OEM	Original Equipment Manufacturer	Original Equipment Manufacturer
OLP	Busstecker für Lichtleiter	Optical Link Plug
OMI	Option Module Interface	Option Module Interface
<b>P</b>		
p...	Einstellparameter	Adjustable parameter
PB	PROFIBUS	PROFIBUS
PcCtrl	Steuerungshoheit	Master control
PD	PROFIdrive	PROFIdrive
PDS	Leistungsteildatensatz	Power Unit Data Set
PE	Schutzerde	Protective Earth
PELV	Schutzkleinspannung	Protective Extra-Low Voltage
PEM	Permanenterregter Synchronmotor	Permanent-magnet synchronous motor
PG	Programmiergerät	Programming device
PI	Proportional Integral	Proportional Integral
PID	Proportional Integral Differential	Proportional Integral Differential
PLC	Speicherprogrammierbare Steuerung (SPS)	Programmable Logical Controller
PLL	Phase Locked Loop	Phase Locked Loop
PNO	PROFIBUS Nutzerorganisation	PROFIBUS user organization
PPI	Punkt zu Punkt Schnittstelle	Point-to-Point Interface
PRBS	Weißes Rauschen	Pseudo Random Binary Signal
PROFIBUS	Serieller Datenbus	Process Field Bus
PS	Stromversorgung	Power Supply
PSA	Power Stack Adapter	Power Stack Adapter
PTC	Positiver Temperaturkoeffizient	Positive Temperature Coefficient
PTP	Punkt zu Punkt	Point-To-Point
PWM	Pulsweitenmodulation	Pulse Width Modulation
PZD	PROFIBUS Prozessdaten	PROFIBUS process data
<b>R</b>		
r...	Beobachtungsparameter (nur lesbar)	Display parameter (read only)
RAM	Speicher zum Lesen und Schreiben	Random Access Memory
RCCB	Fehlerstrom-Schutzschalter	Residual Current Circuit Breaker
RCD	Fehlerstrom-Schutzschalter	Residual Current Device
RFG	Hochlaufgeber	Ramp-Function Generator
RJ45	Norm. Beschreibt eine 8-polige Steckverbindung mit Twisted-Pair Ethernet.	Standard. Describes an 8-pole plug connector with twisted pair Ethernet.
RKA	Rückkühlanlage	Cooling unit
RO	Nur lesbar	Read Only
RPDO	Receive Process Data Object	Receive Process Data Object
RS232	Serielle Schnittstelle	Serial interface
RS485	Norm. Beschreibt die Physik einer digitalen seriellen Schnittstelle.	Standard. Describes the physical characteristics of a digital serial interface.
RTC	Echtzeituhr	Real-Time Clock

Abbreviation	Meaning, German	Meaning, English
<b>S</b>		
S1	Dauerbetrieb	Continuous operation
S3	Aussetzbetrieb	Intermittent duty
SBC	Sichere Bremsenansteuerung	Safe Brake Control
SBH	Sicherer Betriebsstopp	Safe Operating Stop
SBR	Sichere Beschleunigungsüberwachung	Safe Acceleration Monitor
SCA	Sichere Nocke	Safe Cam
SE	Sicherer Software-Endschalter	Safe software limit switch
SG	Sicher reduzierte Geschwindigkeit	Safely reduced speed
SGA	Sicherheitsgerichteter Ausgang	Safety-related output
SGE	Sicherheitsgerichteter Eingang	Safety-related input
SH	Sicherer Halt	Safety standstill
SI	Safety Integrated	Safety Integrated
SIL	Sicherheitsintegritätsgrad	Safety Integrity Level
SLM	Smart Line Module	Smart Line Module
SLP	Sicher begrenzte Position	Safely Limited Position
SLS	Sicher begrenzte Geschwindigkeit	Safely Limited Speed
SLVC	Geberlose Vektorregelung	Sensorless Vector Control
SM	Sensor Module	Sensor Module
SMC	Sensor Module Cabinet	Sensor Module Cabinet
SME	Sensor Module External	Sensor Module External
SN	Sicherer Software-Nocken	Safe software cam
SOS	Sicherer Betriebsstopp	Safe Operating Stop
SPC	Sollwertkanal	Setpoint Channel
SPS	Speicherprogrammierbare Steuerung	Programmable Logic Controller (PLC)
SS1	Sicherer Stop 1	Safe Stop 1
SS2	Sicherer Stop 2	Safe Stop 2
SSI	Synchron Serielle Schnittstelle	Synchronous Serial Interface
SSM	Sichere Rückmeldung der Geschwindigkeitsüberwachung ( $n < n_x$ )	Safe Speed Monitor
SSR	Sichere Bremsrampe	Safe Stop Ramp
STO	Sicher abgeschaltetes Moment	Safe Torque Off
STW	PROFIBUS Steuerwort	PROFIBUS control word
SVA	Raumzeigerapproximation	Space vector approximation
<b>T</b>		
TB	Terminal Board	Terminal Board
TIA	Totally Integrated Automation	Totally Integrated Automation
TM	Terminal Module	Terminal Module
TN	Drehstromversorgungsnetz geerdet	Grounded three-phase line supply
Tn	Nachstellzeit	Integral time
TPDO	Transmit Process Data Object	Transmit Process Data Object
TT	Drehstromversorgungsnetz geerdet	Grounded three-phase line supply

Abbreviation	Meaning, German	Meaning, English
TTL	Transistor-Transistor-Logik	Transistor-Transistor Logic
Tv	Vorhaltezeit	Derivative-action time
<b>U</b>		
UL	Underwriters Laboratories Inc.	Underwriters Laboratories Inc.
UPS	Unterbrechungsfreie Stromversorgung	Uninterruptible Power Supply
<b>V</b>		
VC	Vektorregelung	Vector Control
Vdc	Zwischenkreisspannung	DC-link voltage
VdcN	Teilzwischenkreisspannung negativ	Partial DC-link voltage negative
VdcP	Teilzwischenkreisspannung positiv	Partial DC-link voltage positive
VDE	Verband Deutscher Elektrotechniker	Association of German Electrical Engineers
VDI	Verein Deutscher Ingenieure	Association of German Engineers
Vpp	Volt Spitze zu Spitze	Volt peak to peak
VSM	Voltage Sensing Module	Voltage Sensing Module
<b>W</b>		
WZM	Werkzeugmaschine	Machine tool
<b>X</b>		
XML	Erweiterbare Auszeichnungssprache (Standardsprache für Web-Publishing und Dokumentenmanagement)	Extensible Markup Language
<b>Z</b>		
ZK	Zwischenkreis	DC link
ZSW	PROFIBUS Zustandswort	PROFIBUS status word

## Abbreviations, DC-specific terms

Abbreviation	Meaning
2Q	2 quadrant
4Q	4 quadrant
IR	Initial rounding
FR	Final rounding
CU_DC	Control Unit DC
DC_CTRL	DC drive control
RUT	Rampup time
Ia	Actual armature current value
IAlimit	Current limit
If	Actual field current value
ILG	Current at critical conduction
In	Rated current
Kp	P gain
La	Armature circuit inductance
Mlimit	Torque limit
Mact	Actual torque value
n	Speed
nact	Actual speed value
nmin	Minimum speed
NN	Normal zero
nsetp	Speed setpoint
Ra	Armature circuit resistance
RDT	Ramp-down time
Tn	Integral time
TSE	Snubber
Tu	Ambient temperature
Ua	Armature voltage
Uf	Field voltage
ULine	Line voltage
USS	Universal serial interface
SICROWBAR	Overvoltage protection

## A.3 Environmental compatibility

### Environmental aspects during development

The use of highly-integrated components has enabled the number of parts to be kept to a minimum, with energy being used as efficiently as possible during production as a result.

Particular emphasis has been placed on ensuring that the metal and plastic parts have a low volume and low weight, and that the number of different types is kept to a minimum.

Front parts:	PC + ABS	Bayblend	Bayer
Plastic parts in the device:	PC	Lexan 915-R	
Insulation materials:	PC (FR) fl	Makrolon or Lexan	
Rating plate:	Polyester film		

Pollutant-free materials have been used for all significant parts. Insulation materials containing silicone are not used. Materials containing halogens are only present to a slight extent (cable insulation in the SINAMICS DCM Control Module).

All materials meet ROHS criteria.

Environmental compatibility was a key criterion in selecting supplier parts.

### Environmental aspects during production

The packaging material can be recycled and consists mainly of cardboard.

With the exception of the enclosure, no surface coatings have been used.

The production processes do not produce any emissions.

### Environmental aspects for disposal

For environmentally friendly recycling and disposal of your old device, please contact a company certified for the disposal of old electrical and electronic devices and dispose of the device in accordance with the regulations in your country.

The device features screw-in and snap-in connections that can be easily released in order to separate it into different mechanical components for recycling purposes.

The printed circuit boards may be used in recycling processes involving energy recovery. The proportion of components containing hazardous substances is low.



## A.4 Servicing

### Repairs

If you wish to have a part or unit repaired, please get in touch with your regional contact for repairs.

### Service calls

Qualified personnel can perform repair work on your devices and offer services that ensure their availability. This work can be carried out with charges that are scaled according to the amount of time and work involved, or at a flat rate as part of a contract. Services whose charges depend on the amount of time and work involved are performed within the normal working hours for the region and with an appropriate response time.

You can get in touch with your regional contact if you wish to have any services carried out.

---

### Note

We would be grateful if you could specify the following device data when you have any queries:

- Device article number and serial number
  - Firmware version
  - Hardware version of the electronics module CUD (printed on the component side)
  - Hardware version and firmware version of additional modules (if used)
-





## Appendix B

### B.1 Runtimes of the DCC blocks for SINAMICS DCM

The typical runtimes of the DCC blocks (in  $\mu\text{s}$ ) are listed in the following table.

Table B- 1 DCC blocks on the SINAMICS DCM

Designation	Function	Typ. runtime	Group
ADD	Adder (REAL type)	8	Arithmetic
ADD_D	Adder (double integer type)	7	
ADD_I	Adder (integer type)	7	
ADD_M	Modulo adder for addition in correct axis cycle	8	
AVA	Absolute value generator with sign evaluation	6	
AVA_D	Absolute value generator (double integer)	6	
DIV	Divider (REAL type)	9	
DIV_D	Divider (double integer type)	7	
DIV_I	Divider (integer type)	7	
MAS	Maximum evaluator	7	
MIS	Minimum evaluator	8	
MUL	Multiplier	7	
MUL_D	Multiplier (double integer type)	7	
MUL_I	Multiplier (integer type)	7	
PLI20	Polyline, 20 break points	9	
SII	Inverter	6	
SUB	Subtractor	6	
SUB_D	Subtractor (double integer type)	6	
SUB_I	Subtractor (integer type)	5	
DEL	Dead zone element	6	
DEZ	Dead zone element	6	
DIF	Derivative-action element	7	
DT1	Smoothing element	8	
INT	Integrator	8	
LIM	Limiter (REAL type)	6	
LIM_D	Limiter (DOUBLE type)	6	
MVS	Sliding-type mean value generator	8	
PC	P controller	9	
PIC	PI controller	10	
PT1	Delay element	7	

Designation	Function	Typ. runtime	Group
RGE	Ramp-function generator	12	Conversion
RGJ	Ramp-function generator with jerk limiting	78	
BY_W	Status byte to status word converter	14	
B_DW	Converter 32 binary variables to status double word	10	
B_W	Converter 16 binary variables to status word	6	
DW_B	Converter status double word to 32 binary variables	6	
DW_R	Accepting bit string as real value	5	
DW_W	Status double word to status word converter	6	
D_I	DOUBLE INTEGER to INTEGER converter	6	
D_R	DOUBLE INTEGER to REAL converter	7	
D_UI	DOUBLE INTEGER to UNSIGNED INTEGER converter	6	
D_US	DOUBLE INTEGER to UNSIGNED SHORT INTEGER converter	6	
I_D	INTEGER to DOUBLE INTEGER converter	6	
I_R	INTEGER to REAL converter	6	
I_UD	INTEGER to UNSIGNED DOUBLE INTEGER converter	6	
I_US	INTEGER to UNSIGNED SHORT INTEGER converter	6	
N2_R	Converting 16-bit fixed-point format (N2) to REAL	7	
N4_R	Converting 32-bit fixed-point format (N4) to REAL	6	
R_D	REAL to DOUBLE INTEGER converter	6	
R_DW	Bit string transfer as WORD	6	
R_I	REAL to INTEGER converter	6	
R_N2	Converting REAL to 16-bit fixed-point format (N2)	6	
R_N4	Converting REAL to 32-bit fixed-point format (N4)	6	
R_UD	REAL to UNSIGNED DOUBLE INTEGER converter	6	
R_UI	REAL to UNSIGNED INTEGER converter	6	
R_US	REAL to UNSIGNED SHORT INTEGER converter	5	
UD_I	INTEGER DOUBLE INTEGER to INTEGER converter	5	
UD_R	UNSIGNED DOUBLE INTEGER to REAL converter	6	
UI_D	UNSIGNED INTEGER to DOUBLE INTEGER converter	6	
UI_R	UNSIGNED INTEGER to REAL converter	6	

Designation	Function	Typ. runtime	Group
US_D	UNSIGNED-SHORT-INTEGER to DOUBLE INTEGER converter	6	
US_I	UNSIGNED-SHORT-INTEGER to INTEGER converter	5	
US_R	UNSIGNED-SHORT-INTEGER to REAL converter	5	
W_B	Converter, status word to 16 binary variables	5	
W_BY	Status word to status byte converter	5	
W_DW	Status word to status double word converter	6	
AND	BOOL type	7	
BF	Flash function BOOL	12	
BSW	Binary change-over switch (BOOL type)	5	
CNM	Controllable numeric memory (REAL type)	6	
CNM_D	Controllable numeric memory (double integer type)	6	
CNM_I	Controllable numeric memory (integer type)	6	
CTR	Counter (BOOL type)	7	
DFR	Reset-dominant D-type flip-flop (BOOL type)	6	
DLB	Delay element (REAL type)	7	
DX8	Demultiplexer, 8 outputs, (REAL type)	6	
DX8_D	Demultiplexer, 8 outputs, (DOUBLE INTEGER type)	14	
DX8_I	Demultiplexer, 8 outputs, (INTEGER type)	13	
ETE	Edge evaluator (BOOL type)	6	
LVM	Double-sided limit monitor with hysteresis (BOOL type)	7	
MFP	Pulse generator (BOOL type)	6	
MUX8	Multiplexer, cascadable (BREAL type)	6	
MUX8_D	Multiplexer, cascadable (DOUBLE INTEGER type)	12	
MUX8_I	Multiplexer, cascadable (INTEGER type)	13	
NAND	Block (BOOL type)	7	
NCM	Numeric comparator (REAL type)	6	
NCM_D	Numeric comparator (DOUBLE INTEGER type)	5	
NCM_I	Numeric comparator (INTEGER type)	6	
NOP1	Dummy block (REAL type)	5	
NOP1_B	Dummy block (BOOL type)	5	
NOP1_D	Dummy block (DOUBLE INTEGER type)	4	
NOP1_I	Dummy block (INTEGER type)	6	
NOP8	Dummy blocks (REAL type)	8	
NOP8_B	Dummy blocks (BOOL type)	8	
NOP8_D	Dummy blocks (DOUBLE INTEGER type)	8	

Designation	Function	Typ. runtime	Group
NOP8_I	Dummy blocks (INTEGER type)	8	
NOR	Block (BOOL type)	7	
NOT	Inverter (BOOL type)	5	
NSW	Numeric change-over switch (REAL type)	6	
NSW_D	Numeric change-over switch (DOUBLE INTEGER type)	5	
NSW_I	Numeric change-over switch (INTEGER type)	6	
OR	(BOOL type)	7	
PCL	Pulse shortening device (BOOL type)	6	
PDE	Closing delay device (BOOL type)	5	
PDF	Breaking delay device (BOOL type)	6	
PST	Pulse stretching device (BOOL type)	6	
RSR	RS flip-flop, R-dominant (BOOL type)	6	
RSS	RS flip-flop, S-dominant (BOOL type)	6	
SH_DW	Shift block (DWORD type)	6	
TRK	Tracking/memory element (REAL type)	6	
TRK_D	Tracking/memory element (WORD type)	6	
XOR	Block (BOOL type)	6	

Designation	Function	Typ. runtime	Group
RDP	Reading drive parameters (REAL type)	14	System
RDP_D	Reading drive parameters (DOUBLE type)	14	
RDP_I	Reading drive parameters (INTEGER type)	15	
RDP_UD	Reading drive parameters (UNSIGNED DOUBLE INTEGER type)	15	
RDP_UI	Reading drive parameters (UNSIGNED INTEGER type)	16	
RDP_US	Reading drive parameters (UNSIGNED SHORT INTEGER type)	15	
SAH	Sample and hold (REAL type)	23	
SAH_B	Sample and hold (BOOL type)	23	
SAH_BY	Sample and hold (BYTE type)	24	
SAH_D	Sample and hold (DOUBLE type)	24	
SAH_I	Sample and hold (INTEGER type)	24	
SAV	Value buffering (REAL type)	5	
SAV_BY	Value buffering (BYTE type)	6	
SAV_D	Value buffering (DOUBLE type)	6	
SAV_I	Value buffering (INTEGER type)	6	
STM	Fault/alarm trigger	41	
WRP	Writing drive parameters (REAL type)	17	
WRP_D	Writing drive parameters (DOUBLE type)	13	
WRP_I	Writing drive parameters (INTEGER type)	17	
WRP_UD	Writing drive parameters (UNSIGNED DOUBLE INTEGER type)	18	
WRP_UI	Writing drive parameters (UNSIGNED INTEGER type)	16	
WRP_US	Writing drive parameters (UNSIGNED SHORT INTEGER type)	17	
DCA	Diameter calculator	16	Technology
INCO	Axial winder moment of inertia	51	
TTCU	Winding characteristic	25	
OCA	Software cam group	8	
WBG	Wobble generator	50	

## B.2 BOP20 status display during power-up

During power-up, the status of the power-up is briefly displayed on the BOP20.

Table B- 2 Display of the power-up on the BOP20

Displayed value	Meaning
0	Operation
10	Ready
20	Wait for power-up
25	Wait for automatic firmware update of DRIVE-CLiQ components
31	Commissioning software download active
33	Remove/acknowledge topology error
34	End commissioning mode
35	Perform the first commissioning
70	Initialization
80	Reset active
99	Internal software error

The states listed are automatically run through during the commissioning and are normally not visible.

In the following exceptional cases, power-up is interrupted with display value 33. In this state, the unit can be parameterized using BOP20, AOP30 and STARTER:

- Differences have been identified between the reference and actual topology.
  - Correct the topology (e.g. re-insert the TM component)
  - Accept the actual topology into the reference topology by setting p9905=1 or p9905=2. Ramp-up is continued.
- A memory card with a parameter data set, which comes from a SINAMICS DCM with a different article number is inserted in the drive
  - Accept the parameter data set by setting p9906 = 3. Ramp-up is continued.
- A memory card with a parameter data set from another CUD type is inserted in the drive (e.g. a parameter data set from the right-hand CUD was loaded into a left-hand CUD, a parameter data set of a standard CUD was loaded into an advanced CUD)
  - Accept the parameter data set by setting p9906 = 3. Ramp-up is continued.

# Index

## 3

3U1, 3W1, 3C, 3D, 172

## 4

4U1, 4V1, 4W1, 4N1, 174

## 5

5U1, 5W1, 5N1, 173

## A

A\_DIGITAL, 434

Access levels, 352

Accessories, 30

Acknowledge fault

Using AOP30, 397

Acknowledging errors, 650

On the BOP20, 378

Acknowledging faults, 650

Actual speed value A, 423

Actual speed value B, 423

Adaptation

Armature current controller, 572

Field current controller, 572

Address

Setting the PROFIBUS address, 461

Alarms, 648

Configuring, 654

Allocation Board, 188

Analog inputs, 177

Analog outputs, 178, 405

AOP30

Acknowledge fault, 397

As the time-of-day master, 402

Battery replacement, 703

Cable assignment, 187

Faults and alarms, 399

Installation dimensions, 89

LOCAL mode, 393

Menu structure, 382

Operation screen, 383

Overview, 381

Application classes, 408

Article number, 26

Automatic restart, 598

Auxiliary circuits, 581

## B

BICO technology

Converter, 368

Fixed values, 368

Interconnecting signals, 366

What is it?, 364

Binector, 365

Block diagram, 114

BOP20, 368

Commissioning steps, 274

Control word, drive, 379

Status display, 748

Brake, 578

Braking distance, 563

## C

Cabinet configuration, 98

Cabinet installation, 78

Cable routing in the device, 107

CBE20, 191, 333

CDS, (see "Data sets")

Certifications, 729

Korean certification, 730

Changing over the power unit topology, 619

Commissioning

Drive optimization, 336

Optimization runs, 279, 286

Optional additional modules, 324

STARTER, 287

With AOP30, 281

Communication

I&M, 510

Identification & Maintenance, 510

PROFIBUS, 457

Via Modbus TCP, 538

Via PROFIdrive, 405

Components

CBE20 Communication Board Ethernet, 192

Sensor Module Cabinet-Mounted SMC30, 206

Terminal Module TM15, 224

- Terminal Module TM150, 255
- Terminal Module TM31, 237
- Connecting
  - Incremental encoder, 705
- Connecting the incremental encoder, 705
- Connection recommendation, 114
- Connector, 365
- Control word 1, 414
- Control word 1 BM, 416
- Control word 2, 415
- Control word 2 BM, 417
- Copy protection
  - Activating, 676
- Copying RAM to ROM, 320
- CPU time load, 657
- Creep, 564
- CU\_STW1, 434
- CU\_ZSW1, 435
- CUD
  - LEDs, 635
- Current actual value sensing, 706

## D

- Data sets
  - Command data set (CDS), 353
  - Drive data set (DDS), 354
  - Encoder data set (EDS), 354
- Data transfer
  - PROFINET, 495
- DCC, 663
- DCP flashing, 497
- DDS, (see "Data sets")
- Determining the axis number, 449
- Determining the object number, 449
- Determinism, 492
- Device data, 45
- Device dimensions, 80
- Device identification, 463, 481
- Device name, 494
- Diagnostics
  - Diagnostic memory, 632
  - Trend recorder function, 633
  - Using LEDs for CBE20, 195
  - Using LEDs for the Sensor Module Cabinet SMC30, 216
- Diagnostics channel
  - Forwarding of messages, 482, 506
- Diagnostics via LEDs
  - Sensor Module Cabinet SMC10, 201
  - Terminal Module TM15, 230

- Terminal Module TM150, 263
- Terminal Module TM31, 249
- Diagnostics via STARTER, 638
- Digital inputs, 177
- Digital outputs, 177
- Dimension drawings, 80
  - Sensor Module Cabinet SMC10, 202
  - Terminal Module TM150, 264
- Dimensions, 80
- Direct data exchange
  - Faults, 482
  - GSD, 481
  - PROFIBUS, 468
- Disconnection, 555
- Disposal, 740, 740
- Drive Control Chart, 663
- Drive object, 357, 357
- Drive optimization, 336
  - Optimization runs, 337
- DRIVE-CLiQ, 183
- Duty cycles, 40
- Dynamic overload capability of the power unit, 591

## E

- E\_DIGITAL, 435
- EDS, (See "Data sets")
- Electromagnetic compatibility, (See EMC)
- Electromagnetic fields, 19
- Electronic power supply, 115, 173, 174
- Electrostatic sensitive devices, 22
- EMC, 92
  - Basic information, 92
  - Cabinet configuration, 98
  - EMC-compliant installation, 95
  - EN 61800-3, 93
  - RFI suppression filter, 100, 103
  - Shielding, 100
- Enable, 557
- Encoder
  - Incremental encoder evaluation, 178, 179
- Encoder evaluation, 566
- Encoder interface, 424
  - Reference mark search, 426
- Endless trace, 643
- Environmental classes, 44
- Environmental compatibility, 740
- E-STOP, 557
- EtherNet/IP
  - Connection, 525
- Example
  - PROFIBUS telegram structure, 459



**F**

Factory setting, 287  
 Fan  
   Operating hours counter, 581  
   Replacing the fan, 693  
   Terminals, 174  
 Fault buffer, 651  
 Fault value, 651  
 FAULT\_CODE, 423  
 Faults, 648  
   Acknowledging, 650  
   Configuring, 654  
   Fault buffer, 651  
 Faults and alarms, 399, 648  
   BICO interconnections, 657  
 Faults and alarms, 399, 648  
 Field characteristic, 340  
 Field reversal, 620  
 Field supply, 143  
 Firmware update, 686, 687  
 Fixed setpoint, 565  
 Free telegrams, 410  
 Friction characteristic, 341  
 Function generator, 639  
 Function modules  
   Technology controller, 575  
 Functional safety, 188  
 Fuses, 149  
   Replacing fuses, 698

**G**

G2\_STW, 427  
 G2\_XIST1, 432  
 G2\_ZSW, 431  
 Gn\_STW, 424  
 Gn\_ZSW, 428  
 GSD  
   GSD file, 462

**H**

Hearing protection, 21  
 Holding brake, 578  
 Hot restart time, 598

**I**

I&M, 510  
 I<sup>2</sup>t monitoring, 582

Identification & Maintenance, 510  
 Incremental encoder evaluation, 178, 179, 206, 566  
 Industrial security  
   IT security, 405  
 Inputs, 177  
   Analog, 177  
   Digital, 177  
   Overview, 403  
   Temperature sensor, 179  
 Installation  
   Sensor Module Cabinet, 203, 217  
   Terminal Module TM150, 265  
 Installation altitude, 45  
 Interconnecting signals using BICO technology, 366  
 Interconnection using BICO technology, 366  
 Interface descriptions  
   SMC 10 Sensor Module Cabinet, 198  
   Terminal Module TM150, 257  
 Interfaces  
   DRIVE-CLiQ, 183  
   Peer-to-peer, 178, 624  
   USS, 551  
 IO controller, 491  
 IO device, 491  
 IO supervisor, 491  
 IRT, 500, 500, 500  
   Comparison with RT, 501  
 IRT, 500, 500, 500  
 IRT, 500, 500, 500

**J**

Jogging, 563

**K**

Know-how protection  
   Absolute know-how protection, 675  
   Activating, 675  
   Changing the password, 678  
   Copy protection, 674  
   Data security of the memory card, 673  
   Deactivating, 677  
   Executable functions, 672  
   For loading to the file system, 679  
   Locked functions, 672  
   Overview, 671  
   Parameters that can be changed, 673  
   Password check, 673  
   Password security, 671  
 Korean certification, 730

- L**
- Lead/lag element element, 568
  - LEDs
    - For CBE20, 195
    - For the Sensor Module Cabinet SMC30, 216
    - On the CUD, 635
    - Sensor Module Cabinet SMC10, 201
    - Terminal Module TM15, 230
    - Terminal Module TM150, 263
    - Terminal Module TM31, 249
  - Line reactors, 146
  - Load class, 39
- M**
- Maintenance, 685
    - Battery replacement, AOP30, 703
    - Replacing fuses, 698
    - Replacing the fan, 693
  - Manual optimization, 344
  - Manufacturer-specific telegrams, 410
  - MBAP, 543
  - Mechanical system capable of oscillation, 342
  - Media redundancy, 499
  - MELD\_NAMUR, 423
  - Memory card, 359, 364
    - Safely removing, 364
  - Menu, (see AOP30)
  - Messages, 648
    - Configuring, 654
    - External triggering, 655
  - Modbus Application Header, 543
  - Modbus TCP, 538
    - Activate via interface X1400, 539
    - Communication via data set 47, 546
    - Function codes used, 543
    - Mapping tables, 540
    - Modbus register to the parameters of the Control Unit, 540
    - Parameterizing communication for X1400, 540
    - Read and write access, 543
    - Reading and writing parameters, 545
  - Motor temperature, 587
  - MTrace, 648
  - Multiple trace, 644
- N**
- NACT\_A, 423
  - NACT\_B, 423
- O**
- OFF2, 555
  - OFF3, 555
  - Online mode with STARTER, 485
  - Operating hours counter
    - Unit fan, 581
  - Operation enable, 557
  - Operation screen, (see AOP30)
  - Operational brake, 578
  - Operator panel
    - AOP30, 281, 380
    - BOP20, 274, 368
  - Optimization
    - Armature current closed-loop control, (Inductive load) , 339
    - Armature current control, 339
    - EMF closed-loop control, 340
    - Field current closed-loop control, 338, 346
    - Friction characteristic, 341
    - Manual, 280, 344
    - Mechanical system capable of oscillation, 342
    - Optimization runs, 279, 286
    - Speed control, 340
    - Speed controller, 347
  - Optimization runs, 337
  - Options, 30, 89
    - G63, 166, 184, 631
  - Outputs, 177
    - analog, 405
    - Analog, 178
    - Digital, 177
    - Overview, 403
  - Overload protection, 582
- P**
- Parallel connection, 600
    - 12-pulse, 609
    - 6-pulse, 603
    - n+m mode, 605
    - Parameter assignment, 607
    - Standard mode, 604
  - Parallel interface, 183
  - Parameter
    - Factory setting, 287
  - Parameterization
    - Using BOP20, 368
    - With AOP30, 384
- P**

- Parameters
    - Access levels, 352
    - Categories, 350
    - Saving, 401
    - Types, 349
  - Password
    - Changing, 678
  - Peer-to-peer interface, 178, 624
  - Power failure
    - Restart, 598
  - Power unit
    - Connection, 123, 169
    - Dynamic overload capability, 591
  - Power unit topology, 619
  - Process data, 412
  - Process data, actual values
    - G1\_XIST1, 429
    - G1\_XIST2, 430
    - G2\_XIST1, 432
    - G2\_XIST2, 432
  - Process data, control words
    - A\_DIGITAL, 434
    - CU\_STW1, 434
    - G2\_STW, 427
    - Gn\_STW, 424
  - Process data, setpoints
    - NSET\_A, 417
    - NSET\_B, 418
  - Process data, status words
    - CU\_ZSW1, 435
    - E\_DIGITAL, 435
    - G2\_ZSW, 431
    - Gn\_ZSW, 428
    - MELD\_NAMUR, 423
  - PROFIBUS, 457
    - Bus terminating resistor, 456
    - Cable, 109
    - Connection, 455
    - Connector, 109, 182, 455, 456
    - Device identification, 463, 481
    - Direct data exchange, 468
    - Forwarding of messages via diagnostics channels, 482
    - Generic station description file, 462, 481
    - Master class 1 and 2, 457
    - Setting the address, 461
    - Terminating resistor, 463
    - VIK-NAMUR, 462
  - PROFIBUS telegram structure, 459
  - PROFIdrive, 405
    - Controller, Supervisor, Drive Unit, 406
    - Device classes, 405
    - Reading parameters, 449
    - Telegrams, 410
    - Write parameter, 452
  - PROFINET
    - Data transfer, 495
    - Forwarding of messages via diagnostics channels, 506
    - Interface, 496
  - PROFINET cables, 194
  - PROFINET IO, 491
    - Addresses, 493
    - IRT, 500
    - With IRT, 492
    - With RT, 492
  - Protective conductor connection and shield support
    - Terminal Module TM150, 266
- Q**
- Quick stop, 555
- R**
- Ramp-down time, 559
  - Ramp-function generator, 558
  - Ramp-function integrator, 561
  - Ramp-function-generator tracking, 562
  - Ramp-up time, 559
  - Rating plate, packaging label, 29
  - Real-time communication, 492
  - Recycling, 740
  - Reference mark search, 426
  - Replacement
    - Operator panel battery, 702
  - Replacing the Backup Battery of the Cabinet Operator Panel, 702
  - Replacing the CUD, 700
  - Residual risks, 24
  - Restart, 598
  - RFI suppression filter, 103
  - Ring topology, 499
    - Scalance, 499
  - RT
    - Comparison with IRT, 501
  - RT class
    - Setting, 501
  - RT classes
    - Send cycles, 503
    - Update cycles, 503

**S**

- Safety instructions
  - Electromagnetic fields, 19
  - Electrostatic sensitive devices, 22
  - General safety instructions, 17
  - Terminal Modules, 224, 238, 256
- Safety shutdown (E-STOP), 557
- Sensor Module Cabinet-Mounted SMC10, 198
- Sequence of objects in the telegram, 458, 495
- Series connection
  - 12-pulse, 616, 618
  - 6-pulse, 611, 614
- Setpoint channel
  - Creep, 564
  - Fixed setpoint, 565
  - Jogging, 563
  - Ramp-function generator, 558
- Shielding, 100
- Shipbuilding, 705, 729
- Shutdown, 552
  - OFF2 (disconnection), 555
  - OFF3 (quick stop), 555
- SINAMICS Link
  - Activation, 519
  - Bus cycle, 513
  - Configuration example, 520
  - Configuring, 515
  - Requirements, 512
  - Synchronous cycle, 513
  - Transmission time, 513
- Single trace, 643
- Single-phase line supply, 598
- SMC10, 191, 328
- SMC30, 191, 328
- Speed controller, 568
  - Adaptation, 568
  - Droop, 568
  - Reference model, 569
  - Start pulse, 568
- Speed-dependent current limitation, 588
- Standard CUD, 183
- Standard telegrams, 410
- STARTER, 287
  - Commissioning, 289
  - Configuring a drive unit, 298
  - Creating the project, 289
  - Installation, 288
  - Online mode via PROFINET, 485
  - Project wizard, 291
  - Starting the drive project, 317
  - User interface, 288
- Startup trace, 646

- Status display at the BOP20, 748
- Status word 1, 420
- Status word 1 BM, 422
- Status word 2, 421
- Status word 2 BM, 422
- STW1, 414
- STW1 BM, 416
- STW2, 415
- STW2 BM, 417
- Switch on, 552
  - Operation enable (enable), 557
- Synchronization domain, 502

**T**

- Technical data
  - Communication Board CBE20, 197
  - Device data, 45
  - Duty cycles, 40
  - Load classes, 39
  - Sensor Module Cabinet SMC10, 204
  - Sensor Module Cabinet SMC30, 220
  - Terminal Module TM15, 235
  - Terminal Module TM150, 267
  - Terminal Module TM31, 254
- Technology controller, 575
- Telegrams
  - Manufacturer-specific, 410
  - Sequence of objects, 458, 495
  - Standard, 410
  - Structure, 412
- Temperature sensor, 179
- Terminal Module Cabinet, 166, 184, 631
- Terminal Module TM15, 224, 325
- Terminal Module TM150, 255, 325
- Terminal Module TM31, 237, 325
- Thermal overload protection, 582
- Thyristor diagnostics, 633
- Time-of-day master, 402
- Timeout monitoring, 397
- TM15, 191, 224
- TM150, 191
- TMC, 166, 184, 631
- Trace function, 642
- Trend recorder function, 633

**U**

- UL
  - Installation notes, 189
- Unit fan
  - Operating hours counter, 581
- Update
  - Firmware, 687
- Upgrading
  - Firmware version, 686
- Use of the speed controller for other applications, 571
- USS interface, 551

**W**

- WARN\_CODE, 423
- Write protection
  - Activating, 669
  - Deactivating, 671
  - Overview, 669

**X**

- X100, X101, 183
- X126, 182, 455
- X165, 183
- X166, 183
- X177, 177
- X178, 181
- X179, 182
- X200, X201, 188
- XP24V, 174
- XR1, XS1, XT1, 176

**Z**

- ZSW1, 420
- ZSW1 BM, 422
- ZSW2, 421
- ZSW2 BM, 422

## Further information

Siemens:

[www.siemens.com](http://www.siemens.com)

Industry Online Support (service and support):

[www.siemens.com/online-support](http://www.siemens.com/online-support)

IndustryMall:

[www.siemens.com/industrymall](http://www.siemens.com/industrymall)

Siemens AG

Process Industries and Drives

Large Drives

Postbox 4743

90025 Nuremberg

Germany

Scan the QR-Code  
for product  
information

