

Module	Article number	Firmware
SIMATIC NET PC-Software / PN driver unit		
CP 1616	6GK1161-6AA02	from V2.0
	6GK1161-6AA01	
	6GK1161-6AA00	
CP 1604	6GK1160-4AA01	from V2.0
	6GK1160-4AA00	
SOFTNET PROFINET IO	6GK1704-1HW71-3AA0	from V7.1 (Edition 2008)
Embedded and PC-based Automation		
WinAC RTX 2008	6ES7671-0RC06-0YA0	V4.4
WinAC RTX (F) 2009	6ES7671-0RC07-0YA0	V4.5
	6ES7671-1RC07-0YA0	
WinAC RTX (F) 2010	6ES7671-0RC08-0YA0	V4.6
	6ES7671-1RC08-0YA0	
S7-mEC, EC31-RTX	6ES7677-1DD00-0BB0	from V4.4
	6ES7677-1DD10-0BB0	
S7-400 CPUs		
CPU 410-5H	6ES7410-5HX08-0AB0	from V8.0
CPU 412-2 PN	6ES7412-2EK06-0AB0	from V6.0
	6ES7412-2EK07-0AB0	from V7.0
CPU 414-3 PN/DP	6ES7414-3EM05-0AB0	from V5.0
	6ES7414-3EM06-0AB0	from V6.0
	6ES7414-3EM07-0AB0	from V7.0
CPU 414F-3 PN/DP	6ES7414-3FM06-0AB0	from V6.0
	6ES7414-3FM07-0AB0	from V7.0
CPU 416-3 PN/DP	6ES7416-3ER05-0AB0	from V5.0
	6ES7416-3ES06-0AB0	from V6.0
	6ES7416-3ES07-0AB0	from V7.0
CPU 416F-3 PN/DP	6ES7416-3FR05-0AB0	from V5.0
	6ES7416-3FS06-0AB0	from V6.0
	6ES7416-3FS07-0AB0	from V7.0
CPU 412-5H PN/DP	6ES7412-5HK06-0AB0	from V6.0
CPU 414-5H PN/DP	6ES7414-5HM06-0AB0	from V6.0
CPU 416-5H PN/DP	6ES7416-5HS06-0AB0	from V6.0
CPU 417-5H PN/DP	6ES7416-5HT06-0AB0	from V6.0
S7-300 CPUs		
CPU 314C-2 PN/DP	6ES7314-6EH04-0AB0	from V3.3
CPU 315-2 PN/DP	6ES7315-2EH13-0AB0	from V2.5
	6ES7315-2EH14-0AB0	from V3.1
CPU 315F-2 PN/DP	6ES7315-2FH13-0AB0	from V2.5
	6ES7315-2FJ14-0AB0	from V3.1
CPU 315T-3 PN/DP	6ES7315-7TJ10-0AB0	from V3.2
CPU 317-2 PN/DP	6ES7317-2EK13-0AB0	from V2.5
	6ES7317-2EK14-0AB0	from V3.1
CPU 317F-2 PN/DP	6ES7317-2FK13-0AB0	from V2.5
	6ES7317-2FK14-0AB0	from V3.1
CPU 317T-3 PN/DP	6ES7317-7TK10-0AB0	from V3.2
CPU 317TF-3 PN/DP	6ES7317-7UL10-0AB0	from V3.2
CPU 319-3 PN/DP	6ES7318-3EL00-0AB0	from V2.5
	6ES7318-3EL01-0AB0	from V3.2
CPU 319F-3 PN/DP	6ES7318-3FL00-0AB0	from V2.5
	6ES7318-3FL01-0AB0	from V3.2
ET 200S CPUs		
IM 151-8 PN/DP CPU	6ES7151-8AB00-0AB0	from V2.7
	6ES7151-8AB01-0AB0	from V3.2
IM 151-8F PN/DP CPU	6ES7151-8FB00-0AB0	from V2.7
	6ES7151-8FB01-0AB0	from V3.2

This entry is from the Service&Support portal of Siemens AG,
Siemens Industry Online Support.

The general terms of use

(http://www.siemens.com/terms_of_use) apply.

Module	Article number	Firmware
ET 200pro CPUs		
IM 154-8 CPU	6ES7154-8AB00-0AB0	from V2.5
	6ES7154-8AB01-0AB0	from V3.2
IM 154-8F CPU	6ES7154-8FB01-0AB0	from V3.2
IM 154-8FX CPU	6ES7154-8FX00-0AB0	from V3.2
CPU 1513pro-2 PN	6ES7513-2PL00-0AB0	from V2.8
CPU 1513pro F-2 PN	6ES7513-2GL00-0AB0	from V2.8
CPU 1516pro-2 PN	6ES7516-2PN00-0AB0	from V2.0
CPU 1516pro F-2 PN	6ES7516-2GN00-0AB0	from V2.0
S7-1500 CPUs		
CPU 1518-4 PN/DP	6ES7518-4AP00-0AB0	from V1.5
CPU 1518-4 PN/DP ODK	6ES7518-4AP00-3AB0	from V2.0
CPU 1518-4 PN/DP MFP	6ES7518-4AX00-1AC0	from V2.5
CPU 1518F-4 PN/DP	6ES7518-4FP00-0AB0	from V1.5
CPU 1518F-4 PN/DP ODK	6ES7518-4FP00-3AB0	from V2.0
CPU 1518F-4 PN/DP MFP	6ES7518-4FX00-1AC0	from V2.5
CPU 1517-3 PN/DP	6ES7517-3AP00-0AB0	from V1.6
CPU 1517F-3 PN/DP	6ES7517-3FP00-0AB0	from V1.6
CPU 1516-3 PN/DP	6ES7516-3AN00-0AB0	from V1.0
	6ES7516-3AN01-0AB0	from V1.8
CPU 1516F-3 PN/DP	6ES7516-3FN00-0AB0	from V1.5
	6ES7516-3FN01-0AB0	from V1.8
CPU 1515-2 PN	6ES7515-2AM00-0AB0	from V1.5
	6ES7515-2AM01-0AB0	from V1.8
CPU 1515F-2 PN	6ES7515-2FM00-0AB0	from V1.6
	6ES7515-2FM01-0AB0	from V1.8
CPU 1513-1 PN	6ES7513-1AL00-0AB0	from V1.0
	6ES7513-1AL01-0AB0	from V1.8
CPU 1513F-1 PN	6ES7513-1FL00-0AB0	from V1.7
	6ES7513-1FL01-0AB0	from V1.8
CPU 1511-1 PN	6ES7511-1AK00-0AB0	from V1.0
	6ES7511-1AK01-0AB0	from V1.8
	6ES7511-1AK02-0AB0	from V2.5
CPU 1511F-1 PN	6ES7511-1FK00-0AB0	from V1.7
	6ES7511-1FK01-0AB0	from V1.8
	6ES7511-1FK02-0AB0	from V2.5
CPU 1511C-1 PN	6ES7511-1CK00-0AB0	from V1.8
	6ES7511-1CK01-0AB0	from V2.5
CPU 1512C-1 PN	6ES7512-1CK00-0AB0	from V1.8
	6ES7512-1CK01-0AB0	from V2.5
CPU 1511T-1 PN	6ES7511-1TK01-0AB0	from V2.0
CPU 1511TF-1 PN	6ES7511-1UK01-0AB0	from V2.1
CPU 1515T-2 PN	6ES7515-2TM01-0AB0	from V2.0
CPU 1515TF-2 PN	6ES7515-2UM01-0AB0	from V2.1
CPU 1516-3T PN/DP	6ES7516-3TN00-0AB0	from V2.5
CPU 1516-3TF PN/DP	6ES7516-3UN00-0AB0	from V2.5
CPU 1517T-3 PN/DP	6ES7517-3TP00-0AB0	from V2.0
CPU 1517TF-3 PN/DP	6ES7517-3UP00-0AB0	from V2.0
CPU 1513R-1 PN	6ES7513-1RL00-0AB0	from V2.6
CPU 1515R-2 PN	6ES7515-2RM00-0AB0	from V2.6
CPU 1517H-3 PN	6ES7517-3HP00-0AB0	from V2.6

This entry is from the Service&Support portal of Siemens AG,
Siemens Industry Online Support.

The general terms of use

(http://www.siemens.com/terms_of_use) apply.

Module	Article number	Firmware
ET 200SP CPUs		
CPU 1510SP-1 PN	6ES7510-1DJ00-0AB0	from V1.6
	6ES7510-1DJ01-0AB0	from V1.8
CPU 1510SP F-1 PN	6ES7510-1SJ00-0AB0	from V1.7
	6ES7510-1SJ01-0AB0	from V1.8
CPU 1512SP-1 PN	6ES7512-1DK00-0AB0	from V1.6
	6ES7512-1DK01-0AB0	from V1.8
CPU 1512SP F-1 PN	6ES7512-1SK00-0AB0	from V1.7
	6ES7512-1SK01-0AB0	from V1.8
CPU 1515SP PC 2	6ES7677-2DB40-0GB0	from V2.5
	6ES7677-2DB42-0GB0	
	6ES7677-2DB42-0GK0	
	6ES7677-2DB42-0GL0	
	6ES7677-2DB42-0GM0	
CPU 1515SP PC 2 F	6ES7677-2SB40-0GB0	from V2.5
	6ES7677-2SB42-0GB0	
	6ES7677-2SB42-0GK0	
	6ES7677-2SB42-0GL0	
	6ES7677-2SB42-0GM0	
CPU 1515SP PC2 T	6ES7677-2VB42-0GB0	from V2.5
CPU 1515SP PC2 TF	6ES7677-2WB42-0GB0	from V2.5
CPU 1515SP PC	6ES7677-2AA31-0EB0	from V1.7
	6ES7677-2AA41-0FB0	
	6ES7677-2AA41-0FK0	
	6ES7677-2AA41-0FL0	
	6ES7677-2AA41-0FM0	
CPU 1515SP PC F	6ES7677-2FA31-0EB0	from V2.0
	6ES7677-2FA41-0FB0	
	6ES7677-2FA41-0FK0	
	6ES7677-2FA41-0FL0	
	6ES7677-2FA41-0FM0	
S7-1500 Software Controller		
CPU 1507S	6ES7672-7AC00-0YA0	from V1.8
	6ES7672-7AC00-0YG0	
	6ES7672-7AC01-0YA0	
	6ES7672-7AC01-0YG0	
	6ES7672-7AC01-0YK0	
CPU 1508S	6ES7672-8AC01-0YA0	from V2.6
	6ES7672-8AC01-0YG0	
CPU 1507S F	6ES7672-7FC01-0YA0	from V2.0
	6ES7672-7FC01-0YG0	
CPU 1508S F	6ES7672-8FC01-0YA0	from V2.6
	6ES7672-8FC01-0YG0	

This entry is from the Service&Support portal of Siemens AG,
Siemens Industry Online Support.

The general terms of use

(http://www.siemens.com/terms_of_use) apply.

Module	Article number	Firmware
S7-1200 CPUs		
CPU 1211C	6ES7211-1AD30-0XB0	from V1.0
	6ES7211-1BD30-0XB0	
	6ES7211-1HD30-0XB0	
	6ES7211-1AE31-0XB0	
	6ES7211-1BE31-0XB0	from V3.0
	6ES7211-1HE31-0XB0	
	6ES7211-1AE40-0XB0	from V4.0
	6ES7211-1BE40-0XB0	
	6ES7211-1HE40-0XB0	
CPU 1212C	6ES7212-1AD30-0XB0	from V1.0
	6ES7212-1BD30-0XB0	
	6ES7212-1HD30-0XB0	
	6ES7212-1AE31-0XB0	
	6ES7212-1BE31-0XB0	from V3.0
	6ES7212-1HE31-0XB0	
	6ES7212-1AE40-0XB0	
	6ES7212-1BE40-0XB0	
	6ES7212-1HE40-0XB0	
CPU 1212 FC	6ES7212-1AF40-0XB0	from V4.2
	6ES7212-1HF40-0XB0	
CPU 1214C	6ES7214-1AE30-0XB0	from V1.0
	6ES7214-1BE30-0XB0	
	6ES7214-1HE30-0XB0	
	6ES7214-1AG31-0XB0	from V3.0
	6ES7214-1BG31-0XB0	
	6ES7214-1HG31-0XB0	
	6ES7214-1AG40-0XB0	
	6ES7214-1BG40-0XB0	
	6ES7214-1HG40-0XB0	
	6ES7214-1AF40-0XB0	from V4.0
	6ES7214-1HF40-0XB0	
CPU 1215C	6ES7215-1AG31-0XB0	from V3.0
	6ES7215-1BG31-0XB0	
	6ES7215-1HG31-0XB0	
	6ES7215-1AG40-0XB0	from V4.0
	6ES7215-1BG40-0XB0	
	6ES7215-1HG40-0XB0	
CPU 1215 FC	6ES7215-1AF40-0XB0	from V4.0
	6ES7215-1HF40-0XB0	
CPU 1217C	6ES7217-1AG40-0XB0	from V4.0
Industrial Ethernet CPs S7-300/S7-400		
CP 343-1 Standard	6GK7343-1EX30-0XE0	from V2.2
CP 343-1 Advanced	6GK7343-1GX30-0XE0	from V1.0
	6GK7343-1GX31-0XE0	from V3.0
CP 443-1 Standard	6GK7443-1EX20-0XE0	from V1.0
	6GK7443-1EX30-0XE0	from V3.0
CP 443-1 Advanced	6GK7443-1GX20-0XE0	from V2.0
	6GK7443-1GX30-0XE0	from V3.0
Industrial Ethernet CMs		
CM 1242-1	6GK7542-1AX00-0XE0	from V1.0

This entry is from the Service&Support portal of Siemens AG,
Siemens Industry Online Support.

The general terms of use

(http://www.siemens.com/terms_of_use) apply.