

## 通过同步功能激活跳段设置

```
N100 ID=1 WHEN $A_IN[1]==1 do M55
L1
/N300 X100 F1000
/N400 X0
/N500 X100
/N600 X0
MSG("Computing program reached")
L1
N900 M30
```

