


SIEMENS

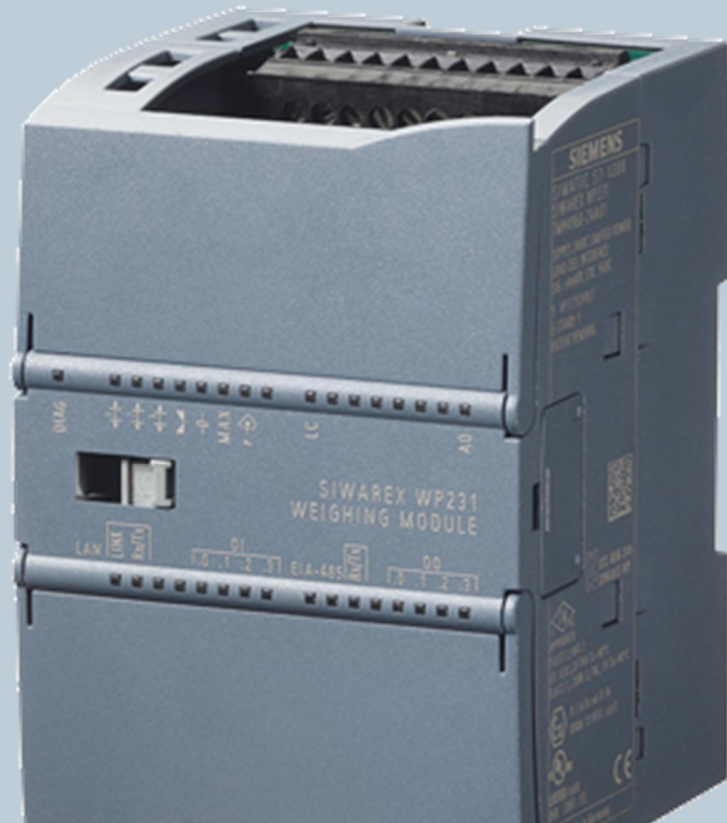

Weighing technology

FAQs


SIWAREX WP231

“Which Ethernet-Settings are necessary for a communication between a PC (Windows XP & SIWATOOL V7) and a SIWAREX WP2xx weighing module?”


Version 2.0, 29/04/2013

Siemens.com/weighing


Answer: Please check / define the following settings on your PC / WPxx.
An active Firewall on the PC can disturb or even block the connection!

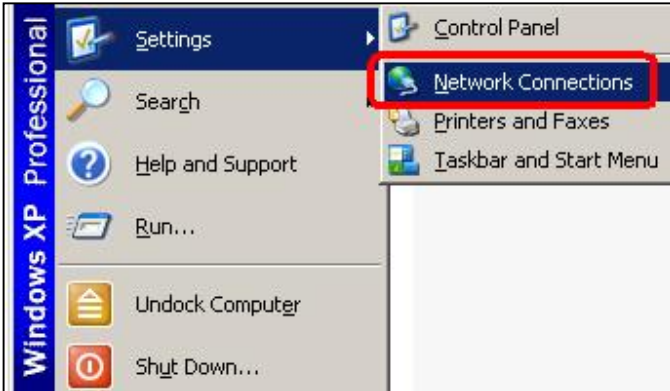


“Start → Settings → Network Connections“

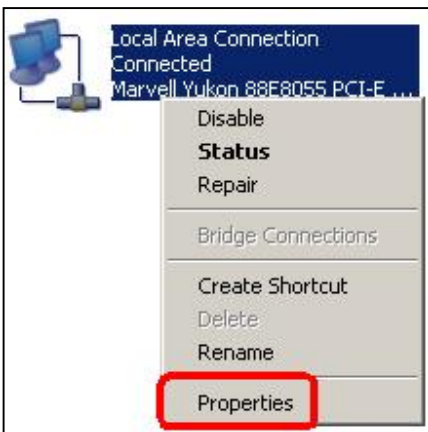

Right click on the used ethernet connection → “Properties“

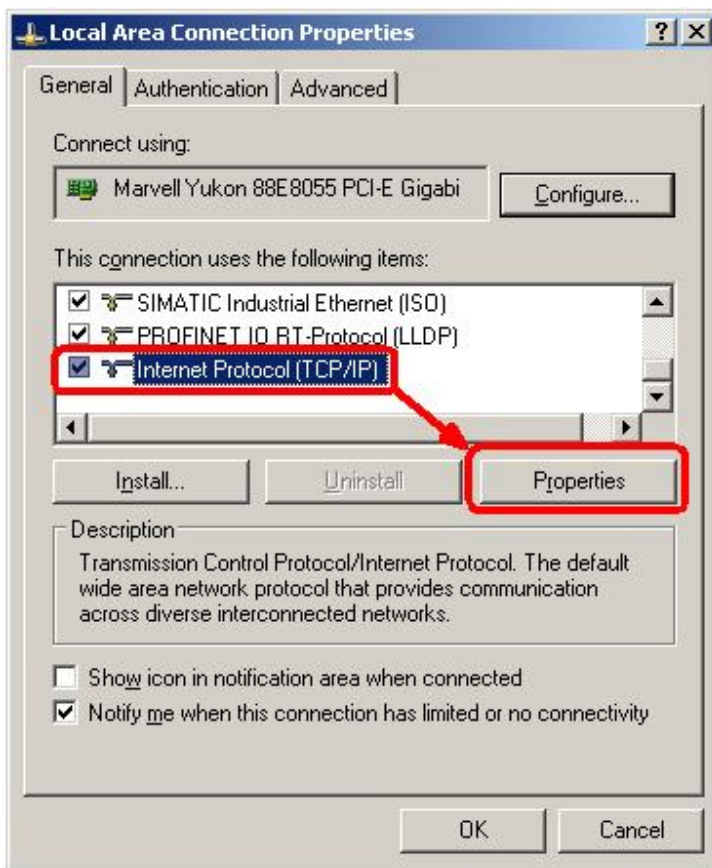

Mark „Internet Protocol (TCP/IP)“ → Click on “Properties”

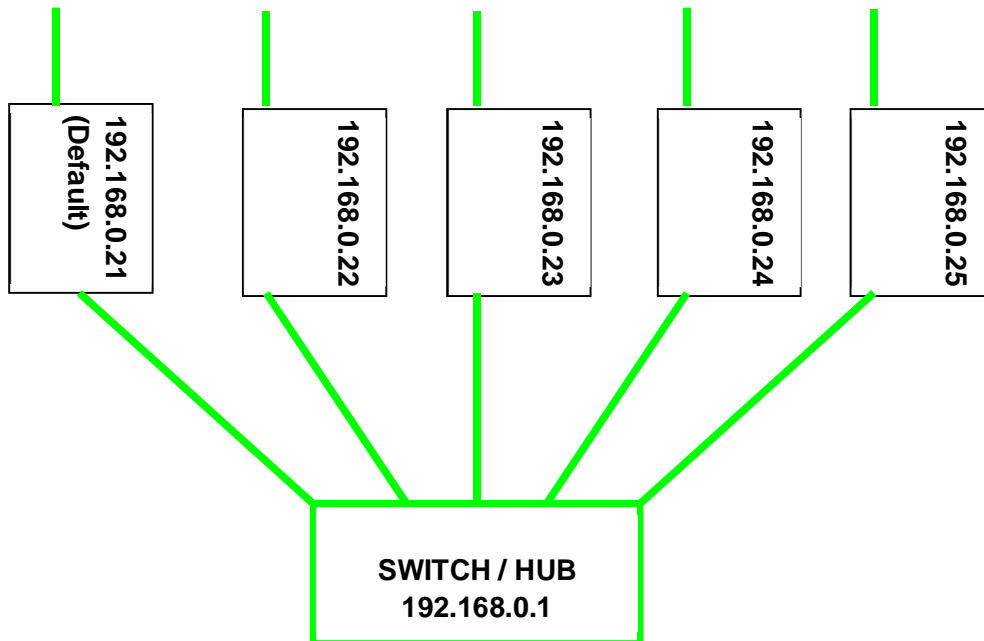


The IP-address of the PC with SIWATOOL needs to be defined the following way:

192.168.0.xxx

In this example the end addresses .21, .22, .23, .24, .25 or .1 mustn't be used, because they are used in the network already!

Example of a network with five SIWAREX WP2xx and one PC which communicates via a Hub or Switch with the weighing modules.
PC mit SIWATOOL V7


A direct connection between WP2xx and a PC is possible too!

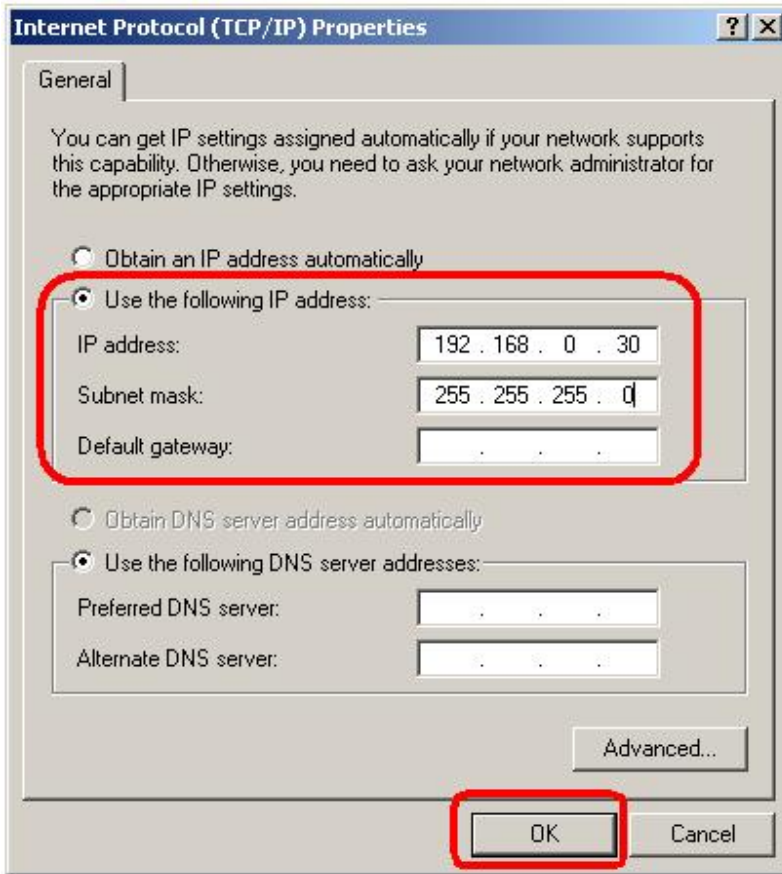

For the setup of our example, we can define the IP-address of the PC with 192.168.0.30 for instance.

The subnet mask needs to be defined with 255.255.255.0.

After that the IP-address of the designated WP2xx must be entered in SIWATOOL. In our example it can be the address **192.168.0.21, 22, 23, 24** or **25**.

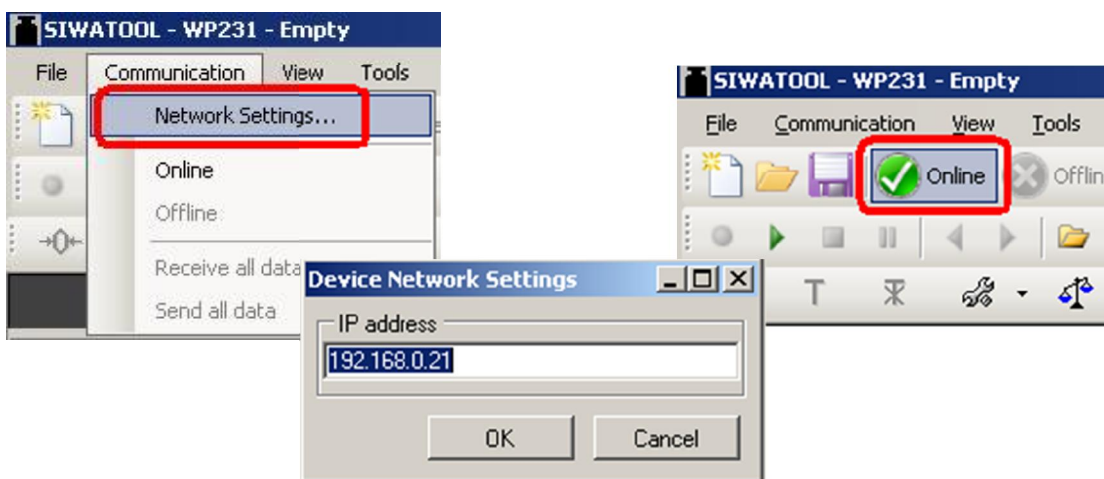

A click on "Online" establishes the connection to the WP2xx.