

STEP 7 Version	Windows 95	Windows 98	Windows ME	Windows NT4.0+SP3	Windows 2000	Windows Server 2003
V3.1	X	-	-	-	-	-
V3.2	X	-	-	X	-	-
V4.01	X	-	-	X	-	-
V4.02	X	-	-	X	-	-
ab V4.02.5	X	X	-	X	-	-
V5.0 incl. SPs	X	X	-	X	-	-
V5.1	X	X	-	X	-	-
V5.10 incl. SPs	X	X	X ¹⁾	X	X ¹⁾²⁾	-
V5.2 ⁹⁾ incl. SPs	X ⁴⁾	X ⁶⁾	X	X ⁶⁾	X ⁷⁾	-
V5.3 ¹⁰⁾ incl. SPs	-	-	-	-	X ⁸⁾	X ¹¹⁾¹²⁾

⁰¹⁾ Only with installation of CD "STEP 7 V5.1 incl. SPx".

⁰²⁾ As from STEP 7 V5.1 incl. SP2 you require SP1 for MS Windows 2000.

⁰⁴⁾ MS Windows 95b or MS Windows 95 OSR2 required for OEM versions.

⁰⁵⁾ MS Windows 98 SE (Second Edition) required.

⁰⁶⁾ SP6a for MS Windows NT 4.0 required.

⁰⁷⁾ At least SP1 for MS Windows 2000 required.

⁰⁸⁾ MS Windows 2000 Professional at least SP3 required.

⁰⁹⁾ MS Windows XP Professional SP1 recommended.

Not released for MS Windows XP Professional SP2.

¹⁰⁾ MS Windows XP Professional SP1 or SP1a required.

For MS Windows XP Professional SP2 you require STEP 7 V5.3 SP2.

Not released under MS Windows XP SP2c.

¹¹⁾ STEP 7 V5.3 incl. SP2 is not released for use with MS Windows Server 2003 incl. SP1.

¹²⁾ MS Windows Server 2003 as a workstation computer, STEP 7 V5.3 SP2 is required.

Informationen concerning the versions V5.4 and V5.5 are to be found under following link:

<https://support.automation.siemens.com/kompatool/index.html>