

A man in a light blue shirt is shown from the side, looking at a tablet. The background is a blurred industrial setting with a clock on the wall. Overlaid on the scene are various digital icons and text elements. At the top right, the word "SIEMENS" is written in a bold, teal font. Below it, there are several floating digital panels. One panel shows a circular arrow with "24/7" inside, indicating 24-hour support. Another panel shows a "NEWS" section with a person icon. A central panel displays "Industry Online Support" and "Home". There are also icons for a folder, a network of people, and a magnifying glass. The overall theme is digital industry support.

SIEMENS

Support Packages for TIA Portal V17

April 2024

<https://support.industry.siemens.com/cs/ww/en/view/72341852>

Siemens
Industry
Online
Support



This entry is from the Siemens Industry Online Support. The general terms of use (http://www.siemens.com/terms_of_use) apply.

**Security
information**

Siemens provides products and solutions with industrial security functions that support the secure operation of plants, systems, machines and networks.

In order to protect plants, systems, machines and networks against cyber threats, it is necessary to implement – and continuously maintain – a holistic, state-of-the-art industrial security concept. Siemens' products and solutions constitute one element of such a concept.

Customers are responsible for preventing unauthorized access to their plants, systems, machines and networks. Such systems, machines and components should only be connected to an enterprise network or the internet if and to the extent such a connection is necessary and only when appropriate security measures (e.g. firewalls and/or network segmentation) are in place.

For additional information on industrial security measures that may be implemented, please visit <https://www.siemens.com/industrialsecurity>.

Siemens' products and solutions undergo continuous development to make them more secure. Siemens strongly recommends that product updates are applied as soon as they are available and that the latest product versions are used. Use of product versions that are no longer supported, and failure to apply the latest updates may increase customer's exposure to cyber threats.

To stay informed about product updates, subscribe to the Siemens Industrial Security RSS Feed under <https://www.siemens.com/cert>.

Table of content

1	Support Packages for STEP 7	5
1.1	Support Packages for STEP 7 Basic or Professional V17	5
1.1.1	HSP 0063	5
1.1.2	HSP 0134	5
1.1.3	HSP 0198 – V2.0 SP1	5
1.1.4	HSP 0234	5
1.1.5	HSP 0238 – V2.0	5
1.1.6	HSP 0311	5
1.1.7	HSP 0311 – V2.0	6
1.1.8	HSP 0311 – V3.0	6
1.1.9	HSP 0328 – STEP 7 V17 Update 2 is required	6
1.1.10	HSP 0339 – STEP 7 V17 Update 4 is required	6
1.1.11	HSP 0341	6
1.1.12	HSP 0342	6
1.1.13	HSP 0343	7
1.1.14	HSP 0345	7
1.1.15	HSP 0347	7
1.1.16	HSP 0348	7
1.1.17	HSP 0349	7
1.1.18	HSP 0351	7
1.1.19	HSP 0352	7
1.1.20	HSP 0353	7
1.1.21	HSP 0354	8
1.1.22	HSP 0355	8
1.1.23	HSP 0356	8
1.1.24	HSP 0357	8
1.1.25	HSP 0358 V2.0	8
1.1.26	HSP 0360	8
1.1.27	HSP 0363	8
1.1.28	HSP 0364	8
1.1.29	HSP 0366 – STEP 7 V17 Update 1 is required	9
1.1.30	HSP 0368	9
1.1.31	HSP 0369	9
1.1.32	HSP 0370	9
1.1.33	HSP 0371 – STEP 7 V17 Update 4 is required	9
1.1.34	HSP 0373 – STEP 7 V17 Update 2 is required	9
1.1.35	HSP 0374	10
1.1.36	HSP 0376 – STEP 7 V17 Update 2 is required	10
1.1.37	HSP 0377 – STEP 7 V17 Update 2 is required	10
1.1.38	HSP 0378	10
1.1.39	HSP 0379	10
1.1.40	HSP 0381	10
1.1.41	HSP 0383	10
1.1.42	HSP 0388 V1.0 – STEP 7 V17 Update 4 is required	11
1.1.43	HSP 0388 V2.0 – STEP 7 V17 Update 6 is required	11
1.1.44	HSP 0390	11
1.1.45	HSP 0392 – STEP 7 V17 Update 6 is required	11
1.1.46	NEW: HSP 0395 – STEP 7 V17 Update 7 is required	12
1.1.47	HSP 0396	12
1.1.48	HSP 0404	12
1.2	Support Packages for STEP 7 Professional V17	13
1.2.1	HSP 0185 V3.0	13
1.2.2	HSP 0424 – V3.0	13
2	Support Packages for WinCC	14
2.1	Support Packages for WinCC V17	14
2.1.1	HSP 0362	14

3	Support Packages for STEP 7 Safety	15
3.1	Support Packages for STEP 7 Safety Advanced V17	15
3.1.1	HSP 0271 – STEP 7 Safety V17 Update 2 is required.....	15

1 Support Packages for STEP 7

1.1 Support Packages for STEP 7 Basic or Professional V17

You can use these HSP with STEP 7 Basic V17 and STEP 7 Professional V17.
At least STEP 7 Basic V17 or STEP 7 Professional V17 is required.

1.1.1 HSP 0063

is necessary for these devices:

SITOP UPS1600 / UPS1100 / BAT1600 – FW V2.5

- 6EP4134-3AB00-2AY0; 6EP4136-3AB00-2AY0; 6EP4137-3AB00-2AY0
- 6EP4136-3AC00-2AY0;
- 6EP4134-0GL00-0AY0
- 6EP4133-0GD00-0AY0; 6EP4135-0GL00-0AY0

1.1.2 HSP 0134

is necessary for this device:

SIMATIC ET 200PRO Frequency converter FC-2 – FW Version 4.7.13

- 6SL3514-1KE13-5AE0

1.1.3 HSP 0198 – V2.0 SP1

is necessary for these devices:

SIMATIC MICRO-DRIVE PDC(F)

- 6BK1630-1AA10-0AA0; 6BK1630-2AA10-0AA0
- 6BK1630-1AA60-0AA0; 6BK1630-2AA60-0AA0
- 6BK1630-1BA00-0AA0

1.1.4 HSP 0234

is necessary for this module:

SIMATIC ET 200SP TM ECC 2xPWM ST

- 6FE1242-6TM10-0BB1

1.1.5 HSP 0238 – V2.0

is necessary for these devices:

SIRIUS Soft Starter 3RW5

- 3RW5..

1.1.6 HSP 0311

is necessary for these modules:

SIMATIC ET 200SP F-TM ServoDrive/StepDrive

- 6BK1136-6AB00-0BU0; 6BK1136-6AB00-0CU0
- 6BK1136-6SB00-0BU0

1.1.7 HSP 0311 – V2.0

is necessary for these modules:

SIMATIC ET 200SP F-TM ServoDrive/StepDrive

- 6BK1136-6AB00-0BU0; 6BK1136-6AB00-0CU0
- 6BK1136-6SB00-0BU0

1.1.8 HSP 0311 – V3.0

is necessary for these modules:

SIMATIC ET 200SP F-TM ServoDrive/StepDrive

- 6BK1136-6AB00-0BU0
- 6BK1136-6AB00-0CU0
- 6BK1136-6SB00-0BU0
- 6BK1136-6AB01-0BU0
- 6BK1136-6AB01-0CU0
- 6BK1136-6SB01-0BU0

1.1.9 HSP 0328 – STEP 7 V17 Update 2 is required

is necessary for these devices:

SIMATIC RF18x – FW-Version 2.0

- 6GT2002-0JE10
- 6GT2002-0JE20
- 6GT2002-0JE40
- 6GT2002-0JE50
- 6GT2002-0JE60

1.1.10 HSP 0339 – STEP 7 V17 Update 4 is required

is necessary for these devices:

SCALANCE W17xx– FW-Version 3.0

- 6GK5748-1GY01-0AA0
- 6GK5788-1GY01-0AA0; 6GK5788-2GY01-0AA0; 6GK5788-2GY01-0TA0
- 6GK5788-2HY01-0AA0

1.1.11 HSP 0341

is necessary for this module:

SIMATIC ET 200SP, TM PTO 2x24V

- 6ES7138-6EB00-0BA0

1.1.12 HSP 0342

is necessary for this module:

SIMATIC S7-1500 AQ 8xU/I HS (FW-Version 2.2)

- 6ES7532-5HF00-0AB0

1.1.13 HSP 0343

is necessary for these modules:

SIMATIC S7-1500, DQ 230VAC ST (Triac)

- 6ES7522-5FF00-0AB0; 6ES7522-5FH00-0AB0

1.1.14 HSP 0345

is necessary for this module:

SIMATIC ET 200PRO Frequency Converter FC-2 – FW Version 4.7.13

- 6SL3514-1KE13-5AE0

NOTE

If you want to use a language pack for Spanish, Italian or French and the HSP 0345, please note the [FAQ 109805224](#).

1.1.15 HSP 0347

is necessary for this module:

SIMATIC S7-1500 DI 16xNAMUR HF

- 6ES7521-7TH00-0AB0

1.1.16 HSP 0348

is necessary for this module:

SIMATIC ET 200AL CM 4x IO-Link – FW-Version 1.2

- 6ES7147-5JD00-0BA0

1.1.17 HSP 0349

is necessary for this module:

SIMATIC ET 200SP FST070

- 7ME3448-6AA00-0BB1

1.1.18 HSP 0351

is necessary for this module:

SIMATIC ET 200SP TM ECC PL ST

- 6FE1242-6TM20-0BB1

1.1.19 HSP 0352

is necessary for this module:

SIMATIC S7-1500 DI 16x24VDC HS

- 6ES7521-7BH00-0AB0

1.1.20 HSP 0353

is necessary for these modules:

SIMATIC ET 200eco PN

- 6ES7141-6BG00-0BB0; 6ES7141-6BH00-0BB0
- 6ES7142-6BG00-0BB0; 6ES7142-6BR00-0BB0
- 6ES7143-6BH00-0BB0

- 6ES7148-6JG00-0BB0

1.1.21 HSP 0354

is necessary for these modules:

SIMATIC S7-1500, AI 8xU/I HF – FW-Version 1.2
6ES7531-7NF00-0AB0

1.1.22 HSP 0355

is necessary for this module:

SIMATIC S7-1500, TM PosInput 2 – FW-Version 2.0
- 6ES7551-1AB01-0AB0

1.1.23 HSP 0356

is necessary for this module:

SIMATIC ET 200SP TM SIWAREX WP341 HF
- 7MH4138-6CA00-0CU0

1.1.24 HSP 0357

is necessary for these modules:

SIMATIC ET 200SP AI RTD/TC HF – FW-Version 2.1
- 6ES7134-6JD00-0CA1; 6ES7134-6JF00-0CA1

1.1.25 HSP 0358 V2.0

is necessary for this module:

SIMATIC PN/CAN LINK – FW-Version 1.0, 2.0, 2.1
- 6BK1620-0AA00-0AA0

1.1.26 HSP 0360

is necessary for this module:

SIMATIC ET 200SP F-DI 8x24VDC HF
- 6ES7136-6BA01-0CA0

1.1.27 HSP 0363

is necessary for these modules:

SIMATIC ET 200eco PN
- 6ES7141-6BG00-0BB0; 6ES7141-6BH00-0BB0
- 6ES7142-6BG00-0BB0; 6ES7142-6BR00-0BB0
- 6ES7143-6BH00-0BB0
- 6ES7148-6JG00-0BB0

1.1.28 HSP 0364

is necessary for these devices:

SCALANCE WAM766/WUM766 – FW-Version 1.1
- 6GK5766-1GE00..

1.1.29 HSP 0366 – STEP 7 V17 Update 1 is required

is necessary for these modules:

SIMATIC S7-1200 CP1242/1243 – FW-Version 3.3

- 6GK7243-1BX30-0XE0; 6GK7243-8RX30-0XE0
- 6GK7242-7KX31-0XE0

1.1.30 HSP 0368

is necessary for this module:

SIMATIC S7-1500, TM FAST

- 6ES7554-1AA00-0AB0

1.1.31 HSP 0369

is necessary for this module:

SIMATIC ET 200eco PN AI8

- 6ES7144-6JF00-0BB0

1.1.32 HSP 0370

is necessary for this module:

SIMATIC ET 200SP F-DI 8x24VDC HF – FW-Version 2.0

- 6ES7136-6BA01-0CA0

1.1.33 HSP 0371 – STEP 7 V17 Update 4 is required

is necessary for these devices:

SCALANCE M8xx – FW-Version 7.1

- 6GK5615-0AA00-2AA2
- 6GK5804-0AP00-2AA2
- 6GK5812-1AA00-2AA2; 6GK5812-1BA00-2AA2
- 6GK5816-1AA00-2AA2; 6GK5816-1BA00-2AA2
- 6GK5826-2AB00-2AB2
- 6GK5853-2EA00-2DA1
- 6GK5856-2EA00-3AA1; 6GK5856-2EA00-3DA1; 6GK5856-2EA00-3FA1
- 6GK5874-2AA00-2AA2; 6GK5874-3AA00-2AA2
- 6GK5876-3AA02-2BA2; 6GK5876-3AA02-2EA2; 6GK5876-4AA00-2BA2
- 6GK5876-4AA00-2DA2; 6GK5876-4AA10-2BA2
- 6GK6108-4AM00-2BA2; 6GK6108-4AM00-2DA2

1.1.34 HSP 0373 – STEP 7 V17 Update 2 is required

is necessary for this device:

SIMATIC RF360R – FW-Version 2.0

- 6GT2801-5BA30

1.1.35 HSP 0374

is necessary for these devices:

SCALANCE WAM766/WUM766 – FW-Version 1.2

- 6GK5766-1GE00..
- 6GK5763-1AL00..

1.1.36 HSP 0376 – STEP 7 V17 Update 2 is required

is necessary for these devices:

SIMATIC RF600R – FW-Version 4.0

- 6GT2811-6AA10-0AA0; 6GT2811-6AA10-1AA0; 6GT2811-6AA10-2AA0
- 6GT2811-6AA10-2AA0; 6GT2811-6AA10-4AA0
- 6GT2811-6BC10-0AA0; 6GT2811-6BC10-1AA0; 6GT2811-6BC10-2AA0
- 6GT2811-6CA10-4AA0; 6GT2811-6CA10-0AA0; 6GT2811-6CA10-1AA0
- 6GT2811-6CC10-0AA0; 6GT2811-6CC10-1AA0; 6GT2811-6CC10-2AA0

1.1.37 HSP 0377 – STEP 7 V17 Update 2 is required

is necessary for this device:

SIMATIC RF166C – FW-Version 2.0

- 6GT2002-0EE20

1.1.38 HSP 0378

is necessary for these modules:

SIMATIC ET 200eco PN, CM IO-Link – FW-Version 5.1

- 6ES7148-6JE00-0BB0
- 6ES7148-6JJ00-0BB0

1.1.39 HSP 0379

is necessary for this module:

SIMATIC S7-1500 TM NPU – FW-Version 2.0

- 6ES7556-1AA00-0AB0

1.1.40 HSP 0381

is necessary for these modules:

SIMATIC S7-1500, DI/DQ – FW-Version 2.0

- 6ES7521-1BH50-0AA0; 6ES7521-1FH00-0AA0
- 6ES7522-5FF00-0AB0; 6ES7522-5FH00-0AB0

1.1.41 HSP 0383

is necessary for this module:

SIMATIC S7-1500, AI 8xHART HF

- 6ES7531-7TF00-0AB0

1.1.42 HSP 0388 V1.0 – STEP 7 V17 Update 4 is required

is necessary for these devices:

SCALANCE SC6xx – FW-Version 2.3

- 6GK5622-2GS00-2AC2
- 6GK5632-2GS00-2AC2
- 6GK5636-2GS00-2AC2
- 6GK5642-2GS00-2AC2
- 6GK5646-2GS00-2AC2

1.1.43 HSP 0388 V2.0 – STEP 7 V17 Update 6 is required

is necessary for this device:

SCALANCE SC626-2C – FW-Version 2.3

- 6GK5626-2GS00-2AC2

1.1.44 HSP 0390

is necessary for this module:

SIMATIC S7-1500 AI 8 X U/R/RTD/TC HF – FW-Version 1.2

- 6ES7531-7PF00-0AB0

1.1.45 HSP 0392 – STEP 7 V17 Update 6 is required

is necessary for these devices:

SCALANCE X200/X300 – FW-Version 4.4

- 6GK5204-0GA00-1UF2;
- 6GK5204-2AA00-2GF2; 6GK5204-2AA00-2YF2
- 6GK5205-3BB00-2AB2; 6GK5205-3BB00-2TB2; 6GK5205-3BD00-2AB2
- 6GK5205-3BD00-2TB2; 6GK5205-3BF00-2AB2; 6GK5205-3BF00-2TB2
- 6GK5206-2BB00-2AB2; 6GK5206-2BB00-2AC2
- 6GK5206-2BD00-2AB2; 6GK5206-2BD00-2AC2
- 6GK5206-2BF00-2AB2
- 6GK5206-2BS00-2AC2; 6GK5206-2BS00-2FC2
- 6GK5206-2GS00-2AC2; 6GK5206-2GS00-2FC2; 6GK5206-2GS00-2TC2
- 6GK5206-2RS00-2AC2; 6GK5206-2RS00-5AC2; 6GK5206-2RS00-5FC2
- 6GK5208-0BA00-2AB2; 6GK5208-0BA00-2AC2; 6GK5208-0BA00-2FC2
- 6GK5208-0BA00-2TB2; 6GK5208-0GA00-2AC2; 6GK5208-0GA00-2FC2
- 6GK5208-0GA00-2TC2; 6GK5208-0HA00-2AS6; 6GK5208-0HA00-2ES6
- 6GK5208-0HA00-2TS6; 6GK5208-0RA00-2AC2; 6GK5208-0RA00-5AC2
- 6GK5208-0UA00-5ES6
- 6GK5213-3BB00-2AB2; 6GK5213-3BB00-2TB2; 6GK5213-3BD00-2AB2
- 6GK5213-3BD00-2TB2; 6GK5213-3BF00-2AB2; 6GK5213-3BF00-2TB2
- 6GK5216-0BA00-2AB2; 6GK5216-0BA00-2AC2; 6GK5216-0BA00-2FC2
- 6GK5216-0BA00-2TB2; 6GK5216-0HA00-2AS6; 6GK5216-0HA00-2ES6
- 6GK5216-0HA00-2TS6; 6GK5216-0UA00-5ES6; 6GK5216-3RS00-2AC2
- 6GK5216-3RS00-5AC2; 6GK5216-4BS00-2AC2; 6GK5216-4GS00-2AC2
- 6GK5216-4GS00-2FC2; 6GK5216-4GS00-2TC2

- 6GK5224-0BA00-2AC2; 6GK5224-4GS00-2AC2; 6GK5224-4GS00-2FC2
- 6GK5224-4GS00-2TC2
- 6GK5324-0BA00-2AR3; 6GK5324-0BA00-3AR3
- 6GK5326-2QS00-3AR3; 6GK5326-2QS00-3RR3
- 6GK5328-4FS00-2AR3; 6GK5328-4FS00-2RR3; 6GK5328-4FS00-3AR3
- 6GK5328-4FS00-3RR3; 6GK5328-4SS00-2AR3; 6GK5328-4SS00-3AR3

1.1.46 NEW: HSP 0395 – STEP 7 V17 Update 7 is required

is necessary for this device:

SCALANCE X200/X300 – FW-Version 4.5

- 6GK5208-0JA00-2AS6

1.1.47 HSP 0396

is necessary for this device:

Basic unit SIMOCODE pro – FW-Version 3.0

- 3UF7011-1A

1.1.48 HSP 0404

is necessary for these modules:

SIMATIC S7-1500 PS – FW-Version 1.1

- 6ES7505-0KA00-0AB0
- 6ES7505-0RA00-0AB0
- 6ES7505-0RB00-0AB0
- 6ES7507-0RA00-0AB0

1.2 Support Packages for STEP 7 Professional V17

You can use these HSP with STEP 7 Professional V17. **At least** STEP 7 Professional V17 is required.

1.2.1 HSP 0185 V3.0

is necessary for these devices:

SINAMICS V90 PN (FW-version 1.04)

- 6SL3210-5FB10-1UF2; 6SL3210-5FB10-2UF2; 6SL3210-5FB10-4UF1
- 6SL3210-5FB10-8UF0
- 6SL3210-5FB11-0UF1; 6SL3210-5FB11-5UF0
- 6SL3210-5FB12-0UF0
- 6SL3210-5FE10-4UF0; 6SL3210-5FE10-8UF0
- 6SL3210-5FE11-0UF0; 6SL3210-5FE11-5UF0
- 6SL3210-5FE12-0UF0
- 6SL3210-5FE13-5UF0
- 6SL3210-5FE15-0UF0
- 6SL3210-5FE17-0UF0

1.2.2 HSP 0424 – V3.0

is necessary for these devices:

SIMATIC IPC477E PRO

- 6AV7251-..

2 Support Packages for WinCC

2.1 Support Packages for WinCC V17

2.1.1 HSP 0362

is necessary for these devices:

SIMATIC HMI connection box for Mobile Panels

- 6AV2125-2AE13-0AX0
- 6AV2125-2AE23-0AX0

3 Support Packages for STEP 7 Safety

3.1 Support Packages for STEP 7 Safety Advanced V17

3.1.1 HSP 0271 – STEP 7 Safety V17 Update 2 is required

is necessary for these components:

SIPLUS Safety

- 6AG1510-1SJ01-2AB0
- 6AG1512-1SK01-2AB0; 6AG1512-1SK01-7AB0
- 6AG1136-6AA00-2CA1; 6AG1136-6BA00-2CA0; 6AG1136-6DB00-2CA0
- 6AG1136-6DC00-2CA0; 6AG1136-6PA00-2BC0; 6AG1136-6RA00-2BF0
- 6AG1511-1FK01-2AB0; 6AG1511-1FK02-2AB0
- 6AG1513-1FL01-2AB0; 6AG1513-1FL02-2AB0
- 6AG1515-2FM01-2AB0; 6AG1515-2FM02-2AB0
- 6AG1516-3FN01-2AB0; 6AG1516-3FN02-2AB0
- 6AG1518-4FP00-4AB0
- 6AG1526-2BF00-2AB0; 6AG1526-1BH00-2AB0
- 6AG2510-1SJ01-1AB0
- 6AG2512-1SK01-1AB0; 6AG2512-1SK01-4AB0
- 6AG2136-6AA00-1CA1; 6AG2136-6BA00-1CA0; 6AG2136-6DB00-1CA0
- 6AG2136-6DC00-1CA0; 6AG2136-6PA00-1BC0; 6AG2136-6RA00-1BF0
- 6AG2515-2FM01-2AB0; 6AG2515-2FM02-4AB0
- 6AG2516-3FN01-1AB0; 6AG2516-3FN02-2AB0; 6AG2516-3FN02-4AB0
- 6AG2526-2BF00-1AB0; 6AG2526-1BH00-1AB0