

Function Example No. MC-FE-I-009-V11-EN

SINAMICS S120

Safety Integrated Extended Functions

Fail-Safe Drives, Controlling the CU320
with EPOS and using PROFIsafe via PROFIBUS

safety
INTEGRATED

SIEMENS

Preliminary remarks

Function examples for the topic "Safety Integrated" are fully-functioning and tested automation configurations based on standard I DT & IA products for simple, fast and low-cost implementation of automation tasks in safety engineering. Each of the function examples available deals with a typical problem that occurs in safety engineering.

Besides listing all the necessary software and hardware components, and describing their interconnection, the function examples also include tested and commented code. This means the functionalities described here can be set up within a short time and can thus be used as the basis for individual expansions.

Important note

The Safety function examples are non-binding and do not claim to be complete in respect of configuration, equipment or practical contingencies. The Safety function examples are not customer-specific solutions but are only intended to provide support in implementing typical tasks. You yourself are responsible for proper operation of the described products.

These Safety function examples do not relieve you of the obligation to use the products safely during application, installation, operation and maintenance. By using these Safety function examples, you acknowledge the fact that Siemens cannot be held liable for any claims or damages above and beyond the liability described above. We reserve the right to make changes to these Safety function examples at any time without prior notice. For deviations between the recommendations in these Safety function examples and other Siemens publications, such as catalogs, the contents of the other documentation have priority.

Contents

1	Warranty, liability and support	4
2	Automation function	5
2.1	Description of the function example.....	5
2.2	PROFIsafe communication	8
2.3	Advantages / customer benefits	9
3	Required components	10
3.1	Hardware components	10
3.2	Software components	11
3.2.1	Engineering software	11
3.2.2	Firmware	11
4	Configuration and wiring	12
4.1	Overview of the hardware configuration	12
4.2	Wiring of the hardware components	13
4.2.1	Wiring the control voltage	13
4.2.2	DRIVE-CLiQ interconnection.....	14
4.3	Important settings on the hardware components	15
4.3.1	Bus interfaces	15
4.3.2	Requirements for operation	17
5	Overview and operation	18
5.1	Description of operation	18
5.2	Summary of input signals	20
6	Example project	21
6.1	Passwords	21
6.2	Hardware configuration of the fail-safe controller.....	22
6.3	SINAMICS parameter assignment	26
6.4	SIMATIC – Setting the standard program.....	33
6.5	Programming the fail-safe controller.....	38
6.6	Parameterizing the control options for safety functions (PROFIsafe).....	45
6.7	SINAMICS - Parameterizing the safety functions integrated in the drive	48
6.8	EPOS reactions.....	53
6.9	Downloading the sample project	55
6.9.1	Downloading the S7-F-CPU configuration	55
6.9.2	Downloading the SINAMICS S120 configuration	56
6.10	Acceptance test.....	57
7	History	57

1 Warranty, liability and support

Siemens shall not be held liable for the information provided in this document.

We accept no liability for any damage or loss caused by the examples, information, programs, configuration or performance data, etc. described in this Safety function example, irrespective of the legal basis for claims arising from such damage or loss, unless liability is mandatory (for example, in accordance with the German Product Liability Act for intent, acts of gross negligence, harm to the life, body or health of human beings, the assumption of a guarantee for a product's characteristics of state, malicious concealment of a defect, or violation of basic contractual obligations). However, claims for indemnification based on breach of contract shall be limited to liability for damages to the contract-specific, foreseeable damages, provided there is no mandatory liability for intent, acts of gross negligence, harm to the life, body and health of human beings. Any change to the burden of proof to your disadvantage is not covered hereby.

Copyright© 2009 Siemens I DT. Reproduction or transmission of these application examples or extracts thereof are forbidden without the express written authority of Siemens I DT.

If you have any questions about this article, please send an e-mail to the following address:

applications.erlf.aud@siemens.com

2 Automation function

2.1 Description of the function example

The following safety functions according to IEC 61800-5-2 are currently integrated in SINAMICS S120 drives:

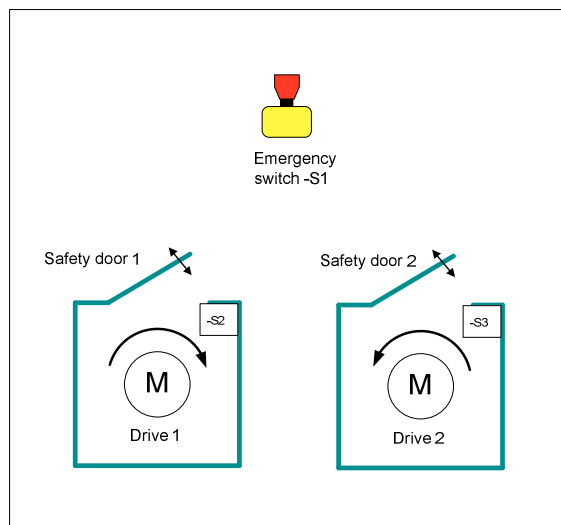
Name	Function	Description
STO	Safe Torque Off	<ul style="list-style-type: none"> Safe disconnection of the torque-generating power supply to the motor. The "Switching On Inhibited" condition prevents the drive from restarting. (Stop function, Category 0 according to EN 60204-1)
SBC	Safe Brake Control	<ul style="list-style-type: none"> SBC is only used when there is a motor brake; the motor brake is connected to the power connector through the outputs. SBC always responds in conjunction with STO or when internal safety monitoring functions respond with safe pulse suppression.
SS1	Safe Stop 1	<ul style="list-style-type: none"> The drive is quickly and safely stopped along the OFF3 ramp and is safely monitored. Transition to STO after a delay time has expired or the shutdown speed has been reached. (Stop function, Category 1 according to EN 60204-1)
SS2	Safe Stop 2	<ul style="list-style-type: none"> The drive is quickly and safely stopped along the OFF3 ramp and is safely monitored. Transition to SOS after a delay time has expired; the drive remains in closed-loop control. (Stop function, Category 2 according to EN 60204-1)
SOS	Safe Operating Stop	<ul style="list-style-type: none"> This function serves to safely monitor the standstill position of a drive; the drive remains in closed-loop control.
SLS	Safely Limited Speed	<ul style="list-style-type: none"> The drive speed is safely monitored. Parameterizable shutdown response when the limit value is violated.
SSM	Safe Speed Monitor	<ul style="list-style-type: none"> Safely displays when the speed falls below a speed limit ($n < n_x$).

These extended safety functions can be controlled via PROFIsafe with PROFIBUS or PROFINET, as well as via a TM54F terminal expansion module. In the current example, a SIMATIC F-CPU uses the PROFIsafe telegram to control the safety functions.

Task description

The extended safety functions integrated in the SINAMICS S120 drives are to be controlled via PROFIsafe with PROFIBUS. The drives belong to different drive groups. An F-CPU handles the safety-related logical processing of the input signals. The F-CPU is both the fail-safe master and the PROFIBUS master.

A typical overview of the assumed machine configuration is shown in the following diagram.

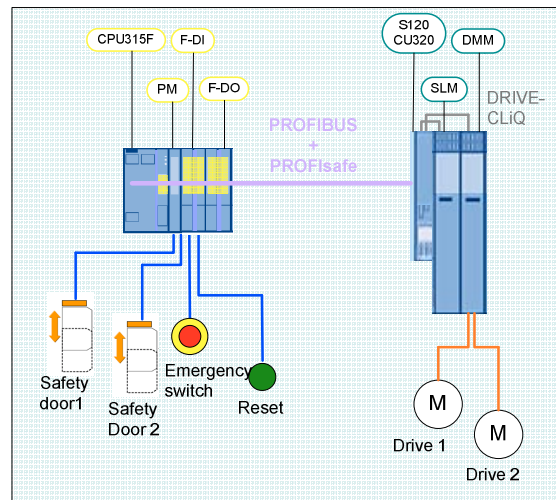


The following safety functions are used as basis for further consideration.

Safety - function	Description	Reaction
SF1	Actuation of the emergency stop button	Drive 1 is stopped with immediate pulse suppression (STO) Drive 2 is quickly stopped in a controlled fashion -> subsequent pulse suppression (SS1)
SF2	When protective door 1 is open, drive 1 must not exceed a maximum speed	Speed monitoring at drive 1 (SLS)
SF3	Drive 2 should be stopped quickly when protective door 2 is opened. Drive 2 must then be held at standstill and the standstill position safely monitored.	For drive 2: Interrupt positioning, perform application-specific braking and, at the same time, select SOS.

Solution

Hardware overview



This function example shows how the STO, SS1, SOS and SLS safety functions are controlled via PROFIsafe with PROFIBUS at a SINAMICS S120 drive line-up.

The drive line-up in the booksize format comprises an infeed and a Double Motor Module. Position control and motor control is carried out by a Control Unit CU320. The two servomotors, which are independent of one another, are controlled from the Double Motor Module. A Smart Line Module is used as infeed.

The safety-related signals are sensed using fail-safe inputs of an F-CPU and evaluated in the F-CPU. Fail-safe PROFIsafe communication is used to activate the safety functions that are integrated in each drive of the SINAMICS S120 drive line-up individually. The control signals are processed in a standard program in the F-CPU and output to the SINAMICS S120 system via PROFIBUS.

When Emergency Stop is requested, drive 1 is stopped using the SS1 safety function integrated in the drive and drive 2 is stopped with STO.

Two switches in the SAFETY training case simulate a protective door for drives 1 and 2 respectively. When protective door 1 is opened, the SLS function is selected. The function SLS reduce the speed setpoint for drive 1 via the EPOS function maximum speed external. When protective door 2 is opened, drive 2 brakes using the EPOS Intermediate stop function, while SOS is selected simultaneously. The drive must come to a standstill before SOS is activated (be sure to configure the delay time correctly). When the

door is closed, axis 2 restarts (the SOS function is deselected). The other drive is not influenced.

2.2 PROFIsafe communication

Each drive with a PROFIsafe slot configured in the drive unit represents a PROFIsafe slave (F-slave) featuring fail-safe PROFIBUS communication with the F-master (F-host).

A separate PROFIsafe telegram (PROFIsafe slot) is created for each drive. This telegram is 6 bytes long for each drive. The first two bytes contain the Safety user data.

The following control signals are sent from the F-CPU to the drive:

F-CPU -> Drive

PROFIdrive Safety Block 1 (F Process Data)															
Byte 0								Byte 1							
0	1	2	3	4	5	6	7	0	1	2	3	4	5	6	7
STO	SS1	SS2	SOS	SLS	Res.	Res.	Int. Ev. ACK	Res.	SLS Limit sel.	SLS Limit sel.	Res.	Res.	Res.	Res.	Res.

- PROFIsafe output data

The drive returns the status of the safety functions to the F-CPU.

Drive -> F-CPU

PROFIdrive Safety Block 1 (F Process Data)															
Byte 0								Byte 1							
0	1	2	3	4	5	6	7	0	1	2	3	4	5	6	7
Power rem.	SS1 act.	SS2 act.	SOS act.	SLS act.	Res.	Res.	Int. Ev.	Res.	SLS Limit	SLS Limit	SOS se-lected	Res.	Res.	Res.	SSM

- PROFIsafe status data

Note

Safety functions that are integrated in the drive but not used must be deselected using a high signal (logical 1).

2.3 Advantages / customer benefits

- Simple control of the safety functions integrated in the drive
- Simple design using standardized technology
- The existing system can be quickly and simply expanded.
- Space-saving and low-cost design using integrated safety functions – additional hardware is not required
- Complex safety concepts can be implemented on this basis.

3 Required components

The hardware components and software versions required to implement the function example are listed in this chapter.

3.1 Hardware components

SAFETY training case (essential components)

Component	Type	MLFB / Ordering data	Qty	Manufacturer
SITOP power supply	SITOP SMART 120W	6EP1 333-2AA01	1	Siemens
SIMATIC S7-300 CPU	CPU 315F-2 PN/DP	6ES7 315-2FH13-0AB0	1	Siemens
	SIMATIC Micro Memory Card, 512KB	6ES7 953-8LJ20-0AA0	1	Siemens
SIMATIC S7 fail-safe input module	SM 326 F-DI 24	6ES7 326-1BK01-0AB0	1	Siemens
SIMATIC S7 fail-safe output module	SM 326 F-DO 8	6ES7 326-1BF40-0AB0	1	Siemens
SINAMICS fail-safe Terminal Module	TM54F	6SL3050-0AA00-3BA0	1	Siemens
Drive-CLiQ	Cable, gray, metal connector	6FX2002-1DC00-1AC0	1	Siemens
Protective door simulation switches S2 and S3	Toggle switch 0-I, latching, 16 mm, black	3SB2000-2AB01	2	Siemens
	Holder with solder pins	3SB2908-0AB	2	Siemens
Emergency stop command device S1	Mushroom pushbutton, red, 16 mm	3SB2000-1AC01	1	Siemens
	Holder with solder pins	3SB2908-0AB	1	Siemens
Reset button S4	Pushbutton, flat button, 16 mm, white	3SB2000-0AG01	1	Siemens
	Holder with lamp holder, lamp and solder pins	3SB2455-1B	1	Siemens
Load resistors R1 .. R8	1 kohm 1 W	Type PO595-0 Style 0207 Power metal oxide film resistors	1	Yageo Europe
Terminals for load resistors (R1..R8)	ST 2.5-QUATTRO-TG	3038451	8	Phoenix Contact
	P-CO component connector	3036796	8	Phoenix Contact
Load resistor R9	SMA0207 1K2 1% TK	WID_MET_SHT_1K2_+-1%_600mW_+50ppm_0207	1	Beyschlag
Terminals for load resistor (R9)	TERMINALS_ACCESSORY_EMPTY_CONNECTOR_TYPE1_GRAY	280-801	1	WAGO
	TERMINAL_4-CONDUCTOR_GRAY	280-686	1	WAGO

SINAMICS training case

Component	Type	MLFB / Ordering data	Qty	Manufacturer
SINAMICS training case	S120 CU320	6ZB2 480-0BA00	1	SIEMENS

Note The function example was tested with the hardware components listed here. Alternatively, other components with the same function may be used. In such a case, a different parameter assignment and different wiring of the components may be required.

3.2 Software components

3.2.1 Engineering software

Table 3-1

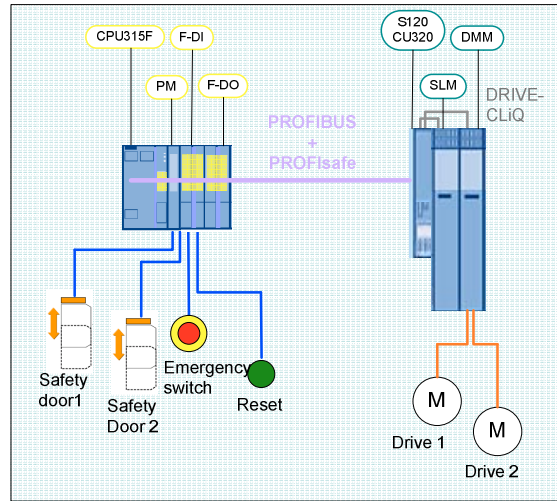
Component	Type	MLFB / Ordering data	Qty	Manufacturer
STEP 7	V5.4 SP4	6ES7810-4CC08-0YA5	1	Siemens
S7 Distributed Safety Programming	V5.4 SP4	6ES7833-1FC02-0YA5	1	Siemens
S7 F ConfigurationPack	V5.5 SP5		1	Siemens
STARTER	V4.1 SP3	6SL3072-0AA00-0AG0	1	Siemens
Drive ES Basic	V5.4 SP4	6SW1700-5JA00-4AA0	1	Siemens
or as an alternative to STARTER & DRIVE ES Basic software:				
SIMOTION SCOUT	V4.1 SP4	6AU1810-1BA41-1XA0	1	Siemens

3.2.2 Firmware

All SINAMICS components must have firmware release V2.6 SP1 or higher.

4 Configuration and wiring

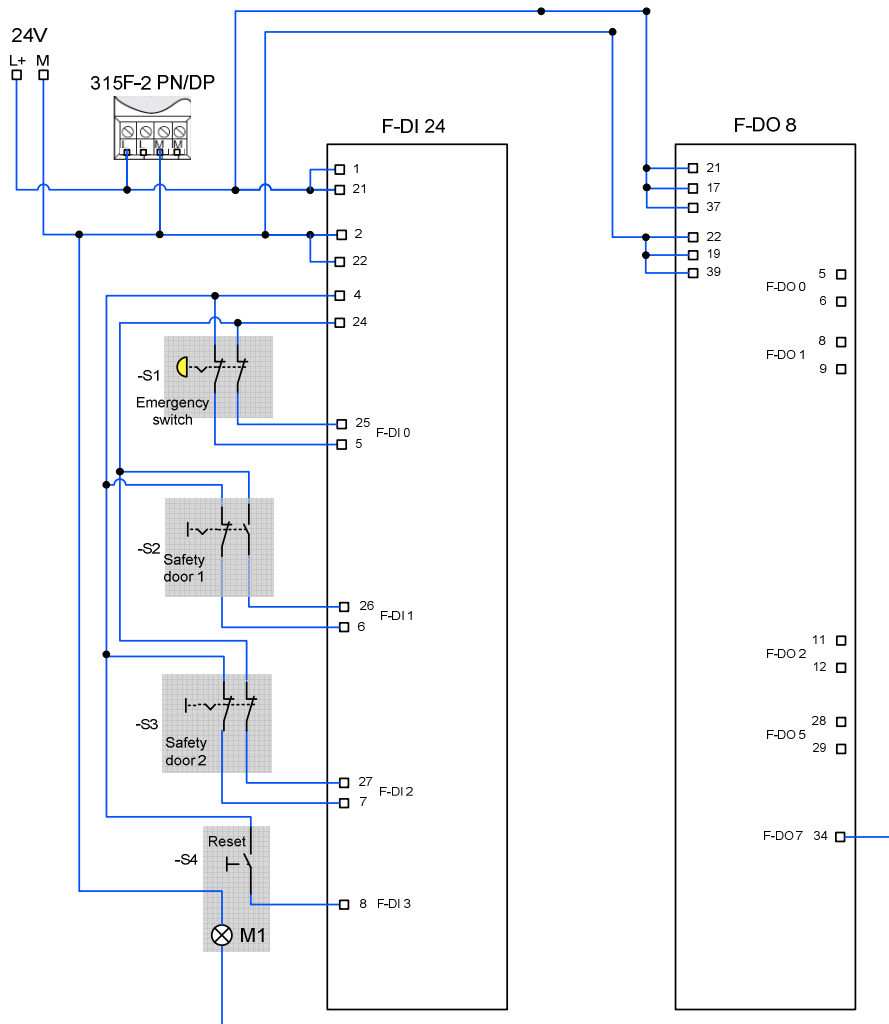
4.1 Overview of the hardware configuration



Basic configuration

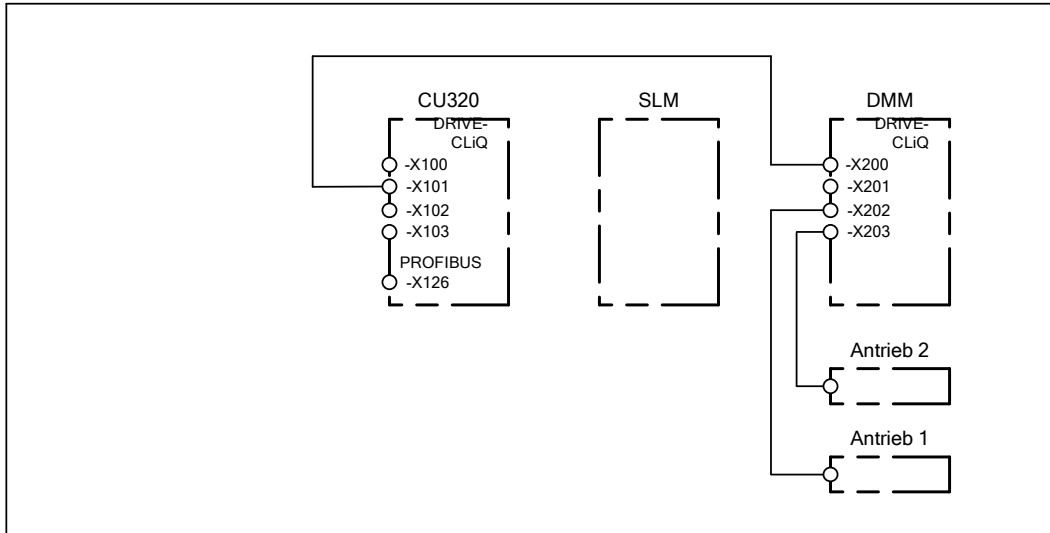
4.2 Wiring of the hardware components

4.2.1 Wiring the control voltage



Wiring safety training case

4.2.2 DRIVE-CLiQ interconnection



DRIVE-CLiQ interconnection

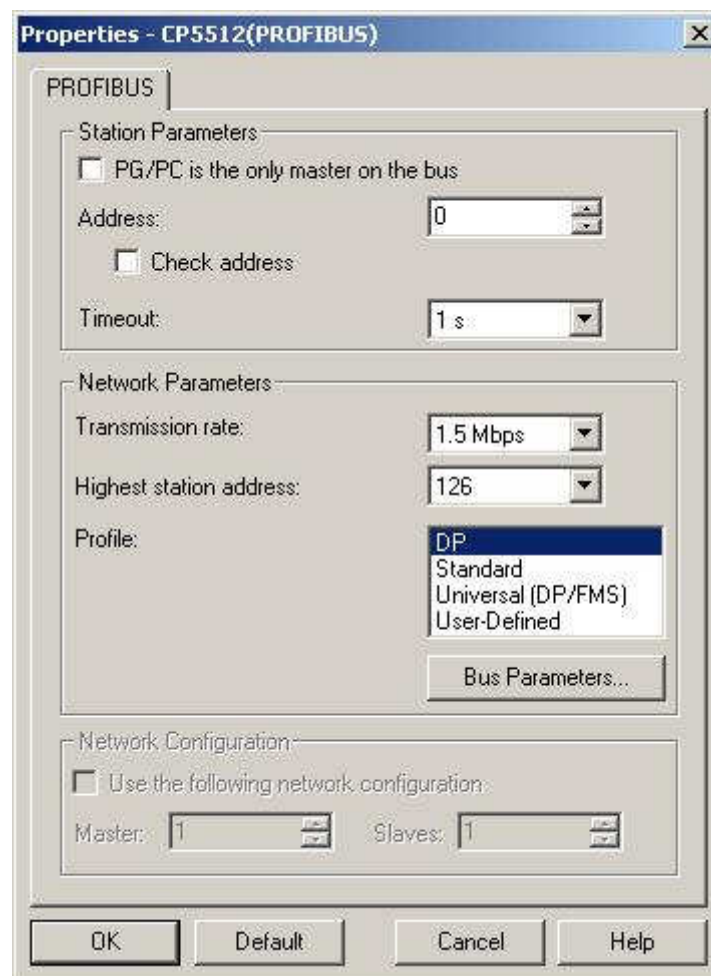
4.3 Important settings on the hardware components

In this function example, the PROFIBUS interfaces of the F-CPU and SINAMICS S120 are used for programming and for the exchange of PROFIdrive data and fail-safe signals. The safety-related exchange of signals between the F-CPU and SINAMICS S120 is implemented using only PROFIsafe telegrams.

4.3.1 Bus interfaces

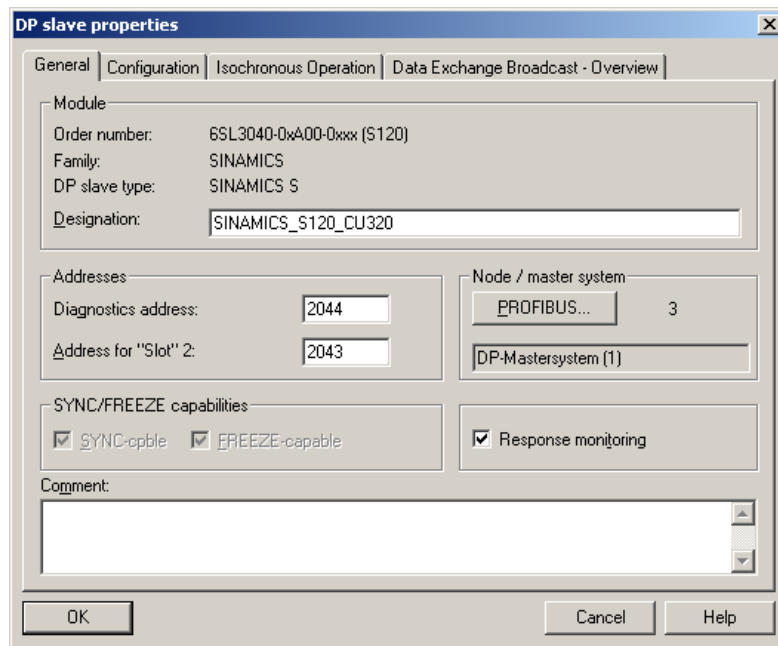
Programming device / PC

- PROFIBUS address = 0
- As the F-CPU used is the bus master, the PROFIBUS interface of the programming device must not be configured as the only master on the bus (do not enter a checkmark in the field "PG/PC is the only master on the bus").



SINAMICS S120 CU320

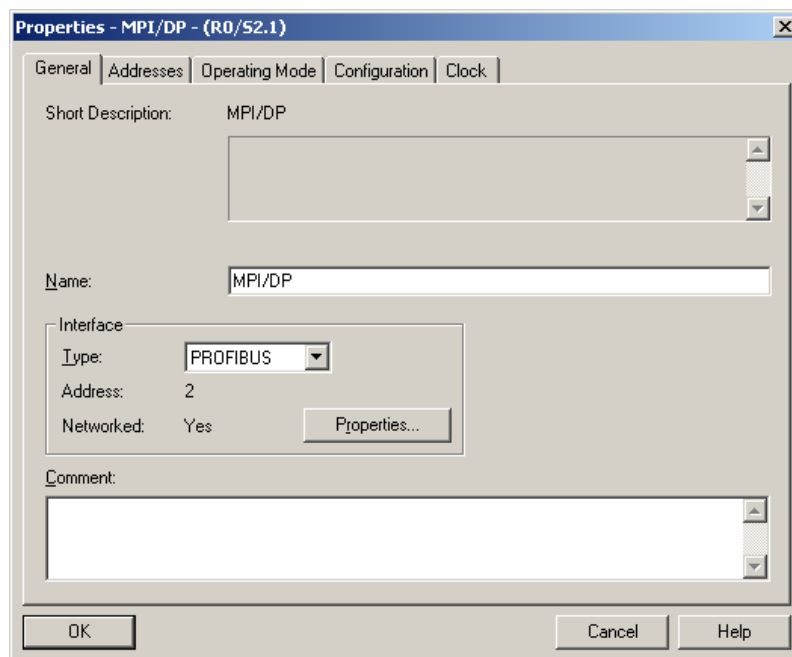
- PROFIBUS address = 3
- The PROFIBUS address is set via HW Config and must match the DIP switch setting at the CU320.



-

SIMATIC 315F-2 PN/DP CPU

- PROFIBUS address = 2



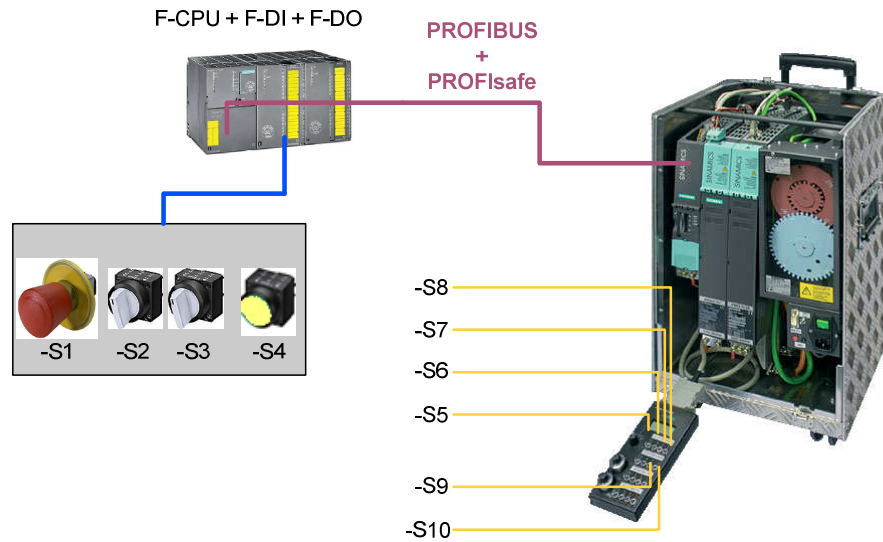
-

4.3.2 Requirements for operation

- The SIMATIC components have been mounted and connected with one another. The PROFIsafe addresses of the fail-safe input and output modules must have been set by means of the DIL switch; see Chapter 6.2 Hardware configuration of the fail-safe controller
- All components have been connected as specified in Chapter 4.2 Wiring of the hardware components.
- The DRIVE-CLiQ topology of the SINAMICS components has been maintained.
- The motors have been connected to the Motor Module using the power and encoder cable.
- The Motor Module is correctly connected with the infeed (DC link and 24 V DC control voltage).
- The infeed is connected to the line supply.
- The components are supplied with 24 V DC.

5 Overview and operation

5.1 Description of operation



Hardware overview

Switches -S1 to -S4 are located on a switchbox that belongs to the Safety training case. The various safety functions are selected using these switches. Switches -S5 to -S10 are located on a switchbox that belongs to the SINAMICS training case. These switches are used to switch axis enable signals, start traversing programs, start the test function for the safety functions and acknowledge faults.

The emergency stop button S1 must be released in order to be able to operate the drives

The axis enable signals for drive 1 (upper motor) are switched using switch -S5. Traversing blocks can be started using -S6. The enable signal for axis 2 (lower motor) is issued using -S7 and the traversing blocks activated using -S8. Alarms present on the SINAMICS system can be acknowledged using -S9. The Safety alarms are the exception in this case, as they must be acknowledged in a fail-safe fashion using -S4. Cyclic test stop for the safety functions is activated using -S10.

If the emergency stop button -S1 is pressed, then STO is activated directly for drive 1 (upper motor), i.e. the drive coasts down to standstill. When an Emergency Stop is initiated, drive 1 comes to a standstill before drive 2. The safety function SS1 is triggered for drive 2 (lower motor); i.e. the drive is braked along the OFF3 ramp and STO then activated.

Drive 1 can be operated at any speed when protective door 1 is closed (toggle switch -S2). If -S2 is opened, the traversing speed is reduced using the EPOS function maximum speed and activating SLS. The user is responsible for maintaining an axis speed that lies below the speed limit for Stage 1 of the SLS safety function. This limit value is monitored by safety function SLS after a defined time has expired. If -S2 is closed again, then SLS is deactivated and the speed reduction is canceled by the application program. The drive can now be operated again with the configured speed.

Drive 2 can be operated when protective door 2 is closed (toggle switch -S3). If -S3 is opened, the SOS safety function is activated, i.e. the drive is braked by the application program using the EPOS function "Intermediate stop" and held at the standstill position. After expiry of a defined period, the next state SOS is activated. Drive 1 is now in the controlled standstill state with speed setpoint value = 0 and the standstill position is safely monitored. If the simulated protective door -S3 is closed again, SOS and the EPOS Intermediate stop function is deselected. The drive accelerates again to its original speed. In this case, an ON command is not necessary.

5.2 Summary of input signals

SINAMICS digital inputs

DI0	-S5	Drive 1	Set / cancel axis enable signals
DI1	-S6	Drive 1	Start / stop the traversing program
DI2	-S7	Drive 2	Set / cancel axis enable signals
DI3	-S8	Drive 2	Start / stop the traversing program
DI6	-S9	Drive 1 / Drive 2	Acknowledge alarms
DI7	-S10	Drive 1 / Drive 2	Initiate a test stop

Fail-safe inputs on the F-DI module

F-DI0	-S1	Emergency stop button	Drive 1: STO Drive 2: SS1
F-DI1	-S2	Protective door 1 (for drive 1)	SLS
F-DI2	-S3	Protective door 2 (for drive 2)	SOS
F-DI3	-S4	Acknowledgement button	Fail-safe acknowledgement (drives 1 & 2) and depassivation (all F-slaves)

Note The drives can only be operated when the infeed is activated and the DC link charged.

6 Example project

In this chapter, you get to know how the individual components must be parameterized. STARTER, DRIVE ES Basic and SIMOTION SCOUT may be used as engineering software for SINAMICS S120.

SIMOTION SCOUT was used to produce this example. STEP 7 and Distributed Safety is a prerequisite for programming the F-CPU.

How the software project belonging to this function example was set-up is described in the following sections.

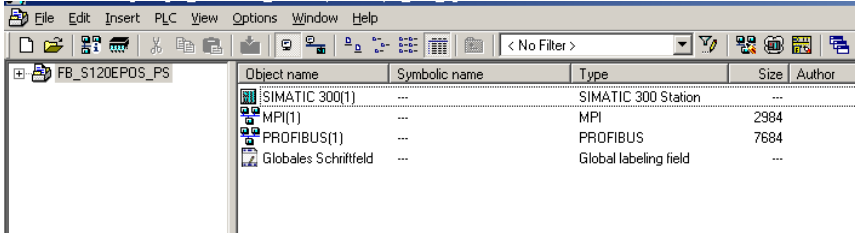
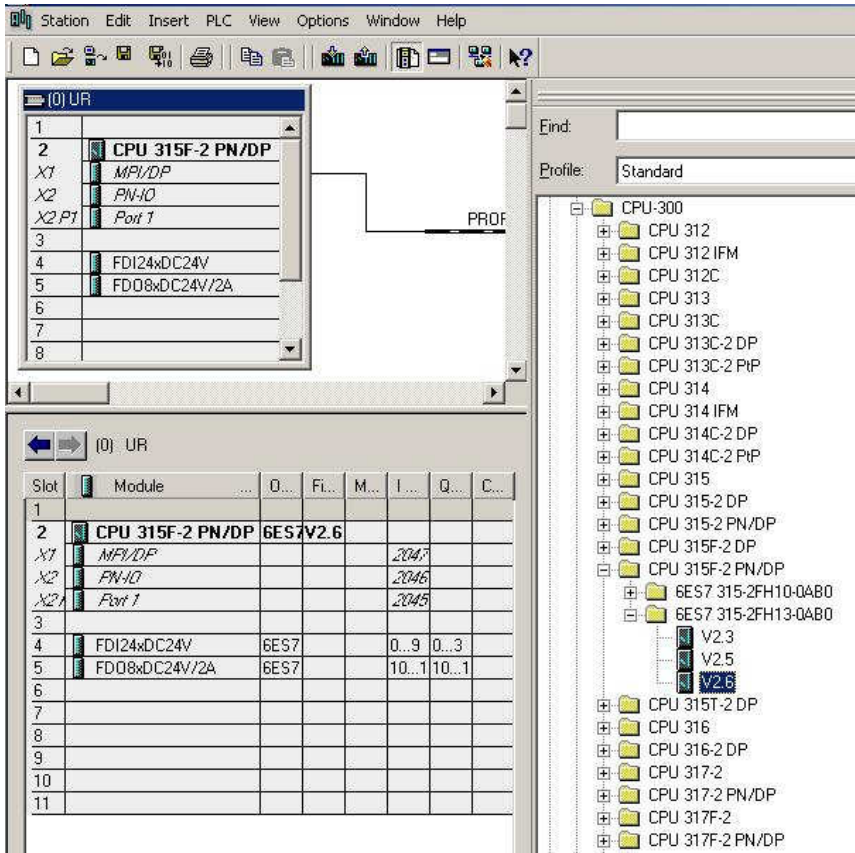
6.1 Passwords

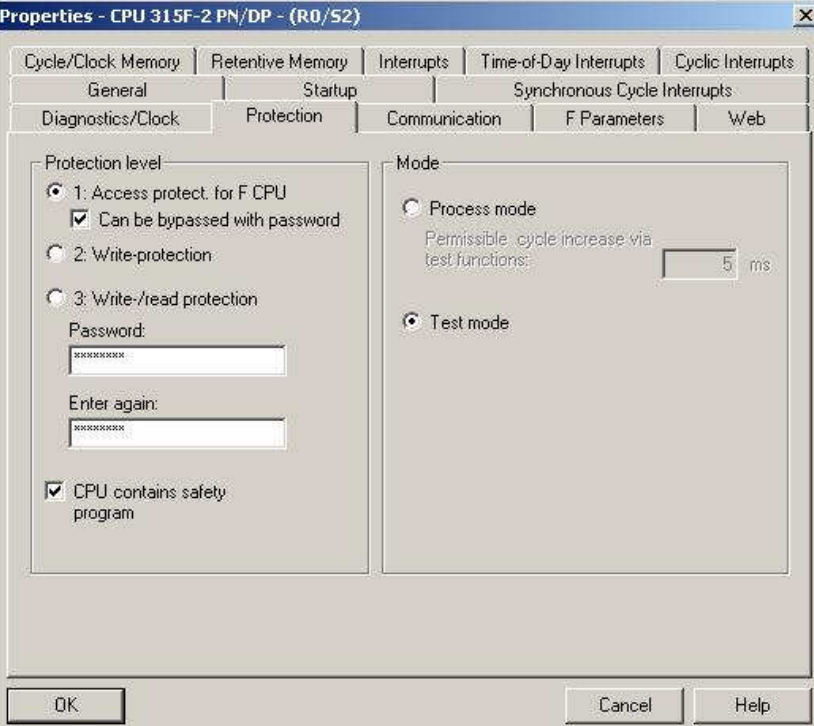
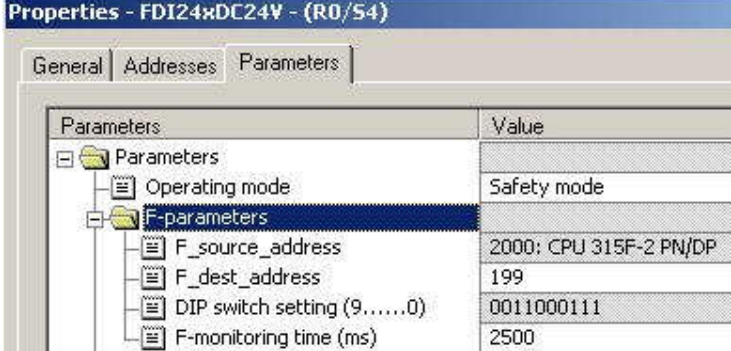
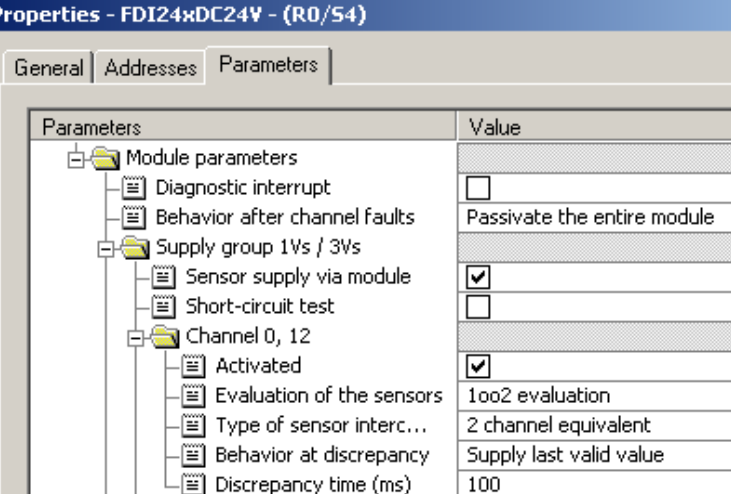
For reasons of simplicity, a common safety password is used for the program and hardware on the SIMATIC components in the project. Also when configuring the Safety functionality of the SINAMICS components, one common password is used for the drives.

- **Safety password on the F-CPU: "0"**
- **Safety password on SINAMICS: "1"**

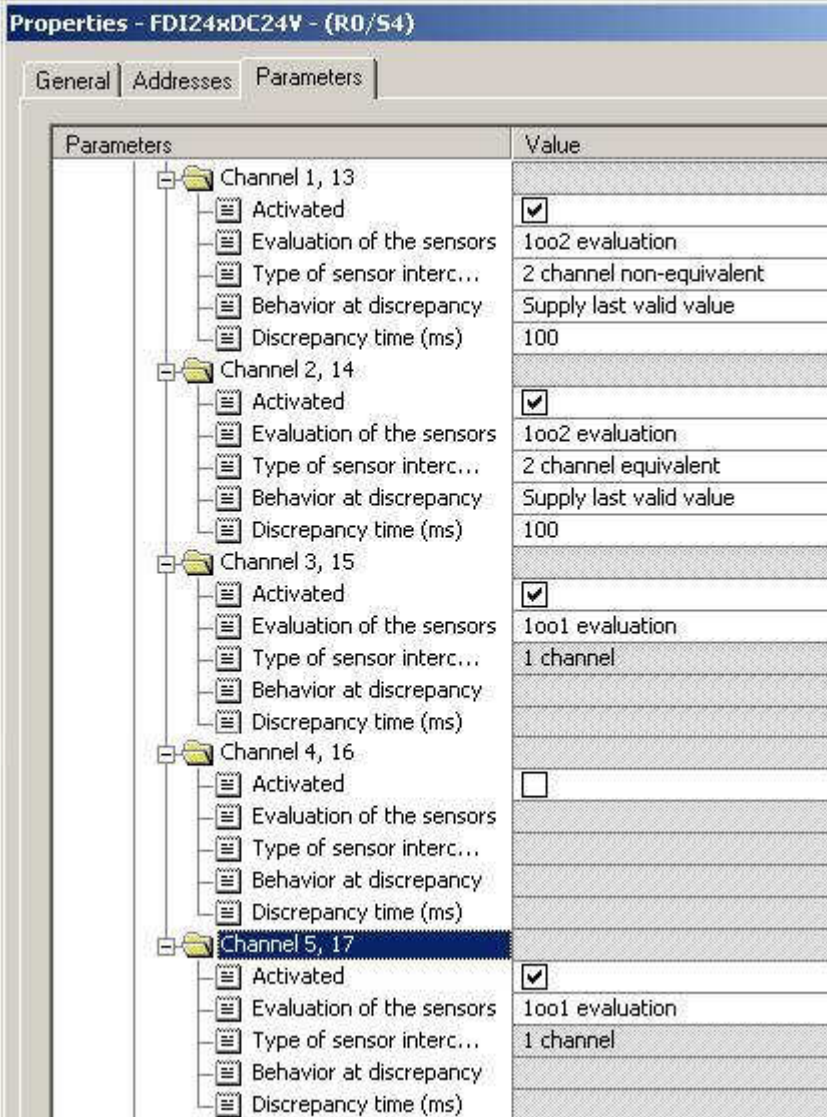
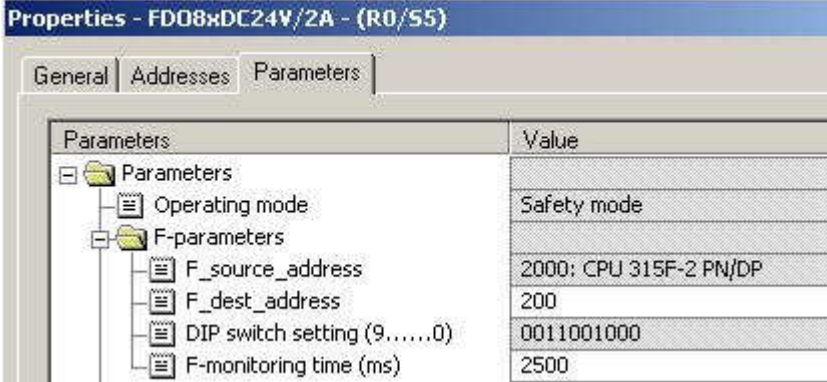
These passwords should be changed for real applications!

6.2 Hardware configuration of the fail-safe controller

Description	Note																																																																																																																								
<p>In the SIMATIC Manager, insert a SIMATIC 300 station into the project.</p>	 <p>The screenshot shows the SIMATIC Manager interface. The project tree on the left includes 'FB_S120EPOS_PS' and a newly added 'SIMATIC 300(1)' station. A table in the center lists the components of the station:</p> <table border="1"> <thead> <tr> <th>Object name</th> <th>Symbolic name</th> <th>Type</th> <th>Size</th> <th>Author</th> </tr> </thead> <tbody> <tr> <td>SIMATIC 300(1)</td> <td>---</td> <td>SIMATIC 300 Station</td> <td>---</td> <td>---</td> </tr> <tr> <td>MPI(1)</td> <td>---</td> <td>MPI</td> <td>2984</td> <td>---</td> </tr> <tr> <td>PROFIBUS(1)</td> <td>---</td> <td>PROFIBUS</td> <td>7684</td> <td>---</td> </tr> <tr> <td>Globales Schriftfeld</td> <td>---</td> <td>Global labeling field</td> <td>---</td> <td>---</td> </tr> </tbody> </table>	Object name	Symbolic name	Type	Size	Author	SIMATIC 300(1)	---	SIMATIC 300 Station	---	---	MPI(1)	---	MPI	2984	---	PROFIBUS(1)	---	PROFIBUS	7684	---	Globales Schriftfeld	---	Global labeling field	---	---																																																																																															
Object name	Symbolic name	Type	Size	Author																																																																																																																					
SIMATIC 300(1)	---	SIMATIC 300 Station	---	---																																																																																																																					
MPI(1)	---	MPI	2984	---																																																																																																																					
PROFIBUS(1)	---	PROFIBUS	7684	---																																																																																																																					
Globales Schriftfeld	---	Global labeling field	---	---																																																																																																																					
<p>Completely create and parameterize the station in HW Config.</p> <p>Therefore, drag the modules contained in the parts list of Chapter 3.1 Hardware components from the catalog window and drop them into the configuration window.</p> <p>Set the address of the DP interface as described in Chapter 4.3.</p>	 <p>The screenshot shows the HW Config interface. The 'Station' window displays the configuration of the station, including the CPU and modules. The 'Parts list' window shows the modules being added to the station. The 'Hardware Catalog' window shows the available modules.</p> <p>The configuration window shows the following modules:</p> <table border="1"> <thead> <tr> <th>Slot</th> <th>Module</th> <th>D...</th> <th>Fl...</th> <th>M...</th> <th>I...</th> <th>Q...</th> <th>C...</th> </tr> </thead> <tbody> <tr> <td>1</td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> </tr> <tr> <td>2</td> <td>CPU 315F-2 PN/DP</td> <td>6ES7</td> <td>V2.6</td> <td></td> <td></td> <td></td> <td></td> </tr> <tr> <td>X1</td> <td>MPI/DP</td> <td></td> <td></td> <td></td> <td>2045</td> <td></td> <td></td> </tr> <tr> <td>X2</td> <td>PN-IO</td> <td></td> <td></td> <td></td> <td>2046</td> <td></td> <td></td> </tr> <tr> <td>X2.1</td> <td>Port 1</td> <td></td> <td></td> <td></td> <td>2045</td> <td></td> <td></td> </tr> <tr> <td>3</td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> </tr> <tr> <td>4</td> <td>FDI24xDC24V</td> <td>6ES7</td> <td></td> <td></td> <td>0...9</td> <td>0...3</td> <td></td> </tr> <tr> <td>5</td> <td>FDO8xDC24V/2A</td> <td>6ES7</td> <td></td> <td></td> <td>10...1</td> <td>10...1</td> <td></td> </tr> <tr> <td>6</td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> </tr> <tr> <td>7</td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> </tr> <tr> <td>8</td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> </tr> <tr> <td>9</td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> </tr> <tr> <td>10</td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> </tr> <tr> <td>11</td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> </tr> </tbody> </table>	Slot	Module	D...	Fl...	M...	I...	Q...	C...	1								2	CPU 315F-2 PN/DP	6ES7	V2.6					X1	MPI/DP				2045			X2	PN-IO				2046			X2.1	Port 1				2045			3								4	FDI24xDC24V	6ES7			0...9	0...3		5	FDO8xDC24V/2A	6ES7			10...1	10...1		6								7								8								9								10								11							
Slot	Module	D...	Fl...	M...	I...	Q...	C...																																																																																																																		
1																																																																																																																									
2	CPU 315F-2 PN/DP	6ES7	V2.6																																																																																																																						
X1	MPI/DP				2045																																																																																																																				
X2	PN-IO				2046																																																																																																																				
X2.1	Port 1				2045																																																																																																																				
3																																																																																																																									
4	FDI24xDC24V	6ES7			0...9	0...3																																																																																																																			
5	FDO8xDC24V/2A	6ES7			10...1	10...1																																																																																																																			
6																																																																																																																									
7																																																																																																																									
8																																																																																																																									
9																																																																																																																									
10																																																																																																																									
11																																																																																																																									

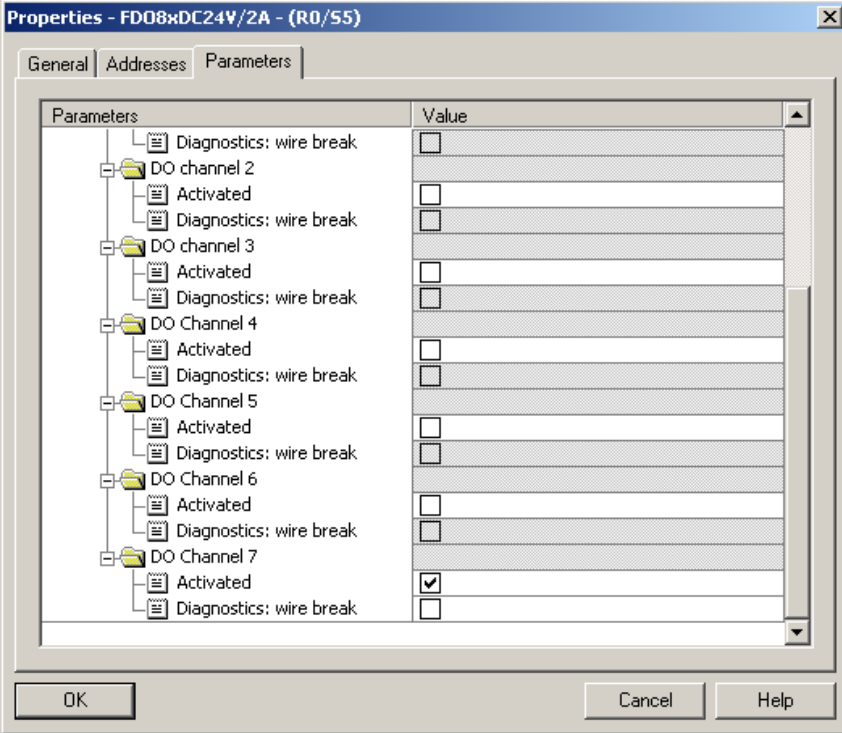
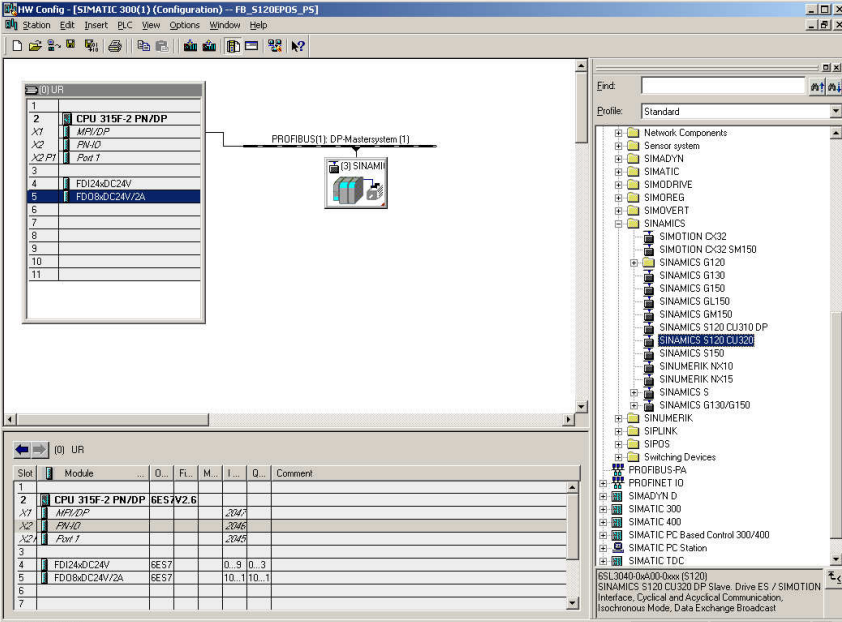
Description	Note
<p>Configuring the F-CPU</p> <p>In the Properties window of the F-CPU, under the Protection tab, activate access protection for the F-CPU and protect using a password.</p> <p>Activate the safety program ("CPU contains safety program").</p>	
<p>Configuring the F-DI module.</p> <p>Configure the PROFIsafe address using DIL switches.</p>	
<p>Configuring the F-DI module.</p> <p>Configuring F-DI 0 (channels 0, 12)</p>	


Copyright © Siemens AG 2009 All rights reserved
36813720_mc_fe_1_009_v11_en

Description	Note
<p>Configuring the F-DI module.</p> <p>Configuring F-DI 1 (channels 1, 13)</p> <p>Configuring F-DI 2 (channels 2, 14)</p> <p>Configuring F-DI 3 (channels 3, 15)</p> <p>Configuring F-DI 5 (channels 5, 17)</p>	
<p>Configuring the F-DO module.</p> <p>Configure the PROFIsafe address using DIL switches.</p>	

Copyright © Siemens AG 2009 All rights reserved
36813720_mc_fe_1_009_v11_en

Copyright © Siemens AG 2009 All rights reserved
36813720_mc_fe_i_009_v11_en

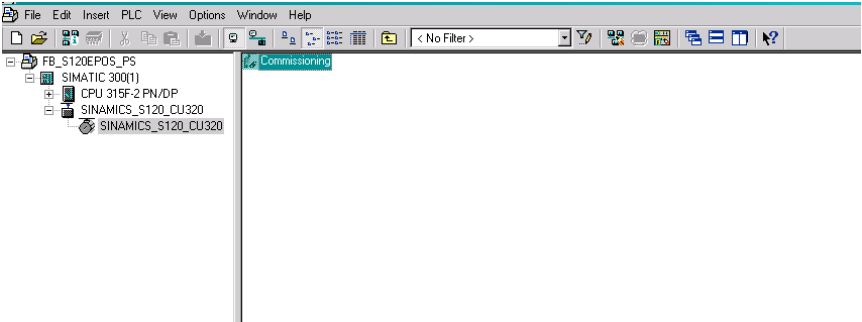


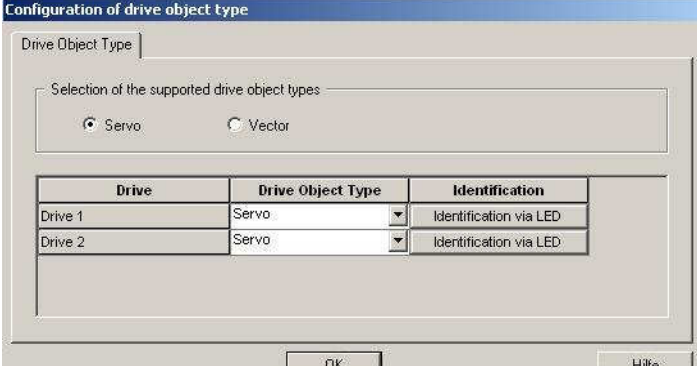
Description	Note
<p>Configuring the F-DO module.</p> <p>Configuring F-DO 7 (Signal lamp)</p>	
<p>Insert SINAMICS S120 CU320 on PROFIBUS DP</p> <p>Set PROFIBUS address 3</p> <p>Select device version 2.5</p>	

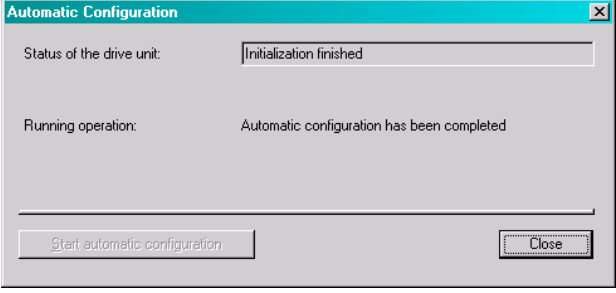

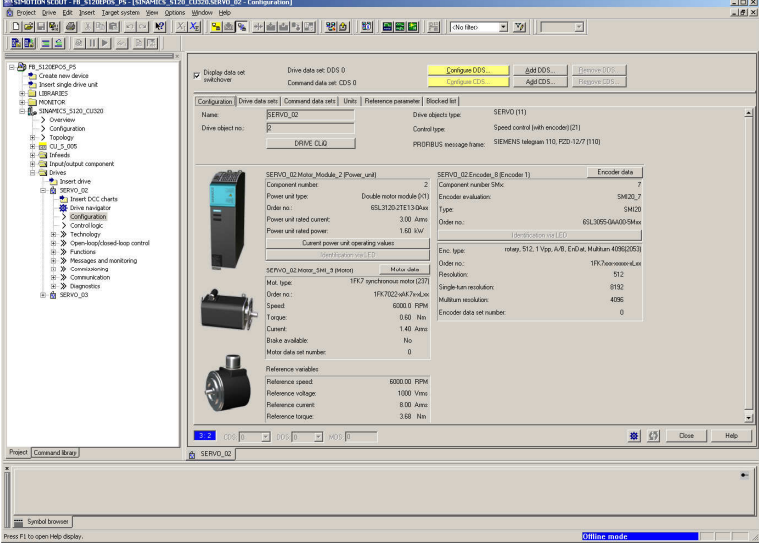
Description	Note
Save and compile HW Config Download HW Config to the F-CPU	

6.3 SINAMICS parameter assignment

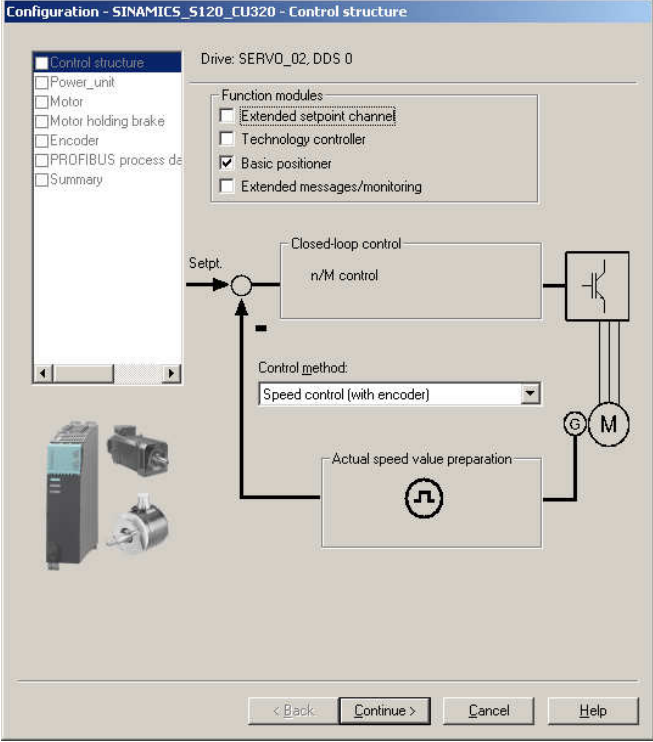
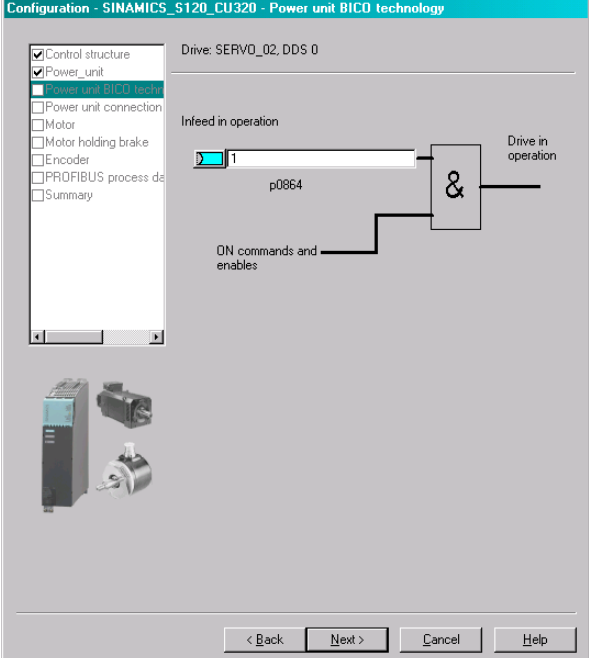
First of all, the existing hardware in the drive system must be commissioned and the desired motion functions set up.

Commissioning the hardware

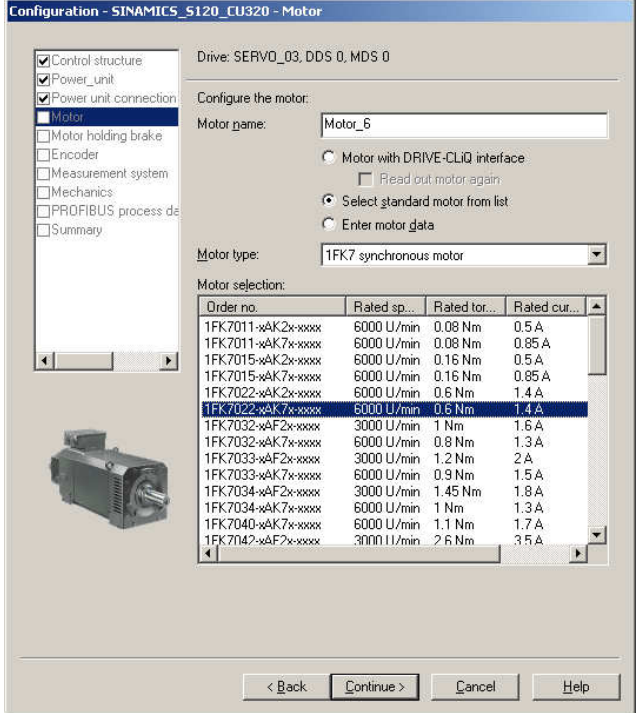
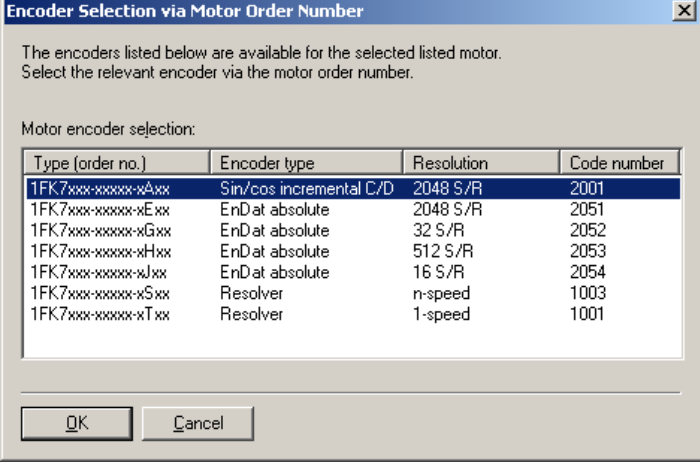
Description	Note									
Double-click on Commissioning to open the STARTER program.										
Go online.										
Carry out automatic first commissioning for the drive line-up.										
Select "Servo" as drive object type.	 <table border="1" data-bbox="596 1742 1153 1823"> <thead> <tr> <th>Drive</th> <th>Drive Object Type</th> <th>Identification</th> </tr> </thead> <tbody> <tr> <td>Drive 1</td> <td>Servo</td> <td>Identification via LED</td> </tr> <tr> <td>Drive 2</td> <td>Servo</td> <td>Identification via LED</td> </tr> </tbody> </table>	Drive	Drive Object Type	Identification	Drive 1	Servo	Identification via LED	Drive 2	Servo	Identification via LED
Drive	Drive Object Type	Identification								
Drive 1	Servo	Identification via LED								
Drive 2	Servo	Identification via LED								

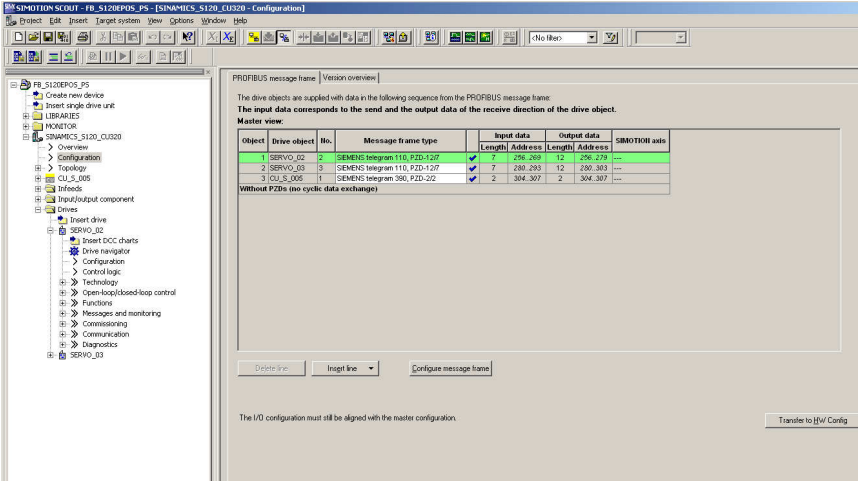
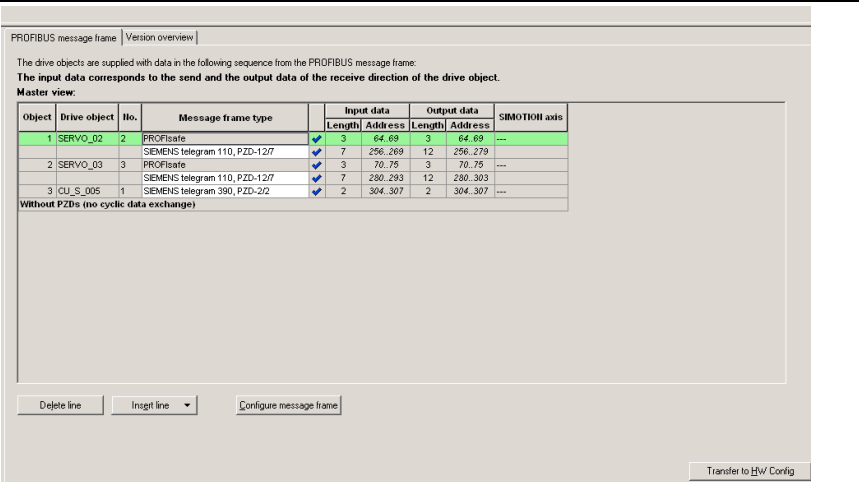
Description	Note
<p>Complete automatic configuration.</p>	
<p>Go offline and "Save and Compile"</p>	
<p>Post configuration, both drives</p> <p>In the Project Navigator for drive 1 (SERVO_02), open the Configuration window.</p> <p>"Configure DDS" starts the navigated post configuration.</p> <p>Note: In the following, only those screen forms are described in which a change is required.</p>	

Copyright © Siemens AG 2009 All rights reserved
36813720_mc_fe_1_009_v11_en

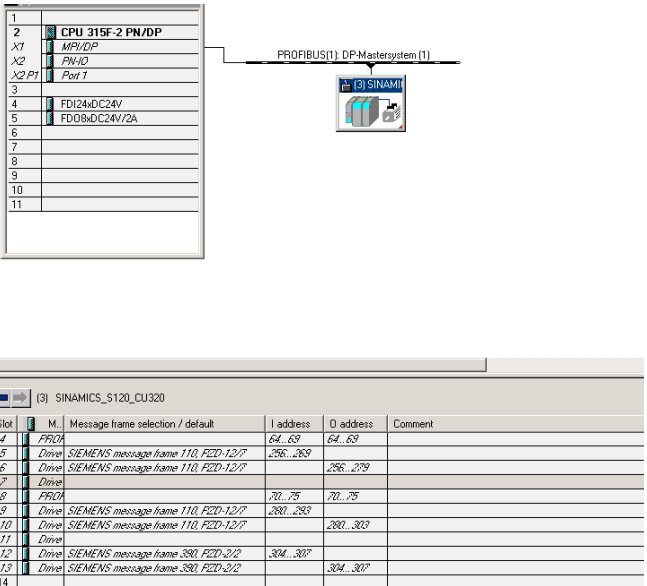


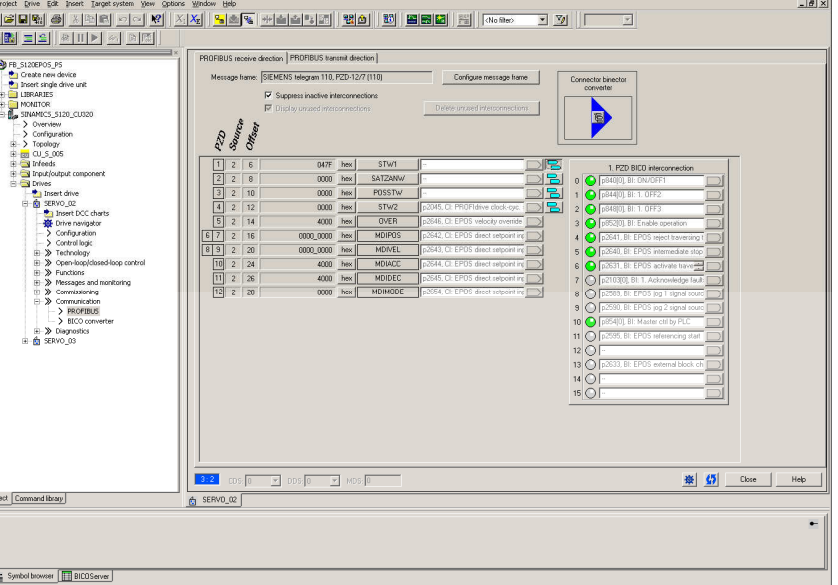
Description	Note
<p>Post configuration, both drives</p> <p>Activate "Basic positioner" as the control structure.</p>	
<p>Post configuration, both drives</p> <p>A signal for "Infeed in operation" (p0864) must be configured. Here, fixed binector 1 is used in the example.</p>	

Copyright © Siemens AG, 2009. All rights reserved. 36813720_mc_fe_i_009_v11_en

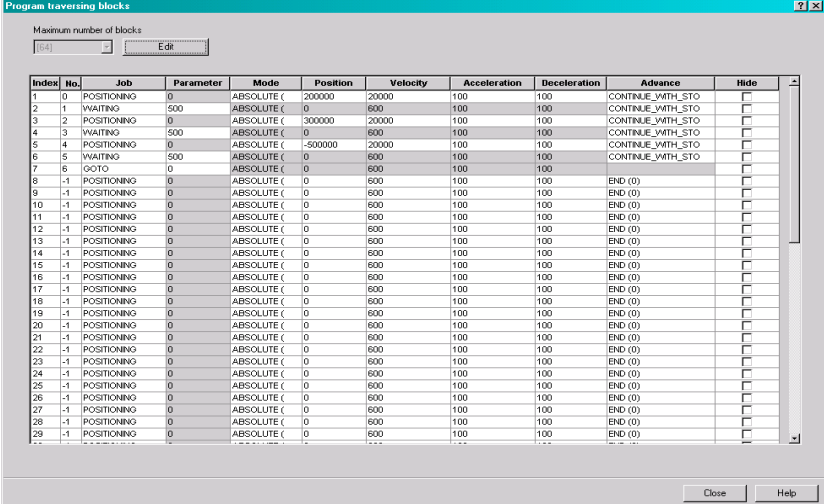
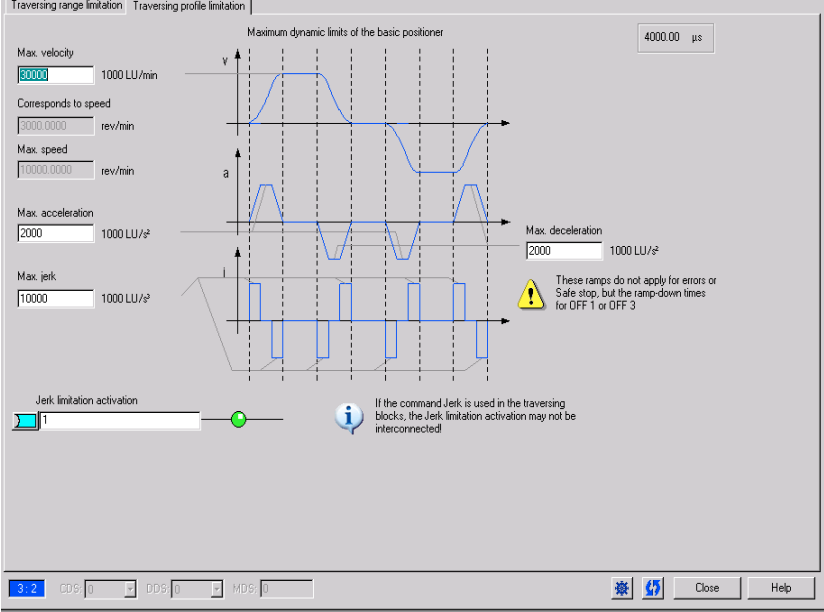



Description	Note																																
<p>Post configuration, drive 2</p> <p>The second drive does not have a Drive-CLiQ encoder; the motor must be manually selected.</p> <p>A 1FK7022 - 5AK71 - 1AG0 motor is used in the example.</p>																																	
<p>Post configuration, drive 2</p> <p>Just like the motor, the encoder must also be manually selected. This is also implemented using the type number (order no.).</p>	 <table border="1" data-bbox="676 1256 1337 1464"> <thead> <tr> <th>Type (order no.)</th> <th>Encoder type</th> <th>Resolution</th> <th>Code number</th> </tr> </thead> <tbody> <tr> <td>1FK7xxx-xxxxx-xAxx</td> <td>Sin/cos incremental C/D</td> <td>2048 S/R</td> <td>2001</td> </tr> <tr> <td>1FK7xxx-xxxxx-xExx</td> <td>EnDat absolute</td> <td>2048 S/R</td> <td>2051</td> </tr> <tr> <td>1FK7xxx-xxxxx-xGxx</td> <td>EnDat absolute</td> <td>32 S/R</td> <td>2052</td> </tr> <tr> <td>1FK7xxx-xxxxx-xHxx</td> <td>EnDat absolute</td> <td>512 S/R</td> <td>2053</td> </tr> <tr> <td>1FK7xxx-xxxxx-xJxx</td> <td>EnDat absolute</td> <td>16 S/R</td> <td>2054</td> </tr> <tr> <td>1FK7xxx-xxxxx-xSxx</td> <td>Resolver</td> <td>n-speed</td> <td>1003</td> </tr> <tr> <td>1FK7xxx-xxxxx-xTxx</td> <td>Resolver</td> <td>1-speed</td> <td>1001</td> </tr> </tbody> </table>	Type (order no.)	Encoder type	Resolution	Code number	1FK7xxx-xxxxx-xAxx	Sin/cos incremental C/D	2048 S/R	2001	1FK7xxx-xxxxx-xExx	EnDat absolute	2048 S/R	2051	1FK7xxx-xxxxx-xGxx	EnDat absolute	32 S/R	2052	1FK7xxx-xxxxx-xHxx	EnDat absolute	512 S/R	2053	1FK7xxx-xxxxx-xJxx	EnDat absolute	16 S/R	2054	1FK7xxx-xxxxx-xSxx	Resolver	n-speed	1003	1FK7xxx-xxxxx-xTxx	Resolver	1-speed	1001
Type (order no.)	Encoder type	Resolution	Code number																														
1FK7xxx-xxxxx-xAxx	Sin/cos incremental C/D	2048 S/R	2001																														
1FK7xxx-xxxxx-xExx	EnDat absolute	2048 S/R	2051																														
1FK7xxx-xxxxx-xGxx	EnDat absolute	32 S/R	2052																														
1FK7xxx-xxxxx-xHxx	EnDat absolute	512 S/R	2053																														
1FK7xxx-xxxxx-xJxx	EnDat absolute	16 S/R	2054																														
1FK7xxx-xxxxx-xSxx	Resolver	n-speed	1003																														
1FK7xxx-xxxxx-xTxx	Resolver	1-speed	1001																														

Description	Note																																																						
<p>Since the 5 kW SLM has no DRIVE-CLiQ interfaces, it is not necessary to configure the infeed.</p>	<p>Notice! If a Single Line Module is used for 230V 1AC (included in the training cases), the DC link parameters must be adapted as follows:</p> <p>p0210: 345V p1248[0]: 240V p1244[0]: 401V</p> <p>See also FAQ ID: 27038754 Upgrading/replacing a Motor Module in the SINAMICS S120 training case http://support.automation.siemens.com/WW/view/de/27038754</p>																																																						
<p>Set the OFF3 ramp-down time.</p>	<p>p1135: 0.4s</p>																																																						
<p>Select SIEMENS telegram 110 for both drives. Select SIEMENS telegram 390 on the CU.</p> <p>Then, transfer the configuration to HW Config.</p>	 <table border="1" data-bbox="798 996 1404 1086"> <thead> <tr> <th>Object</th> <th>Drive object</th> <th>No.</th> <th>Message frame type</th> <th>Input data Length</th> <th>Input data Address</th> <th>Output data Length</th> <th>Output data Address</th> <th>SIMOTION axis</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>SERVO_02</td> <td>3</td> <td>SIEMENS telegram 110, PZD-1/2/7</td> <td>7</td> <td>280.293</td> <td>12</td> <td>280.293</td> <td>---</td> </tr> <tr> <td>2</td> <td>SERVO_03</td> <td>3</td> <td>SIEMENS telegram 110, PZD-1/2/7</td> <td>7</td> <td>280.293</td> <td>12</td> <td>280.303</td> <td>---</td> </tr> <tr> <td>3</td> <td>CU_S_005</td> <td>1</td> <td>SIEMENS telegram 390, PZD-2/2</td> <td>2</td> <td>304.307</td> <td>2</td> <td>304.307</td> <td>---</td> </tr> </tbody> </table>	Object	Drive object	No.	Message frame type	Input data Length	Input data Address	Output data Length	Output data Address	SIMOTION axis	1	SERVO_02	3	SIEMENS telegram 110, PZD-1/2/7	7	280.293	12	280.293	---	2	SERVO_03	3	SIEMENS telegram 110, PZD-1/2/7	7	280.293	12	280.303	---	3	CU_S_005	1	SIEMENS telegram 390, PZD-2/2	2	304.307	2	304.307	---																		
Object	Drive object	No.	Message frame type	Input data Length	Input data Address	Output data Length	Output data Address	SIMOTION axis																																															
1	SERVO_02	3	SIEMENS telegram 110, PZD-1/2/7	7	280.293	12	280.293	---																																															
2	SERVO_03	3	SIEMENS telegram 110, PZD-1/2/7	7	280.293	12	280.303	---																																															
3	CU_S_005	1	SIEMENS telegram 390, PZD-2/2	2	304.307	2	304.307	---																																															
<p>Create a PROFIsafe slot for both drives using the "Insert line" and "PROFIsafe" buttons</p>	 <table border="1" data-bbox="574 1467 1404 1579"> <thead> <tr> <th>Object</th> <th>Drive object</th> <th>No.</th> <th>Message frame type</th> <th>Input data Length</th> <th>Input data Address</th> <th>Output data Length</th> <th>Output data Address</th> <th>SIMOTION axis</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>SERVO_02</td> <td>2</td> <td>PROFIsafe</td> <td>3</td> <td>64.69</td> <td>3</td> <td>64.69</td> <td>---</td> </tr> <tr> <td></td> <td></td> <td></td> <td>SIEMENS telegram 110, PZD-1/2/7</td> <td>7</td> <td>280.293</td> <td>12</td> <td>280.293</td> <td>---</td> </tr> <tr> <td>2</td> <td>SERVO_03</td> <td>3</td> <td>PROFIsafe</td> <td>3</td> <td>70.75</td> <td>3</td> <td>70.75</td> <td>---</td> </tr> <tr> <td></td> <td></td> <td></td> <td>SIEMENS telegram 110, PZD-1/2/7</td> <td>7</td> <td>280.293</td> <td>12</td> <td>280.303</td> <td>---</td> </tr> <tr> <td>3</td> <td>CU_S_005</td> <td>1</td> <td>SIEMENS telegram 390, PZD-2/2</td> <td>2</td> <td>304.307</td> <td>2</td> <td>304.307</td> <td>---</td> </tr> </tbody> </table>	Object	Drive object	No.	Message frame type	Input data Length	Input data Address	Output data Length	Output data Address	SIMOTION axis	1	SERVO_02	2	PROFIsafe	3	64.69	3	64.69	---				SIEMENS telegram 110, PZD-1/2/7	7	280.293	12	280.293	---	2	SERVO_03	3	PROFIsafe	3	70.75	3	70.75	---				SIEMENS telegram 110, PZD-1/2/7	7	280.293	12	280.303	---	3	CU_S_005	1	SIEMENS telegram 390, PZD-2/2	2	304.307	2	304.307	---
Object	Drive object	No.	Message frame type	Input data Length	Input data Address	Output data Length	Output data Address	SIMOTION axis																																															
1	SERVO_02	2	PROFIsafe	3	64.69	3	64.69	---																																															
			SIEMENS telegram 110, PZD-1/2/7	7	280.293	12	280.293	---																																															
2	SERVO_03	3	PROFIsafe	3	70.75	3	70.75	---																																															
			SIEMENS telegram 110, PZD-1/2/7	7	280.293	12	280.303	---																																															
3	CU_S_005	1	SIEMENS telegram 390, PZD-2/2	2	304.307	2	304.307	---																																															

Copyright © Siemens AG 2009 All rights reserved
36813720_mc_fe_i_009_v11_en

Description	Note																																																																								
<p>The telegram selected and address specification were entered automatically in HW Config. The specified address can be changed here.</p>	 <table border="1" data-bbox="587 772 1236 952"> <thead> <tr> <th>Slot</th> <th>M.</th> <th>Message frame selection / default</th> <th>I address</th> <th>Q address</th> <th>Comment</th> </tr> </thead> <tbody> <tr> <td>4</td> <td>FFD0</td> <td></td> <td>64...69</td> <td>64...69</td> <td></td> </tr> <tr> <td>5</td> <td>Drive</td> <td>SIEMENS message frame 110, FZD-12/P</td> <td>296...299</td> <td></td> <td></td> </tr> <tr> <td>6</td> <td>Drive</td> <td>SIEMENS message frame 110, FZD-12/P</td> <td>296...299</td> <td></td> <td></td> </tr> <tr> <td>7</td> <td>Drive</td> <td></td> <td></td> <td></td> <td></td> </tr> <tr> <td>8</td> <td>FFD0</td> <td></td> <td>70...75</td> <td>70...75</td> <td></td> </tr> <tr> <td>9</td> <td>Drive</td> <td>SIEMENS message frame 110, FZD-12/P</td> <td>280...283</td> <td></td> <td></td> </tr> <tr> <td>10</td> <td>Drive</td> <td>SIEMENS message frame 110, FZD-12/P</td> <td>280...303</td> <td></td> <td></td> </tr> <tr> <td>11</td> <td>Drive</td> <td></td> <td></td> <td></td> <td></td> </tr> <tr> <td>12</td> <td>Drive</td> <td>SIEMENS message frame 380, FZD-3/2</td> <td>304...307</td> <td></td> <td></td> </tr> <tr> <td>13</td> <td>Drive</td> <td>SIEMENS message frame 380, FZD-3/2</td> <td>304...307</td> <td></td> <td></td> </tr> <tr> <td>14</td> <td></td> <td></td> <td></td> <td></td> <td></td> </tr> </tbody> </table>	Slot	M.	Message frame selection / default	I address	Q address	Comment	4	FFD0		64...69	64...69		5	Drive	SIEMENS message frame 110, FZD-12/P	296...299			6	Drive	SIEMENS message frame 110, FZD-12/P	296...299			7	Drive					8	FFD0		70...75	70...75		9	Drive	SIEMENS message frame 110, FZD-12/P	280...283			10	Drive	SIEMENS message frame 110, FZD-12/P	280...303			11	Drive					12	Drive	SIEMENS message frame 380, FZD-3/2	304...307			13	Drive	SIEMENS message frame 380, FZD-3/2	304...307			14					
Slot	M.	Message frame selection / default	I address	Q address	Comment																																																																				
4	FFD0		64...69	64...69																																																																					
5	Drive	SIEMENS message frame 110, FZD-12/P	296...299																																																																						
6	Drive	SIEMENS message frame 110, FZD-12/P	296...299																																																																						
7	Drive																																																																								
8	FFD0		70...75	70...75																																																																					
9	Drive	SIEMENS message frame 110, FZD-12/P	280...283																																																																						
10	Drive	SIEMENS message frame 110, FZD-12/P	280...303																																																																						
11	Drive																																																																								
12	Drive	SIEMENS message frame 380, FZD-3/2	304...307																																																																						
13	Drive	SIEMENS message frame 380, FZD-3/2	304...307																																																																						
14																																																																									
<p>Save and compile the HW configuration.</p>																																																																									
<p>Then, download the HW configuration to the target system.</p>																																																																									
<p>By selecting standard telegrams, all the interconnections required for the example were created automatically.</p>	 <table border="1" data-bbox="798 1377 1141 1713"> <thead> <tr> <th>Source</th> <th>Destination</th> <th>Address</th> <th>Length</th> <th>Function</th> <th>Comment</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>2</td> <td>6</td> <td>04F</td> <td>hex</td> <td>STW1</td> </tr> <tr> <td>2</td> <td>8</td> <td>000</td> <td>hex</td> <td>SATZANN</td> <td></td> </tr> <tr> <td>3</td> <td>10</td> <td>000</td> <td>hex</td> <td>POSSTw</td> <td></td> </tr> <tr> <td>4</td> <td>12</td> <td>000</td> <td>hex</td> <td>STW2</td> <td>p340: CI PROFdrive clock-cyc</td> </tr> <tr> <td>5</td> <td>14</td> <td>400</td> <td>hex</td> <td>OVER</td> <td>p340: CI EPDS watchdog event</td> </tr> <tr> <td>6</td> <td>16</td> <td>000_000</td> <td>hex</td> <td>MDPOS</td> <td>p342: CI EPDS direct output v1</td> </tr> <tr> <td>7</td> <td>18</td> <td>000_000</td> <td>hex</td> <td>MDVEL</td> <td>p343: CI EPDS direct output v1</td> </tr> <tr> <td>8</td> <td>20</td> <td>000_000</td> <td>hex</td> <td>MDACC</td> <td>p344: CI EPDS direct output v1</td> </tr> <tr> <td>10</td> <td>24</td> <td>400</td> <td>hex</td> <td>MDDEC</td> <td>p345: CI EPDS direct output v1</td> </tr> <tr> <td>11</td> <td>26</td> <td>400</td> <td>hex</td> <td>MDDEC</td> <td>p345: CI EPDS direct output v1</td> </tr> <tr> <td>12</td> <td>28</td> <td>000</td> <td>hex</td> <td>MDINDEC</td> <td>p346: CI EPDS direct output v1</td> </tr> </tbody> </table>	Source	Destination	Address	Length	Function	Comment	1	2	6	04F	hex	STW1	2	8	000	hex	SATZANN		3	10	000	hex	POSSTw		4	12	000	hex	STW2	p340: CI PROFdrive clock-cyc	5	14	400	hex	OVER	p340: CI EPDS watchdog event	6	16	000_000	hex	MDPOS	p342: CI EPDS direct output v1	7	18	000_000	hex	MDVEL	p343: CI EPDS direct output v1	8	20	000_000	hex	MDACC	p344: CI EPDS direct output v1	10	24	400	hex	MDDEC	p345: CI EPDS direct output v1	11	26	400	hex	MDDEC	p345: CI EPDS direct output v1	12	28	000	hex	MDINDEC	p346: CI EPDS direct output v1
Source	Destination	Address	Length	Function	Comment																																																																				
1	2	6	04F	hex	STW1																																																																				
2	8	000	hex	SATZANN																																																																					
3	10	000	hex	POSSTw																																																																					
4	12	000	hex	STW2	p340: CI PROFdrive clock-cyc																																																																				
5	14	400	hex	OVER	p340: CI EPDS watchdog event																																																																				
6	16	000_000	hex	MDPOS	p342: CI EPDS direct output v1																																																																				
7	18	000_000	hex	MDVEL	p343: CI EPDS direct output v1																																																																				
8	20	000_000	hex	MDACC	p344: CI EPDS direct output v1																																																																				
10	24	400	hex	MDDEC	p345: CI EPDS direct output v1																																																																				
11	26	400	hex	MDDEC	p345: CI EPDS direct output v1																																																																				
12	28	000	hex	MDINDEC	p346: CI EPDS direct output v1																																																																				


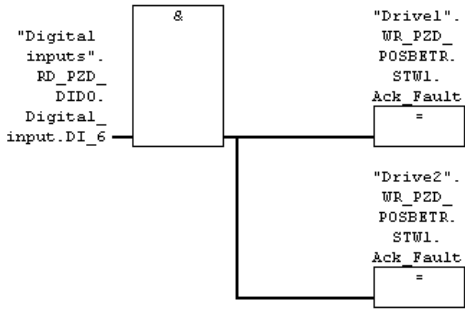
Copyright © Siemens AG 2009 All rights reserved
36813720_mc_fe_i_009_v11_en

Description	Note
<p>Program the traversing blocks for both axes. You can also deviate from this example and use other EPOS functions, such as JOG and MDI.</p>	
<p>Adapt the traversing profile limits for both drives. Set the maximum acceleration and deceleration to 2000 and the maximum jerk to 10000. Activate the jerk limitation.</p>	
<p>Save the project.</p>	
<p>Go online.</p>	
<p>Download the project to the target device and copy RAM to ROM.</p>	

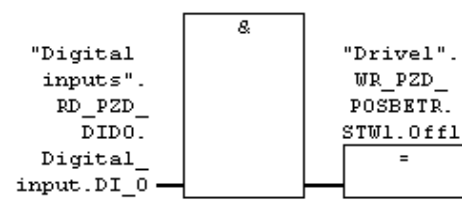
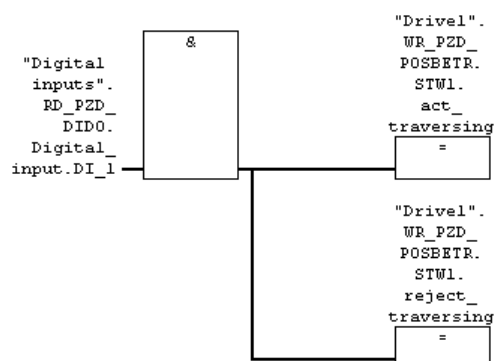
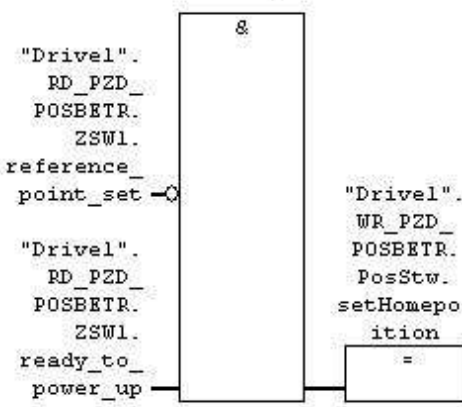
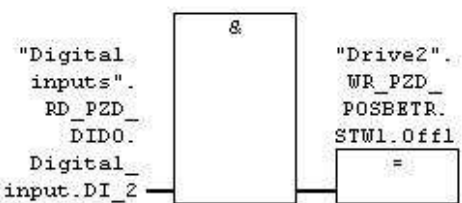
Copyright © Siemens AG 2009 All rights reserved 36813720_mc_fe_i_009_v11_en

6.4 SIMATIC – Setting the standard program

The following programming must be carried out in the standard program of the F-CPU.

Description	Note
<p>OB1:NW1 Call up function FC2. FC2 is the user program in this case.</p>	<pre>OB1 : "Main Program Sweep (Cycle)" Network 1: Call FC 2 CALL FC 2</pre>
<p>Then save the block OB1 and load it to the target system.</p>	
<p>FC2:NW1, NW2 and NW3 Write the input data of the standard telegrams to the associated data blocks. SFC14 is used for this purpose.</p>	<pre>FC2 : Drivecontrolling Network 1: Read Drive 1 CALL "DPRD_DAT" LADDR :=W#16#100 RET_VAL:="Drive1".RetVall RECORD :="Drive1".RD_PZD_POSBETR Network 2: Read Drive 2 CALL "DPRD_DAT" LADDR :=W#16#118 RET_VAL:="Drive2".RetVall RECORD :="Drive2".RD_PZD_POSBETR Network 3: Read digital I/O CALL "DPRD_DAT" LADDR :=W#16#130 RET_VAL:="Digital inputs".RetVall RECORD :="Digital inputs".RD_PZD_DIDO</pre>
<p>FC2:NW4 Acknowledge drive fault.</p>	<pre>Network 4: Reset FaultBuffer</pre> 

Copyright © Siemens AG 2009 All rights reserved
36813720_mc_fe_i_009_v11_en

Description	Note
<p>FC2:NW5 Drive enable, drive 1</p>	<p>Network 5 : OFF1</p> 
<p>FC2:NW6 Start traversing blocks for drive 1</p>	<p>Network 6 : Activate Traversing Task</p> 
<p>FC2:NW7 Automatic setting of home position for drive 1. In the example, the home position is always set when the drive is ready to power up and the home position has not yet been set.</p>	<p>Netzwerk 7 : set Home position</p> 
<p>FC2:NW8 Drive enable, drive 2</p>	<p>Netzwerk 8 : OFF1</p> 

Copyright © Siemens AG 2009 All rights reserved
36813720_mc_fe_i_009_v11_en

Description	Note
<p>FC2:NW9 Start traversing blocks for drive 2</p>	<p>Netzwerk 9 : Activate Traversing Task</p>
<p>FC2:NW10 Interrupt traversing blocks for drive 2 with intermediate stop when the protective door is opened. M0.1 stands for deselection from the safety program.</p>	<p>Netzwerk 10 : operating condition intermediate stop</p>
<p>FC2:NW11 Automatic setting of home position for drive 2. In the example, the home position is always set when the drive is ready to power up and the home position has not yet been set.</p>	<p>Netzwerk 11 : set Home position</p>

Copyright © Siemens AG 2009 All rights reserved
36813720_mc_fe_i_009_v11_en





Description	Note
<p>FC2:NW12, NW13 and NW14</p> <p>Write the output data of the standard telegrams from the associated data blocks. SFC15 is used for this purpose.</p>	<pre> Netzwerk 12 : Write Drive 1 CALL "DPWR_DAT" LADDR :=W#16#100 RECORD :="Drive1".WR_PZD_POSBETR RET_VAL:="Drive1".RetVal2 Netzwerk 13 : Write Drive 2 CALL "DPWR_DAT" LADDR :=W#16#118 RECORD :="Drive2".WR_PZD_POSBETR RET_VAL:="Drive2".RetVal2 Netzwerk 14 : Write digital I/O CALL "DPWR_DAT" LADDR :=W#16#130 RECORD :="Digital inputs".WR_PZD_DIDO RET_VAL:="Digital inputs".RetVal2 </pre>
<p>Then save the block FC and load it to the target system.</p>	 + 
<p>Then download data blocks DB100, DB101 and DB102 These data blocks correspond to standard telegrams 110 and 390.</p>	 + 

Table of symbols used:

Symbol	Address
"Digital inputs".WR_PZD_DIDO	DB102.DBX0.0
"Digital inputs".RD_PZD_DIDO.Digital_input.DI_0	DB102.DBX6.0

Symbol	Address
"Digital inputs".RD_PZD_DIDO.Digital_input.DI_1	DB102.DBX6.1
"Digital inputs".RD_PZD_DIDO.Digital_input.DI_2	DB102.DBX6.2
"Digital inputs".RD_PZD_DIDO.Digital_input.DI_3	DB102.DBX6.3
"Digital inputs".RD_PZD_DIDO.Digital_input.DI_6	DB102.DBX6.6
"Digital inputs".RD_PZD_DIDO	DB102.DBX4.0
"Digital inputs".RetVal1	DB102.DBW8
"Digital inputs".RetVal2	DB102.DBW10
"Drive1".WR_PZD_POSBETR	DB100.DBX0.0
"Drive1".WR_PZD_POSBETR.STW1.Off1	DB100.DBX1.0
"Drive1".WR_PZD_POSBETR.STW1.reject_traversing	DB100.DBX1.4
"Drive1".WR_PZD_POSBETR.STW1.act_traversing	DB100.DBX1.6
"Drive1".WR_PZD_POSBETR.STW1.Ack_Fault	DB100.DBX1.7
"Drive1".WR_PZD_POSBETR.PosStw.setHomeposition	DB100.DBX5.1
"Drive1".RD_PZD_POSBETR	DB100.DBX24.0
"Drive1".RD_PZD_POSBETR.ZSW1.reference_point_set	DB100.DBX24.3
"Drive1".RD_PZD_POSBETR.ZSW1.ready_to_power_up	DB100.DBX25.0
"Drive1".RetVal1	DB100.DBW38
"Drive1".RetVal2	DB100.DBW40
"Drive2".WR_PZD_POSBETR	DB101.DBX0.0
"Drive2".WR_PZD_POSBETR.STW1.Off1	DB101.DBX1.0
"Drive2".WR_PZD_POSBETR.STW1.reject_traversing	DB101.DBX1.4
"Drive2".WR_PZD_POSBETR.STW1.intermediate_stop	DB101.DBX1.5
"Drive2".WR_PZD_POSBETR.STW1.act_traversing	DB101.DBX1.6
"Drive2".WR_PZD_POSBETR.STW1.Ack_Fault	DB101.DBX1.7
"Drive2".WR_PZD_POSBETR.PosStw.setHomeposition	DB101.DBX5.1
"Drive1".RD_PZD_POSBETR	DB101.DBX24.0
"Drive2".RD_PZD_POSBETR.ZSW1.reference_point_set	DB101.DBX24.3
"Drive2".RD_PZD_POSBETR.ZSW1.ready_to_power_up	DB101.DBX25.0
"Drive2".RetVal1	DB101.DBW38
"Drive2".RetVal2	DB101.DBW40

6.5 Programming the fail-safe controller

In this example, the safety program in the F-CPU is processed in fail-safe function block FB1. A simplified program sequence has been selected to illustrate how the functions work. Complex safety logic and boundary conditions for creating the safety program are covered in the relevant function examples and in the Distributed Safety manuals.

Caution:

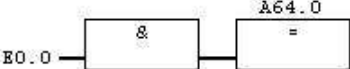
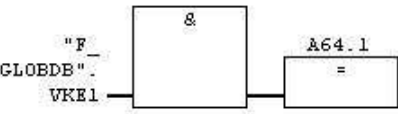

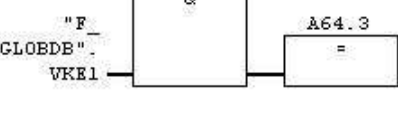
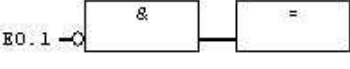
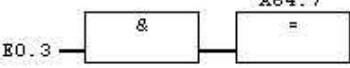
In this form, it is not permissible that the program is used for a real application.

You start with the F-call block. This is required to call the safety program. To do this, a function (in this case, FC1) must be inserted into the block folder using the the F-Call programming language. Cyclic interrupt OB35 is required to cyclically call the safety program.

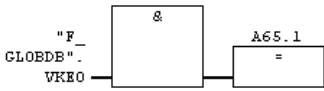
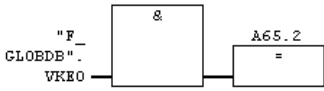
In this example, the actual safety program is executed in a function block (here, FB1), this means that FB 1 must now be inserted using the F-LAD or F-FBD programming language.


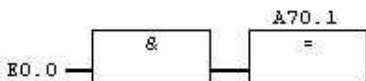

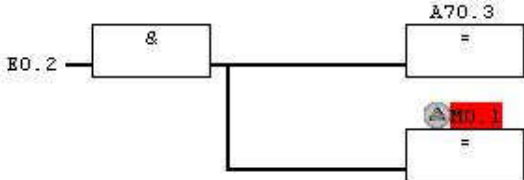

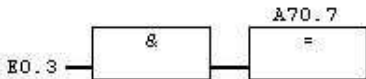
Description	Note
<p>Programming OB35</p> <p>Calling the safety program</p>	
<p>Programming FB1</p> <p>Network 1: Activate automatic acknowledgement</p>	

Copyright © Siemens AG 2009 All rights reserved
36813720_mc_fe_i_009_v11_en

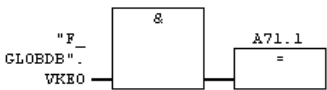


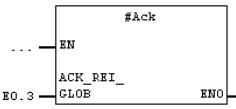

Description	Note
<p>Drive 1: Address 64 corresponds to byte 0 of the PROFIsafe data block.</p> <p>Network 2: -S1 (emergency stop) is interconnected to PROFIsafe STW with STO.</p> <p>Networks 3, 4 and 5: - Fixed deselection of the functions SS1, SS2 and SOS on the PROFIsafe STW.</p> <p>Network 6: -S2 (protective door 1) is interconnected to PROFIsafe STW with SLS.</p> <p>Network 7: -S4 (Acknowledge) is interconnected to PROFIsafe STW with internal event acknowledgement.</p>	<p>Netzwerk 2 : PROFIsafe Drive 1 STO</p>  <p>Netzwerk 3 : PROFIsafe Drive 1 SS1</p>  <p>Netzwerk 4 : PROFIsafe Drive 1 SS2</p>  <p>Netzwerk 5 : PROFIsafe Drive 1 SOS</p>  <p>Netzwerk 6 : PROFIsafe Drive 1 SLS</p>  <p>Netzwerk 7 : PROFIsafe Drive 1 acknowledgement</p> 

Copyright © Siemens AG 2009 All rights reserved
36813720_mc_fe_1_009_v11_en

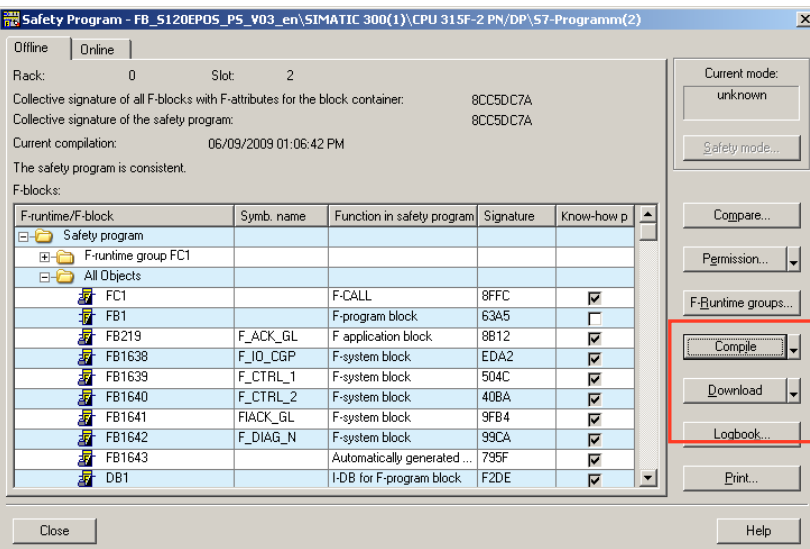
Description	Note
<p>Drive 1: Address 65 corresponds to byte 1 of the PROFIsafe data block.</p> <p>Networks 8 and 9: - Fixed selection of SLS speed level 1 on PROFIsafe STW.</p>	<p>Network 8 : PROFIsafe Drive 1 SLS velocity step Bit 0</p>  <p>Network 9 : PROFIsafe Drive 1 SLS velocity step Bit 1</p> 

Description	Note
<p>Drive 2: Address 70 corresponds to byte 0 of the PROFIsafe data block.</p> <p>Network 10: - Fixed deselection of the STO function on PROFIsafe STW.</p> <p>Network 11: -S1 (emergency stop) is interconnected to PROFIsafe STW with SS1.</p> <p>Network 12: - Fixed deselection of the SS2 function on PROFIsafe STW.</p> <p>Network 13: -S3 (protective door 2) is interconnected to PROFIsafe STW with SOS. Bit memory M0.1 is used to evaluate the request in the standard program.</p> <p>Network 14: - Fixed deselection of the SLS function on PROFIsafe STW.</p> <p>Network 15: -S4 (Acknowledge) is interconnected to PROFIsafe STW with internal event acknowledge.</p>	<p>Netzwerk 10 : PROFIsafe Drive 2 STO</p>  <p>Netzwerk 11 : PROFIsafe Drive 2 SS1</p>  <p>Netzwerk 12 : PROFIsafe Drive 2 SS2</p>  <p>Netzwerk 13 : PROFIsafe Drive 2 SOS</p>  <p>Netzwerk 14 : PROFIsafe Drive 2 SLS</p>  <p>Netzwerk 15 : PROFIsafe Drive 2_acknowledgement</p> 

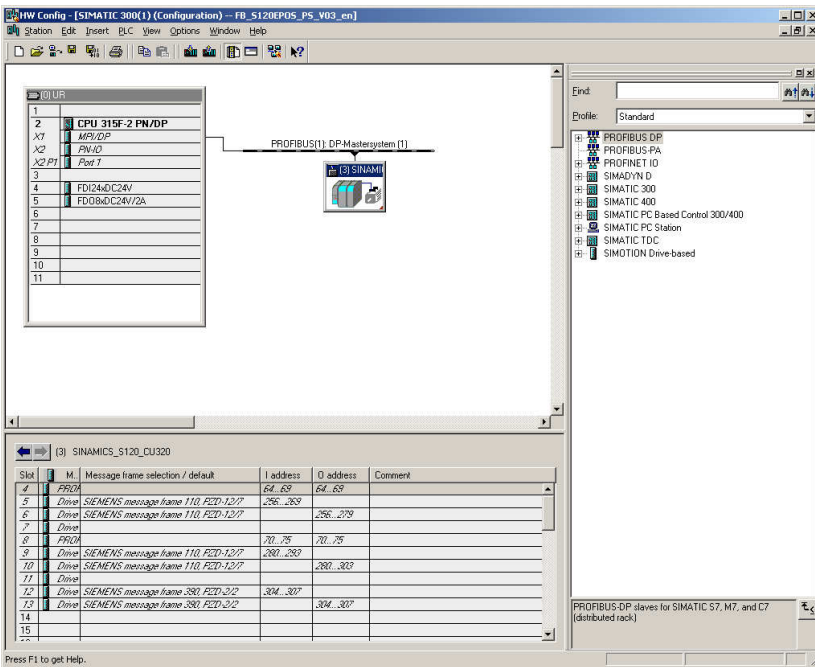
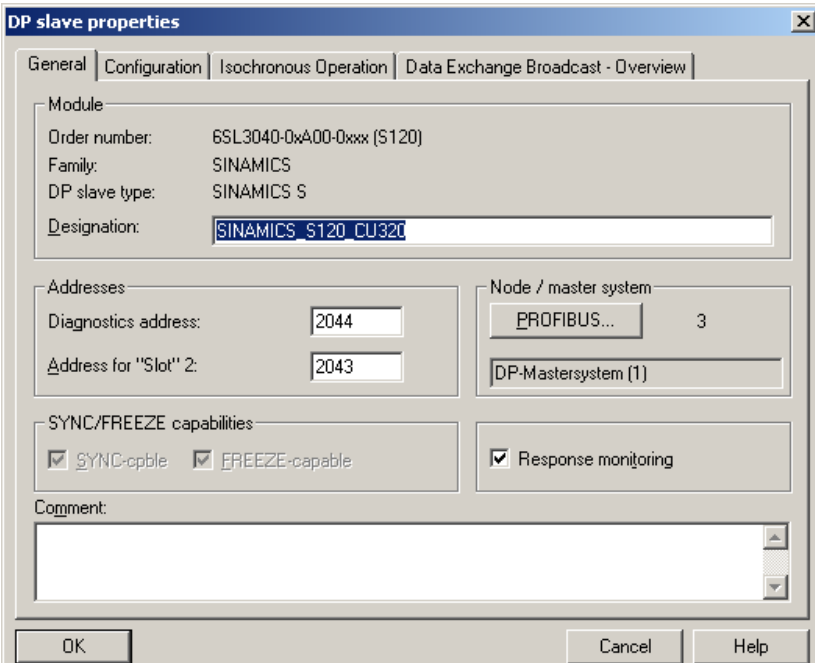
Copyright © Siemens AG 2009 All rights reserved
36813720_mc_fe_i_009_v11_en

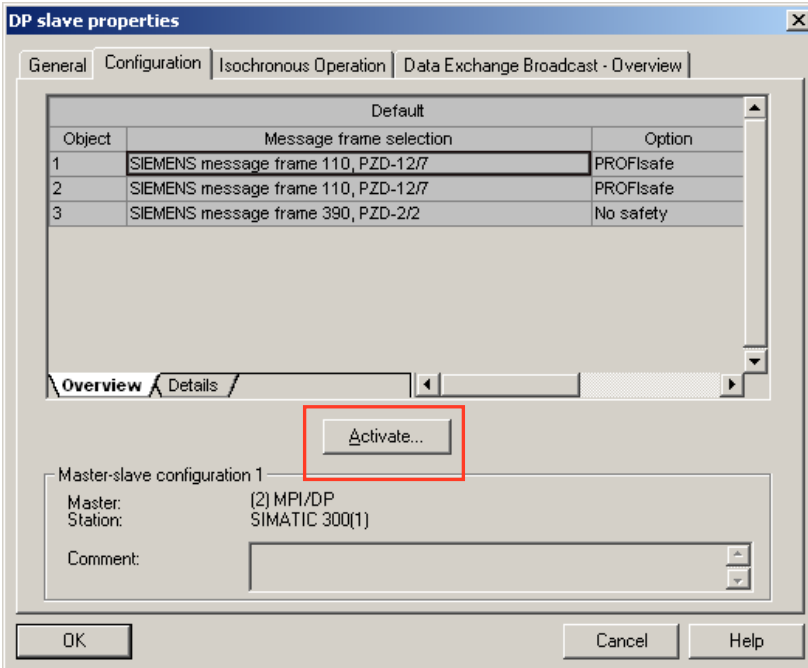
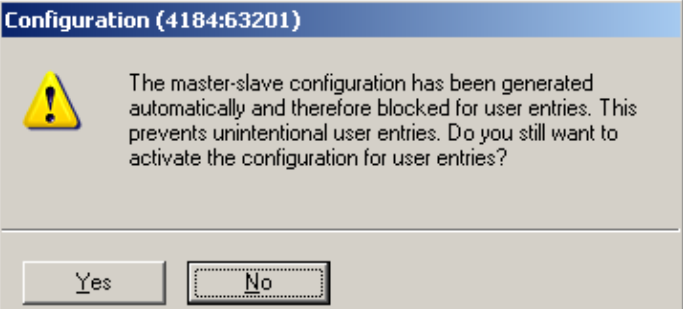
Description	Note
<p>Drive 2: Address 71 corresponds to byte 1 of the PROFIsafe data block.</p> <p>Networks 16 and 17: - Fixed selection of SLS speed level 1 on PROFIsafe STW.</p>	<p>Network 16 : PROFIsafe Drive 2 SLS velocity step Bit 0</p>  <p>Network 17 : PROFIsafe Drive 2 SLS velocity step Bit 1</p> 
<p>Network 18: Switching the signal lamp in S4 for safe standstill detection.</p> <p>Network 19: -S4 is used for reintegration of all modules.</p>	<p>Network 18 : Switching the lamp in switch S4</p>  <p>Network 19 : Reintegration of all f-slaves</p> 
<p>Creating a new F-runtime group</p> <p>Here, the safety program (FB1) is assigned to FC1 and the associated I-DB is defined.</p>	

Copyright © Siemens AG 2009 All rights reserved
36813720_mc_fe_i_009_v11_en

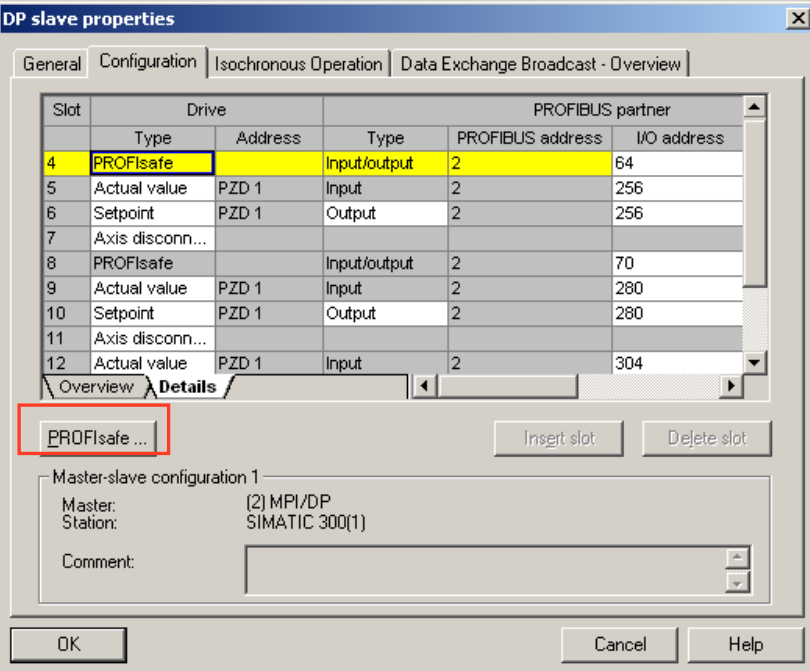
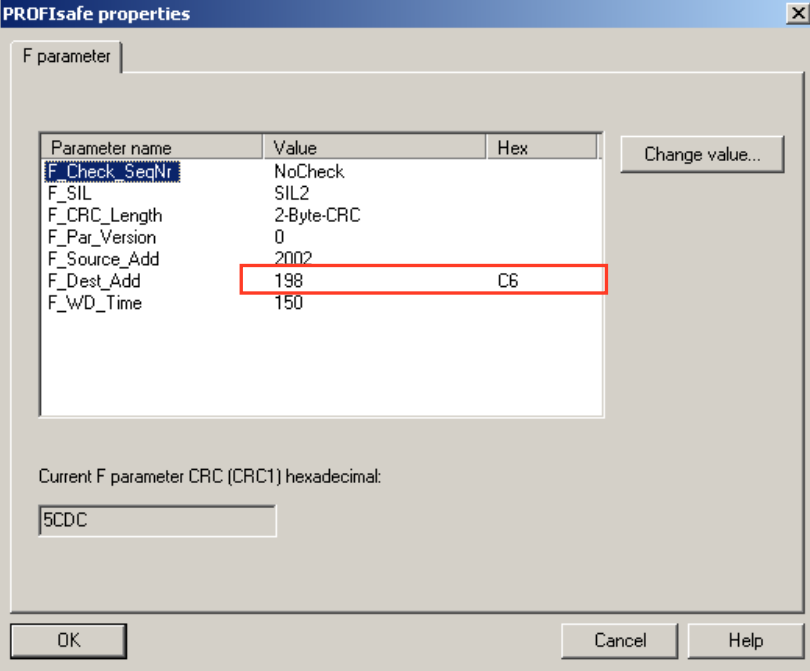
Description	Note
<p>Then, generate the safety program and download to the CPU.</p> <p>In addition, download the standard blocks to the F-CPU.</p>	



6.6 Parameterizing the control options for safety functions (PROFIsafe)

Description	Note																																																																														
<p>Open HW Config</p>	 <table border="1" data-bbox="544 981 1098 1126"> <thead> <tr> <th>Slot</th> <th>M</th> <th>Message frame selection / default</th> <th>I address</th> <th>Q address</th> <th>Comment</th> </tr> </thead> <tbody> <tr> <td>4</td> <td>PROL</td> <td></td> <td>64...67</td> <td>64...67</td> <td></td> </tr> <tr> <td>5</td> <td>Diag</td> <td>SIEMENS message frame 110, FCD-12/1</td> <td>256...269</td> <td>256...269</td> <td></td> </tr> <tr> <td>6</td> <td>Diag</td> <td>SIEMENS message frame 110, FCD-12/1</td> <td>296...299</td> <td></td> <td></td> </tr> <tr> <td>7</td> <td>Diag</td> <td></td> <td></td> <td></td> <td></td> </tr> <tr> <td>8</td> <td>PROL</td> <td></td> <td>70...75</td> <td>70...75</td> <td></td> </tr> <tr> <td>9</td> <td>Diag</td> <td>SIEMENS message frame 110, FCD-12/1</td> <td>280...283</td> <td>280...303</td> <td></td> </tr> <tr> <td>10</td> <td>Diag</td> <td>SIEMENS message frame 110, FCD-12/1</td> <td></td> <td></td> <td></td> </tr> <tr> <td>11</td> <td>Diag</td> <td></td> <td></td> <td></td> <td></td> </tr> <tr> <td>12</td> <td>Diag</td> <td>SIEMENS message frame 380, FCD-2/2</td> <td>304...307</td> <td></td> <td></td> </tr> <tr> <td>13</td> <td>Diag</td> <td>SIEMENS message frame 380, FCD-2/2</td> <td></td> <td>304...307</td> <td></td> </tr> <tr> <td>14</td> <td></td> <td></td> <td></td> <td></td> <td></td> </tr> <tr> <td>15</td> <td></td> <td></td> <td></td> <td></td> <td></td> </tr> </tbody> </table>	Slot	M	Message frame selection / default	I address	Q address	Comment	4	PROL		64...67	64...67		5	Diag	SIEMENS message frame 110, FCD-12/1	256...269	256...269		6	Diag	SIEMENS message frame 110, FCD-12/1	296...299			7	Diag					8	PROL		70...75	70...75		9	Diag	SIEMENS message frame 110, FCD-12/1	280...283	280...303		10	Diag	SIEMENS message frame 110, FCD-12/1				11	Diag					12	Diag	SIEMENS message frame 380, FCD-2/2	304...307			13	Diag	SIEMENS message frame 380, FCD-2/2		304...307		14						15					
Slot	M	Message frame selection / default	I address	Q address	Comment																																																																										
4	PROL		64...67	64...67																																																																											
5	Diag	SIEMENS message frame 110, FCD-12/1	256...269	256...269																																																																											
6	Diag	SIEMENS message frame 110, FCD-12/1	296...299																																																																												
7	Diag																																																																														
8	PROL		70...75	70...75																																																																											
9	Diag	SIEMENS message frame 110, FCD-12/1	280...283	280...303																																																																											
10	Diag	SIEMENS message frame 110, FCD-12/1																																																																													
11	Diag																																																																														
12	Diag	SIEMENS message frame 380, FCD-2/2	304...307																																																																												
13	Diag	SIEMENS message frame 380, FCD-2/2		304...307																																																																											
14																																																																															
15																																																																															
<p>Double-click on SINAMICS to open the DP slave properties.</p>	 <p>DP slave properties</p> <p>General Configuration Isochronous Operation Data Exchange Broadcast - Overview</p> <p>Module</p> <p>Order number: 6SL3040-0xA00-0xxx (S120) Family: SINAMICS DP slave type: SINAMICS S Designation: SINAMICS S120 CU320</p> <p>Addresses</p> <p>Diagnostics address: 2044 Address for "Slot" 2: 2043</p> <p>Node / master system</p> <p>PROFIBUS... 3 DP-Mastersystem (1)</p> <p>SYNC/FREEZE capabilities</p> <p><input checked="" type="checkbox"/> SYNC-capable <input checked="" type="checkbox"/> FREEZE-capable <input checked="" type="checkbox"/> Response monitoring</p> <p>Comment:</p> <p>OK Cancel Help</p>																																																																														


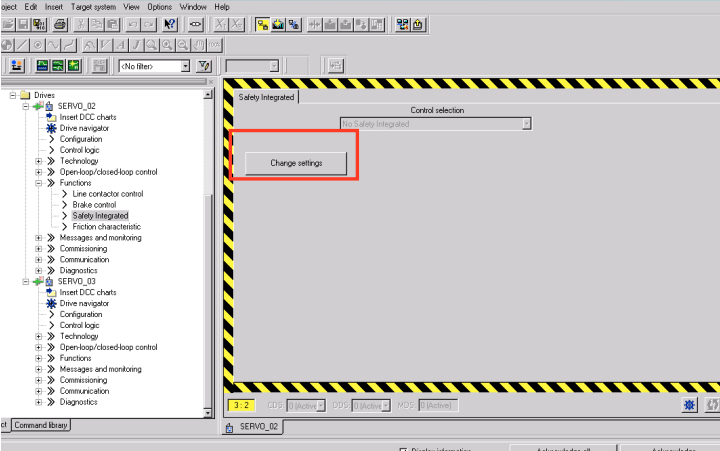
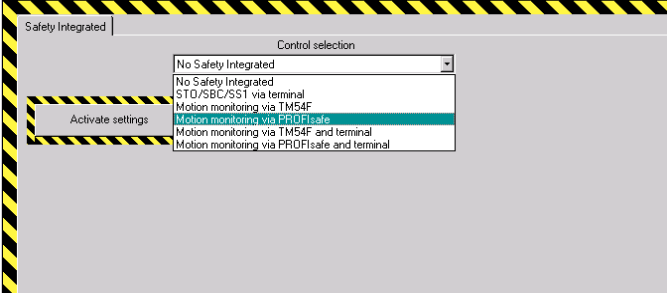

Description	Note
<p>Press the "Activate..." button in the "Configuration" tab.</p>	 <p>The screenshot shows the 'DP slave properties' dialog box with the 'Configuration' tab selected. It contains a table with three rows of message frame selections and an 'Activate...' button highlighted with a red rectangle. Below the table, there are fields for 'Master-slave configuration 1', 'Master: (2) MPI/DP', 'Station: SIMATIC 300(1)', and a 'Comment' field. At the bottom are 'OK', 'Cancel', and 'Help' buttons.</p>
<p>Click on "Yes" to confirm.</p>	 <p>The screenshot shows a warning dialog box titled 'Configuration (4184:63201)'. It features a yellow warning triangle icon and the text: 'The master-slave configuration has been generated automatically and therefore blocked for user entries. This prevents unintentional user entries. Do you still want to activate the configuration for user entries?'. At the bottom, there are 'Yes' and 'No' buttons.</p>

Copyright © Siemens AG 2009 All rights reserved
36813720_mc_fe_i_009_v11_en

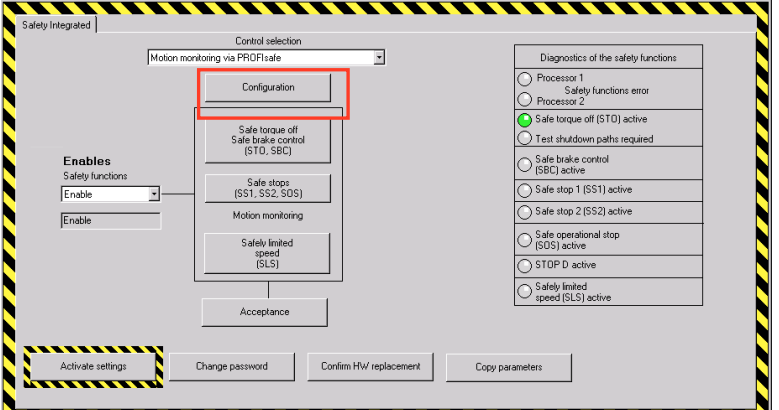
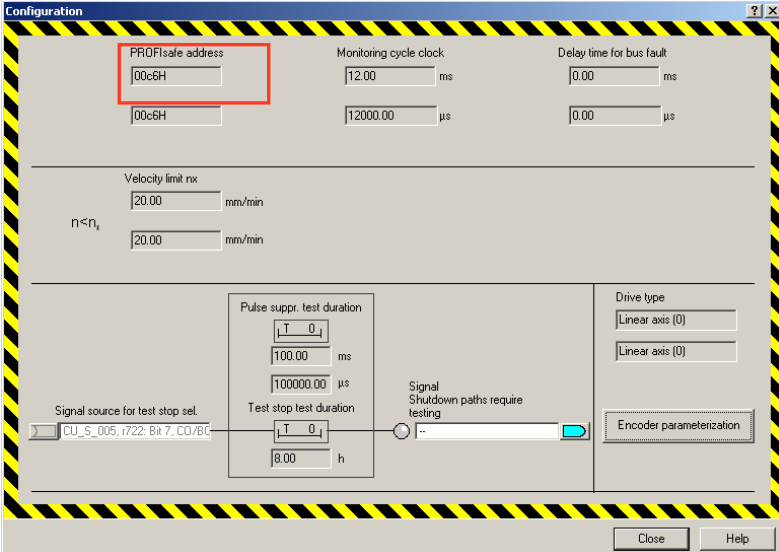
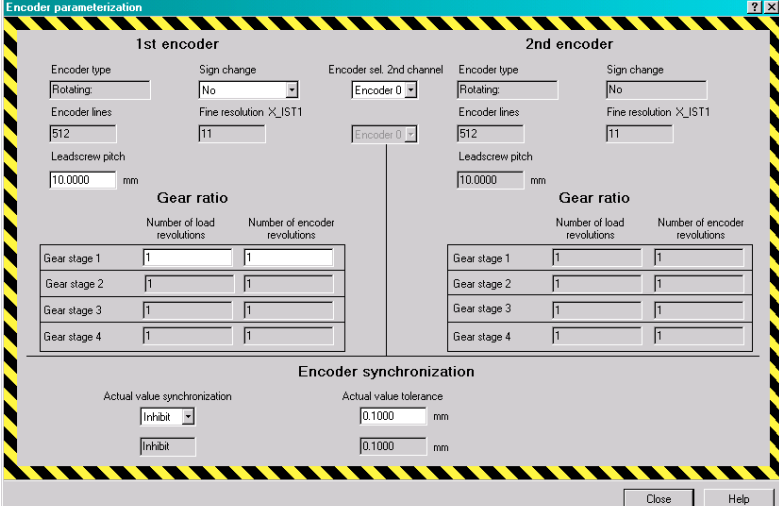
Description	Note																																																																		
<p>Further settings can be made using the "PROFIsafe" button.</p>	 <p>DP slave properties</p> <p>General Configuration Isochronous Operation Data Exchange Broadcast - Overview</p> <table border="1"> <thead> <tr> <th>Slot</th> <th>Drive</th> <th colspan="4">PROFIBUS partner</th> </tr> <tr> <th></th> <th>Type</th> <th>Address</th> <th>Type</th> <th>PROFIBUS address</th> <th>I/O address</th> </tr> </thead> <tbody> <tr> <td>4</td> <td>PROFIsafe</td> <td></td> <td>Input/output</td> <td>2</td> <td>64</td> </tr> <tr> <td>5</td> <td>Actual value</td> <td>PZD 1</td> <td>Input</td> <td>2</td> <td>256</td> </tr> <tr> <td>6</td> <td>Setpoint</td> <td>PZD 1</td> <td>Output</td> <td>2</td> <td>256</td> </tr> <tr> <td>7</td> <td>Axis disconn...</td> <td></td> <td></td> <td></td> <td></td> </tr> <tr> <td>8</td> <td>PROFIsafe</td> <td></td> <td>Input/output</td> <td>2</td> <td>70</td> </tr> <tr> <td>9</td> <td>Actual value</td> <td>PZD 1</td> <td>Input</td> <td>2</td> <td>280</td> </tr> <tr> <td>10</td> <td>Setpoint</td> <td>PZD 1</td> <td>Output</td> <td>2</td> <td>280</td> </tr> <tr> <td>11</td> <td>Axis disconn...</td> <td></td> <td></td> <td></td> <td></td> </tr> <tr> <td>12</td> <td>Actual value</td> <td>PZD 1</td> <td>Input</td> <td>2</td> <td>304</td> </tr> </tbody> </table> <p>Overview Details</p> <p>PROFIsafe ...</p> <p>Master-slave configuration 1</p> <p>Master: (2) MPI/DP Station: SIMATIC 300(1)</p> <p>Comment:</p> <p>OK Cancel Help</p>	Slot	Drive	PROFIBUS partner					Type	Address	Type	PROFIBUS address	I/O address	4	PROFIsafe		Input/output	2	64	5	Actual value	PZD 1	Input	2	256	6	Setpoint	PZD 1	Output	2	256	7	Axis disconn...					8	PROFIsafe		Input/output	2	70	9	Actual value	PZD 1	Input	2	280	10	Setpoint	PZD 1	Output	2	280	11	Axis disconn...					12	Actual value	PZD 1	Input	2	304
Slot	Drive	PROFIBUS partner																																																																	
	Type	Address	Type	PROFIBUS address	I/O address																																																														
4	PROFIsafe		Input/output	2	64																																																														
5	Actual value	PZD 1	Input	2	256																																																														
6	Setpoint	PZD 1	Output	2	256																																																														
7	Axis disconn...																																																																		
8	PROFIsafe		Input/output	2	70																																																														
9	Actual value	PZD 1	Input	2	280																																																														
10	Setpoint	PZD 1	Output	2	280																																																														
11	Axis disconn...																																																																		
12	Actual value	PZD 1	Input	2	304																																																														
<p>Enter the value of F_Dest_Add for drive 1 in hex format in the STARTER. In the example, c6hex for drive 1 and c5hex for drive 2</p> <p>See also Chap.6.7 SINAMICS - Parameterizing the safety functions integrated in the drive</p> <p>Note: The watchdog time (F_WD_Time = 150msec) must match the OB35 cycle. In the example, the value is 100 msec.</p>	 <p>PROFIsafe properties</p> <p>F parameter</p> <table border="1"> <thead> <tr> <th>Parameter name</th> <th>Value</th> <th>Hex</th> <th>Change value...</th> </tr> </thead> <tbody> <tr> <td>F_Check_SeqNr</td> <td>NoCheck</td> <td></td> <td></td> </tr> <tr> <td>F_SIL</td> <td>SIL2</td> <td></td> <td></td> </tr> <tr> <td>F_CRC_Length</td> <td>2-Byte-CRC</td> <td></td> <td></td> </tr> <tr> <td>F_Par_Version</td> <td>0</td> <td></td> <td></td> </tr> <tr> <td>F_Source_Add</td> <td>2002</td> <td></td> <td></td> </tr> <tr> <td>F_Dest_Add</td> <td>198</td> <td>C6</td> <td></td> </tr> <tr> <td>F_WD_Time</td> <td>150</td> <td></td> <td></td> </tr> </tbody> </table> <p>Current F parameter CRC (CRC1) hexadecimal: 5CDC</p> <p>OK Cancel Help</p>	Parameter name	Value	Hex	Change value...	F_Check_SeqNr	NoCheck			F_SIL	SIL2			F_CRC_Length	2-Byte-CRC			F_Par_Version	0			F_Source_Add	2002			F_Dest_Add	198	C6		F_WD_Time	150																																				
Parameter name	Value	Hex	Change value...																																																																
F_Check_SeqNr	NoCheck																																																																		
F_SIL	SIL2																																																																		
F_CRC_Length	2-Byte-CRC																																																																		
F_Par_Version	0																																																																		
F_Source_Add	2002																																																																		
F_Dest_Add	198	C6																																																																	
F_WD_Time	150																																																																		
<p>Just like for drive 1, enter the settings for drive 2.</p>																																																																			

Description	Note
Save and compile the HW configuration.	
Then, download the HW configuration to the target system.	

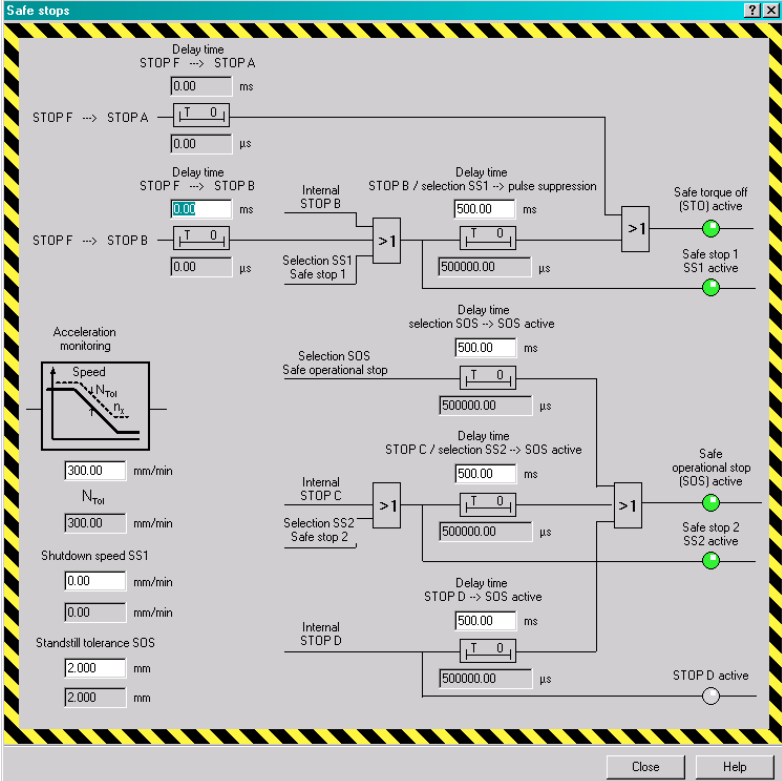
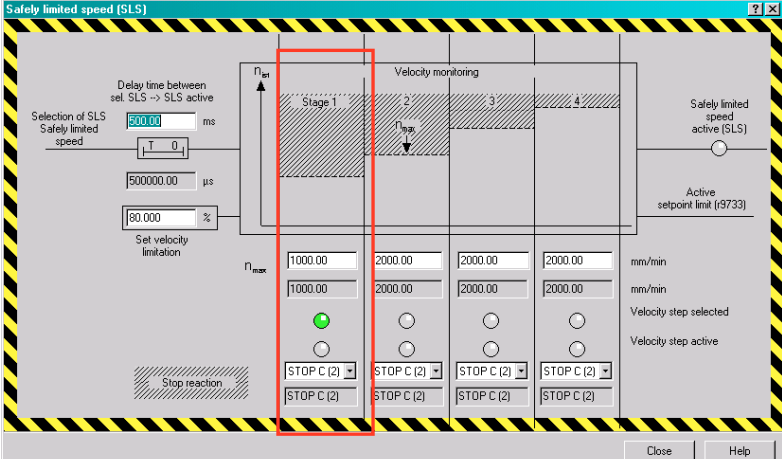
6.7 SINAMICS - Parameterizing the safety functions integrated in the drive

Description	Note
Go online in STARTER.	
<p>Open the "Safety Integrated" window of drive 1/2 (SERVO_02 / SERVO_03) and activate the commissioning mode using "Change settings".</p> <p>The password for the first commissioning is "0".</p>	
Change control selection to "Motion Monitoring via PROFIsafe".	
Confirm message with "OK".	

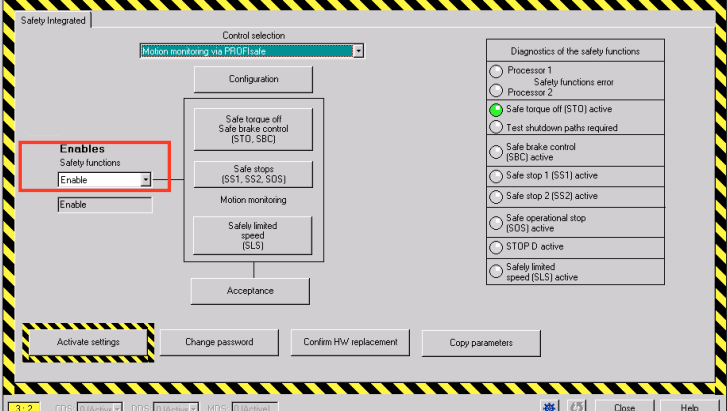
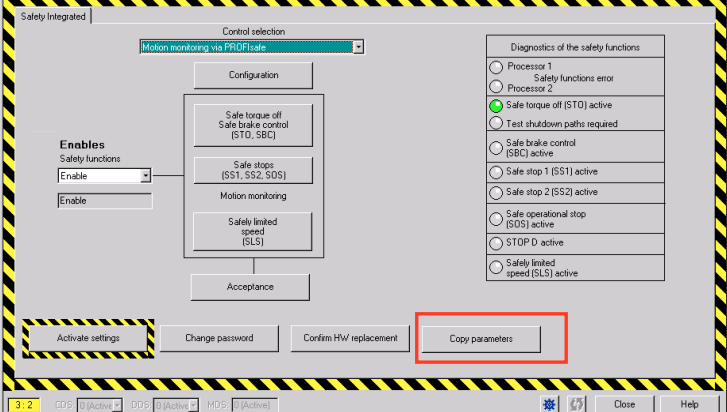

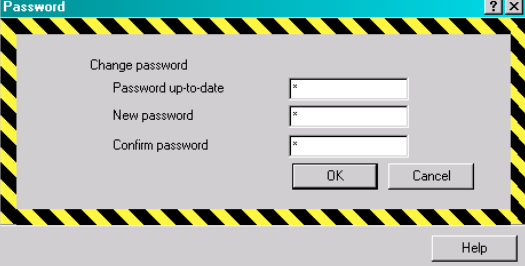

Copyright © Siemens AG, 2009. All rights reserved. 36813720_mc_fe_i_009_v11_en

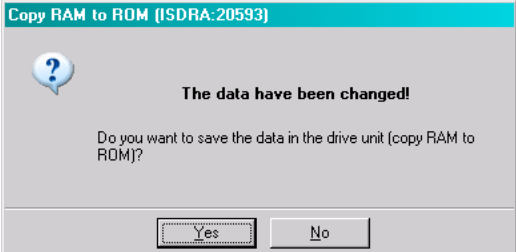

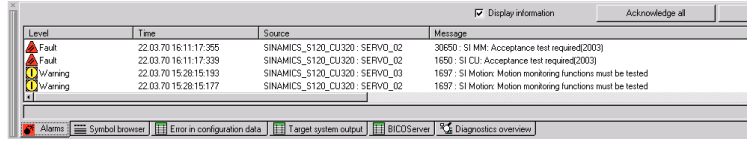


Description	Note
<p>Click on "Configuration".</p>	
<p>The following have to be configured in the example: PROFIsafe address with c6hex (for drive 1) and/or C5hex (for drive 2) Velocity limit (SSM) with 20 mm/min Signal source, test stop with DI7 of SINAMICS.</p>	
<p>In the "Encoder parameterization" window, the encoder data of the drive are entered.</p>	

Copyright © Siemens AG, 2009. All rights reserved. 36813720_mc_fe_i_009_v11_en

Description	Note
<p>Enter the following values for the example in the "Safe stops" screen form:</p> <p>Delay time SS1 -> Pulse suppression = 500msec</p> <p>Delay time selection SOS -> SOS active = 500msec</p> <p>Delay time SS2-> SOS active = 100msec</p> <p>Acceleration monitoring = 500mm/min</p> <p>Shutdown speed SS1 = 0mm/min</p> <p>Standstill tolerance SOS = 2.0mm</p>	
<p>Use the "Safely limited speed (SLS)" screen form to enter the maximum speed (limit speed: speed still permissible when protective door is open). Only Stage 1 is used for velocity monitoring. The stop reaction to be initiated if the limit is exceeded must also be selected. (STOP C - internal SS2)</p> <p>Within the "Delay time between sel. SLS -> SLS active" (p9551'), the drive speed must be lower than the limit n_{max}.</p>	

Copyright © Siemens AG 2009 All rights reserved
36813720_mc_fe_i_009_v11_en

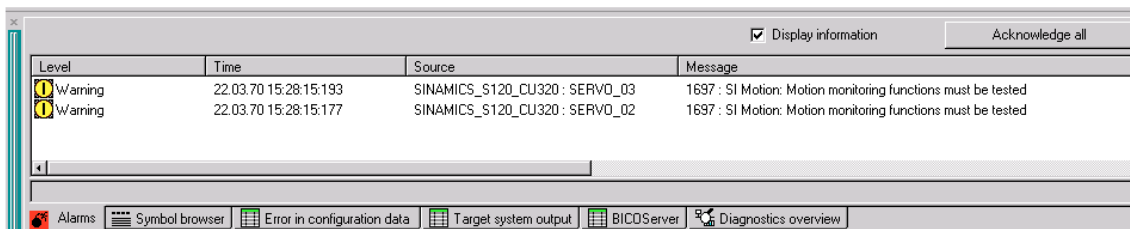
Description	Note
<p>Enable safety functions.</p>	
<p>In order to accept the settings made, click on "Copy parameters".</p>	
<p>Click on "Activate settings".</p>	
<p>When the machine is commissioned for the first time, you are prompted to enter the safety password. In the example, the default password during first commissioning is "0"; the new password is "1".</p>	
<p>Click on "Axis parameters" to save the changes in the drive.</p>	

Description	Note
<p>Confirm message that appears with "Yes". The data is copied from the RAM to the ROM.</p>	
<p>Repeat this procedure for the second drive!</p>	
<p>Post configuration, drive 1 Connect parameter p2594 with parameter r9733. This connection will reduce the maximum speed of the EPOS when SLS is selected.</p>	
<p>Acknowledge the messages for acceptance test; Notice: With a real machine, it is necessary to perform acceptance testing (see section 6.10 Acceptance test for details).</p>	
<p>Now, copy from RAM to ROM (on SINAMICS Integrated).</p>	
<p>Then perform a Power-On reset on the Control Unit.</p>	<p>POWER ON</p>
<p>Go online, download the configuration to the PG and save.</p>	

If you have carried out the Safety commissioning for all drives, you can operate the drives with emergency stop deselected.

The use of the safety functions integrated in the drive is selected and these can be activated or deactivated using the operator control elements at the F-CPU.

Only the following messages should be visible.



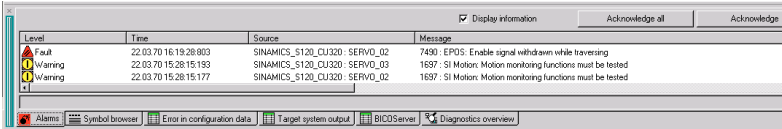
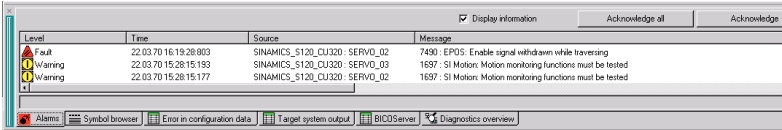
However, these messages do not influence the functionality described above. They only state that a test stop must be performed for the safety

functions in the drives (A1697). These messages are warnings, which means that the drives may be energized and put into motion as soon as configuration of the SIMATIC S7 has been completed.

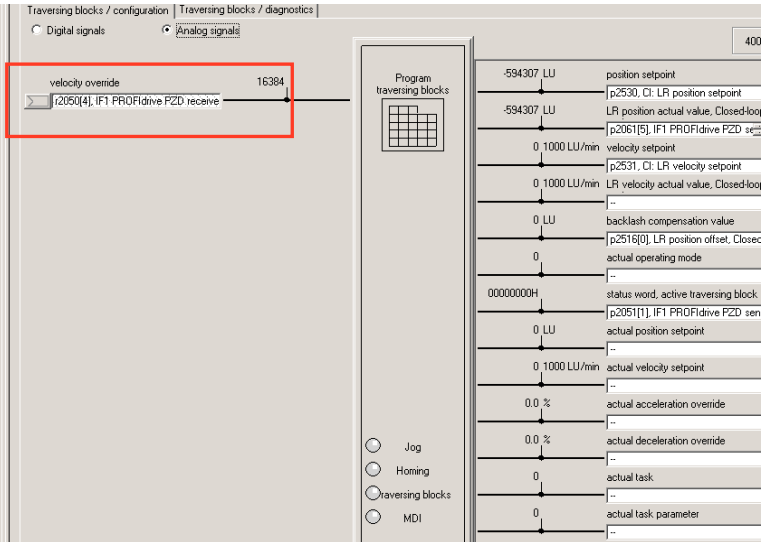
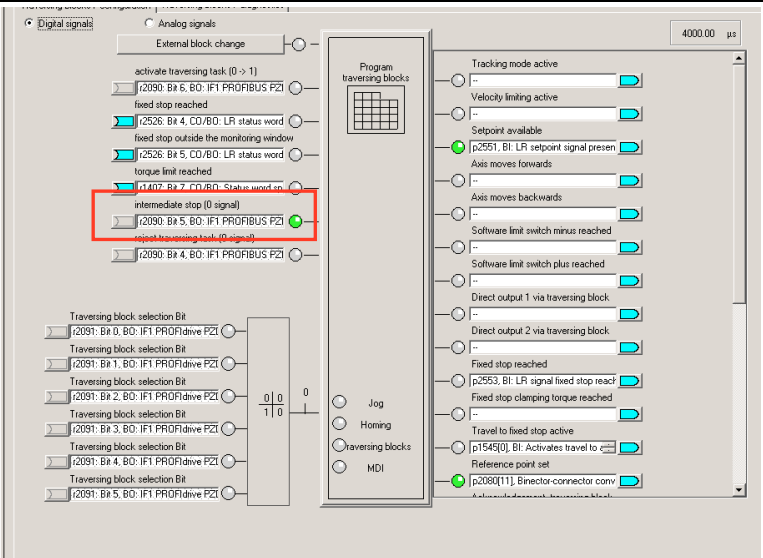
In this example, S10 (DI7) can be used to execute the test stop.

6.8 EPOS reactions

The EPOS reactions on selection of the safety functions are described here.

Description	Note																
<p>STO</p> <p>If STO is selected at drive 1, the drive is immediately switched to zero torque. EPOS control over the drive is withdrawn, which produces the error message "7490 EPOS: Enable signal withdrawn while traversing" This error must be acknowledge by the user, via switch S9 in the example.</p>	 <p>The screenshot shows an alarm log window with the following data:</p> <table border="1"> <thead> <tr> <th>Level</th> <th>Time</th> <th>Source</th> <th>Message</th> </tr> </thead> <tbody> <tr> <td>Fault</td> <td>22.03.70 16:19:28:803</td> <td>SINAMICS_S120_CU320: SERVO_02</td> <td>7490: EPOS: Enable signal withdrawn while traversing</td> </tr> <tr> <td>Warning</td> <td>22.03.70 15:28:15:193</td> <td>SINAMICS_S120_CU320: SERVO_03</td> <td>1697: SI Motor: Motion monitoring functions must be tested</td> </tr> <tr> <td>Warning</td> <td>22.03.70 15:28:15:177</td> <td>SINAMICS_S120_CU320: SERVO_02</td> <td>1697: SI Motor: Motion monitoring functions must be tested</td> </tr> </tbody> </table>	Level	Time	Source	Message	Fault	22.03.70 16:19:28:803	SINAMICS_S120_CU320: SERVO_02	7490: EPOS: Enable signal withdrawn while traversing	Warning	22.03.70 15:28:15:193	SINAMICS_S120_CU320: SERVO_03	1697: SI Motor: Motion monitoring functions must be tested	Warning	22.03.70 15:28:15:177	SINAMICS_S120_CU320: SERVO_02	1697: SI Motor: Motion monitoring functions must be tested
Level	Time	Source	Message														
Fault	22.03.70 16:19:28:803	SINAMICS_S120_CU320: SERVO_02	7490: EPOS: Enable signal withdrawn while traversing														
Warning	22.03.70 15:28:15:193	SINAMICS_S120_CU320: SERVO_03	1697: SI Motor: Motion monitoring functions must be tested														
Warning	22.03.70 15:28:15:177	SINAMICS_S120_CU320: SERVO_02	1697: SI Motor: Motion monitoring functions must be tested														
<p>SS1</p> <p>If SS1 is selected at drive 2, the drive immediately brakes along the OFF3 ramp and is then switched to zero torque. EPOS control over the drive is withdrawn, which produces the error message "7490 EPOS: Enable signal withdrawn while traversing"</p>	 <p>The screenshot shows an alarm log window with the following data:</p> <table border="1"> <thead> <tr> <th>Level</th> <th>Time</th> <th>Source</th> <th>Message</th> </tr> </thead> <tbody> <tr> <td>Fault</td> <td>22.03.70 16:19:28:803</td> <td>SINAMICS_S120_CU320: SERVO_02</td> <td>7490: EPOS: Enable signal withdrawn while traversing</td> </tr> <tr> <td>Warning</td> <td>22.03.70 15:28:15:193</td> <td>SINAMICS_S120_CU320: SERVO_03</td> <td>1697: SI Motor: Motion monitoring functions must be tested</td> </tr> <tr> <td>Warning</td> <td>22.03.70 15:28:15:177</td> <td>SINAMICS_S120_CU320: SERVO_02</td> <td>1697: SI Motor: Motion monitoring functions must be tested</td> </tr> </tbody> </table>	Level	Time	Source	Message	Fault	22.03.70 16:19:28:803	SINAMICS_S120_CU320: SERVO_02	7490: EPOS: Enable signal withdrawn while traversing	Warning	22.03.70 15:28:15:193	SINAMICS_S120_CU320: SERVO_03	1697: SI Motor: Motion monitoring functions must be tested	Warning	22.03.70 15:28:15:177	SINAMICS_S120_CU320: SERVO_02	1697: SI Motor: Motion monitoring functions must be tested
Level	Time	Source	Message														
Fault	22.03.70 16:19:28:803	SINAMICS_S120_CU320: SERVO_02	7490: EPOS: Enable signal withdrawn while traversing														
Warning	22.03.70 15:28:15:193	SINAMICS_S120_CU320: SERVO_03	1697: SI Motor: Motion monitoring functions must be tested														
Warning	22.03.70 15:28:15:177	SINAMICS_S120_CU320: SERVO_02	1697: SI Motor: Motion monitoring functions must be tested														

Copyright © Siemens AG 2009 All rights reserved
36813720_mc_fe_i_009_v11_en

Description	Note
<p>SLS</p> <p>To reduce the speed at drive 1 on selection of the SLS function, the user program reduces the velocity override in FC2. The required interconnection was created automatically when the standard telegram was selected.</p>	
<p>SOS</p> <p>To stop the axis of drive 2 on selection of the SOS function, the user program selects the Intermediate stop function in FC2. The required interconnection was created automatically when the standard telegram was selected.</p>	
<p>SS2</p> <p>If SS2 is selected at drive 2, the drive immediately brakes along the OFF3 ramp and then SOS is activated: EPOS control over the drive is withdrawn, which produces the error message "7490 EPOS: Enable signal withdrawn while traversing"</p>	<p>Since this produces an error message and switches the drive to zero torque, it makes no sense to use the SS2 function with EPOS at present.</p> <p>Instead of SS2, the SOS function is recommended, using the Intermediate stop function, for example, to bring the drive to a halt.</p>

Copyright © Siemens AG 2009 All rights reserved
36813720_mc_fe_i_009_v11_en

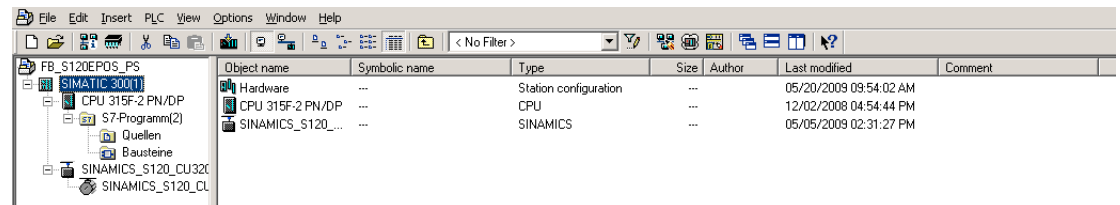
6.9 Downloading the sample project

Up until now, the configuration of the function example was described step-by-step. The following steps should now be followed if the sample project is to be directly downloaded to the hardware.

First, all components (S7-F-CPU and SINAMICS S120) should be generally reset or reset to factory settings.

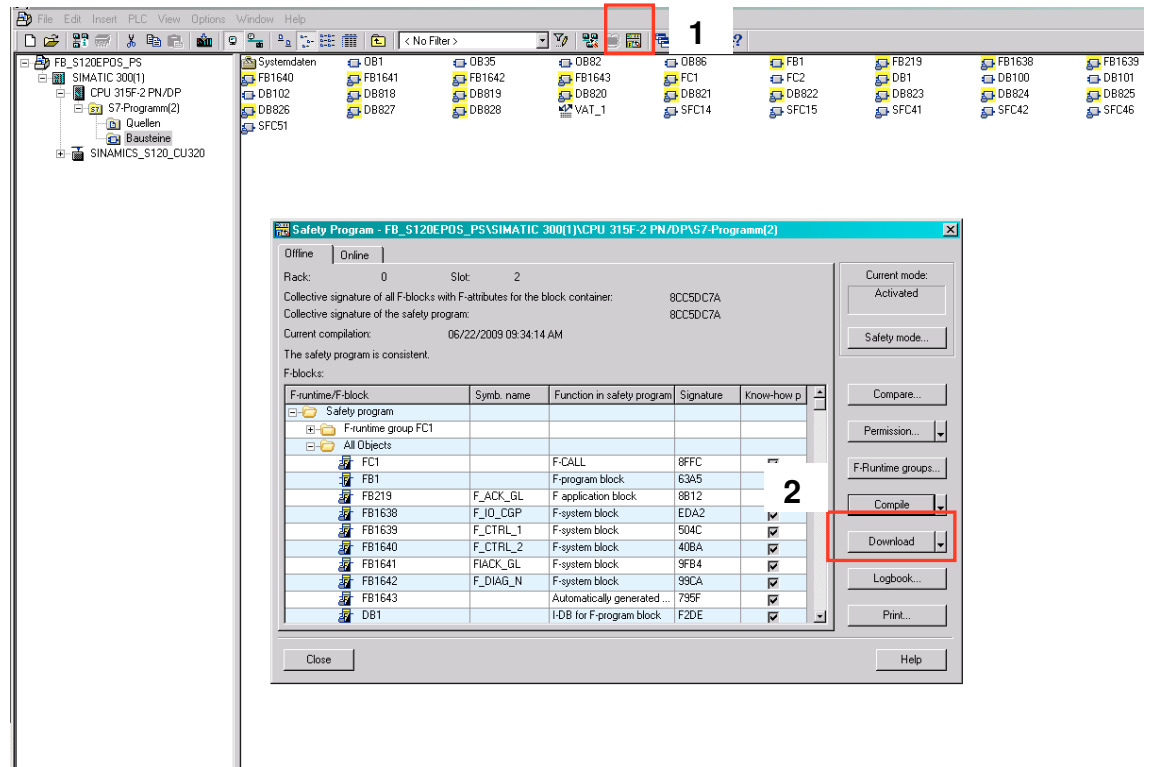
6.9.1 Downloading the S7-F-CPU configuration

First, the HW configuration of the S7-F-CPU must be downloaded. The HW configuration is opened by double-clicking on "Hardware".



Depending on the default values and the previous configuration on the F-CPU side, if required, the baud rate of the PC/PG interface must be adapted to download the hardware configuration of the F-CPU. **Note:** If a Safety program existed on the CPU beforehand, then this is password-protected. This must be known for the download. If it is not known, then the memory card must be deleted using a suitable device (e.g. SIEMENS PG). If the card is deleted or formatted using a card reader, the card will be destroyed.

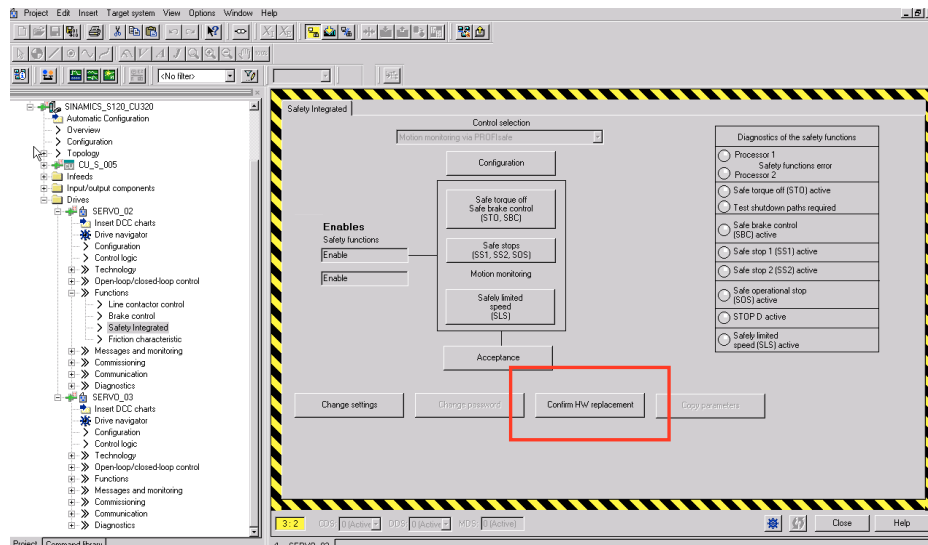
After the HW configuration has been downloaded, the program blocks must be downloaded to the F-CPU.



The window to download the safety functions is first opened using the "yellow" button in the function bar. The download is then initiated from this window using the "Download" button. The remaining (non-safety-related) blocks are then downloaded normally.

6.9.2 Downloading the SINAMICS S120 configuration

You can download the configuration directly to the SINAMICS S120. After the download, various safety faults are present as the serial numbers of the encoder modules do not match those of the devices that were used to generate the sample project. Now, for each series commissioning, the new serial numbers must be transferred to the Safety configuration. This is done using "Confirm HW replacement" The simplest way is to open the Safety screen form on **both** drives and there to press the "Confirm HW replacement" button.



The backup procedure from RAM to ROM must then be initiated for SINAMICS and a restart carried out (Power On reset).

6.10 Acceptance test

To verify safety-oriented parameters, an acceptance test must be performed after the machine has been commissioned for the first time and also after changes are made to safety-related parameters. The acceptance test must be appropriately documented. The acceptance reports must be adequately stored and archived.

The acceptance test must be carried out after parameterization has been completed and a Power On reset performed.

Information about the acceptance test, the acceptance report and an example of an appropriate acceptance report is provided in the "Function Manual SINAMICS S120 Safety Integrated" (FHS) in the Chapter "Acceptance test and acceptance report".

7 History

Table 7-1 History

Version	Date	Change
V1.0	17.07.2009	First edition
V1.1	29.10.2009	Revision