

SIEMENS

SIMATIC NET

Industrial Ethernet switches SCALANCE XC-100


Operating Instructions


<u>Introduction</u>	1
<u>Safety notices</u>	2
<u>Description of the device</u>	3
<u>Installation and disassembly</u>	4
<u>Connecting up</u>	5
<u>Maintenance and troubleshooting</u>	6
<u>Technical specifications</u>	7
<u>Dimension drawings</u>	8
<u>Certifications and approvals</u>	9


Legal information

Warning notice system

This manual contains notices you have to observe in order to ensure your personal safety, as well as to prevent damage to property. The notices referring to your personal safety are highlighted in the manual by a safety alert symbol, notices referring only to property damage have no safety alert symbol. These notices shown below are graded according to the degree of danger.

 DANGER
indicates that death or severe personal injury will result if proper precautions are not taken.

 WARNING
indicates that death or severe personal injury may result if proper precautions are not taken.

 CAUTION
indicates that minor personal injury can result if proper precautions are not taken.

NOTICE
indicates that property damage can result if proper precautions are not taken.


If more than one degree of danger is present, the warning notice representing the highest degree of danger will be used. A notice warning of injury to persons with a safety alert symbol may also include a warning relating to property damage.

Qualified Personnel

The product/system described in this documentation may be operated only by **personnel qualified** for the specific task in accordance with the relevant documentation, in particular its warning notices and safety instructions. Qualified personnel are those who, based on their training and experience, are capable of identifying risks and avoiding potential hazards when working with these products/systems.

Proper use of Siemens products

Note the following:

 WARNING
Siemens products may only be used for the applications described in the catalog and in the relevant technical documentation. If products and components from other manufacturers are used, these must be recommended or approved by Siemens. Proper transport, storage, installation, assembly, commissioning, operation and maintenance are required to ensure that the products operate safely and without any problems. The permissible ambient conditions must be complied with. The information in the relevant documentation must be observed.

Trademarks

All names identified by ® are registered trademarks of Siemens AG. The remaining trademarks in this publication may be trademarks whose use by third parties for their own purposes could violate the rights of the owner.

Disclaimer of Liability

We have reviewed the contents of this publication to ensure consistency with the hardware and software described. Since variance cannot be precluded entirely, we cannot guarantee full consistency. However, the information in this publication is reviewed regularly and any necessary corrections are included in subsequent editions.

Table of contents

1	Introduction	5
1.1	Security information	6
2	Safety notices	9
3	Description of the device	11
3.1	Product overview	11
3.2	Device views	13
3.2.1	Device view of a SCALANCE XC106-2 (SC)	13
3.2.2	Device view of a SCALANCE XC106-2 (ST/BFOC)	14
3.2.3	Device view of a SCALANCE XC108	15
3.2.4	Device view of a SCALANCE XC116	16
3.2.5	Device view of a SCALANCE XC124	17
3.3	LED display	18
3.4	SET button	19
4	Installation and disassembly	21
4.1	Safety notices for installation	21
4.2	Types of installation	24
4.3	Mounting on DIN rails	24
4.4	Installation on a standard S7-300 rail	25
4.5	Installation on a standard S7-1500 rail	27
4.6	Wall mounting	28
4.7	Changing the position of the securing bar	29
4.8	Disassembly	30
5	Connecting up	31
5.1	Safety when connecting up	31
5.2	Wiring rules	34
5.3	Power supply	35
5.4	Signaling contact	36
5.5	Functional ground	37
6	Maintenance and troubleshooting	39
7	Technical specifications	41
7.1	Technical specifications of the SCALANCE XC106-2 (SC)	41
7.2	Technical specifications of the SCALANCE XC106-2 (ST/BFOC)	43
7.3	Technical specifications of the SCALANCE XC108	45

7.4	Technical specifications of the SCALANCE XC116	46
7.5	Technical specifications of the SCALANCE XC124	47
7.6	Switching properties	48
7.7	Mechanical stability (in operation)	48
8	Dimension drawings	49
9	Certifications and approvals	53
	Index	61

Introduction

Purpose of the Operating Instructions

These operating instructions support you when installing and connecting up devices of the SCALANCE XC-100 product group.

Validity of the Operating Instructions

These operating instructions apply to the following devices:

- SCALANCE XC106-2 (SC)
- SCALANCE XC106-2 (ST/BFOC)
- SCALANCE XC108
- SCALANCE XC116
- SCALANCE XC124

Unless mentioned otherwise, the descriptions in these operating instructions refer to all devices of the SCALANCE XC-100 product group named above in the section on validity.

Designations used

Classification	Description	Terms used
Product line	The product line includes all devices and variants of all product groups. If information applies to all product groups within the product line, the term SCALANCE X-100 is used.	SCALANCE X-100
Product group	If information applies to all devices and variants of a product group, the term SCALANCE XC-100 is used.	SCALANCE XC-100
Device	If information relates to a specific device, the device name is used.	e.g. SCALANCE XC106-2 (ST/BFOC)

Further documentation

In the system manuals "Industrial Ethernet / PROFINET Industrial Ethernet" and "Industrial Ethernet / PROFINET passive network components", you will find information on other SIMATIC NET products that you can operate along with the devices of this product line in an Industrial Ethernet network.

There, you will find among other things optical performance data of the communications partner that you require for the installation.

1.1 Security information

You will find the system manuals here:

- On the data medium that ships with some products:
 - Product CD / product DVD
 - SIMATIC NET Manual Collection
- On the Internet pages of Siemens Industry Online Support:
 - Industrial Ethernet / PROFINET Industrial Ethernet System Manual (<https://support.industry.siemens.com/cs/ww/en/view/27069465>)
 - Industrial Ethernet / PROFINET Passive Network Components System Manual (<https://support.industry.siemens.com/cs/ww/en/view/84922825>)

SIMATIC NET manuals

You will find the SIMATIC NET manuals here:

- On the data medium that ships with some products:
 - Product CD / product DVD
 - SIMATIC NET Manual Collection
- On the Internet pages of Siemens Industry Online Support (<https://support.industry.siemens.com/cs/ww/en/ps/15247>).

SIMATIC NET glossary

Explanations of many of the specialist terms used in this documentation can be found in the SIMATIC NET glossary.

You will find the SIMATIC NET glossary here:

- SIMATIC NET Manual Collection or product DVD
The DVD ships with certain SIMATIC NET products.
- On the Internet under the following address:
50305045 (<https://support.industry.siemens.com/cs/ww/en/view/50305045>)

Security information

1.1 Security information

Siemens provides products and solutions with industrial security functions that support the secure operation of plants, systems, machines and networks.

In order to protect plants, systems, machines and networks against cyber threats, it is necessary to implement – and continuously maintain – a holistic, state-of-the-art industrial security concept. Siemens' products and solutions constitute one element of such a concept.

Customers are responsible for preventing unauthorized access to their plants, systems, machines and networks. Such systems, machines and components should only be connected to

an enterprise network or the internet if and to the extent such a connection is necessary and only when appropriate security measures (e.g. firewalls and/or network segmentation) are in place.

For additional information on industrial security measures that may be implemented, please visit

<https://www.siemens.com/industrialsecurity> (<https://www.siemens.com/industrialsecurity>).

Siemens' products and solutions undergo continuous development to make them more secure. Siemens strongly recommends that product updates are applied as soon as they are available and that the latest product versions are used. Use of product versions that are no longer supported, and failure to apply the latest updates may increase customer's exposure to cyber threats.

To stay informed about product updates, subscribe to the Siemens Industrial Security RSS Feed under

<https://www.siemens.com/cert> (<https://www.siemens.com/cert>).

Catalogs

You will find the article numbers for the Siemens products of relevance here in the following catalogs:

- SIMATIC NET Industrial Communication / Industrial Identification, catalog IK PI
- SIMATIC Products for Totally Integrated Automation and Micro Automation, catalog ST 70
- Industry Mall - catalog and ordering system for automation and drive technology, Online catalog (<https://mall.industry.siemens.com/goos/WelcomePage.aspx?regionUrl=/en&language=en>)

You can request the catalogs and additional information from your Siemens representative.

Device defective

If a fault develops, send the device to your SIEMENS representative for repair. Repairs on-site are not possible.

Recycling and disposal



The products are low in pollutants, can be recycled and meet the requirements of the WEEE directive 2012/19/EU for the disposal of electrical and electronic equipment.

Do not dispose of the products at public disposal sites.

For environmentally friendly recycling and the disposal of your old device contact a certified disposal company for electronic scrap or your Siemens contact (Product return (<https://support.industry.siemens.com/cs/ww/en/view/109479891>)).

Note the different national regulations.

Trademarks

The following and possibly other names not identified by the registered trademark sign ® are registered trademarks of Siemens AG:

SCALANCE, C-PLUG, OLM

Electrostatic discharge



NOTICE

Electrostatic sensitive devices (ESD)

Electronic modules contain electrostatic sensitive components

These components can easily be destroyed if handled incorrectly.

Note the following instructions to avoid damage.


- Touch electronic modules only when you absolutely need to work on them.
- If electronic modules need to be touched, the body of the person involved must first be electrostatically discharged and grounded.
- Do not bring electronic modules in contact with electrically isolating materials such as plastic film, isolating table top pads or clothing made of synthetic fibers.
- Place the modules only on conductive surfaces.
- Pack, store and transport electronic modules and components only in conductive packaging such as metalized plastic or metal containers, conductive foam or household aluminum foil.

Safety notices

Read the safety notices


Note the following safety notices. These relate to the entire working life of the device.

You should also read the safety notices relating to handling in the individual sections, particularly in the sections "Installation" and "Connecting up".

 CAUTION
To prevent injury and damage, read the manual before using the device.

Safety notices on use in hazardous areas

General safety notices relating to protection against explosion

 WARNING
EXPLOSION HAZARD
Do not open the device when the supply voltage is turned on.

Safety instructions for use in hazardous locations according to UL/FM HazLoc

If you use the device under UL or FM HazLoc conditions, you must also adhere to the following safety instructions in addition to the general safety instructions for protection against explosion:

This equipment is suitable for use in Class I, Division 2, Groups A, B, C and D or non-hazardous locations only.

This equipment is suitable for use in Class I, Zone 2, Group IIC or non-hazardous locations only.


Description of the device

3.1 Product overview

Article numbers

Device	Description	Article number
SCALANCE XC106-2 (SC)	6 x 10/100 Mbps RJ-45 ports, 2 x 10/100 Mbps SC ports, multimode fiber-optic cable	6GK5 106-2BD00-2AC2
SCALANCE XC106-2 (ST/BFOC)	6 x 10/100 Mbps RJ-45 ports, 2 x 10/100 Mbps ST/BFOC ports, multimode FO cable	6GK5 106-2BB00-2AC2
SCALANCE XC108	8 x 10/100 Mbps RJ-45 ports	6GK5 108-0BA00-2AC2
SCALANCE XC116	16 x 10/100 Mbps RJ-45 ports	6GK5 116-0BA00-2AC2
SCALANCE XC124	24 x 10/100 Mbps RJ-45 ports	6GK5 124-0BA00-2AC2

Unpacking and checking

 WARNING
<p>Do not use any parts that show evidence of damage</p> <p>If you use damaged parts, there is no guarantee that the device will function according to the specification.</p> <p>If you use damaged parts, this can lead to the following problems:</p> <ul style="list-style-type: none"> • Injury to persons • Loss of the approvals • Violation of the EMC regulations • Damage to the device and other components <p>Use only undamaged parts.</p>

1. Make sure that the package is complete.
2. Check all the parts for transport damage.

Components of the product

The following components are supplied with the device:

- One IE switch
- A 4-pin terminal block for the power supply (spring-loaded terminal)
- A 2-pin terminal block for the signaling contact (spring-loaded terminal)

Spare parts


The following spare parts are available for the device:

Component	Description	Article number
Spring-loaded terminal block, 4 terminals	4-terminal spring-loaded terminal block to connect the power supply (24 VDC), for SCALANCE X/W/S/M, pack of 5	6GK5 980-1DB10-0AA5
Spring-loaded terminal block, 2 terminals	2-terminal spring-loaded terminal block to connect the signaling contact (24 VDC), for SCALANCE X/W/S/M, pack of 5	6GK5 980-0BB10-0AA5

3.2 Device views


3.2.1 Device view of a SCALANCE XC106-2 (SC)

The following figure shows an overview of the components of the SCALANCE XC106-2 (SC).

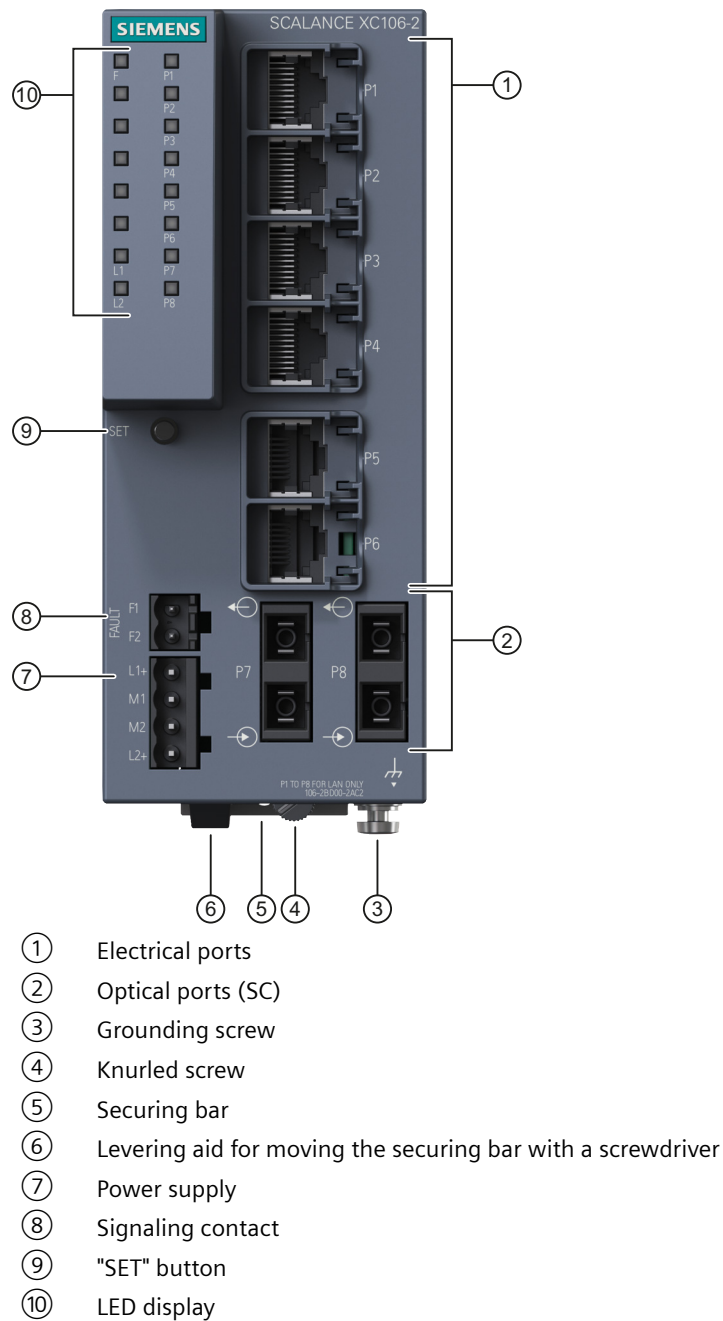


3.2.2 Device view of a SCALANCE XC106-2 (ST/BFOC)

The following figure shows an overview of the components of the SCALANCE XC106-2 (ST/BFOC).

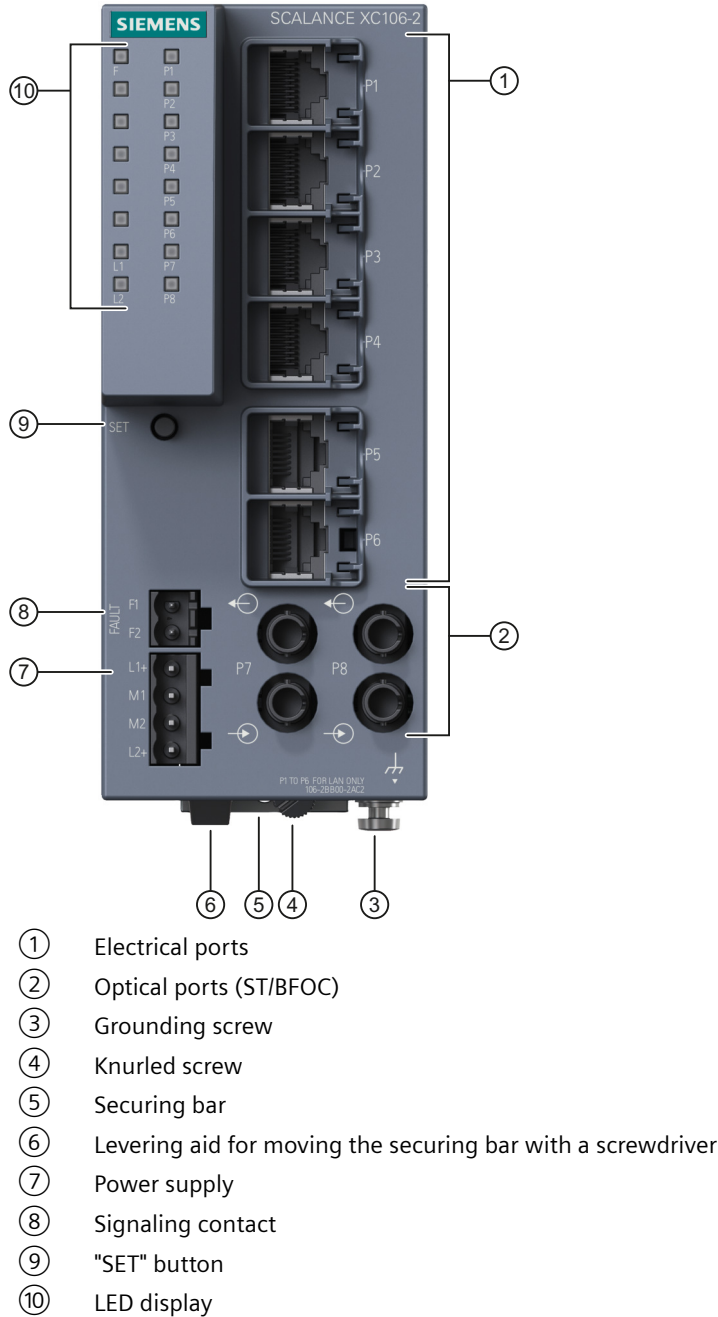


3.2.3 Device view of a SCALANCE XC108

The following figure shows an overview of the components of the SCALANCE XC108.

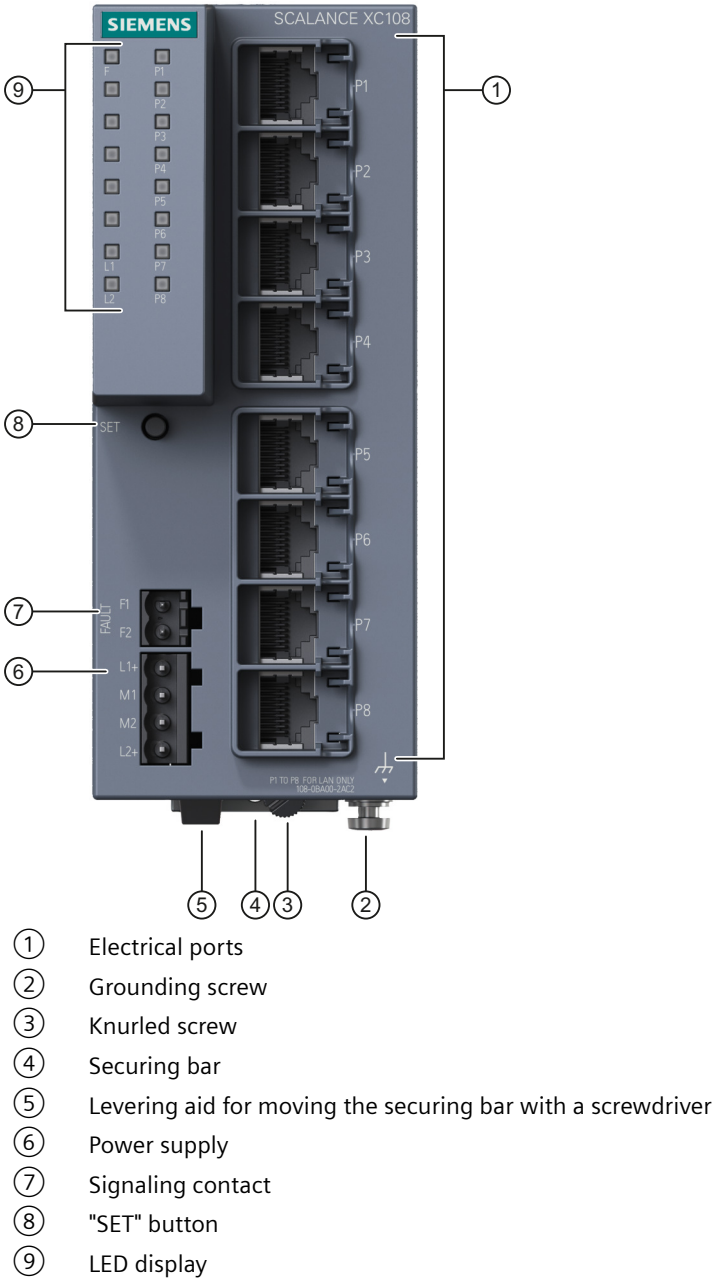

3.2.4 Device view of a SCALANCE XC116


The following figure shows an overview of the components of the SCALANCE XC116.

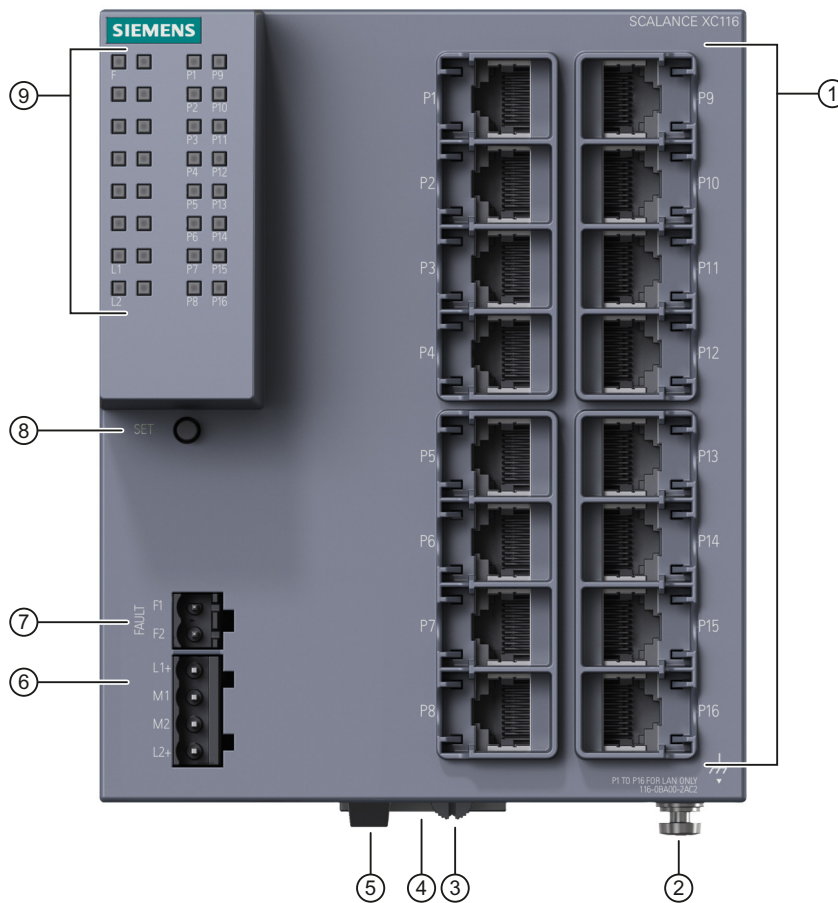

- ① Electrical ports
- ② Grounding screw
- ③ Knurled screw
- ④ Securing bar
- ⑤ Levering aid for moving the securing bar with a screwdriver
- ⑥ Power supply
- ⑦ Signaling contact
- ⑧ "SET" button
- ⑨ LED display

3.2.5 Device view of a SCALANCE XC124

The following figure shows an overview of the components of the SCALANCE XC124.

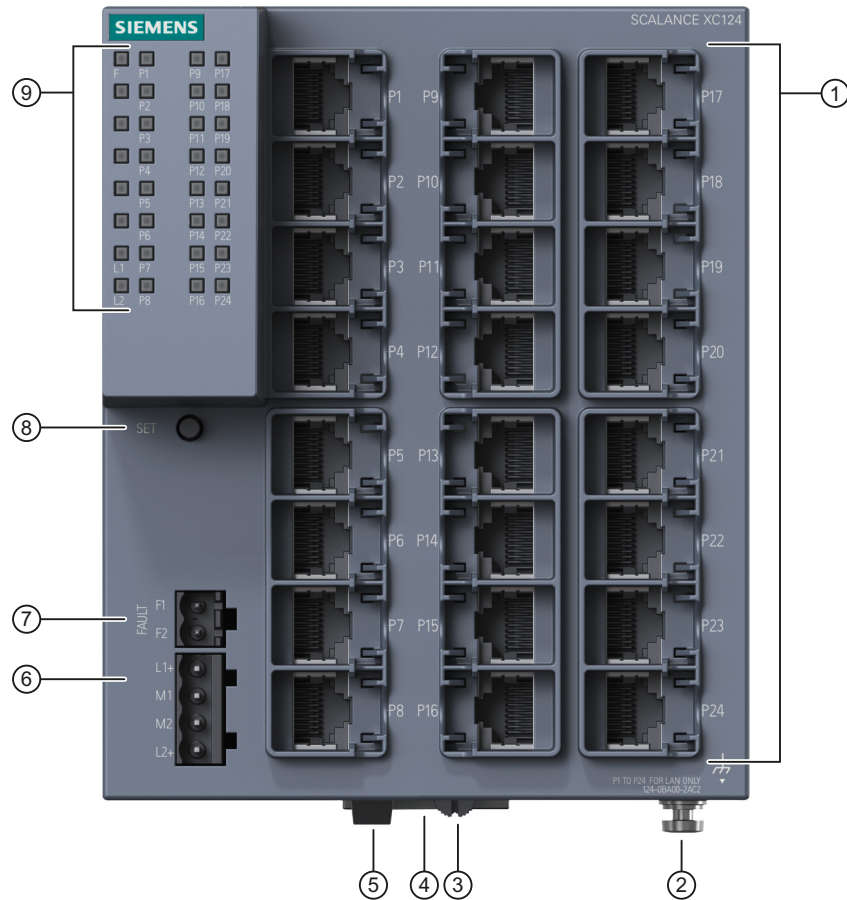

- ① Electrical ports
- ② Grounding screw
- ③ Knurled screw
- ④ Securing bar
- ⑤ Levering aid for moving the securing bar with a screwdriver
- ⑥ Power supply
- ⑦ Signaling contact
- ⑧ "SET" button
- ⑨ LED display

3.3 LED display

Fault LED "F" (red LED)

The fault LED indicates the incorrect functioning of the device.

LED color	LED status	Meaning
Red	Lit	The IE switch detects an error. At the same time, the signaling contact opens. The following faults/errors are detected: <ol style="list-style-type: none"> 1. Link down event on a monitored port. 2. Loss of the power supply of one of the two redundant power supplies or the power supply drops below 9.6 V. 3. Both power supplies are below approximately 9.6 V (voltage too low).
-	Off	No error detected.

Power LEDs "L1" and "L2" (green LEDs)

The power LEDs show the status of the power supply at connectors L1 and L2.

L1/L2 LEDs		L1/L2 connector
LED color	LED status	
Green	Lit	Power supply L1 or L2 is connected.
-	Off	Power supply L1 and L2 are not connected or L1 and L2 <9.6 V.

Note

If the green LED is not lit, no other signal LED lights up either.

Port LEDs "P" (green/yellow LEDs)

The port LEDs indicate the status of the ports.

LED color	LED status	Meaning
Green	Lit	Link exists, no data reception at port
Yellow	Lit	Link exists, data reception at port
Yellow	Flashing	Setting or display of the fault mask

3.4 SET button

Position

The "SET" button is located on the front of the device.

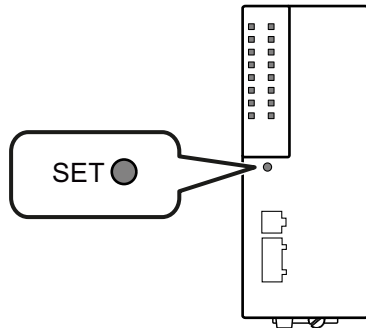


Figure 3-1 Position of the "SET" button

Function

With the SET button, you can display and change the set fault mask.

Setting the fault mask

Factory setting

In its delivery condition (factory default), the following settings are monitored via the message screen:


- Link up to all ports
- Redundant power supply (L1+/M1 und L2+/M2) connected

When you turn the device on and at least one of the settings is not fulfilled, the device registers a fault. Switch the device to the required operating mode and save these settings in the message screen.

Changing the setting

The changed settings remain after cycling power to the device.

Different settings are made depending on how long you hold down the SET button, as described in the following table:



Time the button is pressed
in seconds

3.4 SET button

Phase	Description	
1	LEDs flash at 5 Hz	The currently set fault mask is displayed. The LEDs of the monitored ports flash. If no fault mask is set, all port LEDs flash one after the other.
	If you release the button in phase 1, this has no effect.	
2	LEDs flash at 2.5 Hz	The current status is displayed. <ul style="list-style-type: none"> • The LEDs of the ports at which there is currently a link flash.
	If you release the button in phase 2, this has no effect.	
3	This new status is adopted and stored as the new fault mask in phase 3.	
	LEDs flashing	If you release the SET button while the LEDs are still flashing, storing is aborted.
	LEDs lit	If you release the SET button as soon as the LEDs light up, the current settings will be stored. The stored status is displayed. <ul style="list-style-type: none"> • The monitored ports are indicated by statically lit LEDs. • The monitored power supply is indicated by statically lit LEDs.

Error/fault

If the link is lost (link down) at a monitored port or a monitored power supply is lost, this is signaled as follows:

- The red fault LED lights up.
- The signaling contact is opened.

Installation and disassembly

4.1 Safety notices for installation

Safety notices

When installing the device, keep to the safety notices listed below.

 **WARNING**

If a device is operated in an ambient temperature of more than 60 °C, the temperature of the device housing may be higher than 70 °C. The device must therefore be installed so that it is only accessible to service personnel or users that are aware of the reason for restricted access and the required safety measures at an ambient temperature higher than 60 °C.

 **WARNING**

If the device is installed in a cabinet, the inner temperature of the cabinet corresponds to the ambient temperature of the device.

 **WARNING**

If the cable or conduit entry point exceeds 70 °C or the branching point of conductors exceeds 80 °C, special precautions must be taken. If the equipment is operated in an air ambient in excess of 60 °C, only use cables with admitted maximum operating temperature of at least 80 °C.

NOTICE

Improper mounting

Improper mounting may damage the device or impair its operation.

- Before mounting the device, always ensure that there is no visible damage to the device.
- Mount the device using suitable tools. Observe the information in the respective section about mounting.

Safety notices on use in hazardous areas

General safety notices relating to protection against explosion

 **WARNING**

EXPLOSION HAZARD

Replacing components may impair suitability for Class 1, Division 2 or Zone 2.

 **WARNING**

The device is intended for indoor use only.

 **WARNING**

The device may only be operated in an environment of contamination class 1 or 2 (see EN/IEC 60664-1, GB/T 16935.1).

 **WARNING**

When used in hazardous environments corresponding to Class I, Division 2 or Class I, Zone 2, the device must be installed in a cabinet or a suitable enclosure.

Notes for use in hazardous locations according to ATEX, IECEx, UKEX and CCC Ex

If you use the device under ATEX, IECEx, UKEX or CCC Ex conditions you must also keep to the following safety instructions in addition to the general safety instructions for protection against explosion:

 **WARNING**


To comply with EU Directive 2014/34 EU (ATEX 114), UK-Regulation SI 2016/1107 or the conditions of IECEx or CCC-Ex, the housing or cabinet must meet the requirements of at least IP54 (according to EN/IEC 60529, GB/T 4208) in compliance with EN IEC/IEC 60079-7, GB 3836.8.

 **WARNING**

If the temperature of the cable or housing socket exceeds 60 °C or the temperature at the branching point of the cables exceeds 80 °C, special precautions must be taken. If the equipment is operated in an air ambient in excess of 60 °C, only use cables with admitted maximum operating temperature of at least 80 °C.


Safety notices when using according to FM


If you use the device under FM conditions you must also keep to the following safety notices in addition to the general safety notices for protection against explosion:

 WARNING
EXPLOSION HAZARD
For operation the device is intended to be installed within an enclosure/control cabinet. The inner temperature of the enclosure/control cabinet corresponds to the ambient temperature of the device. Use installation wiring connections with admitted maximum operating temperature of at least 30 °C higher than maximum ambient temperature.

Safety notices when using the device as industrial control equipment according to UL 61010-2-201

If you use the device under UL 61010-2-201 conditions you must also keep to the following safety notices in addition to the general safety notices for protection against explosion:

 WARNING
Open equipment
The devices are "open equipment" according to the standard IEC 61010-2-201 or UL 61010-2-201 / CSA C22.2 No. 61010-2-201. To fulfill requirements for safe operation with regard to mechanical stability, flame retardation, stability, and protection against contact, the following alternative types of installation are specified:
<ul style="list-style-type: none">• Installation in a suitable cabinet.• Installation in a suitable enclosure.• Installation in a suitably equipped, enclosed control room.

 WARNING
If the temperature at the cable or housing socket or at the branching points of the cables exceeds 60 °C, special precautions must be taken. If the equipment is operated at ambient temperatures in excess of 40 °C, only use cables with permitted operating temperature of at least 80 °C.

Further notes

NOTICE
Warming and premature aging of the network component due to direct sunlight
Direct sunlight can heat up the device and can lead to premature aging of the network component and its cabling.
Provide suitable shade to protect the network component against direct sunlight.

4.2 Types of installation

Types of installation

The device can be installed in the following ways:

- DIN rail
- S7-300 mounting rail
- S7-1500 mounting rail
- Wall mounting

Installation clearance

Keep to the minimum clearances so that the convection ventilation of the device is not blocked.

- Below at least 10 cm
- Above at least 10 cm

4.3 Mounting on DIN rails

Installation

Note

Note the position of the securing bar, see also section "Dimension drawings (Page 49)".

When supplied, the securing bar is in the wall mounting position. To change the position of the securing bar, refer to the section "Changing the position of the securing bar (Page 29)".

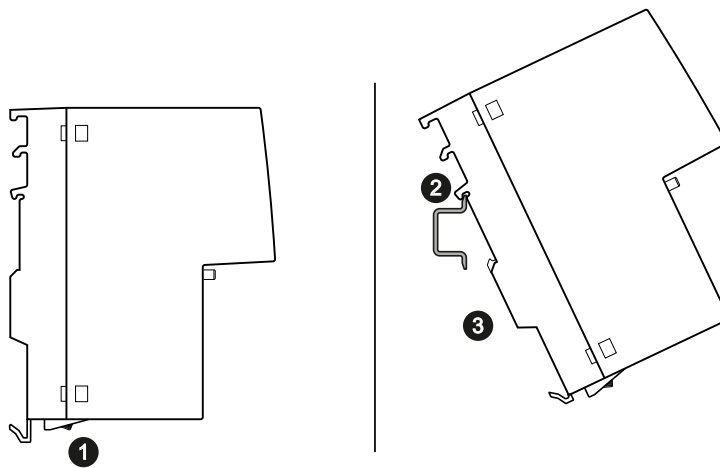


Figure 4-1 DIN rail mounting with securing bar in the wall mounting position.

Securing bar in the wall mounting position (as supplied).

To install the device on a 35 mm DIN rail complying with DIN EN 60715, follow the steps below:

1. Loosen the knurled screw with your hand or a screwdriver.
2. Place the third housing guide of the device on the top edge of the DIN rail.
3. Press the device down against the DIN rail until the spring securing bar locks in place.
4. When you tighten the knurled screw, you cannot release the securing bar (torque 0.5 Nm). The device is additionally fixed.
5. Connect the electrical connecting cables, refer to the section "Connecting up (Page 31)".

Removal

To remove the device from a DIN rail, follow the steps below:

1. Disconnect all connected cables.
2. If necessary, loosen the knurled screw with your hand or a screwdriver.
3. Lever the securing bar down using a screwdriver as far as it will go.
4. Pull the device away from the bottom of the DIN rail with the bar pulled.

4.4 Installation on a standard S7-300 rail

Installing on an S7-300 standard rail

Note

Note the position of the securing bar, see also section "Dimension drawings (Page 49)".

When supplied, the securing bar is in the wall mounting position. To change the position of the securing bar, refer to the section "Changing the position of the securing bar (Page 29)".

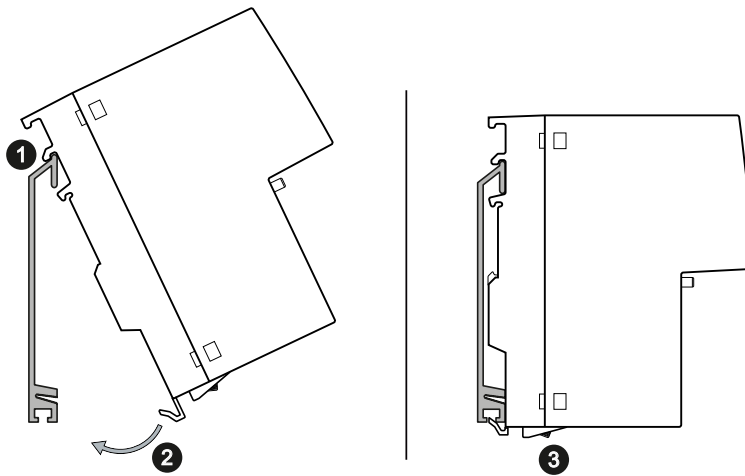


Figure 4-2 S7-300 mounting rail installation with the securing bar in the wall mounting position.

Securing bar in the wall mounting position (as supplied).

To install the device on an S7-300 standard rail, follow the steps below:

1. Place the second housing guide of the device on the top edge of the standard rail.
2. Swing the device down towards the back against the mounting rail.
3. Loosen the knurled screw with your hand or a screwdriver. The spring mounted securing bar locks in place.
4. When you tighten the knurled screw, you cannot release the securing bar (torque 0.5 Nm). The device is additionally fixed.
5. Connect the electrical connecting cables, refer to the section "Connecting up (Page 31)".

Removal

To remove the device from a standard rail, follow the steps below:

1. Disconnect all connected cables.
2. If necessary, loosen the knurled screw with your hand or a screwdriver.
3. Lever the securing bar down using a screwdriver as far as it will go.
4. Remove the device from the mounting rail with the bar pulled.

4.5 Installation on a standard S7-1500 rail

Installing on an S7-1500 standard rail

Note

Note the position of the securing bar, see also section "Dimension drawings (Page 49)".

When supplied, the securing bar is in the wall mounting position. To change the position of the securing bar, refer to the section "Changing the position of the securing bar (Page 29)".

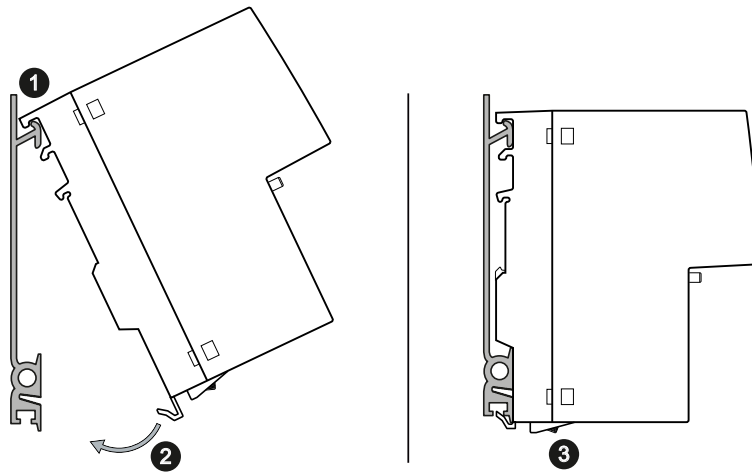


Figure 4-3 S7-1500 mounting rail installation with the securing bar in the wall mounting position.

Securing bar in the wall mounting position (as supplied).

To install the device on an S7-1500 standard rail, follow the steps below:

1. Place the first housing guide of the device on the top edge of the standard rail.
2. Swing the device down towards the back against the mounting rail.
3. Loosen the knurled screw with your hand or a screwdriver. The spring mounted securing bar locks in place.
4. When you tighten the knurled screw, you cannot release the securing bar (torque 0.5 Nm). The device is additionally fixed.
5. Connect the electrical connecting cables, refer to the section "Connecting up (Page 31)".

Removal

To remove the device from a standard rail, follow the steps below:

1. Disconnect all connected cables.
2. If necessary, loosen the knurled screw with your hand or a screwdriver.
3. Lever the securing bar down using a screwdriver as far as it will go.
4. Remove the device from the mounting rail with the bar pulled.

4.6 Wall mounting

Preparation

Note the position of the securing bar, see also section "Dimension drawings (Page 49)".

When supplied, the securing bar is in the wall mounting position. You do not need to prepare the device any further.

If the securing bar is in the rail mounting position, note the section "Changing the position of the securing bar (Page 29)".

Tools

To mount the device on a wall, you require the following:

- 2 wall plugs with a diameter of 6 mm and a minimum length of 35 mm.
- 2 oval-head screws with a diameter of 3.5 mm to 4 mm and a minimum length of 50 mm.

Note

Use suitable fitting material depending on the mounting surface.

Mounting on a concrete wall

The following table shows the size of the drill hole and the required fastening material using a concrete drill hole as an example:

Base	Concrete	
Drill hole	Depth	Min. 45 mm
	Diameter	6 mm
Fastening material	Plugs	6 x 35
	Oval-head screws	4 x 50

Assembly

Note


The wall mounting must be capable of supporting at least four times the weight of the device.

To mount the device on a wall, follow the steps below:

1. Prepare the wall mounting with drilled holes and plugs. For the precise dimensions, refer to the section "Dimension drawings (Page 49)".
2. Turn the upper screw in to the wall so that 10 mm remains jutting out.
3. Hang the device with the keyhole hanging mechanism on the rear on the screw.
4. Fix the device to the wall with the lower screw.
5. Connect the electrical connecting cables, refer to the section "Connecting up (Page 31)".

4.7 Changing the position of the securing bar

Rail mounting position - wall mounting position

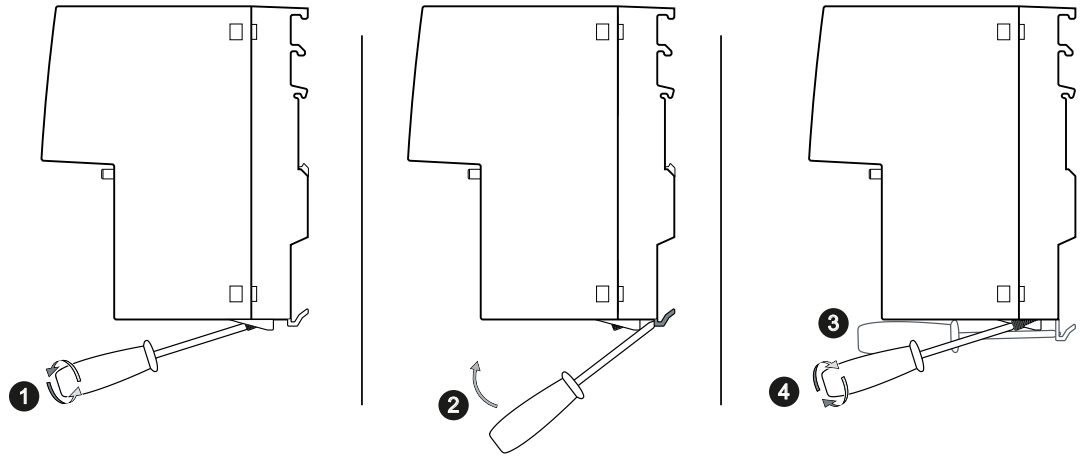


To change the securing bar from the rail mounting position to the wall mounting position follow the steps below:

1. If necessary, loosen the knurled screw with your hand or a screwdriver.
2. Move the securing bar down as far as it will go.
 - Use the levering aid and level the securing bar down using a screwdriver into this position.
 - Push the securing bar down using your hand.
3. Hold the securing bar in this position.
 - Hold the securing bar with the screwdriver.
 - Use the gap on the rear of the device and fix the securing bar briefly with a pin.
4. Tighten the knurled screw (torque 0.5 Nm).
The securing bar is fixed in the wall mounting position.
5. Remove the pin.

Wall mounting position - rail mounting position

To move the securing bar from the wall mounting position to the rail mounting position, loosen the knurled screw.

4.8 Disassembly

 **WARNING**

Improper disassembly

Improper disassembly may result in a risk of explosion in hazardous areas.

For proper disassembly, observe the following:


- Before starting work, ensure that the electricity is switched off.
- Secure remaining connections so that no damage can occur as a result of disassembly if the system is accidentally started up.

Connecting up

5.1 Safety when connecting up

Safety notices

When connecting up the device, keep to the safety notices listed below.

 WARNING
<p>Power supply</p> <p>The device is designed for operation with a directly connectable safety extra low voltage (SELV) from a limited power source (LPS).</p> <p>The power supply therefore needs to meet at least one of the following conditions:</p> <ul style="list-style-type: none"> • Only safety extra low voltage (SELV) with limited power source (LPS) complying with IEC 60950-1 / EN 60950-1 / VDE 0805-1 or IEC 62368-1 / EN 62368-1 / VDE 62368-1 may be connected to the power supply terminals. • The power supply unit for the device must meet NEC Class 2 according to the National Electrical Code (r) (ANSI / NFPA 70). <p>If the equipment is connected to a redundant power supply (two separate power supplies), both must meet these requirements.</p>

<p>NOTICE</p>
<p>Failure of the data traffic due to contamination of optical plug-in connections</p> <p>Optical sockets and plugs are sensitive to contamination of the end face. Contamination can lead to the failure of the optical transmission network. Take the following precautions to avoid functional impairments:</p> <ul style="list-style-type: none"> • Clean the end face of field-assembled connectors carefully before connecting. No residues of processing may remain on the connector. • Only remove the dust caps of optical transceivers and pre-configured cables shortly before connecting the cables. • Close unused optical sockets and plugs as well as pluggable transceivers and slots with the supplied protective caps.

Safety notices on use in hazardous areas

General safety notices relating to protection against explosion

 **WARNING**

EXPLOSION HAZARD

Do not connect or disconnect cables to or from the device when a flammable or combustible atmosphere is present.

 **WARNING**

EXPLOSION HAZARD

Do not press the SET button if there is a potentially explosive atmosphere.

 **WARNING**

Suitable cables at high ambient temperatures in hazardous area

At an ambient temperature of ≥ 60 °C, use heat-resistant cables designed for an ambient temperature at least 20 °C higher. The cable entries used on the enclosure must comply with the IP degree of protection required by EN IEC / IEC 60079-0, GB 3836.1.

 **WARNING**

Unsuitable cables or connectors

Risk of explosion in hazardous areas

- Only use connectors that meet the requirements of the relevant type of protection.
- If necessary, tighten the connector screw connections, device fastening screws, grounding screws, etc. according to the specified torques.
- Close unused cable openings for electrical connections.
- Check the cables for a tight fit after installation.

 **WARNING**

Lack of equipotential bonding

If there is no equipotential bonding in hazardous areas, there is a risk of explosion due to equalizing current or ignition sparks.

- Ensure that equipotential bonding is available for the device.

 WARNING**Unprotected cable ends**

There is a risk of explosion due to unprotected cable ends in hazardous areas.

- Protect unused cable ends according to IEC/EN 60079-14.

 WARNING**Improper installation of shielded cables**

There is a risk of explosion due to equalizing currents between the hazardous area and the non-hazardous area.

- Ground shielded cables that cross hazardous areas at one end only.
- Lay a potential equalization conductor when grounding at both ends.

 WARNING**Insufficient isolation of intrinsically safe and non-intrinsically safe circuits**

Risk of explosion in hazardous areas

- When connecting intrinsically safe and non-intrinsically safe circuits, ensure that the galvanic isolation is performed properly in compliance with local regulations (e.g. IEC 60079-14).
- Observe the device approvals applicable for your country.

Notes for use in hazardous locations according to ATEX, IECEx, UKEX and CCC Ex


If you use the device under ATEX, IECEx, UKEX or CCC Ex conditions you must also keep to the following safety instructions in addition to the general safety instructions for protection against explosion:

 WARNING**Transient overvoltages**


Take measures to prevent transient overvoltages of more than 40% of the rated voltage (or more than 119 V). This is the case if you only operate devices with SELV (safety extra-low voltage).

Safety notices when using the device according to Hazardous Locations (HazLoc)

If you use the device under HazLoc conditions you must also keep to the following safety notices in addition to the general safety notices for protection against explosion:

<p> WARNING</p> <p>EXPLOSION HAZARD</p> <p>You may only connect or disconnect cables carrying electricity when the power supply is switched off or when the device is in an area without inflammable gas concentrations.</p>

Further notes

<p> WARNING</p> <p>Safety notice for connecting with a LAN ID (Local Area Network)</p> <p>A LAN or LAN segment with all the interconnected devices should be contained completely in a single low voltage power distribution in a building. The LAN is designed either for "Environment A" according to IEEE802.3 or "Environment 0" according to IEC TR 62102.</p> <p>Do not connect any electrical connectors directly to the telephone network (telephone network voltage) or a WAN (Wide Area Network).</p>
--

5.2 Wiring rules

When wiring use cables with the following AWG categories or cross sections.

Wiring rules for ...		Screw/spring-loaded terminals
connectable cable cross sections for flexible cables ...	without wire end ferrule	0.25 - 2.5 mm ² AWG: 24 - 13
	with wire end ferrule with plastic ferrule**	0.25 - 2.5 mm ² AWG: 24 - 13
	with wire end ferrule without plastic ferrule**	0.25 - 2.5 mm ² AWG: 24 - 13
	with TWIN wire end ferrule**	0.5 - 1 mm ² AWG: 20 - 17
Stripped length of the cable		8 - 10 mm
Wire end ferrule according to DIN 46228 with plastic ferrule**		8 - 10 mm

* AWG: American Wire Gauge

** See note "Wire end ferrules"

Note


Wire end ferrules


Use crimp shapes with smooth surfaces, such as provided by square and trapeze shaped crimp cross sections.

Crimp shapes with wave-shaped profile are unsuitable.

5.3 Power supply

Notes on the power supply

 WARNING
Incorrect power supply Never operate the device with AC voltage or DC voltage higher than 32 V DC.

 CAUTION
Damage to the device due to overvoltage The connector of the external power supply is not protected against strong electromagnetic pulses that can, for example, result from lightning strikes or switching large loads. One of the tests used to attest the immunity of devices of the IE switches SCALANCE XC-100 to electromagnetic interference was the "surge immunity test" according to EN61000-4-5. This test requires overvoltage protection for the power supply lines. A suitable device is, for example, the Dehn Blitzductor BVT AVD 24, article number 918 422 or a comparable protective element. Manufacturer: DEHN+SOEHNE GmbH+Co.KG, Hans-Dehn-Str.1, Postfach 1640, D92306 Neumarkt, Germany Operate the SCALANCE XC-100 with suitable overvoltage protection.

Note

The device can be disconnected from the power supply with the terminal block.

Information on the power supply

- The power supply is connected using a 4-pin plug-in terminal block (spring-loaded terminal). The terminal block ships with the device and can also be ordered as a spare part.
- The power supply can be connected redundantly. Both inputs are isolated. There is no distribution of load.

5.4 Signaling contact

- The power supply is connected over a high resistance with the enclosure to allow an ungrounded set up. The two power inputs are non-floating.
- Note the wiring rules.

Position and assignment

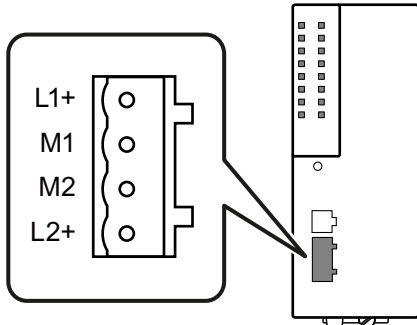


Figure 5-1 Position of the power supply on the SCALANCE XC-100 and the assignment of the terminal block

Contact	Assignment
L1+	L1+ DC 12 ... 24 V
M1	Ground
M2	Ground
L2+	L2+ DC 12 ... 24 V

5.4 Signaling contact

Information on the signaling contact

- The signaling contact is a floating switch that signals error statuses by opening the contact. The signaling contact must be operated within the range of the operating voltage. If an error/fault occurs, the signaling contact opens. In normal operation, the signaling contact is closed.
- The signaling contact is connected using a 2-pin plug-in terminal block (spring-loaded terminal). The terminal block ships with the device and can also be ordered as a spare part.
- Note the wiring rules.

NOTICE

Damage due to voltage being too high

The signaling contact can be subjected to a maximum load of 100 mA (safety extra-low voltage SELV, 24 VDC).

Higher voltages or currents can damage the device!

Position and assignment

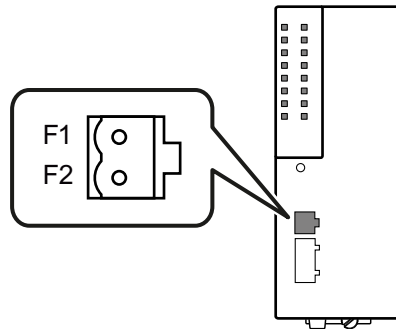


Figure 5-2 Position of the signaling contact on the SCALANCE XC-100 and the assignment of the terminal block

Contact	Assignment
F1	Fault contact 1
F2	Fault contact 2

Signaling faults

- The signaling of errors by the signaling contact is synchronized with the fault LED "F", see section "LED display (Page 18)".
All errors that the fault LED "F" indicates (freely configurable) are also signaled by the signaling contact.
- If an internal fault occurs, the fault LED "F" lights up and the signaling contact opens.
- If you connect a communications node to an unmonitored port or disconnect it, this does not cause an error message.
- The signaling contact remains open until one of the following events occurs:
 - The problem is eliminated.
 - The current status is entered in the fault mask as the new desired status.

5.5 Functional ground


EMC disturbances are diverted to ground via the functional ground. This ensures the immunity of the data transmission.

The functional ground must be implemented with low impedance. The connection of the functional ground must be established directly on the mounting plate or the DIN rail terminal.

The IE switch has a grounding screw (fillister head screw with clamping washer und disk) for functional ground, refer to the section "Device views (Page 13)".

The grounding screw is identified by the following symbol for the functional ground .

Follow the steps below to connect the functional ground:

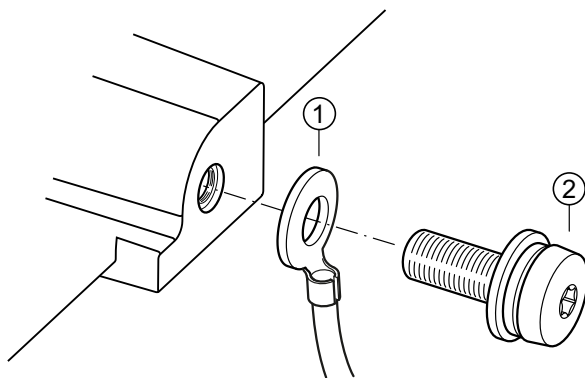

- ① Grounding terminal with cable
- ② Fillister head screw with spring washer and washer

1. Loosen the grounding screw).
2. Put the grounding terminal and grounding screw together.
3. Tighten the grounding screw with a maximum torque of 0.75 Nm.


Protective/functional ground

The connection of the reference potential surface with the protective ground system is normally in the cabinet close to the power feed-in. This ground conducts fault currents to ground safely and according DIN/VDE 0100 is a protective ground to protect people, animals and property from too high contact voltages.

Apart from the protective ground, there is functional grounding in the cabinet. According to EN60204-1 (DIN/VDE 0113 T1) electrical circuits must be grounded. The chassis (0 V) is grounded at one defined point. Here, once again the grounding is implemented with the lowest leakage resistance to ground in the vicinity of the power feed-in.

With automation components, functional ground also ensures interference-free operation of a controller. Via the functional ground, interference currents coupled in via the connecting cables are discharged to ground.

Maintenance and troubleshooting

 **WARNING**

Unauthorized repair of devices in explosion-proof design

Risk of explosion in hazardous areas

- Repair work may only be performed by personnel authorized by Siemens.

 **WARNING**

Impermissible accessories and spare parts

Risk of explosion in hazardous areas

- Only use original accessories and original spare parts (Page 11).
- Observe all relevant installation and safety instructions described in the manuals for the device or supplied with the accessories or spare parts.



 **CAUTION**

Hot surfaces

Risk of burns during maintenance work on parts with a surface temperature above 70 °C (158 °F).

- Take appropriate protective measures, for example, wear protective gloves.
- Once maintenance work is complete, restore the touch protection measures.

NOTICE

Cleaning the housing

If the device is not in a hazardous area, only clean the outer parts of the housing with a dry cloth.

If the device is in a hazardous area, use a slightly damp cloth for cleaning.

Do not use solvents.

Fuses

Some devices have a resettable fuse (PTC). If the fuse blows, all LEDs are off although the power supply is correctly connected. In this case, disconnect the device from the power supply for approximately 30 minutes before you turn it on again.

Link display on the optical ports

Devices with optical ports support "Far-end fault" at the optical ports. This function is, however, not used for the corresponding link display. If only the receive direction is plugged in, a "far end fault" is detected and no data is forwarded. The port LED is already lit.

Device defective

If a fault develops, send the device to your SIEMENS service center for repair. Repairs on-site are not possible.

Technical specifications

7.1 Technical specifications of the SCALANCE XC106-2 (SC)

The following technical specifications apply to the SCALANCE XC106-2 (SC).


Technical specifications		
Electrical data		
Power supply	Rated voltage	12 to 24 VDC
	Voltage range (incl. tolerance)	9.6 to 31.2 VDC Safe Extra Low Voltage (SELV)
	Design	Terminal block, 4 terminals
	Properties	Implemented redundantly
Current consumption	At 12 VDC	400 mA
	at 24 VDC	200 mA
Effective power loss		4.8 W
Fusing		2.5 A
Signaling contact	Quantity	1
	Design	Terminal block, 2 terminals
	Permitted voltage range	24 VDC
	Load capability	max. 100 mA
Permitted ambient conditions		
Ambient temperature	During operation up to 2000 m	-40 °C to +70 °C
	During storage	-40 °C to +85 °C
	During transportation	-40 °C to +85 °C
Relative humidity	During operation at 25 °C	≤ 95 % no condensation
Housing, dimensions and weight		
Design	compact	
Housing material	Polycarbonate (PC-GF10)	
Degree of protection	IP20	
Dimensions (W x H x D)	60 x 147 x 125 mm	
Weight	500 g	
Installation options	<ul style="list-style-type: none"> • Wall mounting • Installation on a DIN rail • Mounting on an S7-300 standard rail • Mounting on an S7-1500 standard rail 	
Mean time between failure (MTBF)		
MTBF (EN/IEC 61709; 40 °C)	> 96 years	

Attachment to Industrial Ethernet

Electrical connectors

Properties	
Quantity	6
Connector	RJ-45 jack
Properties	Half/full duplex, MDI-X pinning
Transmission speed	10 / 100 Mbps

Optical connectors

Optical connectors	
Quantity	2
Connectors	
<p>The attachment to Industrial Ethernet uses SC connector technology (Subscriber Connector).</p>	

Properties		
Transmission mode	100Base-FX complying with IEEE 802.3	
Transmission rate	100 Mbps (Fast Ethernet)	
Transmission medium	Multimode fiber-optic cable	
Light source	LED/Class1-LASER "Eye safe"	
Wavelength	1300 nm	
Cable length (max.) *)	At 50 µm fiber core diameter	3 km
	At 62.5 µm fiber core diameter	3 km
Transmitter output (optical)	Minimum	At 50 µm -24 dBm
		At 62.5 µm -20 dBm
	Maximum	-14 dBm
Receiver input	Sensitivity min.	-31 dBm
	Input power max.	-12 dBm

*) Depending on the cable used:

- If you are using at least OM1 fibers (attenuation ≤ 1.5 dB/km, bandwidth length product ≥ 500 MHz*km), you can reach a cable length of up to 3 km.
- When are using fibers with attenuation values ≤ 1 dB/km, you can reach a cable length of up to 5 km.

You can find additional information in the "Industrial Ethernet / PROFINET Passive network components" System Manual, see also section "Introduction", paragraph "Additional documentation".

7.2 Technical specifications of the SCALANCE XC106-2 (ST/BFOC)

The following technical specifications apply to the SCALANCE XC106-2 (ST/BFOC).

Technical specifications		
Electrical data		
Power supply	Rated voltage	12 to 24 VDC
	Voltage range (incl. tolerance)	9.6 to 31.2 VDC Safe Extra Low Voltage (SELV)
	Design	Terminal block, 4 terminals
	Properties	Implemented redundantly
Current consumption	At 12 VDC	400 mA
	at 24 VDC	200 mA
Effective power loss		4.8 W
Fusing		2.5 A
Signaling contact	Quantity	1
	Design	Terminal block, 2 terminals
	Permitted voltage range	24 VDC
	Load capability	max. 100 mA
Permitted ambient conditions		
Ambient temperature	During operation up to 2000 m	-40 °C to +70 °C
	During storage	-40 °C to +85 °C
	During transportation	-40 °C to +85 °C
Relative humidity	During operation at 25 °C	≤ 95 % no condensation
Housing, dimensions and weight		
Design	compact	
Housing material	Polycarbonate (PC-GF10)	
Degree of protection	IP20	
Dimensions (W x H x D)	60 x 147 x 125 mm	
Weight	500 g	
Installation options	<ul style="list-style-type: none"> • Wall mounting • Installation on a DIN rail • Mounting on an S7-300 standard rail • Mounting on an S7-1500 standard rail 	
Mean time between failure (MTBF)		
MTBF (EN/IEC 61709; 40 °C)	> 96 years	

Connection to Industrial Ethernet

Electrical connectors

Properties

Quantity	6
Connector	RJ45 jack

7.2 Technical specifications of the SCALANCE XC106-2 (ST/BFOC)

Properties	
Properties	Half/full duplex, MDI-X pinning
Transmission speed	10 / 100 Mbps

Optical connectors

Optical connectors	
Quantity	2
Connectors	

The attachment to Industrial Ethernet uses ST/BFOC connector technology (Straight Tip/Bayonet Fiber Optic Connector).

Properties		
Transmission mode	100Base-FX complying with IEEE 802.3	
Transmission rate	100 Mbps (Fast Ethernet)	
Transmission medium	Multimode fiber-optic cable	
Light source	LED/Class1-LASER "Eye safe"	
Wavelength	1300 nm	
Cable length (max.) *)	At 50 µm fiber core diameter	3 km
	At 62.5 µm fiber core diameter	3 km
Transmitter output (optical)	Minimum	At 50 µm -24 dBm
		At 62.5 µm -20 dBm
	Maximum	-14 dBm
Receiver input	Sensitivity min.	-31 dBm
	Input power max.	-12 dBm

*) Depending on the cable used:

- If you are using at least OM1 fibers (attenuation ≤ 1.5 dB/km, bandwidth length product ≥ 500 MHz*km), you can reach a cable length of up to 3 km.
- When are using fibers with attenuation values ≤ 1 dB/km, you can reach a cable length of up to 5 km.

You can find additional information in the "Industrial Ethernet / PROFINET Passive network components" System Manual, see also section "Introduction", paragraph "Additional documentation".

7.3 Technical specifications of the SCALANCE XC108

The following technical specifications apply to the SCALANCE XC108.

Technical specifications		
Attachment to Industrial Ethernet		
Electrical connectors	Quantity	8
	Connector	RJ-45 jack
	Properties	Half/full duplex, MDI-X pinning
	Transmission speed	10 / 100 Mbps
Electrical data		
Power supply	Rated voltage	12 to 24 VDC
	Voltage range (incl. tolerance)	9.6 to 31.2 VDC Safe Extra Low Voltage (SELV)
	Design	Terminal block, 4 terminals
	Property	Implemented redundantly
Current consumption	At 12 VDC	250 mA
	at 24 VDC	125 mA
Effective power loss		3 W
Fusing		2.5 A
Signaling contact	Quantity	1
	Design	Terminal block, 2 terminals
	Permitted voltage range	24 VDC
	Load capability	max. 100 mA
Permitted ambient conditions		
Ambient temperature	During operation up to 2000 m	-40 °C to +70 °C
	During storage	-40 °C to +85 °C
	During transportation	-40 °C to +85 °C
Relative humidity	During operation at 25 °C	≤ 95 % no condensation
Housing, dimensions and weight		
Design	compact	
Housing material	Polycarbonate (PC-GF10)	
Degree of protection	IP20	
Dimensions (W x H x D)	60 x 147 x 125 mm	
Weight	475 g	
Installation options	<ul style="list-style-type: none"> • Wall mounting • Installation on a DIN rail • Mounting on an S7-300 standard rail • Mounting on an S7-1500 standard rail 	
Mean time between failure (MTBF)		
MTBF (EN/IEC 61709; 40 °C)	> 103 years	

7.4 Technical specifications of the SCALANCE XC116

The following technical specifications apply to the SCALANCE XC116.

Technical specifications		
Attachment to Industrial Ethernet		
Electrical connectors	Quantity	16
	Connector	RJ-45 jack
	Properties	Half/full duplex, MDI-X pinning
	Transmission speed	10 / 100 Mbps
Electrical data		
Power supply	Rated voltage	12 to 24 VDC
	Voltage range (incl. tolerance)	9.6 to 31.2 VDC Safe Extra Low Voltage (SELV)
	Design	Terminal block, 4 terminals
	Properties	Implemented redundantly
Current consumption	At 12 VDC	450 mA
	at 24 VDC	225 mA
Effective power loss		5.4 W
Fusing		2.5 A
Signaling contact	Quantity	1
	Design	Terminal block, 2 terminals
	Permitted voltage range	24 VDC
	Load capability	max. 100 mA
Permitted ambient conditions		
Ambient temperature	During operation up to 2000 m	-40 °C to +70 °C
	During storage	-40 °C to +85 °C
	During transportation	-40 °C to +85 °C
Relative humidity	During operation at 25 °C	≤ 95 % no condensation
Housing, dimensions and weight		
Design	compact	
Housing material	Polycarbonate (PC-GF10)	
Degree of protection	IP20	
Dimensions (W x H x D)	120 x 147 x 125 mm	
Weight	775 g	
Installation options	<ul style="list-style-type: none"> • Wall mounting • Installation on a DIN rail • Mounting on an S7-300 standard rail • Mounting on an S7-1500 standard rail 	
Mean time between failure (MTBF)		
MTBF (EN/IEC 61709; 40 °C)	> 73.69 years	

7.5 Technical specifications of the SCALANCE XC124

The following technical specifications apply to the SCALANCE XC124.

Technical specifications		
Attachment to Industrial Ethernet		
Electrical connectors	Quantity	24
	Connector	RJ-45 jack
	Properties	Half/full duplex, MDI-X pinning
	Transmission speed	10 / 100 Mbps
Electrical data		
Power supply	Rated voltage	12 to 24 VDC
	Voltage range (incl. tolerance)	9.6 to 31.2 VDC Safe Extra Low Voltage (SELV)
	Design	Terminal block, 4 terminals
	Property	Implemented redundantly
Current consumption	At 12 VDC	650 mA
	at 24 VDC	325 mA
Effective power loss		7.8 W
Fusing		2.5 A
Signaling contact	Quantity	1
	Design	Terminal block, 2 terminals
	Permitted voltage range	24 VDC
	Load capability	max. 100 mA
Permitted ambient conditions		
Ambient temperature	During operation up to 2000 m	-40 °C to +70 °C
	During storage	-40 °C to +85 °C
	During transportation	-40 °C to +85 °C
Relative humidity	During operation at 25 °C	≤ 95 % no condensation
Housing, dimensions and weight		
Design	compact	
Housing material	Polycarbonate (PC-GF10)	
Degree of protection	IP20	
Dimensions (W x H x D)	120 x 147 x 125 mm	
Weight	850 g	
Installation options	<ul style="list-style-type: none"> • Wall mounting • Installation on a DIN rail • Mounting on an S7-300 standard rail • Mounting on an S7-1500 standard rail 	
Mean time between failure (MTBF)		
MTBF (EN/IEC 61709; 40 °C)	> 58.42 years	

7.6 Switching properties

Note the following switching properties:

Switching properties	
Aging time	45 seconds
Max. number of learnable MAC addresses	2048
Response to LLDP frames	Blocking
Response to spanning tree BPDU frames	Forwarding
CoS acc. to IEEE 802.1Q	Yes
QoS priority queues	4
IEEE 802.1Q tags (VLAN ID, priority) transparent forwarding	Yes
Maximum frame size	1536 bytes
Forwarding of PRP frames (Parallel Redundancy Protocol)	Yes
Broadcast storm protection	5% broadcast frames

7.7 Mechanical stability (in operation)

Mechanical stability (in operation)

Device	IEC 60068-2-27 shock	IEC 60068-2-6 vibration
	15 g, 11 ms duration 6 shocks per axis	10 - 58 Hz: 0.075 mm 85 - 150 Hz: 1 g 1 octave/min, 20 sweeps
SCALANCE XC106-2 (SC)	●	●
SCALANCE XC106-2 (ST/BFOC)	●	●
SCALANCE XC108	●	●
SCALANCE XC116	●	●
SCALANCE XC124	●	●

Dimension drawings

Note

Dimensions are specified in mm.

Front view of the SCALANCE XC106-2 (SC), SCALANCE XC106-2 (ST/BFOC), SCALANCE XC108


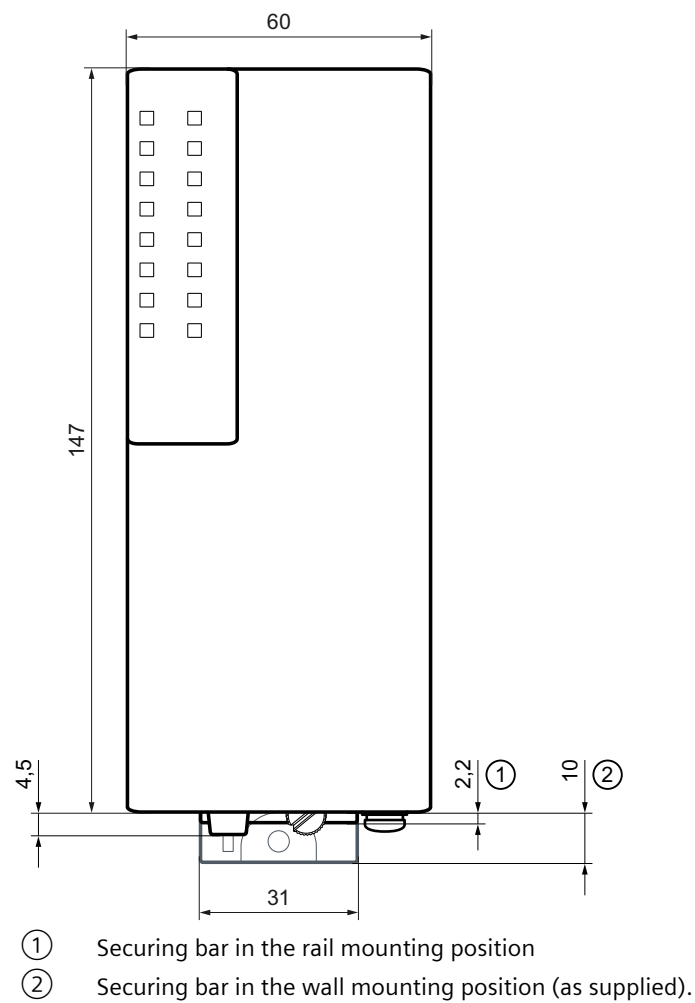


Figure 8-1 Width and height


Front view of the SCALANCE XC116, SCALANCE XC124

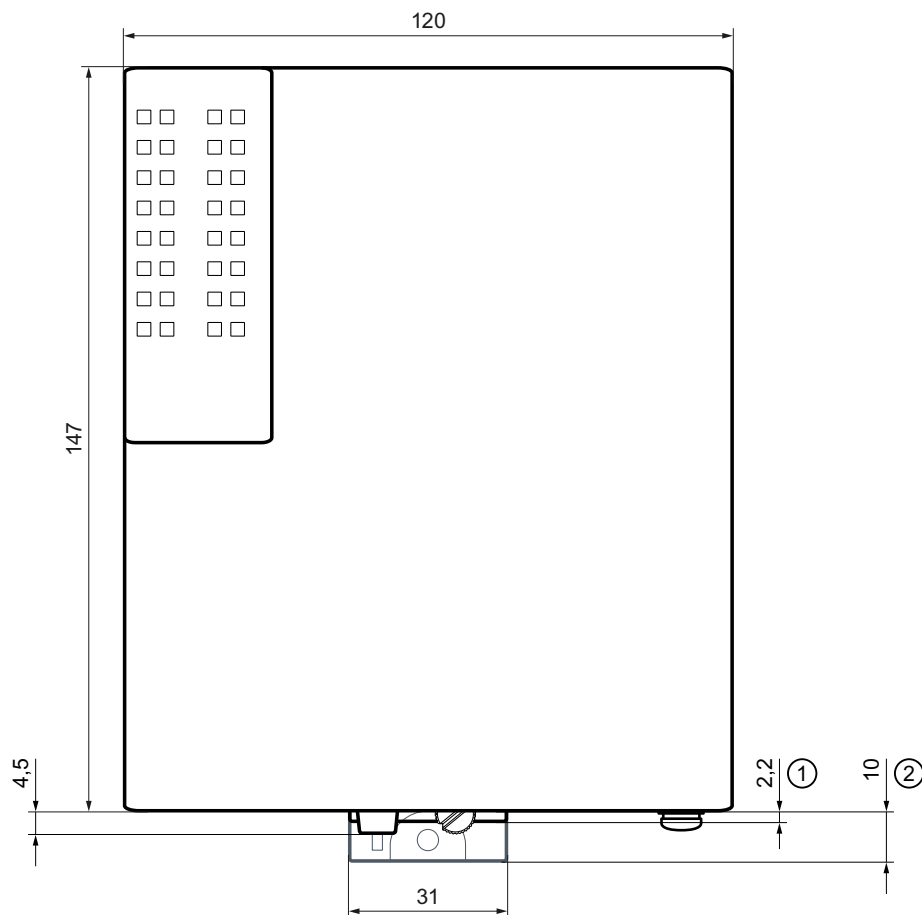

- ① Securing bar in the rail mounting position
- ② Securing bar in the wall mounting position (as supplied).

Figure 8-2 Width and height

Side view of the SCALANCE XC-100

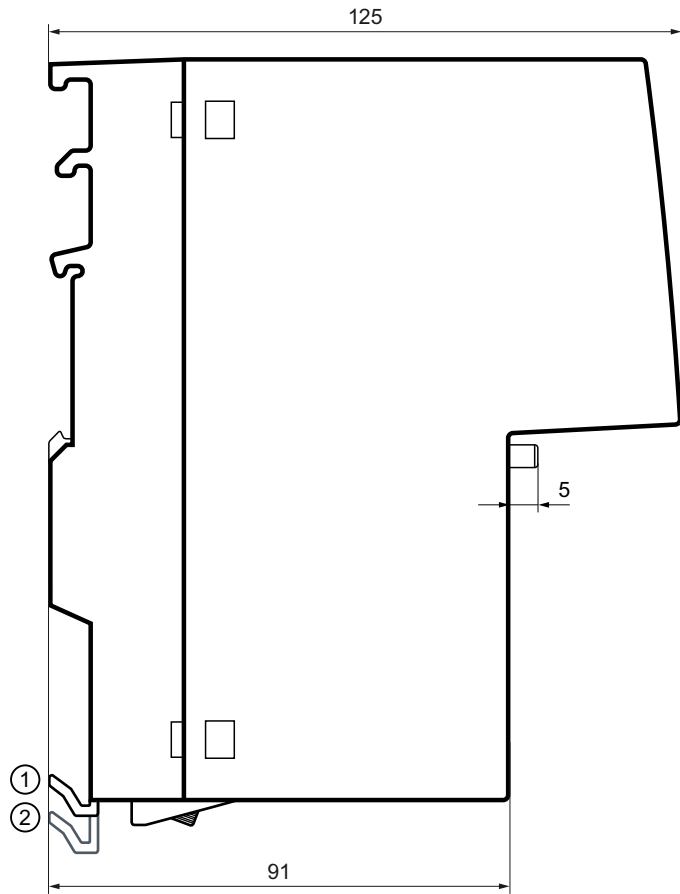

- ① Securing bar in the rail mounting position
- ② Securing bar in the wall mounting position (as supplied).

Figure 8-3 Depth

Drilling template for wall mounting

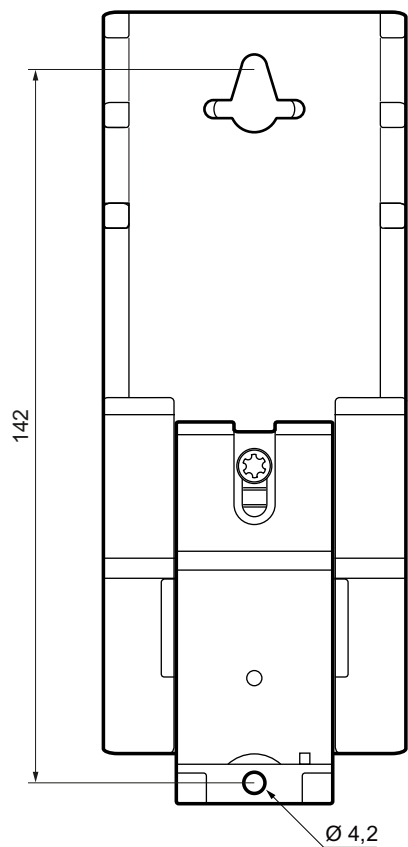


Figure 8-4 Drilling template

Certifications and approvals

The SIMATIC NET products described in these Operating Instructions have the approvals listed below.

Note

Issued approvals on the type plate of the device

The specified approvals apply only when the corresponding mark is printed on the product. You can check which of the following approvals have been granted for your product by the markings on the type plate.

Current approvals on the Internet

You will find the current approvals for the product on the Internet pages of Siemens Industry Online Support (<https://support.industry.siemens.com/cs/ww/en/ps/15273/cert>).

Notes for the manufacturers of machines

This product is not a machine in the sense of the EC Machinery Directive or the Supply of Machinery (Safety) Regulations (UK).

There is therefore no declaration of conformity relating to the EC Machinery Directive 2006/42/EEC or the Supply of Machinery (Safety) Regulations 2008 (UK) for this product.

If the product is part of the equipment of a machine, it must be included in the procedure for obtaining the EU/UK conformity assessment by the manufacturer of the machine.

Machinery directive

The product is a component in compliance with the EC Machinery Directive 2006/42/EEC and the Supply of Machinery (Safety) Regulations 2008 (UK).

According to the Machinery Directive respectively the Supply of Machinery (Safety) Regulations (UK), we are obliged to point out that the product described is intended solely for installation in a machine.

Before the final product can be put into operation, it must be tested to ensure that it conforms with the Machinery Directive 2006/42/EEC and the Supply of Machinery (Safety) Regulations 2008 (UK).

EC declaration of conformity



The SIMATIC NET products described in these operating instructions meet the requirements and safety objectives of the following EC directives and comply with the harmonized European

standards (EN) which are published in the official documentation of the European Union and here.

- **2014/34/EU (ATEX explosion protection directive)**
Directive of the European Parliament and the Council of 26 February 2014 on the approximation of the laws of the member states concerning equipment and protective systems intended for use in potentially explosive atmospheres, official journal of the EU L96, 29/03/2014, pages. 309-356
- **2014/30/EU (EMC)**
EMC directive of the European Parliament and of the Council of February 26, 2014 on the approximation of the laws of the member states relating to electromagnetic compatibility; official journal of the EU L96, 29/03/2014, pages. 79-106
- **2011/65/EU (RoHS)**
Directive of the European Parliament and of the Council of 8 June 2011 on the restriction of the use of certain hazardous substances in electrical and electronic equipment, official journal of the EC L174, 01/07/2011, pages 88-110

You will find the EC declaration of conformity for these products on the Internet pages of Siemens Industry Online Support (<https://support.industry.siemens.com/cs/ww/en/ps/15273/cert>).

The EC Declaration of Conformity is available for all responsible authorities at:

Siemens Aktiengesellschaft

Digital Industries
DE-76181 Karlsruhe
Germany

UK Declaration of Conformity



The UK declaration of conformity is available to all responsible authorities at:

Siemens Aktiengesellschaft
Digital Industries
Process Automation
DE-76181 Karlsruhe
Germany

Importer UK:


Siemens plc,
Manchester M20 2UR

You can find the current UK Declaration of Conformity for these products on the Internet pages under Siemens Industry Online Support (<https://support.industry.siemens.com/cs/ww/en/ps/15273/cert>).

The SIMATIC NET products described in this document meet the requirements of the following directives:

- UK-Regulation
SI 2016/1107 Equipment and Protective Systems Intended for use in Potentially Explosive Atmospheres Regulations 2016, and related amendments
- EMC Regulation
SI 2016/1091 Electromagnetic Compatibility Regulations 2016, and related amendments
- RoHS Regulation
SI 2012/3032 Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012, and related amendments

ATEX, IECEx, UKEX and CCC Ex certification

 WARNING
Risk of explosion in hazardous areas
When using SIMATIC NET products in hazardous area zone 2, make absolutely sure that the associated conditions in the following document are adhered to:
"SIMATIC NET Product Information Use of subassemblies/modules in a Zone 2 Hazardous Area".
You will find this document
<ul style="list-style-type: none"> • on the data medium that ships with some devices. • on the Internet pages under Siemens Industry Online Support (https://support.industry.siemens.com/cs/ww/en/view/78381013).
Enter the document identification number "C234" as the search term.

The markings of the electrical devices are:



II 3 G Ex ec IIC T4 Gc
 DEKRA 18ATEX0025 X
 DEKRA 21UKEX0001 X
 IECEx DEK 18.0017X
 Importer UK:
 Siemens plc,
 Manchester
 M20 2UR
 (Ex na IIC T4 Gc, not on the nameplate)
 2020322310002626
 2020322310002915
 2020322310002987

The products meet the requirements of the following standards:

- EN/IEC 60079-7, GB 3836.8
- EN IEC/IEC 60079-0, GB 3836.1

You will find the current versions of the standards in the currently valid certificates.

Note for devices with CLASS 1 LASER

Important note on products certified according to Type Examination Certificate KEMA 07ATEX0145 X as of Issue 95 / DEKRA 18ATEX0025 X and IECEx Certificate of Conformity DEK 14.0025X as of Issue 43 / DEK 18.0017X and containing Class 1 optical radiation sources.

Note

CLASS 1 LASER

The device contains optical radiation sources which comply with the limits of Class 1 according to IEC 60825-1. Fiber-optic cables connected to these optical radiation sources may therefore be routed either to or through hazardous areas requiring Category 2G, 3G, 2D or 3D equipment.

EMC (electromagnetic compatibility)

The SIMATIC NET products described in these operating instructions meet the electromagnetic compatibility requirements according to the EU Directive 2014/30/EU as well as the UK-Regulation SI 2016/1091 and their associated amendments.

Applied standards:

- EN 61000-6-2 Electromagnetic compatibility (EMC) - Part 6-2: Generic standards - Immunity for industrial environments
- EN 61000-6-4 Electromagnetic compatibility (EMC) - Part 6-4: Generic standards - Emission standard for industrial environments

You will find the current versions of the standards in the currently valid EC/UK Declaration of Conformity.

RoHS

The SIMATIC NET products described in these operating instructions meet the requirements on the restriction of the use of certain hazardous substances in electrical and electronic equipment according to the EU Directive 2011/65/EU as well as the UK-Regulation SI 2012/3032 and their associated amendments.

Applied standard:

- EN IEC 63000

FM

The product meets the requirements of the standards:

- Factory Mutual Approval Standard Class Number 3611
- FM Hazardous (Classified) Location Electrical Equipment:
Non Incendive / Class I / Division 2 / Groups A,B,C,D / T4 and
Non Incendive / Class I / Zone 2 / Group IIC / T4

cULus approval for industrial control equipment



cULus Listed IND. CONT. EQ.

Underwriters Laboratories Inc. complying with

- UL 61010-2-201
- CAN/CSA-IEC 61010-2-201

Report no. E85972

cULus Approval for Information Technology Equipment



cULus Listed I. T. E.

Underwriters Laboratories Inc. complying with

- UL 60950-1 (Information Technology Equipment)
- CSA C22.2 No. 60950-1-03

Report no. E115352

cULus Approval Hazardous Location



HAZ. LOC.

cULus Listed I. T. E. FOR HAZ. LOC.

Underwriters Laboratories Inc. complying with

- UL 60950-1 (Information Technology Equipment)
- ANSI/ISA 12.12.01-2007
- CSA C22.2 No. 213-M1987

Approved for use in

Cl. 1, Div. 2, GP A, B, C, D T4

Cl. 1, Zone 2, GP IIC T4

Report no. E240480

E1

The device meets the requirements of the ECE R10 directive.

Test number 10 R - 057876

Note

This approval exists only for the IE switch SCALANCE XC108.

Note for Australia - RCM

The product meets the requirements of the RCM standard.

Applied standards:

- AS/NZS CISPR11 (Industrial, scientific and medical equipment - Radio-frequency disturbance characteristics - Limits and methods of measurement).
- EN 61000-6-4 Electromagnetic compatibility (EMC) - Part 6-4: Generic standards - Emission standard for industrial environments

You will find the current versions of the standards in the currently valid RCM SDoCs (Self-Declaration of Conformity).

MSIP 요구사항 - For Korea only

A급 기기(업무용 방송통신기자재)

이 기기는 업무용(A급) 전자파 적합기기로서 판매자 또는 사용자는 이 점을 주의하시기 바라며, 가정 외의 지역에서 사용하는 것을 목적으로 합니다.

Marking for the customs union



EAC (Eurasian Conformity)

Eurasian Economic Union of Russia, Belarus, Armenia, Kazakhstan and Kyrgyzstan

Declaration of conformity according to the technical regulations of the customs union (TR ZU)

FDA and IEC marks

The following devices meet the FDA and IEC requirements listed below:

Device	CLASS 1 LASER Product
SCALANCE XC106-2 (SC)	●
SCALANCE XC106-2 (ST/BFOC)	●
SCALANCE XC108	-
SCALANCE XC116	-
SCALANCE XC124	-



Figure 9-1 FDA and IEC approvals

 CAUTION

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

Installation guidelines

The devices meet the requirements if you adhere to the installation and safety instructions contained in this documentation and in the following documentation when installing and operating the devices.

- "Industrial Ethernet / PROFINET Industrial Ethernet" System Manual (<https://support.industry.siemens.com/cs/ww/en/view/27069465>)
- "Industrial Ethernet / PROFINET - Passive Network Components" System Manual (<https://support.industry.siemens.com/cs/ww/en/view/84922825>)
- "EMC Installation Guidelines" configuration manual (<https://support.industry.siemens.com/cs/ww/en/view/60612658>)

 WARNING**Personal injury and property damage can occur**

The installation of expansions that are not approved for SIMATIC NET products or their target systems may violate the requirements and regulations for safety and electromagnetic compatibility.

Only use expansions that are approved for the system.

Note

The test was performed with a device and a connected communications partner that also meets the requirements of the standards listed above.

When operating the device with a communications partner that does not comply with these standards, adherence to the corresponding values cannot be guaranteed.

Index

A

Ambient temperature, 41, 43, 45, 46, 47
Approvals, 53
Article numbers, 11
Attachment to Industrial Ethernet, 45, 46, 47

C

CE mark, 53
Components of the product, 11
Connecting up
 Grounding, 37

D

Dimensions, 41, 43, 45, 46, 47
Display, 40

E

E1, 57
Electrical data, 41, 43, 45, 46, 47
Environmental conditions, 41, 43, 45, 46, 47
Error
 Far-end fault, 40
 Link display, 40
ESD directives, 8

F

Fault mask
 Changing the setting, 19
 Error/fault, 20
 Factory setting, 19

G

Glossary, 6
Grounding, 13, 14, 15, 16, 17, 37
Grounding screw, 13, 14, 15, 16, 17

H

Housing, 41, 43, 45, 46, 47

I

Installation, 41, 43, 45, 46, 47
 Installation on a DIN rail, 25
 Installation on a standard rail, 26, 27
 Wall mounting, 28
Installation on a DIN rail, 25
Installation on a standard rail, 26, 27

K

Knurled screw, 13, 14, 15, 16, 17, 25, 26, 27

L

LED display, 13, 14, 15, 16, 17
LEDs, 18
 Fault LED (red LED), 18
 Port LEDs (green/yellow LEDs), 18
 Power LED (green LED), 18
Levering aid, 13, 14, 15, 16, 17, 29

M

MTBF, 41, 43, 45, 46, 47

P

Permitted ambient conditions, 41, 43, 45, 46, 47
Power supply, 11, 13, 14, 15, 16, 17, 35

S

S7-1500, 27
S7-300, 26
Safety notices
 for installation, 21
 general, 9
 Use in hazardous areas, 9, 21, 31
 when connecting up, 31
Securing bar, 13, 14, 15, 16, 17, 25, 26, 27, 49, 50, 51
SET button, 13, 14, 15, 16, 17, 19
 Function, 19
Signaling contact, 11, 13, 14, 15, 16, 17, 36

SIMATIC NET glossary, 6
SIMATIC NET manual, 6
Spare parts, 12
Spring-loaded terminal, 11, 35, 36
System manual, 6, 59

W

Weight, 41, 43, 45, 46, 47